


Panasonic

Hybrid IP-PBX

Feature Guide

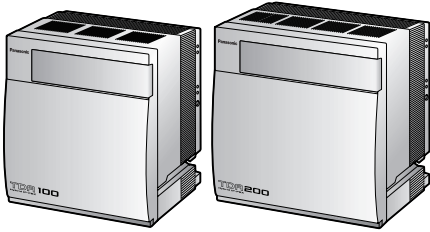

KX-TDA100
Model KX-TDA200



Thank you for purchasing a Panasonic Hybrid IP-PBX.
Please read this manual carefully before using this product and save this manual for future use.

KX-TDA100/KX-TDA200: Version 2.0

Introduction

About the Feature Guide

The Feature Guide is designed to serve as an overall reference describing the features of the Panasonic Hybrid IP-PBX. It explains what the Hybrid IP-PBX can do, as well as how to obtain the most of its many features and facilities.

The Feature Guide is divided into the following sections:

Section 1 Call Handling Features

Describes the call handling features of the Hybrid IP-PBX.

Section 2 System Configuration and Administration Features

Describes the features which allow the Hybrid IP-PBX to be configured and administered to suit the needs of its users.

Section 3 Programming Instructions

Serves as an overall system programming reference for the Hybrid IP-PBX.

Section 4 KX-TDA Maintenance Console Operating Instructions

Serves as reference operating instructions when using the Panasonic KX-TDA Maintenance Console software to program the Hybrid IP-PBX.

Section 5 Appendix

Provides tables which describe the resource capacity of the Hybrid IP-PBX, as well as its different tones and ring tones. Abbreviations used frequently throughout the Feature Guide are also briefly explained here.

Index

An alphabetical listing of features and terms, as well as the page numbers of related sections.

References Found in the Feature Guide

Installation Manual References

The Hybrid IP-PBX Installation Manual provides instructions detailing the installation and maintenance of the PBX. Sections from the Installation Manual are listed throughout the Feature Guide for your reference.

Feature Guide References

Related sections of the Feature Guide are listed for your reference.

User Manual References

The Hybrid IP-PBX User Manual describes how users can access commonly used PBX features and functions with their proprietary telephones (PTs), single line telephones (SLTs), portable stations (PSs), and DSS Consoles. Sections from the User Manual are listed throughout the Feature Guide for your reference.

PT Programming References

Commonly used settings can be programmed using a display PT (→ 2.3.2 PT Programming). These PT programming items are noted throughout the Feature Guide for your reference by title and program number.

The following is an example of a PT Programming reference:

"Idle extensions are automatically searched for according to a preprogrammed hunting type (→ Idle Extension Hunting Type [680])."

Links to Other Pages and Manuals

If viewing this Feature Guide with a PC, certain items are linked to different sections of the Feature Guide and other Hybrid IP-PBX manuals. Click on a link to jump to that section.

Linked items include:

- Installation Manual References
- Feature Guide References
- User Manual References
- PT Programming References

Notes

- Certain PTs, features, and optional service cards are not available in some areas. Consult your certified Panasonic dealer for more information.
- Every system programming setting can be accessed using a PC and the Panasonic KX-TDA Maintenance Console software (→ 2.3.1 PC Programming). For programming details, refer to the on-line help which is installed along with KX-TDA Maintenance Console (→ 3.2.1 Installing and Starting KX-TDA Maintenance Console).

Trademarks

- Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Intel and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.
- All other trademarks identified herein are the property of their respective owners.
- Screen shots reprinted with permission from Microsoft Corporation.

Feature Highlights

Networking Features

The Hybrid IP-PBX supports the following private networking features:

TIE Line Service

PBXs can be connected via a privately leased telephone lines, such as T1 lines or PRI lines, forming a private network. These "TIE lines" provide a cost-effective way to route calls and communications, and are often used to connect corporate offices located in different cities.

(→ 1.27.1 TIE Line Service)

QSIG Support

TIE line service can be used on a private network that is established using ISDN (PRI) lines programmed to implement the QSIG protocol (Q.931). QSIG offers TIE line service as well as advanced caller and called party identification features.

(→ 1.27.2 QSIG Network)

Voice over Internet Protocol (VoIP) Support

The Hybrid-IP PBX can be used on a private network which implements VoIP. On this type of network, information is sent over the private network in IP packets, which allows voice as well as data to be sent to other devices in the private network.

(→ 1.27.3 Voice over Internet Protocol (VoIP) Network)

Built-in Small Call Center Features

Extensions can form an incoming call distribution (ICD) group and be used as a small call center which can take advantage of several features, some of which are highlighted below.

(→ 1.2.2 Incoming Call Distribution (ICD) Group Features)

Queuing

When all available extensions in an ICD group are busy, additional calls can be placed in a queue as they arrive. While calls are waiting in the queue, callers can hear background music (BGM), an outgoing message (OGM), etc.

(→ 1.2.2.3 Queuing Feature)

Log-in/Log-out

Members of an ICD group can log-in to or log-out of a group manually. Group members can log-in at the beginning of a work shift, and log-out at the end of the day. While logged-in, ICD group members can be allotted a specified amount of time after completing a call during which new calls will not be received by their extensions, allowing them to finish any necessary paperwork before being eligible to receive new calls (Wrap-up).

(→ 1.2.2.6 Log-in/Log-out)

VIP Call

The VIP Call feature is one method of making sure that calls from preferred customers or callers are answered quickly. When using VIP Call mode, ICD groups are assigned a priority, allowing calls in higher-priority groups to be answered before calls in lower-priority groups.

(→ 1.2.2.4 VIP Call)

Computer Telephony Integration (CTI) Features

Computers can be connected to the Hybrid-IP PBX to provide extension users with access to advanced features such as pop-up display of caller information, computer-based speed dialing, etc.

(→ 1.29.1 Computer Telephony Integration (CTI))

PC Phone/PC Console

These Panasonic CTI applications can be used on computers connected to each extension, providing their respective extension users with powerful and flexible call handling and display features.

Third Party CTI Applications

The Hybrid IP-PBX supports industry standard protocols, allowing third-party CTI applications to be integrated with the PBX and its extensions.

Voice Mail Features

A Voice Processing System (VPS) can be connected to the Hybrid IP-PBX to provide Voice Mail (VM) and Automated Attendant (AA) services. A Panasonic VPS which supports DPT (Digital) Integration can be connected to the Hybrid IP-PBX effortlessly and with minimal setup required. Conventional DTMF (analog) voice mail systems, including those from other manufacturers, are also supported.

(→ 1.21.1 Voice Mail (VM) Group)

Portable Station (PS) Features

A Panasonic PS can be used in place of a PT to provide wireless access to PBX features and call handling. When in Wireless XDP Parallel Mode, a PS can share an extension number with a wired telephone, allowing extension users to use their PSs when they are away from their desks to answer or make calls as if they were using their wired telephones.

(→ 1.22 Portable Station (PS) Features)

Paralleled Telephone Features

By connecting telephones in parallel, you can increase the number of telephones connected to the Hybrid IP-PBX without adding additional extension cards.

(→ 1.10.9 Paralleled Telephone)

Parallel Mode

An SLT can be connected to an analog proprietary telephone (APT) or digital proprietary telephone (DPT) that is connected to a Super Hybrid port of the Hybrid IP-PBX. The SLT shares the same extension number with the APT or DPT.

EXtra Device Port (XDP) Mode

An SLT can be connected to a DPT that is connected to a Super Hybrid port of the Hybrid IP-PBX. Unlike parallel mode, XDP mode allows each telephone to act as an independent extension with its own extension number.

Digital XDP

A DPT can be connected to another DPT that is connected to a DPT port or a Super Hybrid port of the Hybrid IP-PBX. Similar to XDP mode, each DPT acts as an independent extension with its own extension number.

Hospitality Features

This PBX has several features that support its use in a hotel-type environment. Extensions corresponding to guest rooms can be "checked in" or "checked out" by a designated hotel operator, who can also check or set wake-up calls. (→ 1.24.1 Hospitality Features—SUMMARY)

List of Abbreviations

A	AA	→	Automated Attendant	
	ANI	→	Automatic Number Identification	
	APT	→	Analog Proprietary Telephone	
	ARS	→	Automatic Route Selection	
B	BGM	→	Background Music	
C	CLI	→	Calling Line Identification	
	CLIP	→	Calling Line Identification Presentation	
	CLIR	→	Calling Line Identification Restriction	
	CNIP	→	Calling Name Identification Presentation	
	CNIR	→	Calling Name Identification Restriction	
	COLP	→	Connected Line Identification Presentation	
	COLR	→	Connected Line Identification Restriction	
	CONP	→	Connected Name Identification Presentation	
	CONR	→	Connected Name Identification Restriction	
	COS	→	Class of Service	
	CPC	→	Calling Party Control	
	CS	→	Cell Station	
	CTI	→	Computer Telephony Integration	
	D	DID	→	Direct Inward Dialing
		DIL	→	Direct In Line
		DISA	→	Direct Inward System Access
DND		→	Do Not Disturb	
DPT		→	Digital Proprietary Telephone	
DSS		→	Direct Station Selection	
DTMF		→	Dual Tone Multi-Frequency	
E		EFA	→	External Feature Access
F	FWD	→	Call Forwarding	
G	G-CO	→	Group-CO	
	G-DN	→	Group Directory Number	
I	ICD	→	Incoming Call Distribution	
	IP-PT	→	IP Proprietary Telephone	
	IRNA	→	Intercept Routing—No Answer	
	ISDN	→	Integrated Services Digital Network	

L	L-CO	→	Loop-CO
	LCS	→	Live Call Screening
O	OGM	→	Outgoing Message
	OHCA	→	Off-hook Call Announcement
	OPX	→	Off Premise Extension
P	PIN	→	Personal Identification Number
	PRI	→	Primary Rate Interface
	PS	→	Portable Station
	PT	→	Proprietary Telephone
S	S-CO	→	Single-CO
	SLT	→	Single Line Telephone
	SMDR	→	Station Message Detail Recording
T	TAFAS	→	Trunk Answer from Any Station
	TEI	→	Terminal Endpoint Identifier
	TRG	→	CO Line Group
	TRS	→	Toll Restriction
U	UCD	→	Uniform Call Distribution
V	VM	→	Voice Mail
	VoIP	→	Voice over Internet Protocol
	VPS	→	Voice Processing System
X	XDP	→	eXtra Device Port

Table of Contents

1	Call Handling Features	17
1.1	Incoming Call Features	18
1.1.1	Incoming CO Line Call Features	18
1.1.1.1	Incoming CO Line Call Features—OVERVIEW	18
1.1.1.2	Direct In Line (DIL)	21
1.1.1.3	Direct Inward Dialing (DID)	23
1.1.1.4	Calling Line Identification (CLI) Distribution	25
1.1.1.5	Intercept Routing	26
1.1.1.6	Intercept Routing—No Destination	28
1.1.2	Internal Call Features	28
1.1.2.1	Internal Call Features—OVERVIEW	28
1.1.2.2	Internal Call Block	29
1.1.3	Incoming Call Indication Features	30
1.1.3.1	Incoming Call Indication Features—OVERVIEW	30
1.1.3.2	Ring Tone Pattern Selection	31
1.1.3.3	Call Waiting	32
1.2	Receiving Group Features	34
1.2.1	Idle Extension Hunting	34
1.2.2	Incoming Call Distribution (ICD) Group Features	35
1.2.2.1	Incoming Call Distribution (ICD) Group Features—OVERVIEW	35
1.2.2.2	Group Call Distribution	39
1.2.2.3	Queuing Feature	41
1.2.2.4	VIP Call	44
1.2.2.5	Overflow Feature	45
1.2.2.6	Log-in/Log-out	47
1.2.2.7	Supervisory Feature	49
1.3	Call Forwarding (FWD)/Do Not Disturb (DND) Features	52
1.3.1	Call Forwarding (FWD)/Do Not Disturb (DND)	52
1.3.1.1	Call Forwarding (FWD)/Do Not Disturb (DND)—OVERVIEW	52
1.3.1.2	Call Forwarding (FWD)	54
1.3.1.3	Do Not Disturb (DND)	58
1.4	Answering Features	59
1.4.1	Answering Features	59
1.4.1.1	Answering Features—OVERVIEW	59
1.4.1.2	Line Preference—Incoming	59
1.4.1.3	Call Pickup	60
1.4.1.4	Hands-free Answerback	61
1.5	Making Call Features	63
1.5.1	Predialing	63
1.5.2	Automatic Extension Release	63
1.5.3	Intercom Call	64
1.5.4	CO Line Call Features	65
1.5.4.1	CO Line Call Features—OVERVIEW	65
1.5.4.2	Emergency Call	65
1.5.4.3	Account Code Entry	66
1.5.4.4	Dial Type Selection	67
1.5.4.5	Pause Insertion	67
1.5.4.6	Host PBX Access Code (Access Code to the Telephone Company from a Host PBX)	68
1.5.4.7	Special Carrier Access Code	69
1.5.5	Seizing a Line Features	69
1.5.5.1	Seizing a Line Features—OVERVIEW	69
1.5.5.2	Line Preference—Outgoing	70
1.5.5.3	CO Line Access	71

1.6	Memory Dialing Features	73
1.6.1	Memory Dialing Features	73
1.6.1.1	Memory Dialing Features—OVERVIEW	73
1.6.1.2	One-touch Dialing	74
1.6.1.3	Last Number Redial	75
1.6.1.4	Speed Dialing—Personal/System	76
1.6.1.5	Quick Dialing	77
1.6.1.6	Hot Line	77
1.7	Busy Line/Busy Party Features	78
1.7.1	Automatic Callback Busy (Camp-on)	78
1.7.2	Executive Busy Override	78
1.7.3	Call Monitor	79
1.7.4	Second Call Notification to Busy Extension	80
1.7.4.1	Second Call Notification to Busy Extension—OVERVIEW	80
1.7.4.2	Call Waiting Tone	81
1.7.4.3	Off-hook Call Announcement (OHCA)	81
1.7.4.4	Whisper OHCA	82
1.8	Toll Restriction (TRS) Features	83
1.8.1	Toll Restriction (TRS)	83
1.8.2	Extension Lock	87
1.8.3	Dial Tone Transfer	88
1.8.4	Walking COS	88
1.8.5	Verified Code Entry	89
1.9	Automatic Route Selection (ARS) Features	91
1.9.1	Automatic Route Selection (ARS)	91
1.10	Conversation Features	97
1.10.1	Hands-free Operation	97
1.10.2	Off-hook Monitor	97
1.10.3	Mute	97
1.10.4	Headset Operation	98
1.10.5	Data Line Security	99
1.10.6	Flash/Recall/Terminate	99
1.10.7	External Feature Access (EFA)	100
1.10.8	CO Line Call Limitation	100
1.10.9	Paralleled Telephone	101
1.10.10	Calling Party Control (CPC) Signal Detection	104
1.11	Transferring Features	105
1.11.1	Call Transfer	105
1.12	Holding Features	107
1.12.1	Call Hold	107
1.12.2	Call Park	108
1.12.3	Call Splitting	109
1.12.4	Music on Hold	110
1.12.5	Consultation Hold	110
1.13	Conference Features	111
1.13.1	Conference Features	111
1.13.1.1	Conference Features—OVERVIEW	111
1.13.1.2	Conference	111
1.13.1.3	Privacy Release	112
1.14	Paging Features	114
1.14.1	Paging	114
1.15	Optional Device Features	116

1.15.1	Doorphone Call	116
1.15.2	Door Open.....	117
1.15.3	Trunk Answer From Any Station (TAFAS).....	117
1.15.4	Background Music (BGM).....	118
1.15.5	Outgoing Message (OGM).....	118
1.15.6	Direct Inward System Access (DISA).....	120
1.15.7	External Sensor.....	126
1.15.8	External Relay Control	127
1.16	Caller ID Features.....	129
1.16.1	Caller ID	129
1.16.2	Incoming Call Log	133
1.17	Message Features	135
1.17.1	Message Waiting.....	135
1.17.2	Absent Message	138
1.18	Proprietary Telephone (PT) Features	139
1.18.1	Fixed Buttons	139
1.18.2	Flexible Buttons.....	141
1.18.3	LED Indication.....	143
1.18.4	Display Information	145
1.19	Integrated Services Digital Network (ISDN) Service Features	147
1.19.1	Integrated Services Digital Network (ISDN)	147
1.19.1.1	Integrated Services Digital Network (ISDN)—OVERVIEW	147
1.19.1.2	Calling Line Identification Presentation (CLIP).....	148
1.20	T1 Line Service Features	150
1.20.1	T1 Line Service	150
1.21	Voice Mail Features	152
1.21.1	Voice Mail (VM) Group.....	152
1.21.2	Voice Mail DPT (Digital) Integration	154
1.21.3	Voice Mail DTMF Integration.....	161
1.22	Portable Station (PS) Features.....	166
1.22.1	Portable Station (PS) Connection	166
1.22.2	PS Ring Group.....	167
1.22.3	Wireless XDP Parallel Mode	171
1.22.4	PS Directory	173
1.22.5	PS Feature Buttons.....	174
1.23	Administrative Information Features	175
1.23.1	Station Message Detail Recording (SMDR)	175
1.23.2	Printing Message	181
1.24	Hospitality Features.....	183
1.24.1	Hospitality Features—SUMMARY.....	183
1.24.2	Room Status Control.....	183
1.25	Extension Controlling Features.....	185
1.25.1	Extension Personal Identification Number (PIN).....	185
1.25.2	Extension Feature Clear	186
1.25.3	Walking Extension.....	187
1.25.4	Timed Reminder.....	187
1.25.5	Remote Extension Control by User.....	188
1.26	Audible Tone Features.....	189
1.26.1	Dial Tone	189
1.26.2	Confirmation Tone	190
1.27	Networking Features.....	191

1.27.1	TIE Line Service.....	191
1.27.1.1	TIE Line Service—OVERVIEW.....	191
1.27.1.2	PBX Code Method (Access with PBX Code).....	198
1.27.1.3	Extension Number Method (Access without PBX Code).....	207
1.27.2	QSIG Network.....	217
1.27.2.1	QSIG Network—OVERVIEW.....	217
1.27.2.2	Calling/Connected Line Identification Presentation (CLIP/COLP) and Calling/Connected Name Identification Presentation (CNIP/CONP)—by QSIG.....	218
1.27.2.3	Network Direct Station Selection (NDSS) (KX-TDA0920 required).....	221
1.27.3	Voice over Internet Protocol (VoIP) Network.....	225
1.28	IP Proprietary Telephone (IP-PT) Features	226
1.28.1	IP Proprietary Telephone (IP-PT).....	226
1.29	Computer Telephony Integration (CTI) Features	227
1.29.1	Computer Telephony Integration (CTI).....	227
2	System Configuration and Administration Features	229
2.1	System Configuration—Hardware.....	230
2.1.1	Extension Port Configuration	230
2.2	System Configuration—Software.....	231
2.2.1	Class of Service (COS).....	231
2.2.2	Group.....	232
2.2.3	Tenant Service	234
2.2.4	Time Service	238
2.2.5	Operator Features.....	242
2.2.6	Manager Features.....	242
2.3	System Data Control.....	245
2.3.1	PC Programming	245
2.3.2	PT Programming.....	247
2.3.3	Quick Setup	248
2.3.4	Automatic Time Adjustment	249
2.3.5	Flexible Numbering/Fixed Numbering.....	250
2.3.6	Floating Extension	255
2.3.7	Software Upgrading	256
2.4	Fault Recovery/Diagnostics.....	257
2.4.1	Power Failure Transfer.....	257
2.4.2	Power Failure Restart	257
2.4.3	Local Alarm Information.....	258
3	Programming Instructions.....	261
3.1	Introduction	262
3.1.1	Introduction	262
3.1.2	Password Security	262
3.1.3	Entering Characters.....	264
3.2	PC Programming.....	267
3.2.1	Installing and Starting KX-TDA Maintenance Console.....	267
3.3	PT Programming	271
3.3.1	Programming Instructions	271
3.3.2	Basic Programming.....	274
3.3.3	System Management Programming	276
3.3.4	Time Programming.....	278
3.3.5	TRS/ARS Programming.....	279
3.3.6	CO Line Programming	282

3.3.7	COS Programming	286
3.3.8	Extension Programming	288
3.3.9	Resource/Interface Programming	294
3.3.10	SMDR & Maintenance Programming	295
3.3.11	Card Programming	297

4 KX-TDA Maintenance Console Operating Instructions 299

4.1	Introduction	300
4.1.1	Software Modes	300
4.1.2	Status Bar	300
4.1.3	Access Levels	300
4.1.4	Standard Buttons	304
4.1.5	Card Status	304
4.1.6	Display Options	304
4.2	File	306
4.2.1	File—New	306
4.2.2	File—Open	306
4.2.3	File—Close	307
4.2.4	File—Save	307
4.2.5	File—Save As	307
4.2.6	File—eXit	307
4.3	Connect	309
4.3.1	Connect—RS-232C	309
4.3.2	Connect—USB	309
4.3.3	Connect—LAN	310
4.3.4	Connect—Modem	310
4.3.5	Connect—Disconnect	311
4.4	Tool	313
4.4.1	Tool—SD memory backup	313
4.4.2	Tool—NDSS Link Data Clear	313
4.4.3	Tool—Extension List View	313
4.4.4	Tool—Import	314
4.4.5	Tool—Export	316
4.4.6	Tool—System data Convert	316
4.5	Utility	318
4.5.1	Utility—Diagnosis	318
4.5.2	Utility—File Transfer PC to PBX (SD Card)	320
4.5.3	Utility—File Transfer PBX (SD Card) to PC	323
4.5.4	Utility—SD Card File View and Load	323
4.5.5	Utility—SD Card File Delete	324
4.5.6	Utility—Message File Transfer PC to PBX	324
4.5.7	Utility—Message File Transfer PBX to PC	325
4.5.8	Utility—Error Log	325
4.5.9	Utility—T1 Signalling Bit Monitor	326
4.5.10	Utility—T1 Line Trace	327
4.5.11	Utility—ISDN/QSIG Protocol Trace	327
4.5.12	Utility—Digital Trunk Error Report	328
4.5.13	Utility—IP Extension Statistical Information	329
4.5.14	Utility—CS Information	329
4.5.15	Utility—PS Information	330
4.5.16	Utility—Timed Update	331

4.5.17	Utility—System Reset—Reset by the Command.....	332
4.5.18	Utility—Flash ROM ID Information.....	333
4.6	Help.....	334
4.6.1	FAQ.....	334
4.7	Configuration [1].....	343
4.7.1	Slot [1-1].....	343
4.7.2	Slot [1-1] MPR Card Property.....	345
4.7.3	Slot [1-1] Extension Card Property.....	346
4.7.4	Slot [1-1] CSI/F Card Property.....	350
4.7.5	Slot [1-1] LCO Card Property.....	350
4.7.6	Slot [1-1] PRI Card Property.....	359
4.7.7	Slot [1-1] T1 Card Property.....	371
4.7.8	Slot [1-1] IP-GW Card Property.....	381
4.7.9	Slot [1-1] IP-Extension Card Property.....	381
4.7.10	Slot [1-1] OPB.....	384
4.7.11	Slot [1-1] OPB Card Command.....	388
4.7.12	Slot [1-1] CTI-LINK Card Property.....	389
4.7.13	Slot [1-1] Card Command.....	391
4.7.14	Portable Station [1-2].....	393
4.7.15	Clock Priority [1-3].....	396
4.7.16	Option [1-4].....	397
4.7.17	LCO Port [1-5].....	397
4.7.18	LCO Port [1-5] Port Command.....	401
4.7.19	PRI Port [1-6].....	401
4.7.20	PRI Port [1-6] Port Command.....	415
4.7.21	T1 Port [1-7].....	416
4.7.22	T1 Port [1-7] Channel Command.....	422
4.7.23	Extension Port [1-8].....	423
4.7.24	Extension Port [1-8] Port Command.....	429
4.7.25	Extension Port [1-8] Port Type View.....	429
4.7.26	CSI/F Port [1-9].....	430
4.7.27	CSI/F Port [1-9] Port Command.....	431
4.7.28	IP-GW Port [1-10].....	432
4.7.29	IP-GW Port [1-10] Port Command.....	433
4.7.30	IP-Extension Port [1-15].....	434
4.8	System [2].....	440
4.8.1	Date & Time/Daylight Saving—Date & Time [2-1-1].....	440
4.8.2	Date & Time / Daylight Saving—Daylight Saving [2-1-2].....	440
4.8.3	PBX Operator [2-2].....	442
4.8.4	BGM / Music on Hold [2-3].....	443
4.8.5	Timers & Counters—CO / Extension [2-4-1].....	444
4.8.6	Timers & Counters—DISA/DPH/CONF/T. Reminder [2-4-2].....	450
4.8.7	Timers & Counters—Miscellaneous [2-4-3].....	457
4.8.8	Time Service—Week Table [2-5-1].....	461
4.8.9	Time Service—Holiday Table [2-5-2].....	468
4.8.10	Numbering Plan—Extension [2-6-1].....	470
4.8.11	Numbering Plan—Feature [2-6-2].....	471
4.8.12	Numbering Plan—Other PBX Extension [2-6-3].....	494
4.8.13	Numbering Plan—Quick Dialing [2-6-4].....	495
4.8.14	Numbering Plan—B/NA DND Call Feature [2-6-5].....	496

4.8.15	Class of Service—COS Settings [2-7-1]	499
4.8.16	Class of Service—External Call Block [2-7-2]	509
4.8.17	Class of Service—Internal Call Block [2-7-3]	509
4.8.18	Ring Tone Patterns—Call from CO [2-8-1]	510
4.8.19	Ring Tone Patterns—Call from Doorphone [2-8-2]	510
4.8.20	Ring Tone Patterns—Call from Others [2-8-3]	511
4.8.21	System Options—Option 1 [2-9-1]	513
4.8.22	System Options—Option 2 [2-9-2]	517
4.8.23	System Options—Option 3 [2-9-3]	523
4.8.24	System Options—Option 4 [2-9-4]	528
4.8.25	CTI [2-10]	532
4.8.26	Audio Gain—Paging/MOH [2-11-1]	534
4.8.27	Extension Caller ID [2-12]	536
4.8.28	IP Extension Settings [2-13]	539
4.9	Groups [3]	541
4.9.1	Trunk Group—TRG Settings [3-1-1]	541
4.9.2	Trunk Group—Local Access Priority [3-1-2]	546
4.9.3	Extension Group [3-2]	547
4.9.4	Call Pickup Group [3-3]	548
4.9.5	Paging Group [3-4]	549
4.9.6	Incoming Call Distribution Group—Group Settings [3-5-1]	552
4.9.7	Incoming Call Distribution Group—Member [3-5-2]	566
4.9.8	Incoming Call Distribution Group—Queuing Time Table [3-5-3]	567
4.9.9	Extension Hunting Group [3-6]	568
4.9.10	VM(DPT) Group—System Setting [3-7-1]	569
4.9.11	VM(DPT) Group—Unit Setting [3-7-2]	571
4.9.12	VM(DTMF) Group—System Setting [3-8-1]	572
4.9.13	VM(DTMF) Group—Group Setting [3-8-2]	580
4.9.14	PS Ring Group [3-9]	582
4.10	Extension [4]	584
4.10.1	Wired Extension—Extension Settings [4-1-1]	584
4.10.2	Wired Extension—Extension Settings [4-1-1] CLIP Generate	617
4.10.3	Wired Extension—FWD/DND [4-1-2]	619
4.10.4	Wired Extension—Speed Dial [4-1-3]	623
4.10.5	Wired Extension—Flexible Key [4-1-4]	624
4.10.6	Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy	633
4.10.7	Wired Extension—PF Key [4-1-5]	634
4.10.8	Wired Extension—NDSS Link Data - Send [4-1-6]	634
4.10.9	Portable Station—Extension Settings [4-2-1]	635
4.10.10	Portable Station—Extension Settings [4-2-1] CLIP Generate	655
4.10.11	Portable Station—FWD/DND [4-2-2]	657
4.10.12	Portable Station—Flexible Key [4-2-3]	661
4.10.13	Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy	669
4.10.14	Portable Station—NDSS Link Data - Send [4-2-4]	670
4.10.15	DSS Console—Main [4-3-1]	670
4.10.16	DSS Console—Flexible Key [4-3-2]	671
4.10.17	DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy	680
4.11	Optional Device [5]	681
4.11.1	Doorphone [5-1]	681
4.11.2	External Pager [5-2]	683

4.11.3	DISA—System Setting [5-3-1]	684
4.11.4	DISA—Message Setting [5-3-2]	687
4.11.5	External Relay [5-4]	689
4.11.6	External Sensor [5-5]	691
4.12	Feature [6].....	694
4.12.1	Speed Dialing & Caller ID—Main Table [6-1-1]	694
4.12.2	Speed Dialing & Caller ID—Caller ID Modification [6-1-2]	696
4.12.3	Speed Dialing & Caller ID—ISDN CLIP Modification [6-1-3].....	697
4.12.4	Emergency Dial [6-2]	698
4.12.5	Verified Code [6-3]	698
4.12.6	Second Dial Tone [6-4].....	700
4.12.7	Absent Message [6-5].....	701
4.12.8	Tenant [6-6].....	702
4.12.9	Dialing Plan [6-7].....	703
4.12.10	Dialing Plan [6-7] Auto Assign	704
4.12.11	Hotel [6-8]	705
4.13	TRS [7]	707
4.13.1	Denied Code [7-1].....	707
4.13.2	Exception Code [7-2]	707
4.13.3	Special Carrier [7-3]	708
4.13.4	Miscellaneous [7-4].....	708
4.14	ARS [8].....	711
4.14.1	System Setting [8-1].....	711
4.14.2	Leading Number [8-2]	712
4.14.3	Routing Plan Time [8-3]	713
4.14.4	Routing Plan Priority [8-4]	714
4.14.5	Carrier [8-5].....	714
4.14.6	Leading Number Exception [8-6]	717
4.15	Private Network [9]	719
4.15.1	TIE Table [9-1].....	719
4.15.2	Network BLF Data Transfer [9-2]	721
4.15.3	Network Operator (VoIP) [9-3]	723
4.15.4	NDSS Key Table [9-4]	723
4.16	CO & Incoming Call [10].....	726
4.16.1	CO Line Setting [10-1]	726
4.16.2	DIL Table & Port Setting [10-2]	727
4.16.3	DID Table [10-3].....	735
4.16.4	DID Table [10-3] Automatic Registration.....	737
4.16.5	DID Table [10-3] Name Generate	739
4.16.6	Miscellaneous [10-4].....	740
4.17	Maintenance [11].....	743
4.17.1	SMDR [11-1]	743
4.17.2	PT System Program [11-2].....	749
4.17.3	Power Failure Transfer [11-3].....	749
4.17.4	Miscellaneous [11-4]	750
4.17.5	Password Setting [11-5].....	756
5	Appendix	759
5.1	Capacity of System Resources	760
5.1.1	Capacity of System Resources.....	760
5.2	Tones/Ring Tones	763

5.2.1	Tones/Ring Tones.....	763
5.3	Revision History.....	765
5.3.1	Version 1.1	765
5.3.2	Version 2.0	766
Index.....		769

Section 1

Call Handling Features

1.1 Incoming Call Features

1.1.1 Incoming CO Line Call Features

1.1.1.1 Incoming CO Line Call Features—OVERVIEW

Description

Each CO line functions as either a public line or a private line. Private lines are used to connect different PBXs and form a private network (→ 1.27.1 TIE Line Service), while public lines connect a PBX to a public network, i.e., the telephone company. Certain PBX features are available depending on the networking type (public or private) of each CO line.

1. Networking Type Used by Each CO Line

Each CO line port (channel) of a CO line card is assigned a port (channel) type which determines the CO line's networking type—public or private.

CO Line Card	Port (Channel) Type	Networking Type	
		Public	Private
LCOT	—	✓	
T1	LCOT	✓	
	GCOT	✓	
	DID	✓	
	TIE (E&M)	✓	✓
	OPX (EXTN.)		
PRI	CO	✓	
	Extension		
	QSIG-Master		✓
	QSIG-Slave		✓
IP-GW	—		✓

✓ Default

✓ Available

2. Distribution Method

Each public CO line port (channel) can use a different method of directing calls to their destinations as they are received.

Distribution Method	Description	Details in
Direct In Line (DIL)	Directs a call to a preprogrammed destination, such as an operator, based on the CO line carrying the call.	• 1.1.1.2 Direct In Line (DIL)
Direct Inward Dialing (DID)	Directs a call received on a DID line to a preprogrammed destination based on the telephone number dialed by the caller.	• 1.1.1.3 Direct Inward Dialing (DID)

Calling Line Identification (CLI) distribution is the most customizable call distribution method available. It allows calls from specific people to be directed to specific destinations, based on the callers' telephone numbers. CLI distribution, when enabled for the current time mode, takes precedence over DIL or DID distribution.

Feature	Description	Details in
Calling Line Identification (CLI) Distribution	Directs a call to its preprogrammed destination if the caller's telephone number and its CLI destination has been stored in the System Speed Dialing Table.	• 1.1.1.4 Calling Line Identification (CLI) Distribution

3. Available Distribution Method for Public CO Lines

CO Line Card	Port (Channel) Type	Distribution Method	
		DIL	DID
LCOT	—	✓	
T1	LCOT	✓	
	GCOT	✓	
	DID	✓	✓
	TIE (E&M)	✓	✓
PRI	CO	✓	✓

✓ Default

✓ Available

4. Available Destination

The following destination types can be programmed as DIL, DID, or CLI destinations.

Destination Type	Availability
Wired Extension (PT/SLT/T1-OPX)	✓
PS	✓
ICD Group	✓
PS Ring Group	✓
VM Group (DTMF/DPT)	✓
External Pager (TAFAS)	✓
DISA	✓
Analog/ISDN Remote Maintenance	✓
Idle Line Access no. + Phone no.	
CO Line Group Access no. + CO Line Group no. + Phone no.	
Extension of Another PBX (via TIE Line, Access with PBX Code)	
Extension of Another PBX (via TIE Line, Access without PBX Code)	✓

5. Intercept Routing

After a call has been directed to its DIL, DID, or CLI destination, the following Intercept Routing features, if programmed, can redirect the call.


Type	Description	Details in
No Answer (IRNA)	If a called party does not answer a call within a preprogrammed time period (Intercept time), the call is redirected to a preprogrammed destination.	• 1.1.1.5 Intercept Routing
Busy	If a called party is already handling another call, the new call is redirected to a preprogrammed destination.	
DND	If a called party is in Do Not Disturb (DND) mode, the call is redirected to a preprogrammed destination.	
No Destination	If a destination is not assigned, the call is redirected to an operator.	• 1.1.1.6 Intercept Routing—No Destination

1.1.1.2 Direct In Line (DIL)

Description

Directs an incoming public CO line call to a preprogrammed destination based on the CO line carrying the call. Each CO line has a destination for each time mode.

[Method Flowchart]

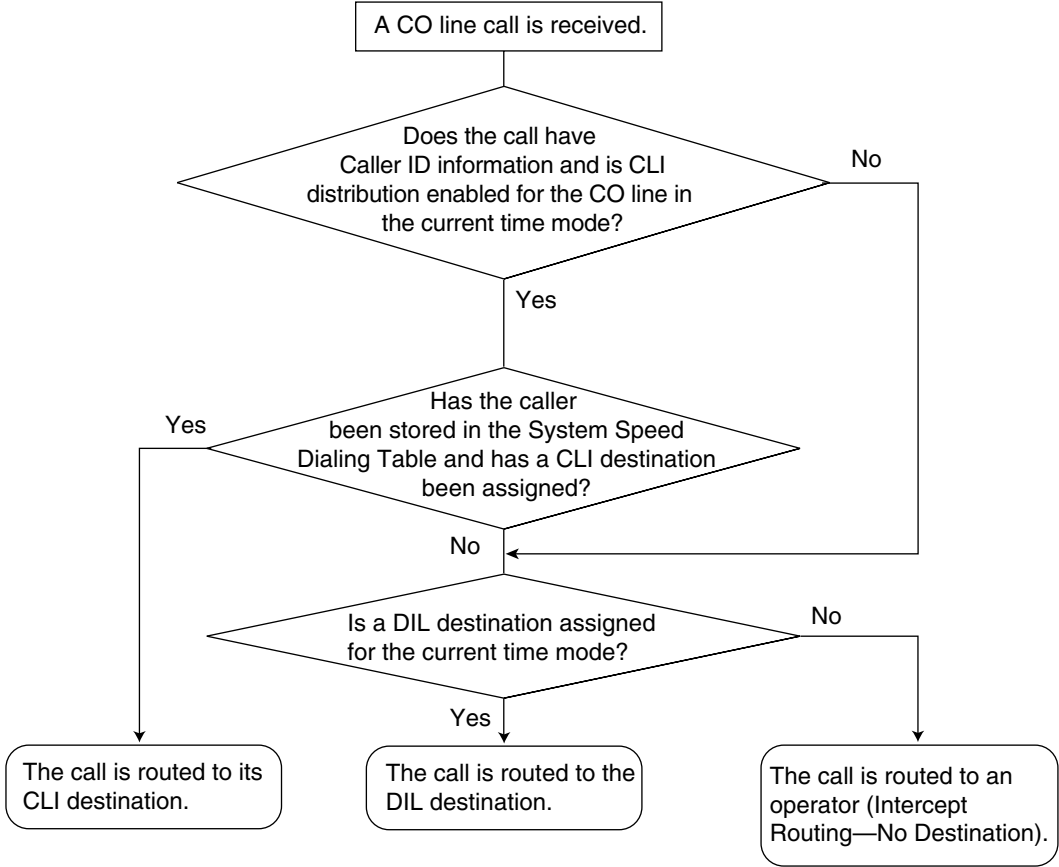

[Programming Example: DIL Table]

The table can be programmed for each CO line.

Port No. (CO Line No.)	CLI Distribution				DIL Destination*			
	Day	Lunch	Break	Night	Day	Lunch	Break	Night
01	Enable	Disable	Enable	Disable	101	100	101	100
02	Enable	Disable	Disable	Disable	102	100	102	100

* → DIL 1:1 Destination [450]

In this example:

If a CO line call is received on CO line 01:

In day mode: Calling Line Identification (CLI) distribution is enabled. The call is routed to its CLI destination, if assigned. If not assigned, the call is routed to the Direct In Line (DIL) destination, extension 101.

In lunch mode: CLI distribution is disabled. The call is routed to the DIL destination, extension 100.

Note

Tenant numbers and VPS trunk (CO line) group numbers (not shown here) can also be programmed in the DIL Table.

The tenant number programmed here is used only to determine the Time Table used by each CO line; selecting tenant 3 means the CO line will use Time Table 3, for example. The VPS trunk (CO line) group number set here is used to determine the Incoming Call Service and greeting message used by the Voice Processing System (VPS) during the current time mode. (→ 1.21.2 Voice Mail DPT (Digital) Integration).

Conditions

- To use this feature, DIL must be assigned as the distribution method for the desired CO line port.

Feature References

1.1.1.4 Calling Line Identification (CLI) Distribution

2.2.4 Time Service


1.1.1.3 Direct Inward Dialing (DID)

Description

Directs a call on a public CO line assigned as a Direct Inward Dialing (DID) line to a preprogrammed destination according to the call's DID number, which is based on the telephone number dialed by the caller. When a call reaches its destination via DID distribution, the DID name will be displayed on the proprietary telephone (PT), allowing extension users to easily see whom a call is directed to. Each DID number has a destination for each time mode.

DID distribution allows you to use your telephone numbers for specific purposes. For example, you can direct calls from customers' fax machines to your office fax machine automatically, or allow your overseas customers to be automatically connected to specific operators.

[Method Flowchart]

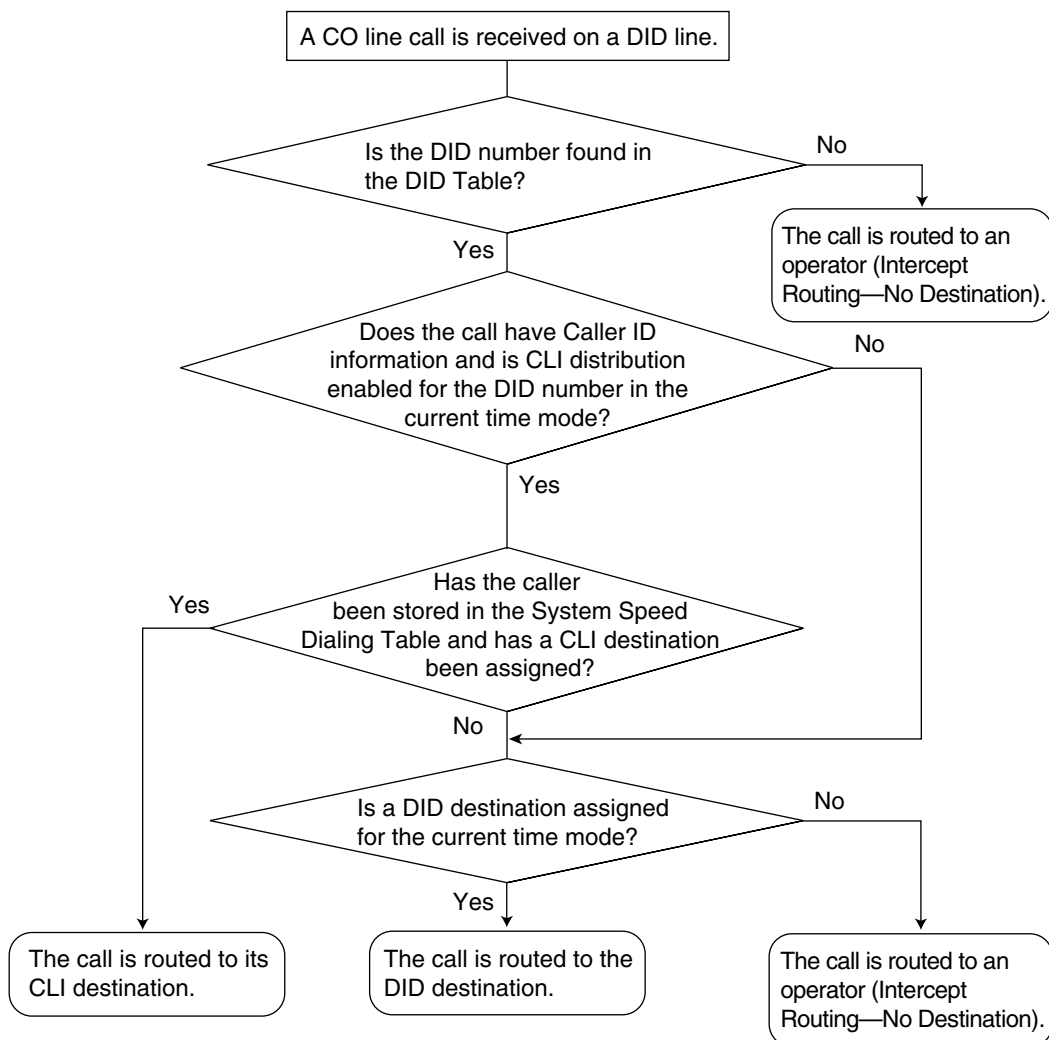

[Programming Example: DID Table]

Location	DID No. ^{*1}	DID Name ^{*2}	CLI Distribution				DID Destination ^{*3}			
			Day	Lunch	Break	Night	Day	Lunch	Break	Night
1	123-4567	Sales	Enable	Disable	Enable	Disable	105	100	105	100
2	123-2468	Judy	Enable	Disable	Disable	Disable	102	100	102	100

*1 → DID Number [451]

*2 → DID Name [452]

*3 → DID Destination [453]

In this example:

If the DID number is "123-4567":

- 1) The PBX looks for the DID number in the table and finds it in location 1.
- 2) The PBX checks the time mode.

In day mode: Calling Line Identification (CLI) distribution is enabled. The call is routed to its CLI destination, if assigned. If not assigned, the call is routed to the DID destination, extension 105, and "Sales" is displayed.

In lunch mode: CLI distribution is disabled. The call is routed to the DID destination, extension 100, and "Sales" is displayed.

Note

Tenant numbers and VPS trunk (CO line) group numbers (not shown here) can also be programmed in the DID Table.

The tenant number programmed here is used only to determine the Time Table used by each DID number; selecting tenant 3 means the DID number will use Time Table 3, for example. The VPS trunk (CO line) group number set here is used to determine the Incoming Call Service and greeting message used by the Voice Processing System (VPS) during the current time mode. (→ 1.21.2 Voice Mail DPT (Digital) Integration).

Conditions

- To use this feature, DID must be assigned as the distribution method for the desired CO line port.

Feature References

1.1.1.4 Calling Line Identification (CLI) Distribution

2.2.4 Time Service

1.1.1.4 Calling Line Identification (CLI) Distribution

Description

Directs an incoming CO line call to a specific destination when the caller's telephone number matches a number in the System Speed Dialing Table. Each telephone number in this table can be assigned its own Calling Line Identification (CLI) destination.

CLI distribution allows you to direct calls from specific people to specific destinations, and has many applications. For example, you can program the PBX to automatically connect calls from priority clients to their sales representatives, or automatically connect mobile phone calls from an executive to his or her assistant.

In order for CLI distribution to function, the PBX must receive Caller ID information from the telephone company.

CLI distribution works in conjunction with both Direct In Line (DIL) and Direct Inward Dialing (DID) distribution; it can be enabled or disabled for each CO line (for DIL) and for each DID number, for each time mode.

When a call has Caller ID information and CLI distribution is enabled for the current time mode, CLI distribution will direct the call to its destination, ignoring preprogrammed DIL or DID destinations.

[Programming Example: System Speed Dialing Table]

Location (System Speed Dialing No.)	System Speed Dialing Name ^{*1}	Telephone No. ^{*2}	CLI Destination
000	ABC Company	912125551234	200
001	XYZ Company	913135551234	300

*1 → System Speed Dialing Name [002]

*2 → System Speed Dialing Number [001]

In this example:

If the caller's telephone number is "1-212-555-1234":

- 1) The PBX looks for the number in the System Speed Dialing Table. (The CO Line Access number, "9", is disregarded.) The number is found in location 000.
- 2) If CLI distribution is enabled in the current time mode for the DID number or for the CO line carrying the call (for DIL distribution), the call is routed to its CLI destination, extension 200.

Conditions

- **If Automatic Caller ID Modification is used:**
Store the modified number in the System Speed Dialing Table.

Feature References

- 1.1.1.2 Direct In Line (DIL)
- 1.1.1.3 Direct Inward Dialing (DID)
- 1.6.1.4 Speed Dialing—Personal/System
- 1.16.1 Caller ID

1.1.1.5 Intercept Routing

Description

Redirects an incoming CO line call to a preprogrammed destination when the original destination does not, or can not, answer the call. There are four types of Intercept Routing, described below.

Type	Description
No Answer (IRNA)	If a called party does not answer a call within a preprogrammed time period (→ Intercept Time [203]), the call is redirected to a preprogrammed intercept destination.
Busy	If a called party is already handling a call, new calls are redirected to a preprogrammed intercept destination.
DND	If a called party is in Do Not Disturb (DND) mode, the call is redirected to a preprogrammed intercept destination.
No Destination	If a call has no destination (i.e., if a destination is not assigned), the call is redirected to an operator. (→ 1.1.1.6 Intercept Routing—No Destination)

Intercept Routing redirects calls to destinations based on the original destination of the call, as shown in the table below. Different intercept destinations can be programmed for each time mode. Note that calls redirected by Intercept Routing—No Answer/Busy/DND are directed to the same destination, and that the intercept destination for Intercept Routing—No Destination is always an operator.

When the original destination is:	The Available Intercept Destination is:
<ul style="list-style-type: none"> Wired Extension (PT/SLT/T1-OPX) PS 	The destination assigned to the original extension (→ Extension Intercept Destination [604])
<ul style="list-style-type: none"> ICD Group 	The ICD Group Overflow destination assigned to the group (→ Destination for Overflow Time Expiration [625]) (→ 1.2.2.5 Overflow Feature)
<ul style="list-style-type: none"> PS Ring Group VM Group (DTMF/DPT) External Pager (TAFAS) 	The destination assigned to the CO line group carrying the call (→ CO Line Group Intercept Destination [470])
<ul style="list-style-type: none"> DISA 	The destination assigned to the CO line group carrying the call* (→ CO Line Group Intercept Destination [470])
<ul style="list-style-type: none"> Analog/ISDN Remote Maintenance Idle Line Access no. + Phone no. CO Line Group Access no. + CO Line Group no. + Phone no. Other PBX Extension (TIE with no PBX Code) Other PBX Extension (TIE with PBX Code) 	Not assignable (Intercept Routing is not available.)

* Intercept Routing will redirect a call only if the Direct Inward System Access (DISA) line is busy. Once a call reaches the destination extension using the DISA feature, the call can be redirected to the Intercept Routing destination assigned to that extension.

[Available Intercept Destination]

The following can be used as intercept destinations:

Intercept Destination	Availability
Wired Extension (PT/SLT/T1-OPX)	✓
PS	✓
ICD Group	✓
PS Ring Group	✓
VM Group (DTMF/DPT)	✓
External Pager (TAFAS)	✓
DISA	✓
Analog/ISDN Remote Maintenance	✓
Idle Line Access no. + Phone no.	✓
CO Line Group Access no. + CO Line Group no. + Phone no.	✓
Extension of Another PBX (via TIE Line, Access with PBX Code)	✓
Extension of Another PBX (via TIE Line, Access without PBX Code)	✓

Conditions

- **If the intercept destination is busy or in DND mode and therefore cannot receive the call:**
 - a) When the call was intercepted via Intercept Routing—No Answer, the call is sent back to the original destination and continues to ring at the original destination until answered.
 - b) When the call was intercepted via Intercept Routing—Busy and arrived through an LCOT or T1 (LCOT/GCOT) card, the call waits at the original destination. If the extension has Call Waiting activated, the user will hear a call waiting tone. When the call arrived on any other card, the caller hears a busy tone.
 - c) When the call was intercepted via Intercept Routing—DND and arrived through an LCOT or T1 (LCOT/GCOT) card, the call waits at the original destination and it rings. When the call arrived through any other card, the caller hears a busy tone.
- **If the intercept destination can, but does not, answer the call:**
The call continues to ring at the intercept destination until answered.
- **Intercept Routing—Busy/DND on/off**
Intercept Routing—Busy and Intercept Routing—DND can each be enabled or disabled for the entire system, through system programming. If enabled, calls will be routed to the appropriate destination. If disabled, a call to an extension which is busy or in DND mode will be handled as described below, depending on the type of CO line card carrying the call.
 - a) LCOT or T1 (LCOT/GCOT) Card: The caller will hear a ringback tone. If busy, the extension will not ring. If in DND mode, the extension will ring.
 - b) All Other CO Line Cards: The caller will hear a busy tone.
- **Idle Extension Hunting**
If an extension is a member of an idle extension hunting group, calls to that extension will not be redirected by Intercept Routing—Busy/DND. If the extension is busy or in DND mode, calls to that extension will be redirected to the next extension in the idle extension hunting group.

Feature References

1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND)

1.1.1.6 Intercept Routing—No Destination

Description

Directs a CO line call to an operator when the call has no assigned destination.

Conditions

- **Intercept Routing—No Destination on/off**
Intercept Routing—No Destination can be enabled or disabled for the entire system, through system programming. If disabled, the caller will hear a reorder tone.
Note that calls received through an LCOT or T1 (LCOT/GCOT) card will always be directed to an operator, even when this feature is disabled.
- **If an operator is not assigned:**
The default intercept destination will be the extension connected to the lowest numbered port, on the card installed in the lowest numbered slot.
- Intercept Routing—No Destination also applies to calls from doorphones.

Feature References

2.2.5 Operator Features

1.1.2 Internal Call Features

1.1.2.1 Internal Call Features—OVERVIEW

Description

There are two types of internal calls, described below.

Feature	Description	Details in
Intercom Call	A call from one extension to another.	• 1.5.3 Intercom Call
Doorphone Call	A call made from a doorphone to its preprogrammed destination, assigned to the doorphone's port, for the current time mode. (→ 2.2.4 Time Service)	• 1.15.1 Doorphone Call

[Available Destination]

The following destinations can be called internally.

Destination	When calling from	
	Extension	Doorphone
Wired Extension (PT/SLT/T1-OPX)	✓	✓
PS	✓	✓
ICD Group	✓	✓
PS Ring Group	✓	✓
VM Group (DTMF/DPT)	✓	✓
External Pager (TAFAS)	✓	✓
DISA		
Analog/ISDN Remote Maintenance	✓	
Idle Line Access no. + Phone no.	✓	✓
CO Line Group Access no. + CO Line Group no. + Phone no.	✓	✓
Extension of Another PBX (via TIE Line, Access with PBX Code)	✓	✓
Extension of Another PBX (via TIE Line, Access without PBX Code)	✓	✓

✓ Available

1.1.2.2 Internal Call Block

Description

Internal calls can be restricted based on the Class of Service (COS) assigned to the caller and to the called party.


[Programming Example: Internal Call Block]

Caller	Called Party			
	COS 1	COS 2	COS 3	COS...
COS 1				
COS 2		Block	Block	Block
COS 3	Block	Block		Block

In this example:

- a) COS 1 can make calls to all extensions.

- b) COS 2 can make calls to COS 1 only. (COS 2 cannot make calls to COS 2.)
- c) COS 3 can make calls to COS 3 only.

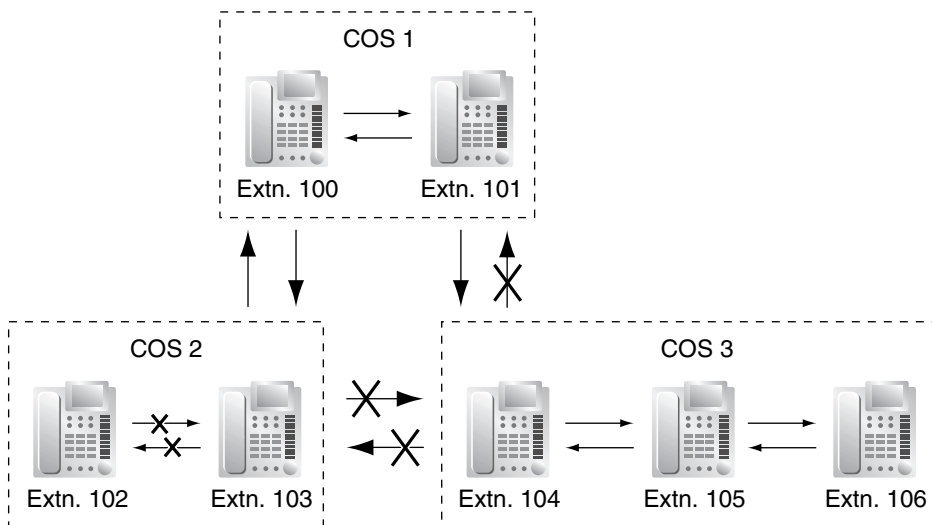

Conditions

- Internal Call Block also prohibits certain features, such as Walking Extension and Walking COS, from being performed between certain extensions.
- Any extension can make an Operator Call regardless of the Internal Call Block setting of its COS. (→ 2.2.5 Operator Features)
- Because each doorphone port is assigned a COS, the Internal Call Block feature can restrict certain extensions from calling certain doorphones. (→ 1.15.1 Doorphone Call)

Feature References

2.2.1 Class of Service (COS)

1.1.3 Incoming Call Indication Features

1.1.3.1 Incoming Call Indication Features—OVERVIEW

Description

Extension telephones can indicate an incoming call in various ways, described below.

Indication Type	Feature	Description	Details in
Ring Tone	Ring Tone Pattern Selection	A telephone rings when receiving a call. A different ring tone pattern can be assigned to each incoming call type.	• 1.1.3.2 Ring Tone Pattern Selection
Voice-calling	Alternate Receiving—Ring/Voice	Proprietary telephone (PT) users can choose how their telephones receive intercom calls, by selecting to hear ring tones or the caller's voice.	• 1.5.3 Intercom Call

Indication Type	Feature	Description	Details in
LED	LED Indication	The LED indicator on a PT can indicate the status of different lines using light patterns and colors.	• 1.18.3 LED Indication
Display (Caller Information)	Display Information	A user's PT can show a variety of information on the display, such as the line number, the caller's name and number, the original destination if the call was forwarded, etc.	• 1.18.4 Display Information
External Pager	Trunk Answer from Any Station (TAFAS)	A pager (loudspeaker) can be used to indicate when a call is received, useful in noisy or large workplaces.	• 1.15.3 Trunk Answer From Any Station (TAFAS)
Tone/Voice during a Conversation	Call Waiting	When an extension user is on another call, the user can be alerted to a new call by a call waiting tone, or the caller can speak directly through the user's handset or built-in speaker.	• 1.1.3.3 Call Waiting


1.1.3.2 Ring Tone Pattern Selection

Description

A different ring tone pattern can be assigned to each incoming call type, based on the Ring Tone Pattern Table of the extension.

There are several programmable Ring Tone Pattern Tables. Each table designates a ring tone for intercom calls, CO line calls, doorphone calls, etc., and each extension can choose its preferred ring tone pattern by selecting a table.

[Ring Tone Patterns]

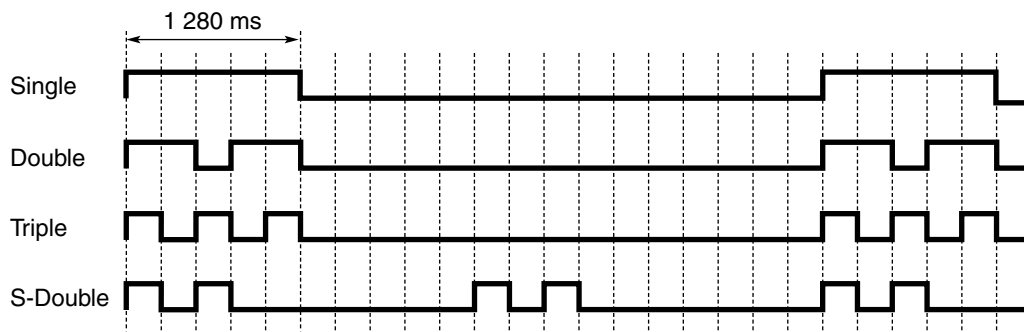

[Programming Example: Ring Tone Pattern Table]

Table No.	Intercom Call/Hold Recall	CO Line Call/Hold Recall		Doorphone Call		Timed Reminder	Call Back	LCS	External Sensor
		TRG1	TRG...	Port 1	Port ...				
1	Double	Single		Single					
2	Single	Double		Double					

Conditions

- "PT Ring off Setting" can be enabled or disabled through system programming. If disabled, proprietary telephone (PT) users cannot turn the ringer off for their extensions.

1.1.3.3 Call Waiting

Description

A busy extension user can be alerted to a new call by Call Waiting. The busy extension user can then answer the second call either by disconnecting the current call or placing it on hold.

One of the following notification methods can be assigned for each extension, depending on the type of telephone being used and the type of call that is waiting.

- Call Waiting Tone:** A tone is heard through the handset or built-in speaker.
- Off-hook Call Announcement (OHCA):** The caller's voice is heard through the built-in speaker.
- Whisper OHCA:** The caller's voice is heard through the handset.
- Off:** No call waiting notification is given.

Call Type	Available Notification Method	
	DPT	Other Telephone
Intercom Call	Call waiting tone/OHCA/Whisper OHCA/Off	Call waiting tone/Off
CO Line Call*	Call waiting tone/Off	

* Includes CO line calls transferred from another extension or received via an incoming call distribution (ICD) group, as well as doorphone calls.

This feature is also known as Busy Station Signaling (BSS).

Conditions

- An extension in a VM group (DPT/DTMF) cannot receive a call waiting tone. This is to prevent call waiting tones from interrupting the recording of voice mail messages.
- **Data Line Security**
When an extension user activates Data Line Security, Call Waiting is turned off. (→ 1.10.5 Data Line Security)
- **Call Waiting Tone**
A proprietary telephone (PT) user can select the preferred call waiting tone through personal programming (Call Waiting Tone Type Selection).
- **Caller Information**
When an extension receives a call waiting tone, the caller's information will flash on the display for five seconds at 15-second intervals.
- **Call Waiting from the Telephone Company**
Besides the Call Waiting feature provided by the PBX, you can also subscribe to your telephone company's Call Waiting service and receive call waiting tones from the telephone company's analog lines. If you do, this external call waiting tone will alert an extension user of another incoming CO line call that is waiting. The user can answer the second call by disconnecting the current call or placing it on hold using EFA.
For details, consult your telephone company.

- **Call Waiting Caller ID (Visual Caller ID)**
When using the call waiting tone supplied by the telephone company over analog lines, the caller's telephone number and name can be received. Either the name or the number will flash on the display for five seconds followed by a 10-second pause, then flash again for five seconds. Note that the received caller information will not be displayed on telephones or wireless phones connected to SLT ports.

Feature References

- 1.7.4 Second Call Notification to Busy Extension

Operation References

- 1.4.4 Call Waiting
- 1.7.3 Call Waiting/Off-hook Call Announcement (OHCA)/Whisper OHCA
- 3.1.2 Settings on the Programming Mode



1.2 Receiving Group Features

1.2.1 Idle Extension Hunting

Description

If a called extension is busy or in Do Not Disturb (DND) mode, Idle Extension Hunting redirects the call to an idle member of the same idle extension hunting group, which can be programmed through system programming (→ Idle Extension Hunting Group Member [681]). Idle extensions are automatically searched for according to a preprogrammed hunting type (→ Idle Extension Hunting Type [680]).

This feature is also known as Station Hunting.

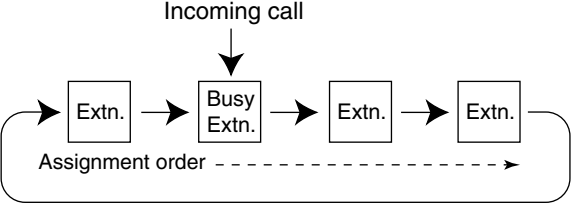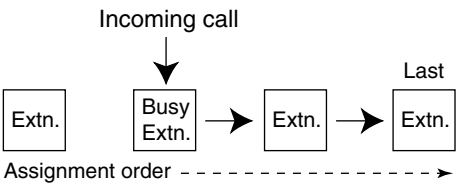Type	Description
Circular Hunting	<p>An idle extension is searched for in a circular fashion in the order in which the extensions were assigned to the group.</p>  <pre> graph TD IC[Incoming call] --> E1[Extn.] E1 --> BE[Busy Extn.] BE --> E2[Extn.] E2 --> E3[Extn.] E3 --> E1 AO[Assignment order] -.-> AO2[] style AO2 width:0px,height:0px AO2 -.-> E1 </pre>
Terminated Hunting	<p>An idle extension is searched for in the order in which the extensions were assigned to the group, until reaching the last extension assigned.</p>  <pre> graph TD IC[Incoming call] --> E1[Extn.] E1 --> BE[Busy Extn.] BE --> E2[Extn.] E2 --> E3[Extn.] E3 --> L[Last] AO[Assignment order] -.-> AO2[] style AO2 width:0px,height:0px AO2 -.-> E1 </pre>

Assignment order: Idle extensions are searched for in the order in which the extensions were assigned as members of the group through system programming. For example, if a call is directed to the fifth extension assigned to the group, hunting begins with the sixth extension.

Conditions

- **Idle Extension Hunting applies to:**
Intercom, CO line, and doorphone calls made to a single extension.
- An extension can belong to only one idle extension hunting group.
- **If all the searched extensions are busy:**
The PBX redirects the call to an overflow destination which can be assigned for each idle extension hunting group and each time mode.

[Available Destination]

The following can be used as overflow destinations assigned to an idle extension hunting group.

Destination	Availability
Wired Extension (PT/SLT/T1-OPX)	✓
PS	✓
ICD Group	✓
PS Ring Group	✓
VM Group (DTMF/DPT)	✓
External Pager (TAFAS)	✓
DISA	✓
Analog/ISDN Remote Maintenance	✓
Idle Line Access no. + Phone no.	✓
CO Line Group Access no. + CO Line Group no. + Phone no.	✓
Extension of Another PBX (via TIE Line, Access with PBX Code)	✓
Extension of Another PBX (via TIE Line, Access without PBX Code)	✓

- **FWD/DND Mode**
While searching for an idle extension, any extension which has set FWD—All Calls or DND will be skipped.

Feature References

1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND)

1.2.2 Incoming Call Distribution (ICD) Group Features

1.2.2.1 Incoming Call Distribution (ICD) Group Features— OVERVIEW

Description

An incoming call distribution (ICD) group is a group of extensions which is assigned a floating extension number. This floating extension number allows extensions in the group to answer calls directed to the group, as opposed to calls directed to just a single extension. ICD groups and their member extensions can be programmed in a variety of ways to handle incoming calls as desired.

The number of agents (extensions which can handle calls at the same time) is programmable for each ICD group, and each group can be assigned a distribution method used to distribute incoming calls to its agents. Once all agents are busy, additional calls can be placed in a queue as they are received. When the number of calls in the queue reaches a specified limit, they can be redirected to another destination.

1.2 Receiving Group Features

Additionally, an extension assigned as the group's supervisor extension can monitor the statistics of calls received by the group, the number of calls waiting in the queue, etc., as well as change the status of group members.

Extensions are assigned as members of an ICD group through system programming (→ ICD Group Member [620]), and can belong to more than one group.

[Programming Example: ICD Group]

A		B	C	D	E	F						
Group No.	Floating Extn. No. ^{*1}	Group Name ^{*2}	Distribution Method ^{*3}	Max. No. of Busy Extensions (No. of Agents) ^{*4}	Queuing Call Capacity ^{*5}	Hurry-up Level ^{*6}	Overflow Time ^{*7}	Overflow Destination ^{*8}				Tenant No. ^{*9}
								Day	Lunch	Break	Night	
1	290	Sales	Ring	3	5	3	60	100	103	100	100	1
2	291	Engineering	UCD	Max.	11	8	90	200	203	200	200	5
3												

*1 → ICD Group Floating Extension Number [622]

*2 → ICD Group Name [623]

*3 → ICD Group Distribution Method [624]

*4 → Maximum Number of Agents [632]

*5 → Queuing Call Capacity [628]

*6 → Queuing Hurry-up Level [629]

*7 → Overflow Time [626]

*8 → Destination for Overflow Time Expiration [625]/Destination When All Busy [627]

*9 The tenant number programmed here is used to determine:


a) The audio source for Music on Hold

b) The Time Table used by each ICD group. (Selecting tenant 3 means the group will use Time Table 3, for example.)

Items A through F in the programming example above are described in the following diagram.

[Example of ICD Group 1 (Above)]

A through F below indicate settings shown above in "Programming Example: ICD Group". The numbers found in circles below indicate calls and the order in which they arrived.

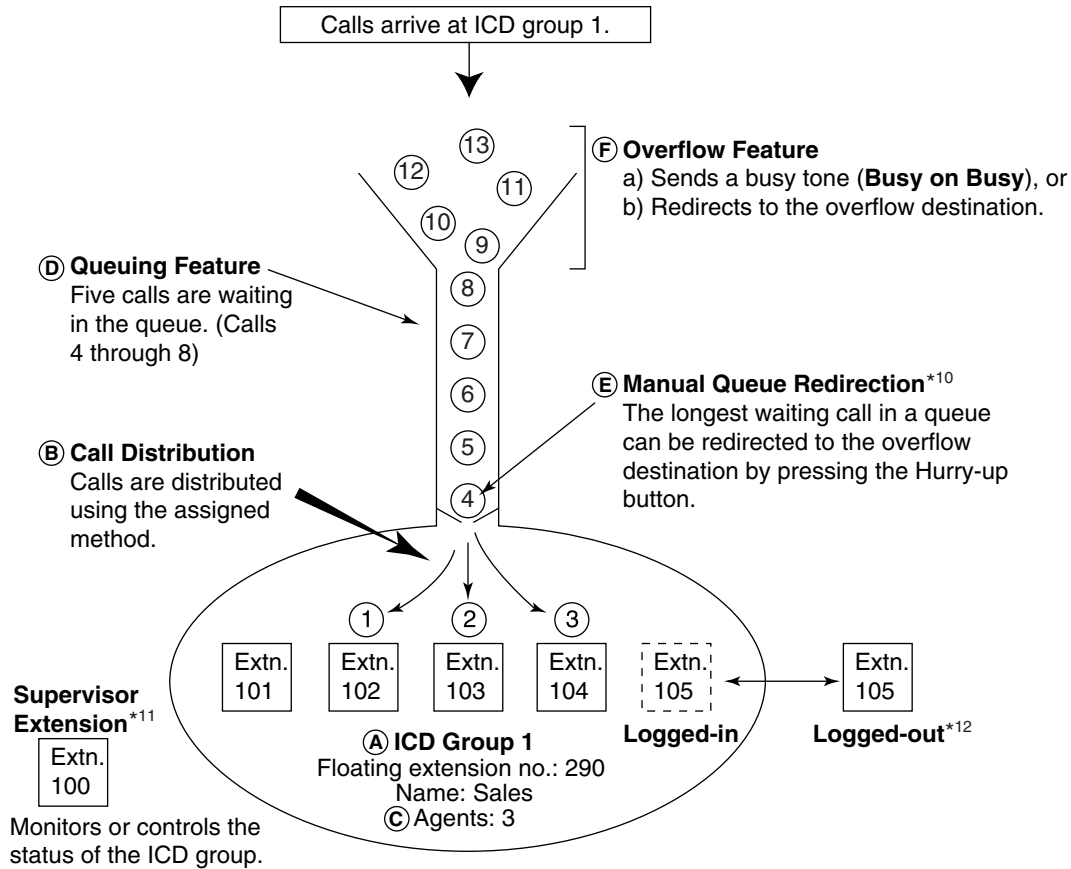

^{*10} → 1.2.2.3 Queuing Feature
^{*11} → 1.2.2.7 Supervisory Feature
^{*12} → 1.2.2.6 Log-in/Log-out

1. Group Call Distribution [→ 1.2.2.2 Group Call Distribution]

Incoming calls are distributed to agents of an ICD group using one of three methods, described below.

Distribution Method	Description
Uniform Call Distribution (UCD)	Each call is distributed to the extension following the last extension to answer a call, ensuring calls are distributed evenly.
Priority Hunting	An idle extension is searched for in a preprogrammed order.
Ring	All extensions in the ICD group ring simultaneously.

2. Queuing Feature [→ 1.2.2.3 Queuing Feature]

If a preprogrammed number of extensions in an ICD group are busy, a preprogrammed number of additional calls can be placed in a queue as they are received.

While calls are waiting in the queue, an outgoing message (OGM) or Music on Hold can be played for waiting callers.

3. VIP Call [→ 1.2.2.4 VIP Call]

ICD groups can be assigned a priority, allowing calls in higher-priority groups to be answered before calls in lower-priority groups.

4. Overflow Feature [→ 1.2.2.5 Overflow Feature]

When calls cannot be answered or queued, they can be redirected to a preprogrammed destination via ICD Group Overflow. Callers can also get a busy tone (Busy on Busy) or be disconnected.

5. ICD Group Control Features

Feature		Description	Details in
Log-in/Log-out		Member extensions can join (log-in) the group to handle calls, or leave (log-out) the group to take a break. Wrap-up time can be given to users after each call, allowing them time to finish their paperwork before being eligible to receive a new call.	• 1.2.2.6 Log-in/Log-out
Supervisory Feature	Incoming Call Queue Monitor	The supervisor extension can monitor various information about the group's calls on its display.	• 1.2.2.7 Supervisory Feature
	Log-in/Log-out Monitor and Remote Control	Monitor: The supervisor extension can monitor the Log-in/Log-out status of group members. Remote Control: The supervisor extension can change the status of group members.	

Conditions

- An extension can belong to more than one ICD group.
- **G-DN button**
Normally incoming calls will arrive on a CO button or on the INTERCOM button of an extension user's telephone. When a call arrives, a button will light accordingly. In this situation however, it is difficult to tell whether an incoming call is directed to the individual user, or to an ICD group the user belongs to. Using flexible buttons, extension users can create a Group Directory Number (G-DN) button for each ICD group they are a member of. These buttons can then be used to receive incoming calls to the corresponding group, indicate the user's Log-in/Log-out status, etc.
An extension can have more than one G-DN button for the same ICD group. (**Multiple G-DN**). If every G-DN button of the same group is occupied on all agents' telephones, the next incoming call will be held in a queue or will overflow.
Even though an extension can have a G-DN button for an ICD group that the extension is not a member of, the G-DN button will not receive calls to that group and will have no function.
- **Group FWD**
The Call Forwarding (FWD) feature can be programmed for each ICD group, allowing all calls to that group to be forwarded to a specific destination. The forward destination can be an outside party if the COS assigned to the group allows it.
- **Internal Call Block**
Internal calls from an extension to an ICD group can be restricted based on the COS assigned to the extension and the group.

Feature References

- 1.3.1.2 Call Forwarding (FWD)
- 1.18.2 Flexible Buttons



1.2.2.2 Group Call Distribution


Description

Each incoming call distribution (ICD) group has a specified number of extensions which can handle calls at the same time. (→ Maximum Number of Agents [632]) This allows you to devote some of your staff to answering calls (call agents) while others carry on with their work. As calls are directed to the group, they are distributed to extensions using the desired distribution method until the preprogrammed number of agents are busy with calls. Once this number is exceeded, new calls to the group are placed in a queue (→ 1.2.2.3 Queuing Feature).

1. Distribution Method

Each ICD group can use a different method of distributing calls to its member extensions (→ ICD Group Distribution Method [624]), described below.

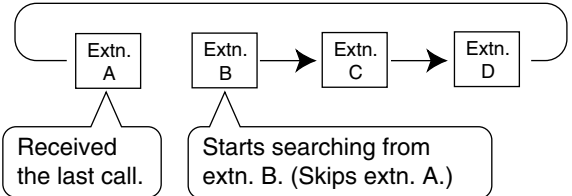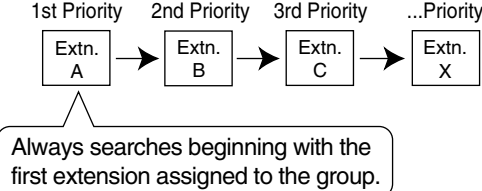Distribution Method	Description
Uniform Call Distribution (UCD)	<p>Available extensions are searched for in the order in which they were assigned to the group, starting with the extension assigned after the last extension to answer a call. Searching is circular, i.e., if a call is answered by the last extension assigned to the group, the next call will start searching for an available extension beginning with the first extension.</p>  <pre> graph LR A[Extn. A] --> B[Extn. B] B --> C[Extn. C] C --> D[Extn. D] D --> A </pre> <p>Received the last call. (points to Extn. A)</p> <p>Starts searching from extn. B. (Skips extn. A.) (points to Extn. B)</p>
Priority Hunting	<p>Available extensions are searched for in the order in which they were assigned to the group.</p>  <pre> graph LR A[Extn. A] --> B[Extn. B] B --> C[Extn. C] C --> X[Extn. X] </pre> <p>Always searches beginning with the first extension assigned to the group. (points to Extn. A)</p>

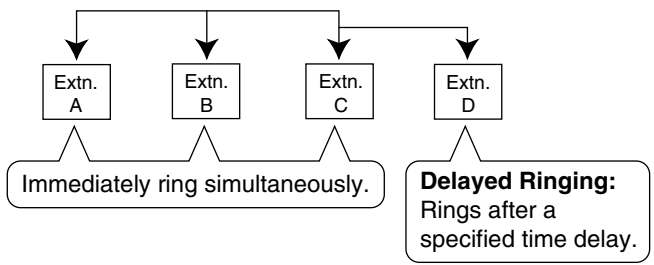Distribution Method	Description
Ring	<p>All extensions in the group ring simultaneously.</p> <p>Delayed Ringing Each extension can be programmed for Delayed Ringing (→ ICD Group Delayed Ringing [621]), which allows extensions to be alerted to calls by flashing buttons only. Each extension can be programmed to not ring at all, or to ring only after a preprogrammed time has passed. Received calls can be answered even if they are not ringing.</p> 

2. Call Waiting for ICD Group (Group Call Waiting)

If all agents in a group are busy when a call arrives they can receive a call waiting tone. The Group Call Waiting mode selected through system programming determines how the call waiting tone is distributed to the agents.

Note

Each member extension must turn on Call Waiting for his or her extension in order to receive a group call waiting tone. (→ 1.1.3.3 Call Waiting)

[How the Group Call Waiting Feature Works]

The selected Group Call Waiting mode and Group Call Distribution method determine how call waiting tones are distributed to agents of a group.

When Group Call Waiting Mode is:	And Group Call Distribution Method is:	Group Call Waiting Distribution will be:	Compatible Telephone
Distribution	UCD	UCD	PT/PS with idle G-DN button
	Priority Hunting	Priority Hunting	
	Ring	Not available*	Any telephone
All	Any of the above	Ring (All busy extensions hear a call waiting tone)	

* Incoming calls are placed in the queue upon arrival. Member extensions will not hear call waiting tones.

If Group Call Waiting mode is "Distribution" and Group Call Distribution method is "Priority Hunting", the extension with priority will hear a call waiting tone.


If Group Call Waiting mode is "All", every extension will hear a call waiting tone, no matter which Group Call Distribution method is programmed.

[G-DN Button for Group Call Waiting]

Group Call Waiting works differently depending on the assigned Group Call Waiting Distribution method, as follows:

- a) **Ring:** All busy extensions hear a call waiting tone simultaneously for the first incoming call, even if they do not have a Group Directory Number (G-DN) button. Additional calls are placed in the queue upon arrival.
- b) **UCD/Priority Hunting:** A call waiting tone is heard and an idle G-DN button flashes on an agent's telephone, according to the group's distribution method (UCD or Priority Hunting). As calls continue to arrive, they will be received on G-DN buttons until every G-DN button on every agent's telephone is occupied, after which additional calls will be placed in the queue, as shown in the figure below.

Note that if an extension's G-DN buttons for a certain group are completely occupied, the Group Call Waiting for the group will not work at that extension.

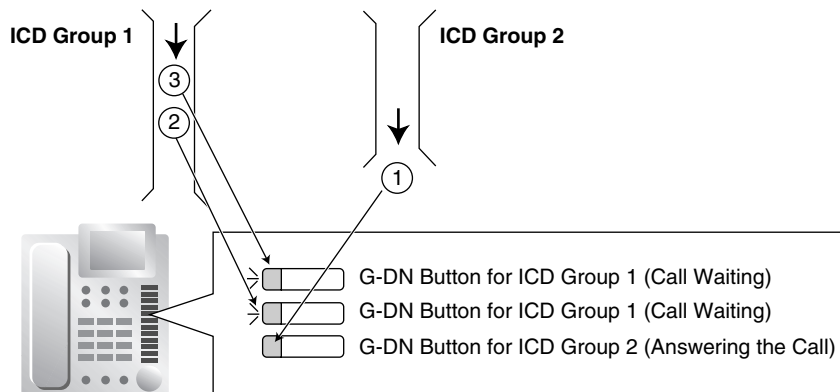**3. No Reply Redirection (UCD or Priority Hunting Method)**

If a call received at an agent's extension is not answered within a preprogrammed time period (No Answer time), the call will be redirected to the next agent according to the group's distribution method. If there is no available agent, the call waits until one becomes available.

Conditions

- **FWD/DND Extension**
Although members of an ICD group can set Call Forwarding (FWD) or Do Not Disturb (DND) for their extensions, each group can be programmed to ignore these settings, in which case the extensions will ring. (→ 1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND))
- Group Call Waiting cannot be used simultaneously with VIP Call (→ 1.2.2.4 VIP Call) and/or Wrap-up (→ 1.2.2.6 Log-in/Log-out), as Call Waiting must be turned off in order for VIP Call or Wrap-up to function.

1.2.2.3 Queuing Feature**Description**

When a preprogrammed number of extensions (→ Maximum Number of Agents [632]) in an incoming call distribution (ICD) group are busy, additional calls can be placed in a queue as they arrive. Once a preprogrammed number of calls are waiting in the queue (→ Queuing Call Capacity [628]), additional calls will be directed to the group's overflow destination (→ 1.2.2.5 Overflow Feature). While calls are waiting in

1.2 Receiving Group Features

the queue, the calls are handled according to a Queuing Time Table (→ Queuing Time Table [630]), which can be assigned for each time mode (→ 2.2.4 Time Service).

Each Queuing Time Table consists of up to 16 sequences. Each sequence consists of a command which plays audio for the caller or controls how the call is routed, and once one sequence has been performed, the next sequence is performed if the caller is still waiting. The commands which can be selected for each sequence are explained below.

[Queuing Time Table Commands]

Command	Description	Condition
OGM	An outgoing message (OGM) is played for the caller.	Once the message has been played, the next sequence is activated.
Wait	The caller waits for the specified time while hearing a ringback tone or Music on Hold.	Music on Hold is played for the caller for the specified amount of time. If an OGM command has not been programmed for a sequence preceding the Wait command, the caller will hear a ringback tone for the specified amount of time.
Sequence	Jumps to a specified sequence. Used to create a loop within the table.	None
Overflow	Directs the call to the overflow destination.	None
Disconnect	Disconnects the call.	None
None	Skips to the next sequence.	If assigned to sequence 01, the Queuing Time Table will be disabled.


[Programming Example: Queuing Time Table]

Queuing Time Table No.	Sequence ^{*1}					
	Sequence 01	Sequence 02	Sequence 03	Sequence 04	...	Sequence 16 ^{*2}
01	OGM 01	Wait 30 s	OGM 03	Overflow		
02	Wait 20 s	OGM 08	Sequence 01			

*1 → Sequences in Queuing Time Table [631]

*2 A call will always be disconnected if it is not answered by the end of Sequence 16.

Example of Queuing Time Table 01 (Above)

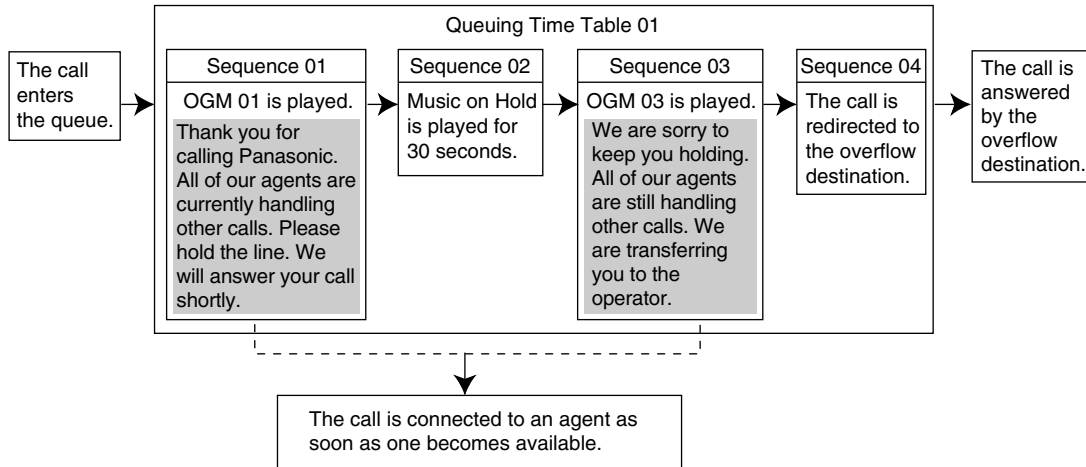

Conditions

- If a call is transferred to an ICD group and is handled by the Queuing Time Table, Transfer Recall will not occur even if the Transfer Recall time expires (→ 1.11.1 Call Transfer).
- **Manual Queue Redirection**

The call which has waited the longest in the queue can be redirected manually to the overflow destination by pressing the Hurry-up button. Note that if a call is already ringing at an extension, it cannot be overflowed.

This feature is also known as Hurry-up Transfer.

Hurry-up Button

Any flexible button can be customized as the Hurry-up button. This button can be used for Manual Queue Redirection, and will also indicate the status of the group's queue using different light patterns, as described below.

Light Pattern	Calls in the Waiting Queue
Off	No queued calls
Red on	Calls are waiting in the queue
Rapid red flashing	The number of calls in the queue has exceeded the Queuing Hurry-up level (→ Queuing Hurry-up Level [629])

Feature References

- 1.2.2.5 Overflow Feature
- 1.18.2 Flexible Buttons

Operation References

- 1.8.3 Manual Queue Redirection

1.2.2.4 VIP Call


Description

Incoming call distribution (ICD) group can be assigned a priority, allowing calls in higher-priority groups (VIP calls) to be answered before calls in lower-priority groups.

To use VIP Call mode, it must first be enabled for at least one ICD group. Once it has been enabled, the priority of each group's calls is determined by its group number (lower-numbered groups have higher priority) and this priority affects which calls get directed to agents first. When an extension belongs to more than one group and it becomes idle, the next call it receives will be from the group with the highest priority of the groups it belongs to.

VIP Call mode is only useful in situations where extensions belong to multiple ICD groups. Also note that when VIP Call mode is disabled for two or more groups, calls to these groups are distributed evenly in arrival order.

In the example below, the three extensions are members of ICD groups 1 through 4. VIP Call mode is enabled for groups 1 and 3. Because group 1 is a lower-numbered group than 3, its calls will be answered first. Group 3 calls will be answered next, and groups 2 and 4, which do not have VIP Call mode enabled, are treated as equals. Calls from these two groups will be answered in arrival order after calls received by groups 1 and 3 are answered.

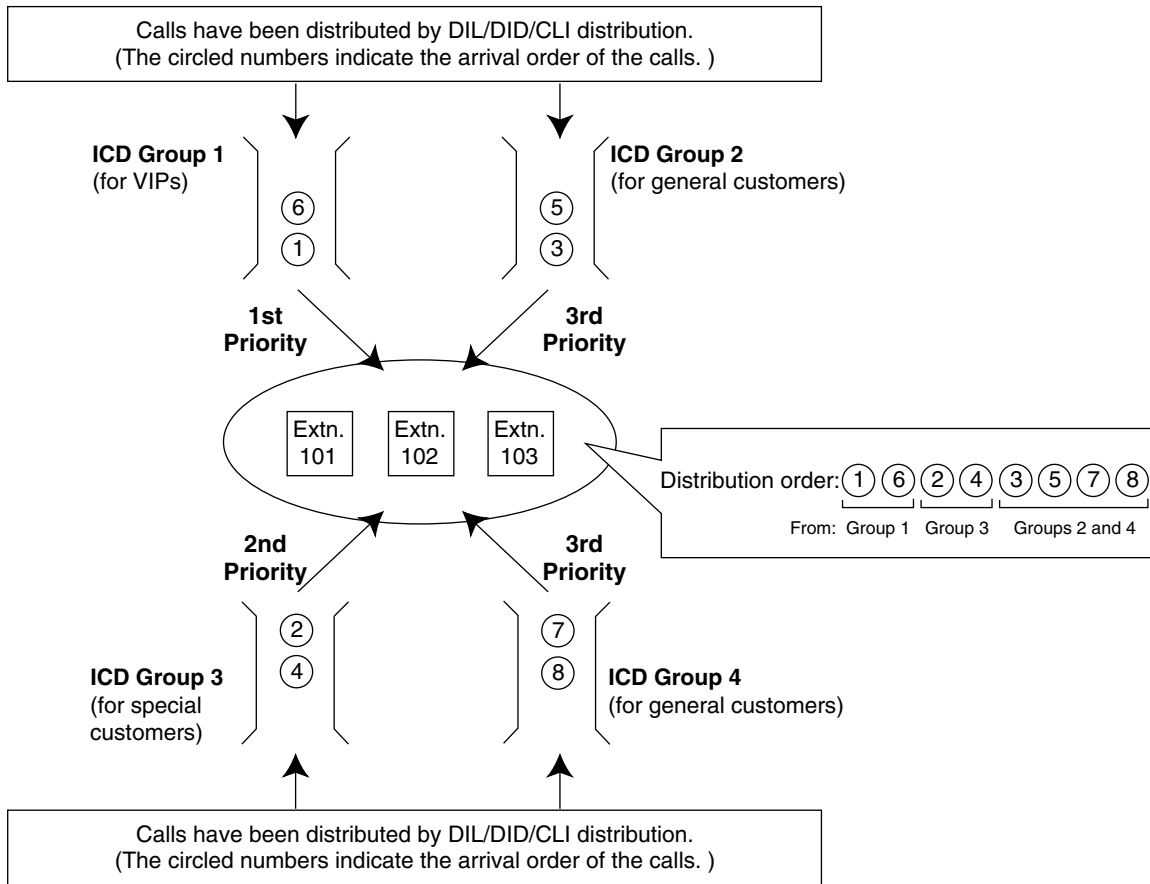

Conditions

- Group Call Waiting (→ 1.2.2.2 Group Call Distribution) cannot be used simultaneously with VIP Call. Even if VIP Call mode is enabled, it will not function when group extensions have turned on Call Waiting. Call Waiting must be turned off on all member extensions in order for VIP Call to function.

1.2.2.5 Overflow Feature

Description

When all agents in an incoming call distribution (ICD) group are handling calls, additional calls can be directed to a queue. When the queue is unable to accommodate additional calls (→ Queuing Call Capacity [628]), its calls can be handled by the Overflow feature. This feature can either direct calls to an overflow destination or give callers a busy tone. Overflow destinations can be assigned for each ICD group and each time mode.

Overflow Feature	Description	Works When:	Conditions
ICD Group Overflow	Redirects calls to a different overflow destination depending on the reason for the overflow. A destination can be assigned for each time mode.	a) There is no space in the queue. b) A Queuing Time Table is not assigned and there are no extensions logged-in.	A destination must be assigned. (→ Destination When All Busy [627])
		c) An Overflow command is assigned to the Queuing Time Table. d) The Overflow time (Overflow time [626]) expires. e) Manual Queue Redirection is performed. (Pressing the Hurry-up button.)	A destination must be assigned. (→ Destination for Overflow Time Expiration [625])
Busy on Busy	Gives callers a busy tone.	a) There is no space in the queue. b) A Queuing Time Table is not assigned and there are no extensions logged-in.	An overflow destination must not be assigned. (→ Destination When All Busy [627])

[Example of Busy on Busy in use]

You have five staff members, of which only two should be on the phone at the same time. When two agents are handling calls, you want callers to hear a busy tone (not a ringback tone) to let them know that your company is open for business.

Program your PBX as follows: the answering agent number (→ Maximum Number of Agents [632]) should be "2", and the queuing call number (→ Queuing Call Capacity [628]) should be "0". Do not assign an overflow destination (→ Destination When All Busy [627]).

[Available Destination]

The following can be used as overflow destinations.

Destination	Availability
Wired Extension (PT/SLT/T1-OPX)	✓
PS	✓
ICD Group	✓
PS Ring Group	✓
VM Group (DTMF/DPT)	✓
External Pager (TAFAS)	✓
DISA	✓
Analog/ISDN Remote Maintenance	✓
Idle Line Access no. + Phone no.	✓
CO Line Group Access no. + CO Line Group no. + Phone no.	✓
Extension of Another PBX (via TIE Line, Access with PBX Code)	✓
Extension of Another PBX (via TIE Line, Access without PBX Code)	✓

Conditions

[ICD Group Overflow]

- **If the Overflow time expires, and the overflow destination is unavailable:**

Redirection is ignored and the Overflow time restarts, except in the following situations.

If the call arrived through an LCOT or T1 (LCOT/GCOT) card, the line is disconnected either when the caller has already heard an outgoing message (OGM) while waiting in a queue, or when the call reached an ICD group using Direct Inward System Access (DISA) (→ 1.15.6 Direct Inward System Access (DISA)).

[Busy on Busy]

- If a CO line call arrives through an LCOT or T1 (LCOT/GCOT) card, the caller will not get a busy tone. Busy on Busy will not function.

Feature References

1.2.2.3 Queuing Feature

1.2.2.6 Log-in/Log-out

Description


Members of an incoming call distribution (ICD) group can join (log-in) or leave (log-out) groups manually. Group members can log-in at the beginning of a work shift when they are ready to answer calls, and log-out at the end of the day.

Wrap-up

While logged-in, ICD group members can be allotted a specified amount of time after completing a call (Wrap-up time) during which new calls will not be received by their extensions, allowing them to finish any necessary paperwork before being eligible to receive new calls. When Wrap-up time expires, new calls can be received at their extensions.

Extension users can also customize a flexible button to be used as the Wrap-up button, which allows users to extend their Wrap-up time or make themselves temporarily unavailable (Not Ready). Pressing this button again will return a user to Ready status.

[Example of Log-in, Log-out, Wrap-up, Not Ready, Ready]

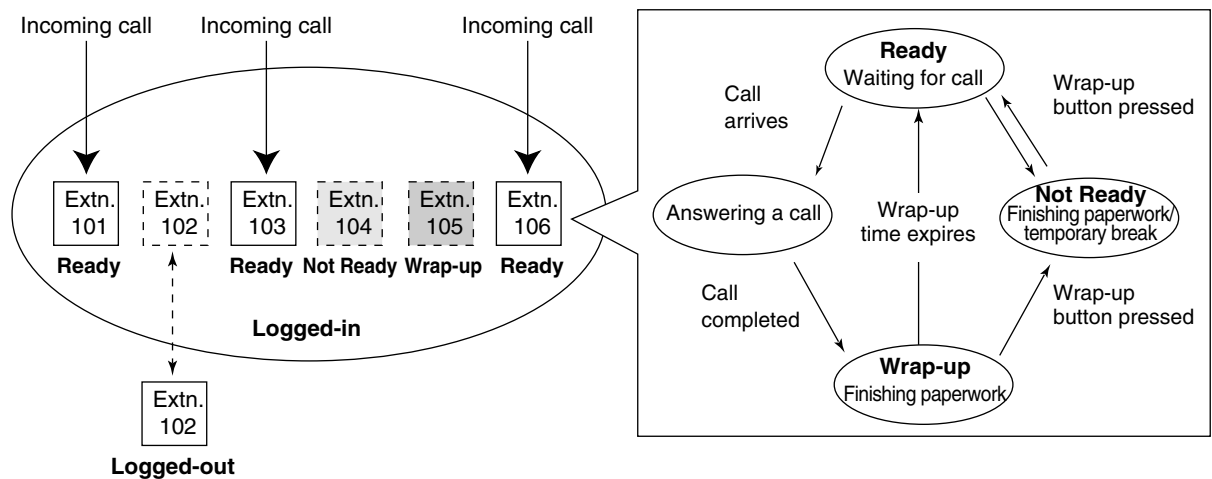

Conditions

- It is programmable whether the last remaining logged-in extension can log out.
- **Log-in/Log-out Button**

Any flexible button can be customized as a Log-in/Log-out button. Three types of buttons can be programmed, as explained below.

Log-in/Log-out Button Type	Usage	Programming	Light Pattern	
			Red on	Off
Group not specified	Log-in/Log-out button is pressed, followed by the floating extension number or Group Directory Number (G-DN) button of the desired group. Press * to log-in/log-out of all groups.	A flexible button must be customized as the Log-in/Log-out button.	—	—
Group is specified	Log-in/Log-out button is pressed. The preprogrammed group is logged-in to/logged-out from.	The desired group's floating extension number must be programmed when creating the Log-in/Log-out button.	When logged-out	When logged-in
All groups	Log-in/Log-out button is pressed. All groups the user belongs to are logged-in to/logged-out from.	* must be entered when creating the Log-in/Log-out button.	When logged-out	When logged-in

- If a Log-in/Log-out button and a G-DN button are created for the same group, the G-DN button will also indicate the Log-in/Log-out status of the group (→ 1.18.3 LED Indication).

- **Wrap-up Button**

Any flexible button can be customized as the Wrap-up button. It shows the current status as follows:

Light pattern	Status
Slow red flashing	Wrap-up
Red on	Not Ready
Off	Ready

- Group Call Waiting cannot be used simultaneously with Wrap-up. This is because when an extension user completes a call with Call Waiting, the extension starts to ring immediately—the user is not given any Wrap-up time. Call Waiting must be turned off on each extension that wants to use Wrap-up feature.
- When a portable station (PS) in Wireless XDP Parallel Mode completes a call, neither the PS nor its wired telephone can have Wrap-up time. (→ 1.22.3 Wireless XDP Parallel Mode)

- **Automatic Log-out**

An extension may be logged-out from a group automatically after the preprogrammed number of calls go unanswered. This allows extensions to be logged-out automatically in the event users leave their desks and forget to log out.

The number of consecutive unanswered calls before Automatic Log-out is applied can be programmed for each ICD group. If an extension is a member of more than one ICD group, all calls unanswered by the extension are tallied. Once an extension has been automatically logged out, the user can log back in manually.

Automatic Log-out does not apply to extensions in an ICD group using Ring distribution.

- **Log-in/Log-out Monitor**

The supervisor extension can monitor and control the Log-in/Log-out status of group members. (→ 1.2.2.7 Supervisory Feature)

- **Log-in/Log-out Information on SMDR**
Log-in/Log-out information can be logged by Station Message Detail Recording (SMDR). (→ 1.23.1 Station Message Detail Recording (SMDR))

Feature References

- 1.18.2 Flexible Buttons
- 1.2.2.2 Group Call Distribution

Operation References

- 1.8.1 Log-in/Log-out, Wrap-up

1.2.2.7 Supervisory Feature


Description

The extension assigned as the supervisor (supervisor extension) of an incoming call distribution (ICD) group can monitor and control each member's status within the ICD group using a 6-line display proprietary telephone (PT).


Feature	Description
Incoming Call Queue Monitor	The supervisor extension can monitor various information about the group's incoming calls on its PT display.
Log-in/Log-out Monitor and Remote Control	<p>Monitor: The supervisor extension can monitor the Log-in/Log-out status of ICD group members with the corresponding Direct Station Selection (DSS) button light.</p> <p>Remote Control: The supervisor extension can change the status of members by pressing the corresponding DSS button.</p>

[Example]

<Incoming Call Queue Monitor Display>

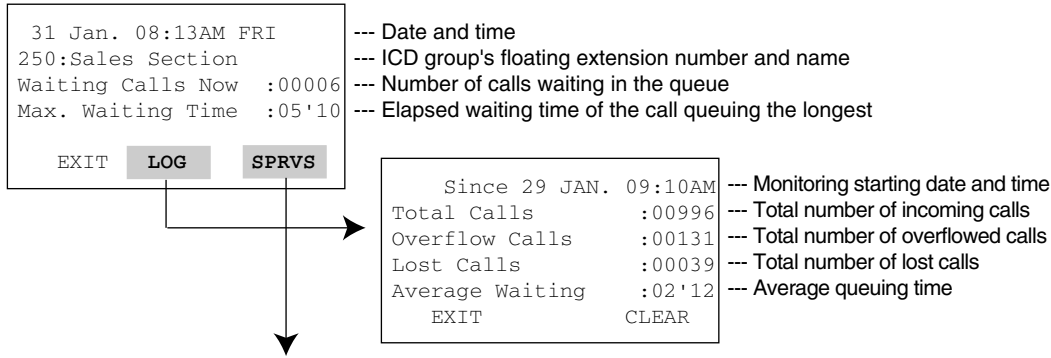

<Log-in/Log-out Monitor/Remote Control Mode with DSS Button light>

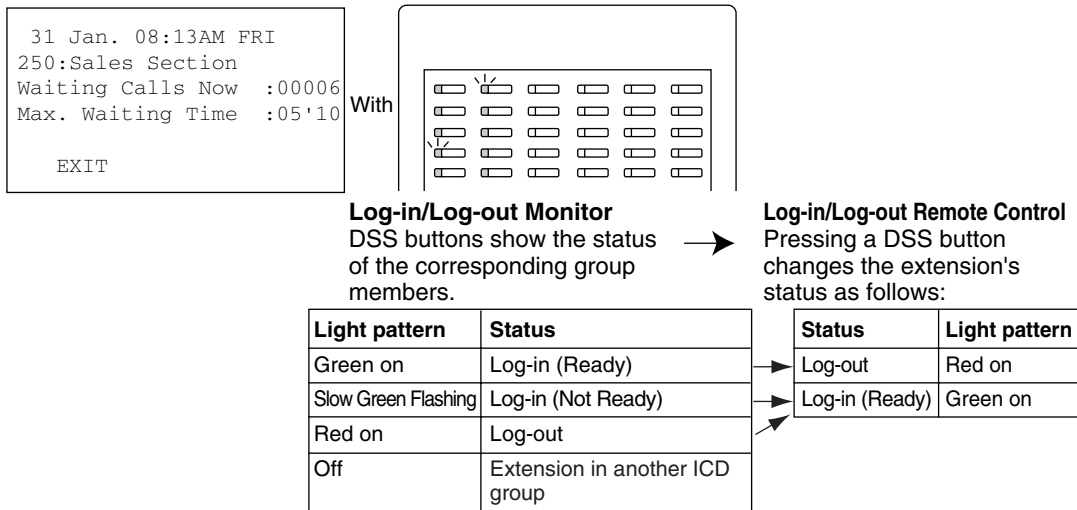

Note

When values displayed on the supervisor extension's PT exceed 99999, "*****" will be displayed.

Conditions

- **Available Extension as a Supervisor Extension**
 - Only one supervisor extension can be assigned for each ICD group, but it need not belong to the group.
 - An extension can be the supervisor extension of more than one ICD group.
- **Available Paired DSS Console**
The KX-T7640, KX-T7440, and KX-T7441 are available for this feature.
- **Monitoring Date and Time Reset**
Information displayed on the supervisor extension's PT can be reset manually. The date and time that the reset was performed will be shown on the display ("Since 29 Jan", above), and all values will be reset to 0.
- **If a call to an ICD group is overflowed:**
The supervisor extension's PT, if in idle status, will automatically change to monitor mode for the corresponding ICD group. When the supervisor is already monitoring a group, the display will not change.

- **Other Features while in Monitor Mode**
The supervisor extension can use other features (making calls, pressing the MESSAGE button, etc.) even while in monitor mode. When each operation is finished, the display will return to monitor mode.

Operation References

1.8.2 Incoming Call Distribution Group Monitor

1.3 Call Forwarding (FWD)/Do Not Disturb (DND) Features

1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND)

1.3.1.1 Call Forwarding (FWD)/Do Not Disturb (DND)—OVERVIEW

Description

When an extension user cannot answer calls (on a call, out of the office, etc.), it is possible to forward or refuse the calls using the following features:

- 1) Call Forwarding (FWD)
- 2) Do Not Disturb (DND)

1. FWD

Extensions and incoming call distribution (ICD) groups can forward their incoming calls to preset destinations. (→ 1.3.1.2 Call Forwarding (FWD))

2. DND

An extension user can send the tone to let the caller know he or she is not available. (→ 1.3.1.3 Do Not Disturb (DND))

Conditions

- **FWD and DND features apply to:**
Intercom calls (including doorphone calls), and CO line calls (including a call from an extension that placed a CO line call on a consultation hold (→ 1.12.5 Consultation Hold).)
- **FWD/DND Button**
Both the FWD and DND features for an extension can be customized on a single flexible button. Only one of these features can be active at a time.
Multiple types of FWD/DND buttons can be customized on an extension.
- **Group FWD Button**
The FWD feature for an ICD group can be customized on a flexible button. Multiple types of Group FWD buttons can be customized on an extension.

[FWD/DND Button and Group FWD Button Types]

Type		Description
FWD/DND for Extension	FWD/DND—Internal	Works for incoming intercom calls
	FWD/DND—External	Works for incoming CO line calls
	FWD/DND—Both	Works for all incoming calls
FWD for ICD Group	Group FWD—Internal	Works for incoming intercom calls
	Group FWD—External	Works for incoming CO line calls
	Group FWD—Both	Works for all incoming calls

[Button Status—FWD/DND Button]

A FWD/DND button shows the current status as follows:

Light Pattern	Status (default)
Red on	DND on
Slow red flashing	FWD on
Off	FWD/DND off

The status indicated by the "on" and "flashing" patterns can be changed through system programming.

[Button Status—Group FWD Button]

A Group FWD button shows the current status as follows:

Light Pattern	Status (default)
Slow red flashing	FWD on
Off	FWD off

[Mode Change]

When either the FWD or DND feature is assigned, pressing the FWD/DND button changes the on/off setting alternately. When both features are assigned simultaneously, pressing the button changes the settings as follows:

**Note**

Pressing the FWD/DND button (fixed button) in idle status will produce one of the following results, selected through system programming:

When in FWD/DND Setting Mode:

Pressing the button will enter personal programming mode for the FWD/DND setting.

When in FWD/DND Cycle Switch Mode:

Pressing the button will cycle the settings as shown above in [Mode Change].

A FWD/DND button customized on a flexible button is always in FWD/DND Cycle Switch mode, and the mode cannot be changed.

- When intercom calls are set to be handled differently from CO line calls (forwarding type, forward destination, DND on/off), we recommend establishing separate buttons for both FWD/DND—Internal and FWD/DND—External, and/or Group FWD—Internal and Group FWD—External, because:

- the light patterns of the FWD/DND—Both button (including FWD/DND button [fixed button]) and the Group FWD—Both button will indicate the setting for either CO line calls or intercom calls, but not both.

Note

The FWD and DND icons on a PS display reflect the settings for CO line calls only.

- pressing the FWD/DND—Both button (including FWD/DND button [fixed button]) or the Group FWD—Both button will not change the FWD or DND mode for intercom calls and CO line calls separately.

Feature References

- 1.18.1 Fixed Buttons
- 1.18.2 Flexible Buttons

Operation References

- 3.1.2 Settings on the Programming Mode



1.3.1.2 Call Forwarding (FWD)

Description

Extensions and incoming call distribution (ICD) groups can forward their calls to preset destinations. There are four Call Forwarding (FWD) modes, described below.

Mode	Description
All Calls	All calls are forwarded. Follow Me: When an extension user fails to set this feature before leaving the desk, this feature can be set from the destination extension.
Busy	Calls are forwarded when the extension user's line is busy.
No Answer	Calls are forwarded when the extension user does not answer within a preprogrammed time (→ Call Forwarding—No Answer Time [605]).
Busy/No Answer	Calls are forwarded when the extension user's line is busy or the user does not answer within a preprogrammed time (→ Call Forwarding—No Answer Time [605]).

Depending on the type of incoming call (intercom or CO line call), it is possible to set different destination for each.

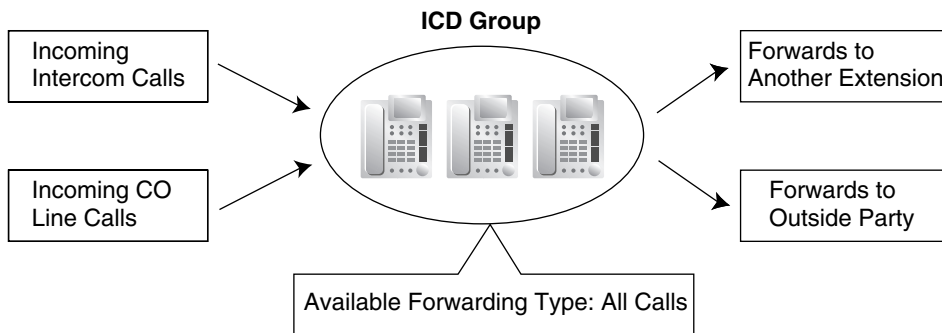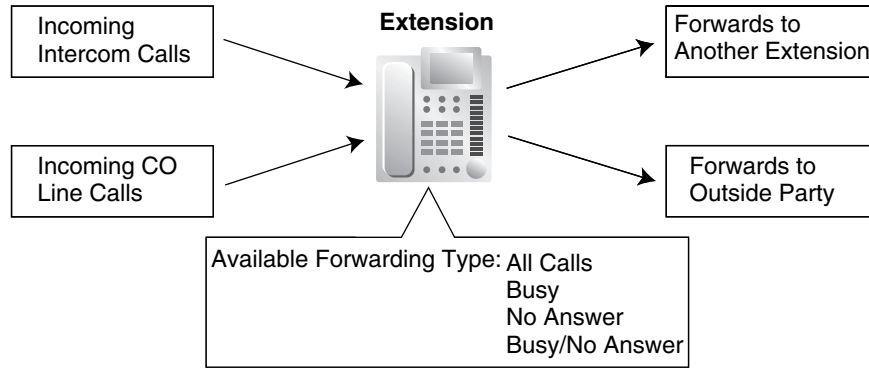

[Available Destination]

Destination	Availability	Condition for Original Extension/ICD Group
Wired Extension (PT/SLT/T1-OPX)	✓	Only available when FWD to extension is allowed through Class of Service (COS) programming.*
PS	✓	
ICD Group	✓	
PS Ring Group	✓	–
VM Group (DTMF/DPT)	✓	–
External Pager (TAFAS)	✓	–
DISA	✓	Only available for incoming CO line calls. Incoming intercom and doorphone calls cannot be forwarded to a Direct Inward System Access (DISA) floating extension number.
Analog/ISDN Remote Maintenance	✓	–
Idle Line Access no. + Phone no.	✓	Only available when FWD to CO line is allowed through COS programming.
CO Line Group Access no. + CO Line Group no. + Phone no.	✓	
Extension of Another PBX (via TIE Line, Access with PBX Code)	✓	Only available when FWD to CO line is allowed through COS programming.


Destination	Availability	Condition for Original Extension/ICD Group
Extension of Another PBX (via TIE Line, Access without PBX Code)	✓	–

* If an extension user cannot call certain extensions on a COS basis (→ 1.1.2.2 Internal Call Block), the extension user cannot forward his or her calls to those extensions either.

Conditions

[General]


- **FWD for CO Line Calls/Intercom Calls**
The FWD feature can be set for CO line calls, for intercom calls, or for both of them by the extension user.
- **FWD from ICD Group (Group FWD)**
COS programming determines the ICD groups that can use this feature.
- **FWD to CO Line**
COS programming determines the extensions or ICD groups that can forward calls to an outside party (→ Call Forwarding to CO Line [504]).
The original extension's Toll Restriction (TRS) and Automatic Route Selection (ARS) still apply to the forwarded call. (→ 1.8.1 Toll Restriction (TRS), → 1.9.1 Automatic Route Selection (ARS))
- **CO Line Call Duration**
If a call between an extension user and an outside party, or between two outside parties is established, the call duration can be restricted by a system timer (→ Extension-to-CO Line Call Duration [472], → CO-to-CO Line Call Duration [473]). If the timer expires, the line will be disconnected. (→ 1.10.8 CO Line Call Limitation)
- **Multiple FWD**
Calls can be forwarded up to four times. The following forwarding features are counted as Multiple FWD:
 - FWD—Busy or Busy/No Answer (in case a destination extension is busy), or All Calls
 - Idle Extension Hunting—Overflow
 - Intercept Routing—Busy/DND (in case a destination extension is busy or in DND mode)
 - ICD Group Overflow

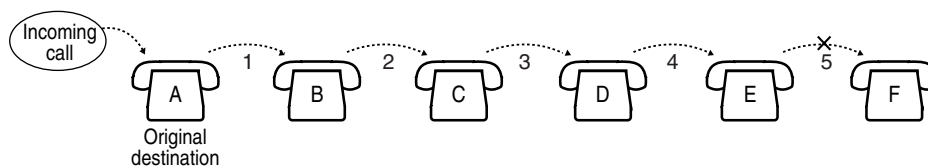

In the above illustration, forwarding stops at extension E. However, forwarding can go farther in the following cases:


- If a destination extension rings, and then the call is redirected to the forward destination by the FWD—No Answer or Busy/No Answer feature.
- If a destination extension rings, and then the call is redirected to the intercept destination by the Intercept Routing—No Answer feature.
- If a call waits in a queue of an ICD group, and then the call is redirected to the overflow destination by the Queuing Time Table. (→ 1.2.2.3 Queuing Feature)

In the above cases, the forwarding counters reset to zero, and calls can be forwarded up to four times again from the applicable extension that occurred in the case above.

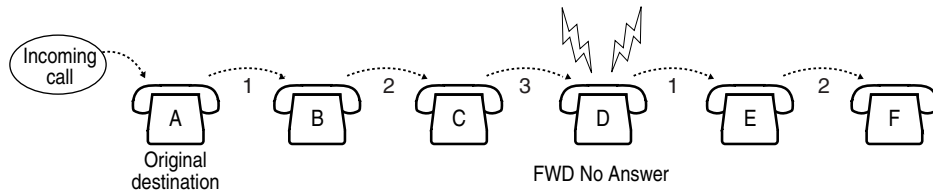

- **Boss & Secretary feature**

It is possible to call the original extension from the destination extension regardless of the forward setting.

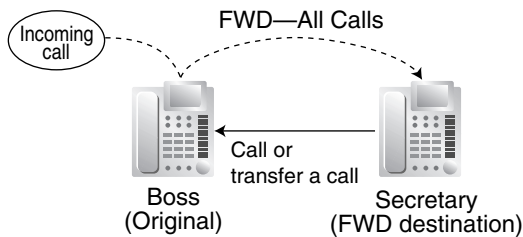

- **Message Waiting**

When a call is forwarded, Message Waiting information is not forwarded. The Message button light turns on at the originally called extension. (→ 1.17.1 Message Waiting)

- **Idle Extension Hunting**

Idle Extension Hunting applies to calls forwarded to a busy extension in an idle extension hunting group.

[All Calls and Busy]

- If the forward destination is not available to answer a call, this feature is canceled and the original destination will ring for the following types of calls:
 - Doorphone call
 - CO Line calls which arrived through an LCOT or T1 (LCOT/GCOT) card

[No Answer and Busy/No Answer]

- **No Answer Time**

The number of rings before the call is forwarded is programmable for each extension (→ Call Forwarding—No Answer Time [605]).

[Follow Me]

- This feature is only available when "Deny Remote Operation by Other Extension" is disabled for the original extension's COS.

Feature References

- 1.1.1.5 Intercept Routing
- 1.2.1 Idle Extension Hunting
- 1.2.2.5 Overflow Feature

Operation References

1.5.1 Call Forwarding

1.3.1.3 Do Not Disturb (DND)

Description

An extension user can make use of the Do Not Disturb (DND) feature. If this feature is set, calls will not arrive at the extension, but arrive at other extension by using the Idle Extension Hunting feature (→ 1.2.1 Idle Extension Hunting) or the Intercept Routing—Busy/DND feature (→ 1.1.1.5 Intercept Routing). When a destination cannot be found, the calling extension will hear the DND tone, while the calling outside party will hear a busy tone.

Conditions

- **DND for CO Line Calls/Intercom Calls**
The DND feature can be set for CO line calls, for intercom calls, or for both of them by the extension user.
- **DSS button in DND Mode**
The DSS button light will turn red if the assigned extension has set DND.
- **DND Override**
An extension in DND mode can be called by other extension users who are allowed to override DND based on their Class of Service (COS) (→ DND Override [507]).
- **Paging DND**
It is programmable whether the PBX pages extensions in DND mode through system programming. (→ 1.14.1 Paging)
- **Intercept Routing—Busy/DND**
If a call arrives at an extension which is in DND mode, the call can be redirected to the preprogrammed destination via the Intercept Routing—Busy/DND feature.
- **Idle Extension Hunting**
While searching for an idle extension within an idle extension hunting group, any extension which has DND set will be skipped. The call will go to the next extension in the group, not to the Intercept Routing—Busy/DND destination.
- If a CO line call arrives through an LCOT or T1 (LCOT/GCOT) card and is directed to an extension which is in DND mode, and if the Intercept Routing—Busy/DND destination is not available and furthermore there is no available extension in the extension's idle extension hunting group, the original destination will ring even though it is in DND mode.
- Calls from a doorphone arrive at an extension even when the extension is in DND mode.

Operation References

1.2.4 When the Dialed Line is Busy or There is No Answer

1.7.2 Do Not Disturb (DND)

1.4 Answering Features

1.4.1 Answering Features

1.4.1.1 Answering Features—OVERVIEW

Description

An extension user can answer incoming calls by the following methods:

Called Extension	Feature	Description	Details in
The user's own extension (PT only)	Line Preference—Incoming	The user can select the line seized when going off-hook.	• 1.4.1.2 Line Preference—Incoming
	Direct One-touch Answering	The user can answer an incoming call simply by pressing the flashing button.	–
	Hands-free Answerback	The user can answer a call automatically and establish a hands-free conversation.	• 1.4.1.4 Hands-free Answerback
Another extension	Call Pickup—Directed/Group	The user can pick up a specific extension's call or a call in a specific call pickup group.	• 1.4.1.3 Call Pickup

1.4.1.2 Line Preference—Incoming

Description

A proprietary telephone (PT) user can select the method used to answer incoming calls from the following three line preferences.

Each of these line preferences can be assigned on each extension through personal programming (Preferred Line Assignment—Incoming).

Type	Description
No Line	Selects a line by pressing the desired Line Access button to answer an incoming call after you go off-hook.
Prime Line	Answers a call arriving at a Flexible CO button or G-DN button (on which the "Prime Line" is assigned) simply by going off-hook. This works even when multiple calls are received simultaneously.
Ring Line (default)	Answers the longest ringing call when multiple calls arrive at one's own telephone simply by going off-hook.

Conditions

[Prime Line]

- The priority of the incoming call is as follows:
 - 1) The call arriving at a button on which the "Prime Line" is assigned.
 - 2) The call arriving at the INTERCOM button.

Operation References

3.1.2 Settings on the Programming Mode

1.4.1.3 Call Pickup

Description

An extension user can answer a call ringing at any other extension. The following types of Call Pickup are available:

Type	Description
Directed	A specified extension's call is answered.
Group	A call within a specified call pickup group is answered.

Call Pickup Deny

An extension user can prevent other extensions from picking up calls ringing at his or her own extension.

Conditions


- **Call Pickup applies to:**
Intercom, CO line, and doorphone calls
- **Internal Call Block**
An extension which cannot call certain extensions based on Class of Service (COS) programming (→ 1.1.2.2 Internal Call Block) also cannot pick up calls ringing at those extensions.

[Directed Call Pickup]

- A user can also pick up a call to a specified extension by pressing the corresponding DSS button. COS programming determines the extensions that can use this feature. The light pattern of a DSS button for an incoming call to an extension or incoming call distribution (ICD) group can be programmed through system programming. Call Pickup is available only when the DSS button is red flashing.

[Group Call Pickup]

- A specified number of call pickup groups can be created (→ Extension Groups of a Pickup Group [650]), each of which consists of extension groups. One extension group can belong to several call pickup groups. (→ 2.2.2 Group)

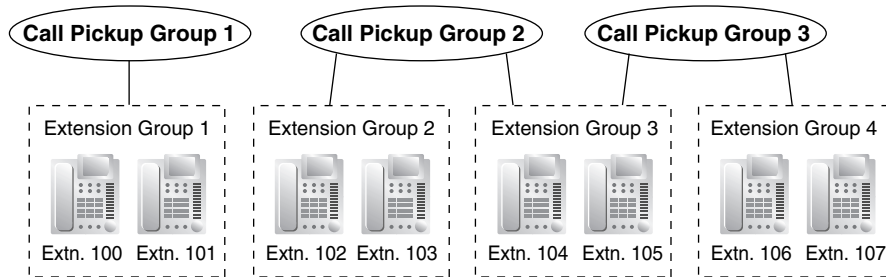[Example]

Operation References

1.3.3 Call Pickup

1.4.1.4 Hands-free Answerback

Description

A proprietary telephone (PT) user with a speakerphone or optional headset can talk to a caller without lifting the handset. If the user receives a call in Hands-free Answerback mode, a hands-free conversation is established in the following method:

Call Type	Answering Method
Intercom Call	Established immediately after a beep tone at the called extension and the caller hears a confirmation tone.
CO Line Call*	Established after a specified number of rings, a called extension hears a beep tone.

* Including a call from an extension that placed a CO line call on a consultation hold. (→ 1.12.5 Consultation Hold)

Conditions

- **Hands-free Answerback applies to:**
Intercom calls and CO line calls, including calls directed to an incoming call distribution (ICD) group in UCD or Priority Hunting distribution method. (→ 1.2.2.2 Group Call Distribution)
- **Hands-free Answerback for CO Line Calls**
System programming is required to use this feature.
- **Secret Monitor**
The beep tone heard by the called party before answering can be eliminated through system programming.
- **Alternate Receiving/Calling Mode (Ring/Voice) Override**
Hands-free Answerback overrides the Alternate Receiving mode preset on the telephone and the Alternate Calling mode from the caller.
- **Hands-free Answerback with Headset**
The Hands-free Answerback feature can also be used with a headset.

Feature References

1.5.3 Intercom Call

Operation References

1.3.2 Hands-free Answerback

1.5 Making Call Features

1.5.1 Predialing

Description

A display proprietary telephone (PT) user can check and correct the number to be dialed on-hook. The call will be initiated after going off-hook.

Conditions

- **Storing the Predialed Number in Personal Speed Dialing**
The predialed number can be stored in Personal Speed Dialing by pressing the AUTO DIAL/STORE button. (→ 1.6.1.4 Speed Dialing—Personal/System) In this case, the extension will enter personal programming mode automatically so that a name can be assigned to the stored number.

Operation References

3.1.2 Settings on the Programming Mode

1.5.2 Automatic Extension Release

Description

After going off-hook, if an extension user fails to dial any digits within a preprogrammed time period, the user will hear a reorder tone. This operation applies to intercom calls only.

This feature is also known as Automatic Station Release.

Conditions

- A proprietary telephone (PT)/portable station (PS) user hears a reorder tone for a preprogrammed time period, and then the PT/PS returns to idle status automatically. A single line telephone (SLT) user will hear a reorder tone until he or she goes on-hook.
- **This feature works in one of the following cases:**
When making an intercom call
 - a) The first digit is not dialed within a preprogrammed time period.
 - b) A digit is dialed, but subsequent digits are not dialed within a preprogrammed time period.

1.5.3 Intercom Call

Description

An extension user can call another extension user.

Conditions

- Extension Number/Name Assignment**
 Extension numbers (→ Extension Number [003]) and names (→ Extension Name [004]) are assigned to all extensions. The assigned number and name of the other extension are shown on display PTs during intercom calls.
- DSS Button**
 It is possible to call another extension by simply pressing the corresponding Direct Station Selection (DSS) button. Any flexible button can be customized as a DSS button.
- Call Directory—Extension Dialing**
 Display proprietary telephone (PT) users can make a call by selecting stored names on the display.
- Alternate Receiving—Ring/Voice**
 A PT user can select to receive intercom calls by ring tone or by voice, through personal programming (Alternate Receiving—Ring/Voice). If a user selects voice-calling, the calling party talks to the user immediately after a confirmation tone. Denying voice-calling can also be selected.
- Alternate Calling—Ring/Voice**
 A caller can change the called party's preset call receiving method (ring tone or voice). By doing so, ring-calling is switched to voice-calling, or vice versa, at the called party. The called party may deny voice-calling.
- Tone after Dialing**
 After dialing an extension number, a user will hear one of the following:

Type	Description
Ringback Tone	Indicates the called party is being called.
Confirmation Tone	Indicates the called party has set voice-calling.
Busy Tone	Indicates the called party is busy.
DND Tone	Indicates the called party has set DND.

Feature References

1.18.2 Flexible Buttons

Operation References

- 1.2.1 Basic Calling
- 1.2.5 Alternate Calling—Ring/Voice
- 1.11.2 Directories
- 3.1.2 Settings on the Programming Mode

1.5.4 CO Line Call Features

1.5.4.1 CO Line Call Features—OVERVIEW

Description

An extension user can use the following features when making a CO line call:

Feature	Description	Details in
Emergency Call	A user can dial preprogrammed emergency numbers regardless of the restrictions imposed on the extension.	• 1.5.4.2 Emergency Call
Account Code Entry	A user can enter an account code to identify outgoing calls for accounting and billing purposes.	• 1.5.4.3 Account Code Entry
Pulse to Tone Conversion	A user can temporarily switch from Pulse mode to DTMF mode if necessary.	• 1.5.4.4 Dial Type Selection
Pause Insertion	A dialing pause can be manually inserted by pressing the PAUSE button, or can be automatically inserted after a user-dialed code, such as a Host PBX Access code or Special Carrier Access code. The length of the pause can be specified through system programming.	• 1.5.4.5 Pause Insertion • 1.5.4.6 Host PBX Access Code (Access Code to the Telephone Company from a Host PBX) • 1.5.4.7 Special Carrier Access Code

1.5.4.2 Emergency Call

Description

An extension user can dial preprogrammed emergency numbers (→ Emergency Number [304]) after seizing a CO line regardless of the restrictions imposed on the extension.

Conditions

- A specified number of emergency numbers can be stored.
- Emergency numbers may be called, regardless of Toll Restriction (TRS) level (→ 1.8.1 Toll Restriction (TRS)), even when:
 - in Account Code—Forced mode (→ 1.5.4.3 Account Code Entry)
 - in Extension Lock (→ 1.8.2 Extension Lock)
- **CLIP Number Notification**
When dialing an emergency number, the preassigned CLIP number for the extension will be sent as a location identification number. (→ 1.19.1.2 Calling Line Identification Presentation (CLIP))
The CLIP number assigned to the extension will be sent regardless of the settings such as CLIR or CLIP number assigned to an ISDN port to be used. This feature is only available when using a PRI line, with E911-compatible services.

1.5.4.3 Account Code Entry

Description

An account code is used to identify outgoing CO line calls for accounting and billing purposes. The account code is appended to the Station Message Detail Recording (SMDR) call record. For example, a firm can use an account code for each client to determine which calls were made for which client, and can submit a bill to the client according to the client's account code as shown on the SMDR call record.

There are two methods of entering account codes explained below.

One of the methods is selected for each extension based on Class of Service (COS) programming (→ Account Code Mode [508]).

Mode	Description
Option	An extension user can enter an account code, but is not required to.
Forced	An extension user must always enter an account code before seizing a CO line.

Conditions

- An account code can be stored in Memory Dialing (One-touch Dialing, for example).
- **Account Button**
A flexible button can be customized as the Account button. The Account button is used in place of the feature number for entering an account code. This button is useful because it can be used at any time, while feature number entry is allowed only when hearing a dial tone before seizing a CO line.
- Account code entry after receiving a disconnection signal from a CO line must be done while hearing a reorder tone. Otherwise the SMDR call record is logged and entry becomes impossible afterwards.
- If an account code is entered more than once, the code entered last is logged in the SMDR.
- Even in Forced mode, emergency numbers can be dialed without an account code. (→ 1.5.4.2 Emergency Call)
- Proprietary telephone (PT) users can also enter an account code for incoming CO line calls during a conversation.
- **Verified Code Entry**
To identify who made a CO line call for accounting and billing purposes, a verified code can be used. This code can be used at any extension. (→ 1.8.5 Verified Code Entry)

Feature References

1.18.2 Flexible Buttons

1.23.1 Station Message Detail Recording (SMDR)

Operation References

1.2.1 Basic Calling

1.5.4.4 Dial Type Selection

Description

The dialing mode (rotary or tone) can be selected for each analog CO line through system programming (→ LCOT Dialing Mode [410]) regardless of originating extension (under contract with the telephone company).

Mode	Description
DTMF (Dual Tone Multi-Frequency)	Numbers dialed by an extension user are transmitted to the CO line using analog tones.
Pulse Dial (Rotary)	Numbers dialed by an extension user are transmitted to the CO line using analog pulses.

Conditions

- **Pulse to Tone Conversion**
It is possible for an extension user to temporarily switch from Pulse mode to DTMF mode in order to access special services such as computer-accessed long distance calling or voice mail services. To switch to DTMF mode, wait for a preprogrammed time period (Default: 5 seconds) after the CO line is connected, or press ✖. This feature works only on CO lines set to Pulse mode. DTMF mode cannot be changed to Pulse mode.
- It is possible to select a pulse rate for the CO line port which has been set to Pulse mode (→ LCOT Pulse Rate [411]). There are two pulse rates: Low (10 pps) and High (20 pps).
- It is possible to assign the minimum duration of the DTMF signal sent to the CO line port which has been set to DTMF mode (→ LCOT DTMF Minimum Duration [412]).

1.5.4.5 Pause Insertion

Description

A dialing pause of a preprogrammed length (→ LCOT Pause Time [416]) can be inserted manually or automatically when dialing.

Manual Insertion: Pressing the PAUSE button.

Automatic Pause Insertion: A pause will be automatically inserted between the user-dialed codes below and the following digits.

- Host PBX Access code (→ 1.5.4.6 Host PBX Access Code (Access Code to the Telephone Company from a Host PBX))
- Special Carrier Access code (→ 1.5.4.7 Special Carrier Access Code)
- Second Dial Tone Waiting code

Conditions

- The length of a pause is programmable for each CO line.
- Numbers stored in Memory Dialing can contain pauses.
- Pressing the PAUSE button while dialing a number inserts a pause of the preprogrammed length.
- When a preprogrammed Second Dial Tone Waiting code is dialed after seizing a CO line, pauses are inserted a preprogrammed number of times after the code.


1.5.4.6 Host PBX Access Code (Access Code to the Telephone Company from a Host PBX)

Description

This PBX can be installed behind an existing host PBX. This is performed by connecting extension ports of the host PBX to CO line ports of this PBX. A Host PBX Access code assigned through system programming (→ Host PBX Access Code [471]) is required to access the telephone company from the host PBX. The CO Line Access number of the host PBX should be stored as a Host PBX Access code on a CO line group of this PBX basis.

A pause of a preprogrammed length (→ LCOT Pause Time [416]) will be automatically inserted between the user-dialed Host PBX Access code and the following digits. (→ 1.5.4.5 Pause Insertion)

[Example]

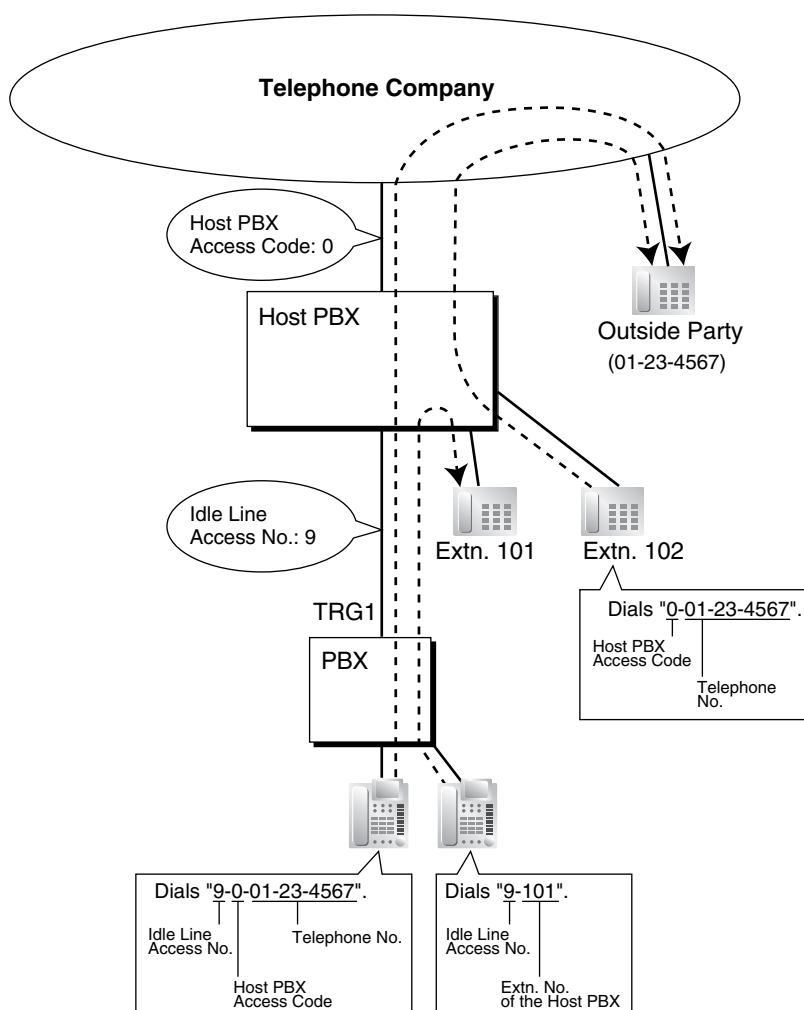

Note

In this example, "0" should be assigned as a Host PBX Access code for CO line group (TRG) 1 of this PBX.

Conditions

- **TRS**
TRS checks only the dialed telephone number excluding the Host PBX Access code when accessing the telephone company through the host PBX. (→ 1.8.1 Toll Restriction (TRS))
- **SMDR**
The Host PBX Access code can be logged by SMDR along with the dialed number when accessing the telephone company through the host PBX.
- To log by SMDR only long distance calls (not local calls) originated via a specific CO line group, assign the long distance call code as a Host PBX Access code to the CO line group.

Feature References

1.23.1 Station Message Detail Recording (SMDR)

1.5.4.7 Special Carrier Access Code

Description

If the PBX has access to multiple telephone companies, a Special Carrier Access code assigned through system programming (→ Special Carrier Access Code [303]) is required every time a CO line call is made. A pause of a preprogrammed length (→ LCOT Pause Time [416]) will be automatically inserted between the user-dialed Special Carrier Access code and the following digits. (→ 1.5.4.5 Pause Insertion)

Conditions

- **TRS**
TRS checks only the dialed telephone number excluding the Special Carrier Access code. (→ 1.8.1 Toll Restriction (TRS))
- **If this PBX is installed behind an existing host PBX:**
A Special Carrier Access code and a Host PBX Access code should be assigned separately—these codes cannot be assigned together as one code. (→ 1.5.4.6 Host PBX Access Code (Access Code to the Telephone Company from a Host PBX))

1.5.5 Seizing a Line Features

1.5.5.1 Seizing a Line Features—OVERVIEW

Description

An extension user can select the line that is seized in order to make a call, using one of the following features.

Feature	Description	Details in
Line Preference—Outgoing	A user can select the line seized when going off-hook.	• 1.5.5.2 Line Preference—Outgoing

Feature	Description	Details in
CO Line Access	A user can select the CO Line Access method every time a CO line call is made.	• 1.5.5.3 CO Line Access

1.5.5.2 Line Preference—Outgoing

Description

Through personal programming, a proprietary telephone (PT) user can select the preferred method of seizing a line (Preferred Line Assignment—Outgoing) that is used each time the user goes off-hook.

Method	Description
Intercom	When an extension user goes off-hook, an extension line is selected automatically.
Idle Line	When an extension user goes off-hook, an idle CO line is selected automatically from the assigned CO line groups.
No Line	When an extension user goes off-hook, no line is selected. In order to make a call, the user must select the desired line manually.
Prime Line	When an extension user goes off-hook, the preset line is selected automatically. A prime line can be selected from the Line Access buttons: S-CO, G-CO, L-CO, G-DN.

Conditions

- **Line Preference Override**
A user can override the preset Line Preference temporarily by pressing the desired Line Access button or a Memory Dialing button, such as One-touch Dialing, before going off-hook.
- To select Idle Line Preference, the CO line groups available to the extension should be programmed on a Class of Service (COS) basis (→ CO Line Group Number [500]). Also CO line groups available for Idle Line Access should be assigned (→ Idle Line Access (Local Access) [103]).
- If Idle Line Preference or Prime Line Preference has been set for an extension, a CO line may be automatically seized and placed on hold when the user goes off-hook and uses a DSS button to access another extension. To avoid this problem:
 1. Set TRS for the extension to a level other than 1.
 2. Make sure that at least one TRS Denied Code for Level 2 has been defined. If there are currently no Denied Codes for Level 2, store "000" in the Denied Code Table for Level 2.

When the user goes off-hook and presses a DSS button, the TRS feature is activated but the TRS check is not complete, so the automatically seized CO line is disconnected.

Feature References

1.8.1 Toll Restriction (TRS)

Operation References

3.1.2 Settings on the Programming Mode

1.5.5.3 CO Line Access

Description

There are three methods of accessing a CO line.

Method	Description	Operation
Idle Line Access (Local Access)	Selects an idle CO line automatically from the assigned CO line groups.	Dial the Idle Line Access number or press a L-CO button.
CO Line Group Access	Selects an idle CO line from the corresponding CO line group.	Dial the CO Line Group Access number and a CO line group number, or press a G-CO button.
S-CO Line Access	Selects the desired CO line directly.	Dial the S-CO Line Access number and the CO line number, or press the S-CO button.

Conditions

- Class of Service (COS) programming determines the CO line groups available for making calls (→ CO Line Group Number [500]).
- CO Line numbers can be referred on a CO line port basis (→ LCOT CO Line Number Reference [409]).
- **Button Assignment**

A flexible button can be customized as a G-CO, L-CO, or S-CO button as follows:

Type	Assignable parameter
Loop-CO (L-CO)	Any CO line group that is made available for Idle Line Access through system programming is applied.
Group-CO (G-CO)	A CO line group is assigned.
Single-CO (S-CO)	A specified CO line is assigned.

It is possible to assign CO lines in the following ways:

- The same CO line to the S-CO button and to a G-CO button
- The same CO line group to more than one G-CO button
- More than one L-CO button

Dialing the CO Line Access number selects a CO button according to the following priority: S-CO → G-CO → L-CO

- **Direct CO Line Access**
If an extension user is on-hook when pressing an idle CO button, the proprietary telephone (PT) automatically enables hands-free operation mode. The user can dial without lifting the handset or pressing the SP-PHONE or MONITOR button.
- **Group Hunting Order for Idle Line Access**
An idle CO line is selected from the CO line groups assigned for Idle Line Access. If multiple CO line groups are available, the CO line group hunting sequence can be determined through system programming.
- **CO Line Hunting Order for Idle Line Access and CO Line Group Access**
The CO line hunting sequence in a CO line group (from lowest numbered CO line, from highest numbered CO line or rotation) can be determined through system programming.

1.5 Making Call Features

- A company name or customer name can be assigned on a CO line port basis (→ LCOT CO Line Name [401]) so that the operator or extension user who is answering the call can view the destination which the caller is trying to reach before answering.
- It is possible to identify the CO line port that has a CO line connected to it (→ LCOT CO Line Connection [400]). This prevents extension users from originating a call to a CO line which is not connected.

Feature References

1.18.2 Flexible Buttons

Operation References

1.2.1 Basic Calling

1.6 Memory Dialing Features

1.6.1 Memory Dialing Features

1.6.1.1 Memory Dialing Features—OVERVIEW

Description

An extension user can store frequently dialed numbers in the PBX. A stored number is dialed automatically with a simple operation.

1. Features

Feature		Storing Method	Details in
One-touch Dialing		<ul style="list-style-type: none"> Personal Programming System Programming (PC Programming only) 	• 1.6.1.2 One-touch Dialing
Last Number Redial (Outgoing Call Log)		The last or most recent dialed numbers are automatically stored.	• 1.6.1.3 Last Number Redial
Speed Dialing	Personal	<ul style="list-style-type: none"> Personal Programming Personal Operation with the Feature Number System Programming (PC Programming only) 	• 1.6.1.4 Speed Dialing—Personal/System
	System	System Programming	
Quick Dialing		System Programming (PC Programming only)	• 1.6.1.5 Quick Dialing
Hot Line		<ul style="list-style-type: none"> Personal Programming Personal Operation with the Feature Number System Programming (PC Programming only) 	• 1.6.1.6 Hot Line
Incoming Call Log		Incoming call information is automatically stored.	• 1.6.2 Incoming Call Log

2. Valid Input

Input	Displayed while Entering	Description
0–9/*/#	0–9/*/#	Store digits, * and # by pressing the corresponding buttons.
PAUSE (Pause)	P	Store a dialing pause by pressing the PAUSE button. (→ 1.5.4.5 Pause Insertion)

Input	Displayed while Entering	Description
FLASH/RECALL (Hooking)*	F	Store a flash/recall signal (EFA mode) by pressing the FLASH/RECALL button at the beginning of the number. (→ 1.10.7 External Feature Access (EFA))
INTERCOM (Secret)*	[/]	Conceal all or part of the number by pressing the INTERCOM button at the beginning and at the end of the number to be concealed. It is programmable whether the concealed part will be shown on the SMDR (→ 1.23.1 Station Message Detail Recording (SMDR)).
TRANSFER (Transfer)*	T	Store a transfer command by pressing the TRANSFER button at the beginning of the number (used only for One-touch Dialing). (→ 1.11.1 Call Transfer) [Example] Storing "T + 305"= Transferring a call to extension 305.

* Available only when in the system/personal programming mode

[Example]

When storing the number "9-123-456-7890", to conceal the telephone number "123-456-7890",

Enter → → → .

Notes

- It is possible to store a Memory Dialing feature number at the beginning of Memory Dialing numbers.
- It is possible to store several feature numbers in one Memory Dialing location.

Conditions

- **CO Line Access by Memory Dialing**

A specific CO Line Access number can be stored along with the telephone number in Memory Dialing. However, if Memory Dialing is done after selecting a CO line, the stored CO Line Access number is ignored and the telephone number is sent using the selected CO line.

1.6.1.2 One-touch Dialing

Description

A proprietary telephone (PT) user can make a call or access a feature with a one-touch operation. This is possible by storing the number, such as an extension number, telephone number, or feature number, in a One-touch Dialing button.

Conditions

- **One-touch Dialing Button**
Any flexible button can be customized as a One-touch Dialing button.
- **Full One-touch Dialing**
There is no need to go off-hook before pressing a One-touch Dialing button.

Feature References

1.18.2 Flexible Buttons

Operation References

1.2.2 Easy Dialing

1.6.1.3 Last Number Redial

Description

Every extension automatically saves the last external telephone number dialed, allowing the same number to be dialed again.

Automatic Redial

If Last Number Redial is performed in hands-free mode and the called party is busy, the number will be automatically redialed a preprogrammed number of times (→ Automatic Redial Repeat Times [205]) at 60-second intervals.

This feature is available only on certain proprietary telephone (PT) models which have the SP-PHONE button.

Outgoing Call Log

Information on outgoing CO line calls is automatically logged at each extension. Users of display PTs can view details of a preset number of recently dialed telephone numbers, and easily call the same outside party again.

Conditions

- Memorized telephone numbers are replaced by new ones.
- Automatic Redial is canceled if any dialing operation is done, an incoming call is answered during Automatic Redial, or the Redial Call No Answer Ring time expires. The Redial Call No Answer Ring time is programmable.
- Automatic Redial is only available for calls that are dialed using a PRI line.
- **Interrupt Redial**
When the called party or the seized CO line is busy, it is possible to press the REDIAL button continuously until the called party or the CO line becomes idle. There is no need to go off-hook before pressing the REDIAL button.
- **Outgoing Call Log Display by REDIAL Button**
The REDIAL button can be programmed through system programming to display the Outgoing Call Log. This feature is available for display PT users while on-hook.
- If the Outgoing Call Log is used to redial an outside party, or a number already stored in the Outgoing Call Log is manually redialed again, the number will be stored in the call log multiple times. However, calls made using the REDIAL button are not stored in the Outgoing Call Log again.
- It is possible to change the number of records that can be stored at each extension through system programming.

Operation References

1.2.3 Redial

1.11.1 Call Log

1.6.1.4 Speed Dialing—Personal/System

Description

An extension user can make calls using abbreviated dialing for frequently dialed numbers which are stored in the PBX, either in the extension's Personal Speed Dialing, or in System Speed Dialing (→ System Speed Dialing Number [001]).

Personal Speed Dialing is also known as Station Speed Dialing.

Conditions

[General]

- Any number, such as a telephone number or feature number, can be stored in Speed Dialing. A name can be assigned to each Personal Speed Dialing number through personal programming, and also to each System Speed Dialing number (→ System Speed Dialing Name [002]).
- **Call Directory—Speed Dialing**
Display proprietary telephone (PT) users can make a call by selecting a stored name shown on the display.

[Personal Speed Dialing]

- **Personal Speed Dialing Display Lock**
An extension user can lock his or her Personal Speed Dialing display to prevent others from viewing it. In this case, the Incoming and Outgoing Call Log information displays are also locked. An extension personal identification number (PIN) is required to use this feature. (→ 1.25.1 Extension Personal Identification Number (PIN))

[System Speed Dialing]

- **TRS Override by System Speed Dialing**
It is possible to override Toll Restriction (TRS) when dialing a number using System Speed Dialing (→ TRS Level for System Speed Dialing [509]). (→ 1.8.1 Toll Restriction (TRS))
- **System Speed Dialing Display by AUTO DIAL/STORE Button**
Pressing the AUTO DIAL/STORE button on a display DPT or KX-T7735 while on-hook can display the System Speed Dialing Directory.
- When an MEC card is installed in the PBX, System Speed Dialing numbers can be assigned separately for each tenant. Each tenant can select to use either the original set of common System Speed Dialing numbers or that tenant's private set.

Operation References

1.2.2 Easy Dialing

1.11.1 Call Log

1.11.2 Directories

3.1.2 Settings on the Programming Mode

3.3 System Programming

1.6.1.5 Quick Dialing

Description

An extension user can make a call or access a feature easily. This is enabled by storing the number (extension number, telephone number, or feature number etc.) for Quick Dialing.

Quick Dialing is convenient in situations such as the following:

- Room service calls in a hotel
- Calling your company's headquarters via the public network. Extension users can think of the Quick Dialing number as an extension number.

[Programming Example: Quick Dialing]

Location No.	Quick Dialing No.	Desired Number
Quick Dialing 01	110	9110 (CO Line Call)
Quick Dialing 02	5	3016 (Room Service)
Quick Dialing 03	2011	90123456789 (Headquarters)

Conditions

- Quick Dialing numbers follow the flexible numbering plan.
(→ 2.3.5 Flexible Numbering/Fixed Numbering)

Operation References

1.2.2 Easy Dialing

1.6.1.6 Hot Line

Description

An extension user can make an outgoing call by simply going off-hook, if the user has previously stored the telephone number or the extension number.

If the Hot Line feature is set and the user goes off-hook, a dial tone is generated for a specified time assigned through system programming (→ Hot Line Waiting Time [204]) and then dialing starts. During this waiting time the user can dial another party, overriding the Hot Line feature.

This feature is also known as Pickup Dialing.

Conditions

- **Compatible Telephone**
Proprietary telephone (PT), single line telephone (SLT), T1-OPX, and portable station (PS)

Operation References

1.2.2 Easy Dialing

1.7 Busy Line/Busy Party Features

1.7.1 Automatic Callback Busy (Camp-on)

Description

If the line is busy when a call is made, a callback ring can inform the caller when the line becomes free. If the called party was another extension, or if the dialed number is handled by Automatic Route Selection (ARS), the number is automatically redialed after the extension user answers the callback ring.

Conditions

- If the callback ring is not answered within 10 seconds, callback is canceled.
- If the extension hears a busy tone before dialing the telephone number, only the CO line or CO line group is reserved. After answering the callback ring, the extension should dial the telephone number.
- An extension can set only one Automatic Callback Busy. The last setting is effective.
- Multiple extension users can set this feature for the same CO line at the same time. However, a maximum of four extension users can set this feature to one extension.
- The priority of the callback is the setting order.
- This feature cannot be used for calls to a Voice Processing System (VPS).

Operation References

1.2.4 When the Dialed Line is Busy or There is No Answer

1.7.2 Executive Busy Override

Description

Allows an extension user to interrupt an existing call to establish a three-party conference call.

Executive Busy Override Deny

It is possible for extension users to prevent their calls from being interrupted by another extension user.

Conditions

- Class of Service (COS) programming determines extension users who can use the Executive Busy Override (→ Executive Busy Override [505]) and set the Executive Busy Override Deny mode (→ Executive Busy Override Deny [506]).
- This feature will not function when the busy extension:
 - a) Has set Executive Busy Override Deny or Data Line Security (→ 1.10.5 Data Line Security).
 - b) Is being monitored by another extension (→ 1.7.3 Call Monitor).
 - c) Is receiving an Off-hook Call Announcement (OHCA) (→ 1.7.4.3 Off-hook Call Announcement (OHCA)) or Whisper OHCA (→ 1.7.4.4 Whisper OHCA).
 - d) Is on a conference call (→ 1.13.1 Conference Features).

- e) Is on a doorphone call (→ 1.15.1 Doorphone Call).
- f) Is using Live Call Screening (LCS) or Two-way Record (→ 1.21.2 Voice Mail DPT (Digital) Integration).
- g) Has a call on a consultation hold (→ 1.12.5 Consultation Hold).
- This feature is not available for a CO-to-CO line call via Direct Inward System Access (DISA) (→ 1.15.6 Direct Inward System Access (DISA)).

Operation References

- 1.2.4 When the Dialed Line is Busy or There is No Answer
- 1.7.6 Executive Busy Override Deny

1.7.3 Call Monitor

Description

Allows an extension user to listen to a busy extension user's existing conversation. The user can hear the conversation but will not be heard. If desired, the monitoring user can interrupt the call to establish a three-party conference call.

Conditions

- Class of Service (COS) programming determines extension users who can use this feature.
- This feature is available only when the busy extension is in a conversation with another extension or outside party.
- This feature will not function when the busy extension:
 - a) Has set Executive Busy Override Deny (→ 1.7.2 Executive Busy Override) or Data Line Security (→ 1.10.5 Data Line Security).
 - b) Is receiving an Off-hook Call Announcement (OHCA) (→ 1.7.4.3 Off-hook Call Announcement (OHCA)) or Whisper OHCA (→ 1.7.4.4 Whisper OHCA).
 - c) Is on a conference call (→ 1.13.1 Conference Features).
 - d) Is on a doorphone call (→ 1.15.1 Doorphone Call).
 - e) Is using Live Call Screening (LCS) or Two-way Record (→ 1.21.2 Voice Mail DPT (Digital) Integration).
 - f) Has a call on a consultation hold (→ 1.12.5 Consultation Hold).
- This feature stops when the busy extension user presses the following buttons during a conversation (→ 1.18.1 Fixed Buttons, → 1.18.2 Flexible Buttons):
 - FLASH/RECALL button
 - HOLD button
 - TRANSFER button
 - CONF (Conference) button
 - DSS button
 - EFA button
 - Two-way Record button
 - Two-way Transfer button
 - One-touch Two-way Transfer button

- Voice Mail (VM) Transfer button

Operation References

1.2.4 When the Dialed Line is Busy or There is No Answer

1.7.4 Second Call Notification to Busy Extension

1.7.4.1 Second Call Notification to Busy Extension—OVERVIEW

Description

When attempting to call a busy extension (i.e., an extension that is ringing or having a conversation), an extension user can send a call waiting indication to the busy extension (**Call Waiting**). The method of notification received depends on the called extension's personal setting and the telephone type:

Notification	Description	Details in
Call Waiting Tone	Sends a call waiting tone to the busy extension.	• 1.7.4.2 Call Waiting Tone
Off-hook Call Announcement (OHCA)	Allows the caller to talk with the busy extension using the built-in speaker and microphone of the called extension, while the existing call is continued using the handset.	• 1.7.4.3 Off-hook Call Announcement (OHCA)
Whisper OHCA	Allows the caller to speak to the busy extension through the handset.	• 1.7.4.4 Whisper OHCA

Conditions

- Each extension user can choose to receive call waiting tones, OHCA, Whisper OHCA, or none of these.
- OHCA and Whisper OHCA are enabled or disabled by the Class of Service (COS) of the calling extension.
- OHCA and Whisper OHCA are not compatible with certain telephone types. In such cases, a call waiting tone will be sent to the called extension.

OHCA Mode of Calling Extension's COS	Called Extension's Call Waiting Mode			
	OFF	ON		
		Call Waiting Tone	OHCA	Whisper OHCA
Disable	Call Waiting disabled	Call waiting tone	Call waiting tone	Call waiting tone
Enable	Call Waiting disabled	Call waiting tone	OHCA (or Call waiting tone)	Whisper OHCA (or Call waiting tone)

- The notification receiving methods (call waiting tone, OHCA, and Whisper OHCA) are available when the called extension is having a conversation with other party. If the extension is not having a conversation but is unavailable to receive the notification (dialing a number, for example), the calling

extension will be kept waiting until the called extension becomes available. Even while waiting, the calling extension will hear a ringback tone.

- If none of these methods of receiving notification (call waiting tone, OHCA, or Whisper OHCA) is set at the called party, the caller will hear a reorder tone after trying to send a call waiting notification.

Feature References

1.1.3.3 Call Waiting

Operation References

1.2.4 When the Dialed Line is Busy or There is No Answer

1.7.4.2 Call Waiting Tone

Description

When an extension user attempts to call a busy extension (i.e., an extension that is ringing or having a conversation), a call waiting tone can be sent to the called extension to indicate another call is waiting.

Conditions

- This feature functions only if the called extension has activated call waiting. If it is activated, the calling extension will hear a ringback tone.
- One of two call waiting tones can be selected (Tone 1 or Tone 2) through personal programming (Call Waiting Tone Type Selection).

Operation References

3.1.2 Settings on the Programming Mode

1.7.4.3 Off-hook Call Announcement (OHCA)

Description

An extension user can talk with a busy extension through the built-in speaker and microphone of the called party's proprietary telephone (PT). If the existing call is using a handset, a second conversation is made using the speakerphone and microphone so that the called extension can talk to both parties.

Conditions

- Class of Service (COS) programming determines which extensions can use this feature.
- This feature is available when the called extension uses one of the following telephones:
 - KX-T7625, KX-T7630, KX-T7633, KX-T7636
 - KX-T7436
 - KX-T7235
- Off-hook Call Announcement (OHCA) cannot be used when

- (a) The OHCA mode of the caller's COS is set to "Disable".
- (b) The called extension's telephone is not compatible with OHCA.
- (c) The called extension is a digital proprietary telephone (DPT) which is connected via a USB Module to a computer running PC Console or PC Phone.
- (d) The called extension is in a Digital XDP connection.

In these cases, a call waiting tone is sent to the called extension. (→ 1.7.4.2 Call Waiting Tone)

- While an extension is receiving an OHCA, if the extension user places the current CO line call on hold or transfers the current intercom call or CO line call, the OHCA will become disabled and the calling extension will hear a ringback tone.
- While an extension is receiving an OHCA, if the extension user places the current intercom call on hold, the called extension can talk to the calling extension through the handset.

1.7.4.4 Whisper OHCA

Description

An extension user can speak to a busy extension through the handset.

Conditions

- Class of Service (COS) programming determines which extensions can use this feature.
- This feature is available when the calling and called extension use one of the following telephones:
 - KX-T7600 series
 - KX-T7400 series
 - IP-PT
- If the Whisper OHCA feature cannot be used due to COS or telephone type, a call waiting tone will be sent to the called extension. (→ 1.7.4.2 Call Waiting Tone)
- If the called extension is not a KX-T7600 or KX-T7400 series telephone or an IP-PT, but forces Whisper OHCA, the announcement may be heard by both parties.
- It is possible to enable Whisper OHCA on any telephone, however, it may not function properly. (The caller's voice may be heard by both callers, for example.)
- While an extension is receiving a Whisper OHCA, if the extension user places the current CO line call on hold or transfers the current intercom call or CO line call, the Whisper OHCA will become disabled and the calling extension will hear a ringback tone.
- While an extension is receiving a Whisper OHCA, if the extension user places the current intercom call on hold, the called extension can talk to the calling extension through the handset.

1.8 Toll Restriction (TRS) Features

1.8.1 Toll Restriction (TRS)

Description

Toll Restriction (TRS) can prohibit extension users from making certain CO line calls, based on the Class of Service (COS) assigned to them (→ Class of Service [602]).

Each COS is assigned a TRS level for each time mode; level 1 grants the highest level of authorization, allowing all CO line calls to be made, and level 7 grants the lowest level of authorization, prohibiting all CO line calls from being made. TRS levels 2 through 6 are used to restrict calls by combining preprogrammed Denied and Exception Code Tables, explained below.

Each COS can also have a separate TRS level applicable to calls made using System Speed Dialing.

A TRS check is applied each time a dialed number is sent to a CO line after an extension user goes off-hook and seizes a line.

Denied Code Tables

Denied Code Tables are preprogrammed lists containing the first few digits (leading number) of telephone numbers which may not be called. All outgoing CO line calls made by TRS level 2 through 6 users are compared to at least one Denied Code Table, and when the leading number of a dialed telephone number (not including the CO Line Access number) matches an entry found in the applicable table, the call is denied.

There are five Denied Code Tables. Each table applies to a corresponding TRS level as well as the level(s) preceding it, as explained below.

Exception Code Tables

Exception Code Tables are preprogrammed lists of leading digits or complete telephone numbers which are checked against every dialed number prohibited by a Denied Code Table. When a user dials a number prohibited by a Denied Code Table, it is compared to at least one Exception Code Table. If the dialed number matches an entry found in the applicable Exception Code Table, the call is permitted.

There are five Exception Code Tables. Each table applies to a corresponding TRS level as well as the level(s) preceding it, as explained below.

TRS Override by System Speed Dialing

When TRS Override by System Speed Dialing is enabled for the PBX, each COS has an additional TRS level applicable only to calls made using System Speed Dialing.

This allows extension users to use System Speed Dialing to make CO line calls which are normally prohibited by the TRS level of their assigned COS. If, for example, a user's TRS level is 7, that user normally cannot make any CO line calls. However, if the same user's TRS level for System Speed Dialing is level 1, the user can make a CO line call to any number stored in System Speed Dialing.

TRS Level

The Denied Code Tables and Exception Code Tables which apply to each TRS level are explained below.

	Denied Code Tables* ¹	Exception Code Tables* ²
Level 1	Not Programmable	Not Programmable
Level 2	Table for Level 2	Tables for Levels 2 through 6
Level 3	Tables for Levels 2 and 3	Tables for Levels 3 through 6

1.8 Toll Restriction (TRS) Features

	Denied Code Tables* ¹	Exception Code Tables* ²
Level 4	Tables for Levels 2 through 4	Tables for Levels 4 through 6
Level 5	Tables for Levels 2 through 5	Tables for Levels 5 through 6
Level 6	Tables for Levels 2 through 6	Tables for Level 6
Level 7	Not Programmable	Not Programmable

*¹ → TRS Denied Code [301]

*² → TRS Exception Code [302]

Level 1	All CO line calls permitted.	
Level 2	Level 2 restrictions	Level 2 - 6 exceptions
Level 3	Level 2 - 3 restrictions	Level 3 - 6 exceptions
Level 4	Level 2 - 4 restrictions	Level 4 - 6 exceptions
Level 5	Level 2 - 5 restrictions	Level 5 - 6 exceptions
Level 6	Level 2 - 6 restrictions	Level 6 exceptions
Level 7	All CO line calls restricted.	

Calls are restricted
 Calls are permitted


[Programming Example: TRS Level]

COS	TRS Level* ¹				TRS Level for System Speed Dialing* ²
	Day	Lunch	Break	Night	
1	1	1	1	6	1
2	2	2	2	6	1

*¹ → TRS Level [501]

*² → TRS Level for System Speed Dialing [509]

[Flowchart]

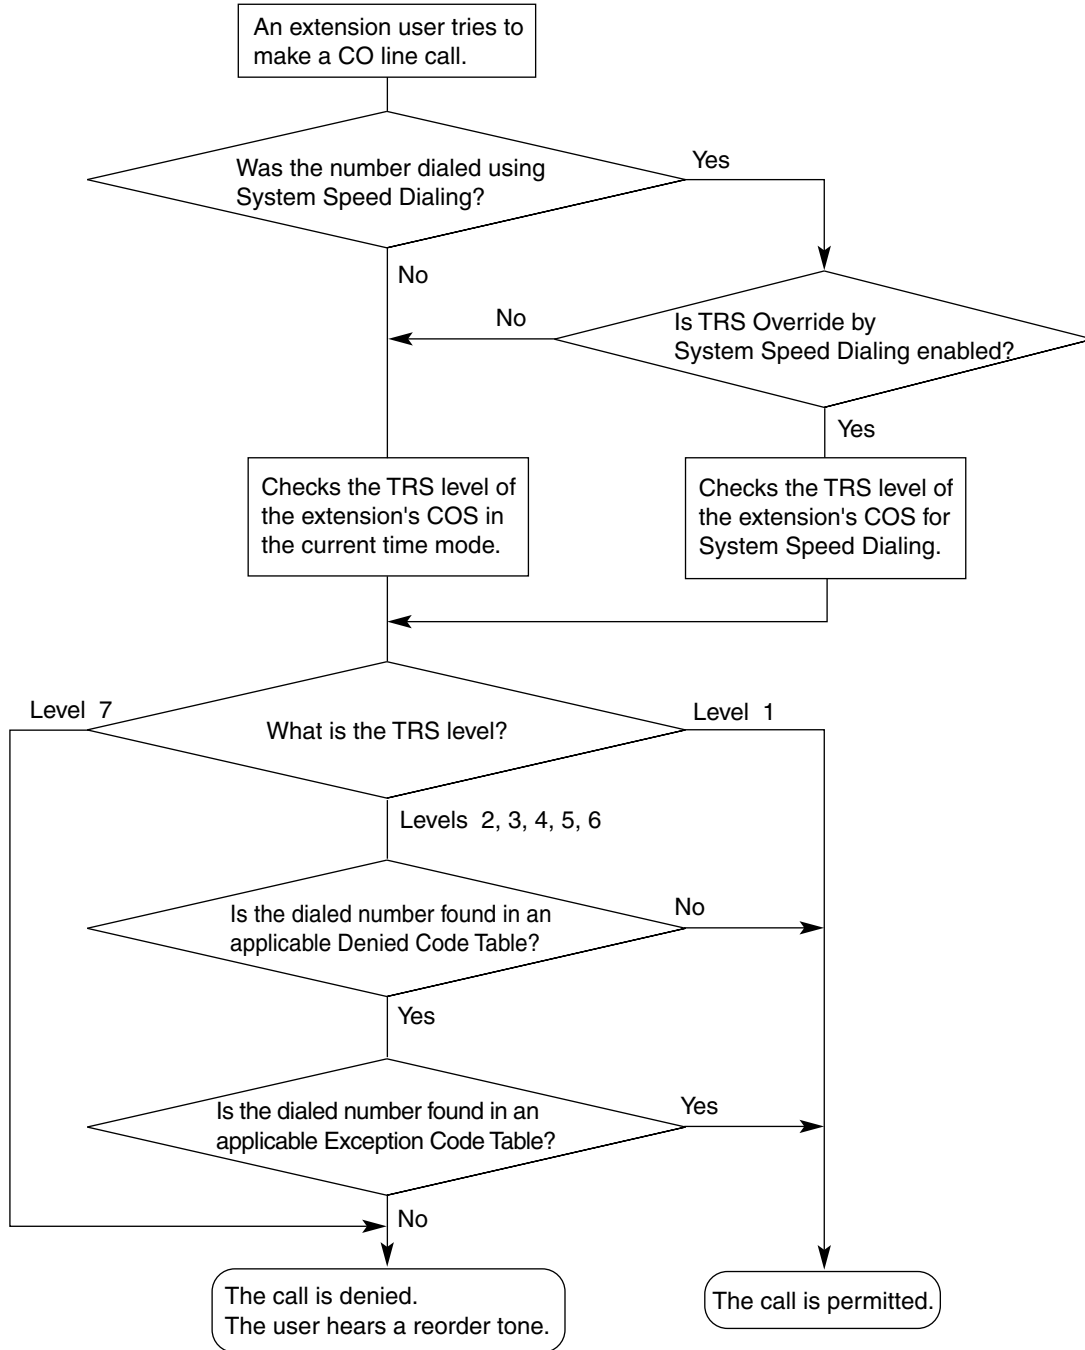

Conditions

WARNING

The software contained in the TRS feature to allow user access to the network must be upgraded to recognize newly established network area codes and exchange codes as they are placed into service.

Failure to upgrade the premises PBXs or peripheral equipment to recognize the new codes as they are established will restrict the customer and the customer's employees from gaining access to the network and to these codes.

KEEP THE SOFTWARE UP-TO-DATE WITH THE LATEST DATA.

- TRS checks are performed for all calls made by:
 - Any CO line access (Idle Line Access, CO Line Group Access, S-CO Line Access)
 - Automatic Route Selection (ARS)
- The PBX can also be programmed to perform a TRS check for numbers that contain non-digits (* or #). By default, the PBX ignores ("No Check") any non-digits that are dialed, which is useful in preventing unauthorized calls which could possibly be made using certain telephone company exchanges.
- TRS can also be programmed to check digits that are dialed after External Feature Access, such as when trying to transfer a call to an outside party. (→ 1.10.7 External Feature Access (EFA))
- **Host PBX Access Code/Special Carrier Access Code**
 TRS checks can be carried out on telephone numbers dialed using a Host PBX Access code (→ 1.5.4.6 Host PBX Access Code (Access Code to the Telephone Company from a Host PBX)) or Special Carrier Access code (→ 1.5.4.7 Special Carrier Access Code).

Access Code Type	Access Code is stored in the PBX		Access Code is not stored in the PBX
	Access Code is dialed	Access Code is not dialed	
Host PBX Access Code	TRS ignores the code and checks the remaining digits.	Number dialed is not a CO line call, so TRS does not check the number.	TRS checks the entire number.
Special Carrier Access Code	TRS ignores the code and checks the remaining digits.	TRS checks the entire number.	TRS checks the entire number.

- **ARS**
 If ARS is applied to a dialed number, TRS will check the user-dialed number, not the modified number produced by ARS. You do not need to program ARS-modified numbers in any of the TRS Tables. Additionally, when using ARS, TRS will ignore the Host PBX Access code or Special Carrier Access code.
- **Dialing Digit Restriction during Conversation**
 TRS can also limit the number of digits which may be dialed by an extension user while the user is engaged on a received CO line call. If the number of dialed digits exceeds the limit, the line will be disconnected.
- It is possible to select through system programming whether the CO line is disconnected when the Inter-digit time expires without the TRS check being completed.
 - If no disconnection is chosen, the TRS check will also be performed after the Inter-digit time expires.
 - If disconnection is chosen, the line will be disconnected when the CO line Inter-digit time expires. This also prevents EFA from being used.
 This setting applies to all CO lines.
- When one of the following features is used, the TRS level of the extension can be temporarily changed. If two or more of these features are used simultaneously (Dial Tone Transfer is used while the extension is locked, for example), the TRS level of the feature with the highest priority is applied for the duration of the call. The numbers below (1 through 4) indicate the priority of each feature, with 1 having the highest priority, and 4 having the lowest.
 - 1) Dial Tone Transfer (→ 1.8.3 Dial Tone Transfer)
 - 2) TRS Override by System Speed Dialing

- 3) Walking COS/Verified Code Entry (→ 1.8.4 Walking COS, → 1.8.5 Verified Code Entry)
- 4) Extension Lock (→ 1.8.2 Extension Lock)

Feature References

- 1.5.5.3 CO Line Access
- 1.6.1.4 Speed Dialing—Personal/System
- 1.9.1 Automatic Route Selection (ARS)
- 2.2.4 Time Service

1.8.2 Extension Lock

Description

Extension users can lock their telephones to prevent unauthorized use—useful for situations when extension users must leave their desks temporarily.

When Extension Lock is engaged, the extension's Toll Restriction (TRS) level (→ 1.8.1 Toll Restriction (TRS)) is temporarily changed to another level, thereby determining which CO line calls can be made from the locked extension by another user.

An extension personal identification number (PIN) is required to unlock a locked extension (→ 1.25.1 Extension Personal Identification Number (PIN)), however, anyone can engage Extension Lock, as no PIN is required.

This feature is also known as Electronic Station Lockout.

Conditions

- This feature also restricts changing the Call Forwarding (FWD) destination. (→ 1.3.1.2 Call Forwarding (FWD))
- **Remote Extension Lock**
Allows an extension assigned as a manager to lock or unlock an extension. When a manager locks an extension remotely, the extension's user cannot unlock it. When a user locks an extension, a manager can override the lock and unlock the extension.
This feature is also known as Remote Station Lock Control.
- **TRS Level**
The TRS level of a locked extension is assigned through system programming. (→ TRS Level for Extension Lock [510]).
- Other features can also temporarily change an extension's TRS level, similar to Extension Lock. If an extension is locked, the TRS level determined by the following features takes priority. The numbers below (1 through 3) indicate the priority of each feature, with 1 having the highest priority, and 3 having the lowest.
 - 1) Dial Tone Transfer (→ 1.8.3 Dial Tone Transfer)
 - 2) TRS Override by System Speed Dialing (→ 1.8.1 Toll Restriction (TRS))
 - 3) Walking COS/Verified Code Entry (→ 1.8.4 Walking COS, → 1.8.5 Verified Code Entry)

Operation References

- 1.5.3 Extension Lock
- 2.1.1 Extension Control


1.8.3 Dial Tone Transfer

Description

Allows an extension assigned as a manager change the Toll Restriction (TRS) level (→ 1.8.1 Toll Restriction (TRS)) of an extension for the purpose of making a single CO line call. The extension user first calls a manager, who then presses the Toll Restriction button, giving the extension user a dial tone from which the normally unauthorized call can be made.

[Example]

A hotel guest calls the front desk and asks for the telephone's toll restriction to be lifted in order to make an international call.

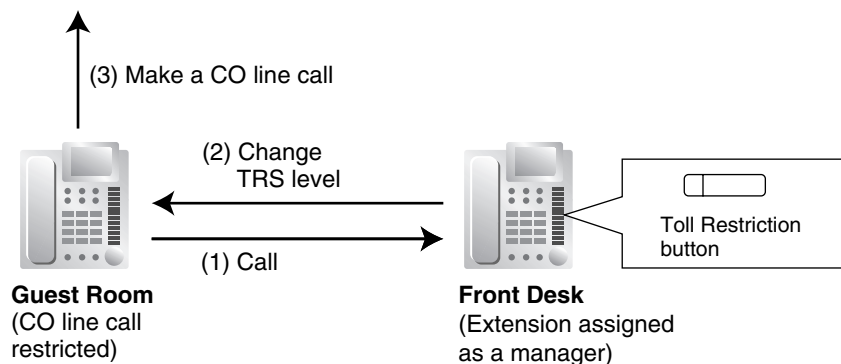

Toll Restriction Button

A manager extension must store the TRS level granted by the Dial Tone Transfer beforehand, when assigning a flexible button as the Toll Restriction button.

Conditions

- Dial Tone Transfer is effective for only one CO line call.

Feature References

1.18.2 Flexible Buttons

Operation References

2.1.3 Dial Tone Transfer

1.8.4 Walking COS

Description

Extension users can temporarily assign their own Class of Service (COS) to another extension, allowing them to make calls as if from their own telephones.

This feature is useful when a manager or supervisor needs to borrow another employee's telephone to make a call. The superior enters the Walking COS feature number followed by his or her extension number and extension personal identification number (PIN), then makes the call.

Other features can be accessed by Walking COS, such as DND Override (→ 1.3.1.3 Do Not Disturb (DND)) and Executive Busy Override (→ 1.7.2 Executive Busy Override). The same privileges and restrictions normally applied to a user are applied when using Walking COS.

Conditions

- Walking COS is effective for only one CO line call or one operation at a time.
- When making a call with Walking COS:
 - a) The extension number of the Walking COS user, not the borrowed extension, is logged by Station Message Detail Recording (SMDR). (→ 1.23.1 Station Message Detail Recording (SMDR))
 - b) The Walking COS user's Itemized Billing Code for ARS will be used.
- **Walking COS through DISA**
This feature is also available through Direct Inward System Access (DISA). (→ 1.15.6 Direct Inward System Access (DISA))

Feature References

2.2.1 Class of Service (COS)

Operation References

1.2.6 Calling without Restrictions

1.8.5 Verified Code Entry

Description

A verified code is a code which is assigned its own Class of Service (COS), and therefore contains a Toll Restriction (TRS) level (→ 1.8.1 Toll Restriction (TRS)). Using a verified code, a PBX user can use any extension to make CO line calls with his or her own set of privileges and restrictions. You may think of Verified Code Entry as Walking COS for PBX users who do not have their own extensions.

Because a verified code user normally has no extension telephone, the verified code will be logged by Station Message Detail Recording (SMDR) for identification or accounting purposes when making a CO line call.

Other features can be accessed by Verified Code Entry, such as DND Override, Executive Busy Override, etc.

Each verified code can be assigned a user name, COS, verified code, personal identification number (PIN), and Itemized Billing Code for ARS. A verified code PIN is required to use Verified Code Entry.

[Programming Example: Verified Codes]

Location No.	Verified Code ¹	User Name ²	Verified Code PIN ³	COS No. ⁴	Itemized Billing Code for ARS
1	1111	Tom Smith	1234	1	2323
2	2222	John White	9876543210	3	4545

- *1 → Verified Code [120]
- *2 → Verified Code Name [121]
- *3 → Verified Code Personal Identification Number (PIN) [122]
- *4 → Verified Code COS Number [123]

Conditions

WARNING

When a third party discovers the personal identification number (PIN) (verified code PIN/extension PIN) of the PBX, there will be a risk that they will make fraudulent phone calls using the telephone line, and the cost will be charged to your own account. In order to avoid this problem, we strongly recommend the following points:

- a) **Carefully maintain the secrecy of the PIN.**
 - b) **Specify a complicated PIN as long and random as you can make it.**
 - c) **Change the PIN frequently.**
- Verified Code Entry is effective for only one CO line call or one operation at a time.
 - When making a call with Verified Code Entry:
 - a) The verified code, not the borrowed extension number, is logged by SMDR. (→ 1.23.1 Station Message Detail Recording (SMDR)) It will appear as * + [the verified code].
 - b) The verified code user's Itemized Billing Code for ARS will be used.
 - **Verified Code PIN**
A verified code PIN can also be assigned for each verified code through manager programming as well as through system programming.
 - **Verified Code Entry through DISA**
This feature is also available through Direct Inward System Access (DISA). (→ 1.15.6 Direct Inward System Access (DISA))
 - **Verified Code PIN Lock**
If the PIN is entered incorrectly three times, the line will be disconnected. If an incorrect PIN is entered a preprogrammed number of times, the PIN will be locked. Only an extension assigned as a manager can unlock a PIN, after which it will be reset.

Feature References

- 1.9.1 Automatic Route Selection (ARS)
- 2.2.1 Class of Service (COS)
- 2.2.6 Manager Features

Operation References

- 1.2.6 Calling without Restrictions
- 3.2.2 Manager Programming

1.9 Automatic Route Selection (ARS) Features

1.9.1 Automatic Route Selection (ARS)

Description


Different telephone carriers charge different rates for calls placed to different areas. Your PBX may use different telephone carriers to make calls to different areas in an effort to reduce costs.

Automatic Route Selection (ARS) is a feature which automatically selects different carriers each time a CO line call is made. In order to use ARS effectively, various ARS-related tables must be preprogrammed to tell the PBX which calls should be placed using which carriers, during which time of day.

If you do not activate ARS, if ARS is bypassed, or if you do not use multiple carriers, CO line calls will be connected via the carrier contracted for each line (default carrier).

[Carrier Selection Procedure Flowchart]

The numbers in parentheses indicate the corresponding items found under [Programming Procedures] on the following pages.

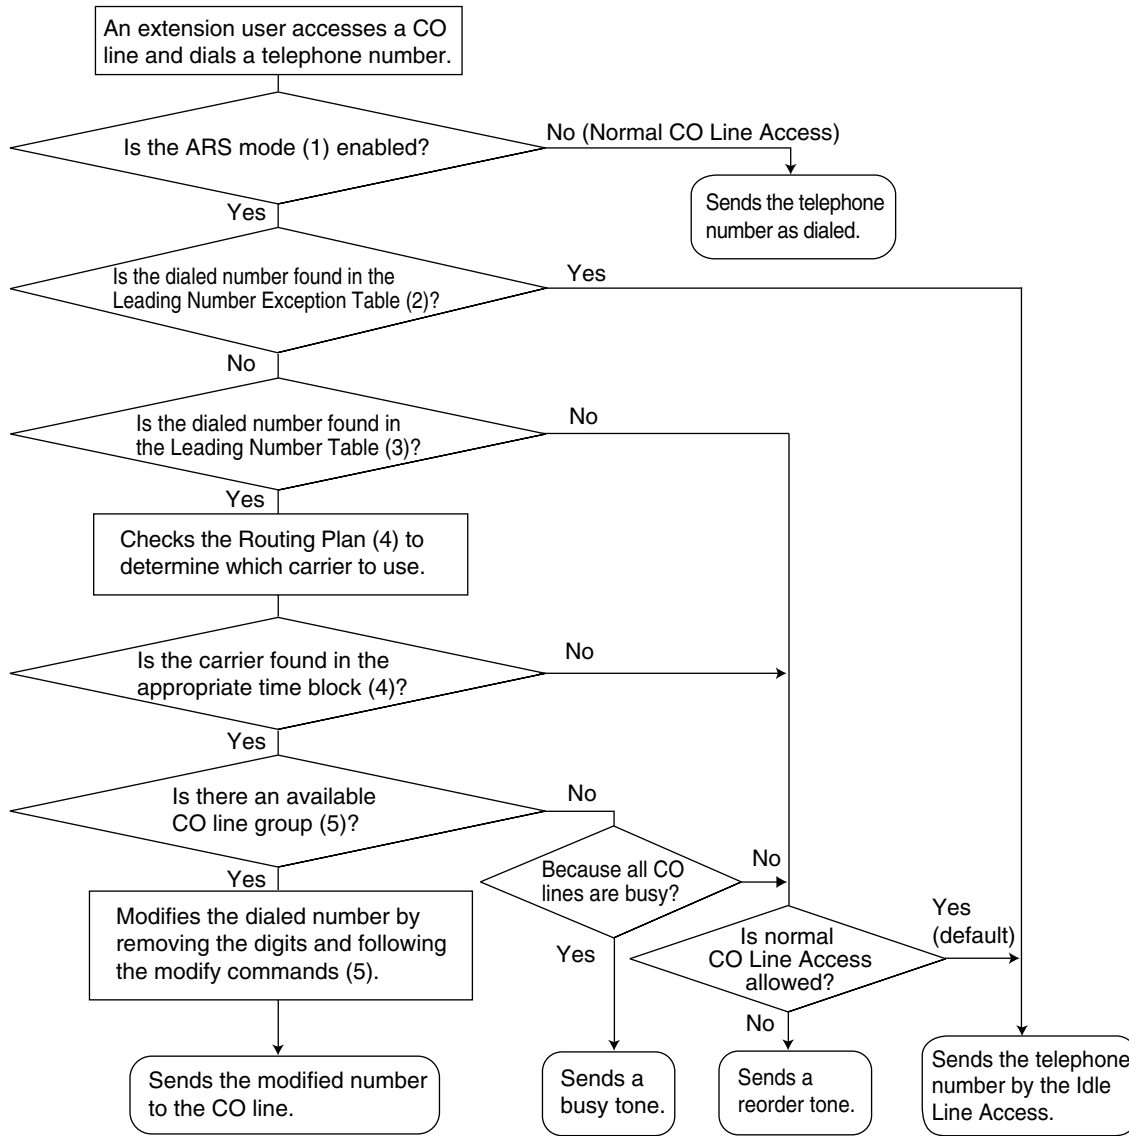

[Programming Procedures]

1. ARS Mode (→ ARS Mode [320])

ARS is turned on by selecting under which circumstances it operates – either when an extension user makes a call using the Idle Line Access method, or when any CO Line Access method is used. (→ 1.5.5.3 CO Line Access). ARS can also be turned off for the entire system.

2. Leading Number Exception Table

Once ARS is activated, store the telephone numbers that will bypass ARS in the Leading Number Exception Table.

Note that the first few digits (leading number) of a telephone number, such as an area code or local exchange, can also be stored, so that all calls to those areas or exchanges are exempted from ARS. Also note that the CO Line Access number is always ignored by ARS and does not need to be programmed here.

Calls that are exempt from ARS are connected to the user-selected line, via the default carrier for that line.

[Programming Example: ARS Leading Number Exception Table]

Location No.	Leading No. Exception ^{*1}
1	555
2	556
3	567

*1 → ARS Exception Number [325]

In this example:

555, 556, and 567 are local exchanges. (555-XXXX, 556-XXXX, 567-XXXX)

These calls can be made using any carrier, and are therefore exempt from ARS.

3. Leading Number Table

Next, store the leading numbers of telephone numbers that should be routed by ARS, and assign a Routing Plan to each leading number that will control how calls containing these leading numbers are routed.

When an extension user dials a number which contains a leading number stored in the ARS Leading Number Table, the call will be routed the corresponding Routing Plan assigned here. Note that the CO Line Access number is always ignored by ARS and does not need to be programmed here.

Before programming the details of each Routing Plan (explained below), you can simply assign here the same Routing Plan number to all the different leading numbers which will be routed the same way.

If a dialed number matches two or more leading numbers stored in the ARS Leading Number Table, the lowest numbered location will have priority.

[Programming Example: ARS Leading Number Table]

Location No.	Leading No. ^{*1}	Additional No. of Digits	Routing Plan No. ^{*2}
1	1212	7	1
2	01181	0	5
3	01144	0	12

*1 → ARS Leading Number [321]

*2 → ARS Routing Plan Table Number [322]

Additional Number of Digits

In order for calls to be made using the desired carrier, telephone numbers dialed by extension users must be modified to meet the criteria required by the carrier. (Refer to 5. Carrier Table.) This modification usually involves removing digits and adding access codes to the beginning of the dialed number.

In situations where a preprogrammed number (such as an Itemized Billing Code) must be added automatically after the telephone number that was dialed by the extension user, set the Additional Number of Digits to a value greater than 0.

4. Routing Plan

Since the preferred carrier may vary depending on the time of day, you can create an ARS-specific time table and break each day of the week into different time blocks. A different carrier can then be assigned to each time block.

Routing Plan Time Table: For each Routing Plan, a different carrier can be assigned for each time of day and each day of the week. Each day can have up to four programmable time blocks.

Routing Plan Priority: For each Routing Plan, a different carrier can be assigned a different priority for each time of day. Generally, the carrier assigned to priority 1 will be used, however, if the CO lines assigned to this carrier are busy, a different available carrier will be used according to priority level.

ARS Leading Number Table

Location No.	Leading No.	Additional No. of Digits	Routing Plan No.
1	1212	7	①
2	01181	0	5
3	01144	0	12

ARS Routing Plan No. ①

Time Table ¹			Carrier ²	
			Priority 1	Priority 2
Monday	Time Block A	9:00	Carrier A	Carrier M
	Time Block B	12:00	Carrier A	Carrier M
	Time Block C	17:00	Carrier C	Carrier M
	Time Block D	23:00	Carrier J	Carrier M

*1 → ARS Routing Plan Time Table [330]

*2 → ARS Routing Plan Table (1–16) [331–346]

5. Carrier Table

Each carrier must be programmed in the Carrier Table. Here each carrier is assigned a carrier number, name, the CO lines it is used with, etc.

Carrier Name: Assign a name for the carrier. Used only as a reference.

CO Line Group: Assign the CO line groups which can be used when making calls via this carrier.

Carrier Access Code: Enter the carrier's access code. Consult carrier for details.

Removed Number of Digits: There may be circumstances where the user-dialed number must be modified in order for the carrier to connect the call. In this case, enter here the number of digits to be removed automatically from the beginning of the dialed number.

Modify Command: When a call is made using this carrier, the telephone number must be modified to meet the criteria required by the carrier in order to connect the call. Program here the commands needed to modify the user-dialed number as necessary.

Conditions

WARNING

The software contained in the ARS feature to allow user access to the network must be upgraded to recognize newly established network area codes and exchange codes as they are placed into service.

Failure to upgrade the premises PBXs or peripheral equipment to recognize the new codes as they are established will restrict the customer and the customer's employees from gaining access to the network and to these codes.

KEEP THE SOFTWARE UP-TO-DATE WITH THE LATEST DATA.

- **Logging Outgoing Calls by SMDR**
Whether SMDR logs the user-dialed number or the ARS-modified number is determined through system programming. (→ 1.23.1 Station Message Detail Recording (SMDR))
- **ARS Data Import/Export**
ARS tables and data can be copied to and from the PBX and a PC using the KX-TDA Maintenance Console software. Files are saved in CSV (Comma Separated Value) format. Because of the large amounts of programming that may be necessary to use ARS effectively, you may choose to export ARS tables and data to a PC, edit them using the software of your choosing, then import the new data to the PBX. This is particularly convenient if you need to update your ARS tables for new area codes or telephone rates, or when you'd like to copy ARS tables from one PBX to another.
- **TRS**
Toll Restriction (TRS) checks are performed before ARS number modification, so program TRS Denied Code Tables and Exception Code Tables accordingly. (→ 1.8.1 Toll Restriction (TRS))
- **When ARS Routing Takes Place**
ARS routing takes place after the preprogrammed number of digits (leading number + additional number of digits) have been dialed.

1.10 Conversation Features

1.10.1 Hands-free Operation

Description

A proprietary telephone (PT) user can talk to another party without lifting the handset. Pressing specific buttons, such as REDIAL, automatically activate hands-free mode.

Conditions

- **PTs with the MONITOR Button**
PTs with the MONITOR button can dial in hands-free mode but cannot have hands-free conversations.

1.10.2 Off-hook Monitor

Description

A proprietary telephone (PT) user can let others listen to the user's conversation through the built-in speaker, during a conversation using the handset.

Conditions

- **Compatible Telephone**
KX-T7400 series (display PT only), all KX-T7600 series telephones, and IP-PTs.
To enable this feature, system programming is required. If disabled, hands-free conversation is performed instead.

Operation References

1.4.7 Off-hook Monitor

1.10.3 Mute

Description

During a conversation, a proprietary telephone (PT) user can disable the built-in microphone or the handset microphone to consult privately with others while listening to the other party on the phone through the built-in speaker or the handset receiver. The user can hear the other party's voice during Mute. Only your voice will be muted.

Conditions

- This feature is available on all PTs that have the AUTO ANS/MUTE button.

Operation References

1.4.6 Mute

1.10.4 Headset Operation

Description

This PBX supports headset compatible proprietary telephones (PTs). A PT user can talk to another party hands-free and without lifting the handset by using an optional headset.

For connection and operation, refer to the Operating Instructions for the headset.

This feature is also known as Handset/Headset Selection.

Conditions

- If headset mode is on, pressing the SP-PHONE button activates the headset, not the built-in speaker.
- To set the headset mode on a digital proprietary telephone (DPT), use personal programming (Headset Operation) or press the Headset button. To set headset mode on an analog proprietary telephone (APT), use the handset/headset selector located on the telephone and/or on the headset.
- **Headset Button**
Any flexible button on a DPT can be customized as the Headset button. The Headset button can be also assigned to a flexible button on an APT, but the button will have no function.
- **Answer/Release Button**
A flexible button can be customized as an Answer button or a Release button. Such buttons are useful for headset operation. It is possible to answer an incoming call by pressing the Answer button. While hearing a call waiting tone during a conversation, pressing the Answer button enables one to answer the second call by placing the current call on hold. Pressing the Release button enables one to disconnect the line during or after conversation, or to complete a Call Transfer.
- It is possible to change from headset mode to hands-free mode or vice versa during a conversation by pressing the Headset button.
- Headset users cannot use the following features:
 - Automatic Redial (→ 1.6.1.3 Last Number Redial)
 - Receiving the Off-hook Call Announcement (OHCA) (→ 1.7.4.3 Off-hook Call Announcement (OHCA))
 - Receiving the Whisper OHCA (→ 1.7.4.4 Whisper OHCA)

Feature References

1.18.2 Flexible Buttons

Operation References

1.3.5 ANSWER/RELEASE Button

1.4.8 Headset Operation

3.1.2 Settings on the Programming Mode

1.10.5 Data Line Security

Description

Once Data Line Security is set on an extension, communication between the extension and the other party is protected from signals such as Call Waiting, Hold Recall and Executive Busy Override. Extensions which have devices connected to them such as modems or fax machines may set this feature to maintain secure data transmission, by blocking tones or other interruptions during communication.

Operation References

1.7.8 Data Line Security

1.10.6 Flash/Recall/Terminate

Description

A proprietary telephone (PT) user can use the FLASH/RECALL button (Flash/Recall mode or Terminate mode) or Terminate button (Terminate mode) to disconnect the current call and originate another call without hanging up.

Flash/Recall Mode: Disconnects the line and the extension user hears the dial tone from the line used last. For example, if a CO line call is disconnected, the extension user will hear a new dial tone from the same CO line.

Terminate Mode: Disconnects the line and the extension user hears a dial tone via the preferred CO line. (→ 1.5.5.2 Line Preference—Outgoing)

Conditions

- **FLASH/RECALL Button Mode**
One of the following modes can be selected for each extension through system programming:
 - Flash/Recall mode
 - Terminate mode
 - EFA mode. (→ 1.10.7 External Feature Access (EFA))
- **Terminate Button**
Any flexible button can be customized as the Terminate button.
- **Disconnect Time (Only for Flash/Recall Mode)**
The amount of time between successive accesses to the same CO line is programmable for each CO line port (→ LCOT Disconnect Time [418]).
- This feature generates a Station Message Detail Recording (SMDR) call record (→ 1.23.1 Station Message Detail Recording (SMDR)), restarts the call timer, inserts a pause, and checks the Toll Restriction (TRS) level (→ 1.8.1 Toll Restriction (TRS)) again.
- If Automatic Route Selection (ARS) is used (→ 1.9.1 Automatic Route Selection (ARS)) or if a CO line call is established using the INTERCOM button or G-DN button, Terminate mode will be effective even when Flash/Recall mode has been set.

Feature References

1.18.2 Flexible Buttons

1.10.7 External Feature Access (EFA)

Description

An extension user can access features of a host PBX or the telephone company, such as Transfer, Hold, Call Waiting, etc. A flash/recall signal is sent to the host PBX or the telephone company. This is only available on CO line calls, including Host PBX Access (→ 1.5.4.6 Host PBX Access Code (Access Code to the Telephone Company from a Host PBX)).

Conditions

- **Flash/Recall Time**
The Flash/Recall time can be assigned for each CO line port (→ LCOT Flash/Recall Time [417]).
- **EFA Button**
A flexible button can be customized as the EFA button.
- This feature is accessed by pressing the FLASH/RECALL button which is set to EFA mode (→ 1.10.6 Flash/Recall/Terminate) or the EFA button. It is also possible to perform this feature by entering the feature number when the current call is placed on a consultation hold (→ 1.12.5 Consultation Hold).

Feature References

1.18.2 Flexible Buttons

Operation References

1.9.4 Host PBX

1.10.8 CO Line Call Limitation

Description

CO Line calls are limited by the following features:

Feature	Description
Extension-to-CO Line Call Duration	<p>If a call between an extension user and an outside party is established, the call duration can be restricted by the system timer selected for each CO line group (→ Extension-to-CO Line Call Duration [472]). Both parties will hear an alarm tone 15 seconds before the timer expires, at five-second intervals. If the timer expires, the line will be disconnected.</p> <p>Class of Service (COS) programming determines whether this feature is enabled or disabled (→ CO Line Call Duration Limitation [502]). Whether this feature is applied to outgoing calls only or to both incoming and outgoing calls is also programmable.</p>

Feature	Description
CO-to-CO Line Call (except Unattended Conference Call) Duration	<p>If a call between two outside parties is established, the call duration can be restricted by the system timer selected for each CO line group (→ CO-to-CO Line Call Duration [473]). Both parties will hear an alarm tone 15 seconds before the timer expires at five-second intervals. If the timer expires, the line will be disconnected.</p> <p>This timer applies to CO line calls which are made via the PBX. If both calls are made by the extension (such as a CO line call made by an extension is transferred to an outside party), the shorter timer will apply to the call.</p>
Dialing Digit Restriction during Conversation	While engaged on a received CO line call, the dialing of digits can be restricted. If the number of dialed digits exceeds the limitation, the line will be disconnected.

Conditions

- During an Unattended Conference Call, the Unattended Conference Recall time is applied. (→ 1.13.1.2 Conference)

1.10.9 Paralleled Telephone





Description

By connecting telephones in parallel, you can increase the number of telephones connected to the PBX without adding additional extension cards.

Both wired and wireless telephones can be connected in parallel. Single line telephones (SLTs), analog proprietary telephones (APTs), and digital proprietary telephones (DPTs) can be connected to other telephones or connectors, allowing up to three telephones to be connected to the PBX through just one extension port. Additionally, portable stations (PSs) can be linked to other telephones wirelessly and used as "paired" extensions.

The different type of parallel connections are described below.

Features	Descriptions	Connections
Parallel Mode	<p>Allows an SLT to be connected to an APT or DPT which is connected to a Super Hybrid port of the PBX.</p> <p>When the two telephones are connected in parallel mode:</p> <ul style="list-style-type: none"> • Both share one extension number (APT or DPT's extension number). • Either telephone can make or answer calls. • If one goes off-hook while the other is on a call, the call is switched to the telephone that goes off-hook. 	<p>APT/DPT + SLT</p> <pre> graph LR PBX[PBX] --- Port1[Super Hybrid Port] Port1 --- DPT1[DPT] Port1 --- SLT1[SLT] DPT1 --- Extn101_Ext[Extn. 101] SLT1 --- Extn101_Ext PBX --- Port2[Super Hybrid Port] Port2 --- APT2[APT] Port2 --- SLT2[SLT] APT2 --- Extn102_Ext[Extn. 102] SLT2 --- Extn102_Ext </pre>

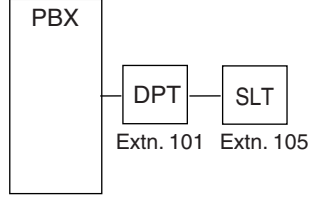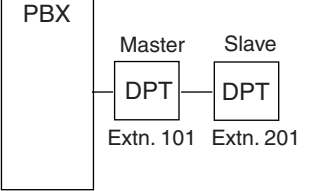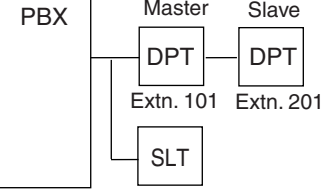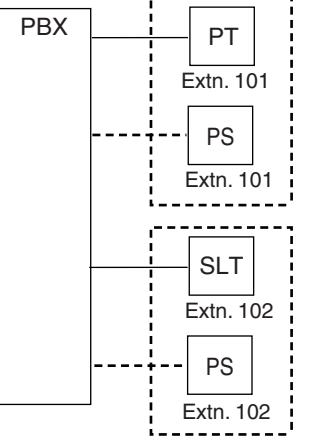Features	Descriptions	Connections
<p>EXtra Device Port (XDP) Mode</p>	<p>Allows an SLT to be connected to a DPT which is connected to a Super Hybrid port of the PBX. Unlike parallel mode, XDP mode allows each telephone to act as an independent extension with its own extension number. (→ 2.1.1 Extension Port Configuration)</p>	<p>DPT + SLT</p> 
<p>Digital XDP</p>	<p>Allows a DPT to be connected to another DPT which is connected to a DPT port or a Super Hybrid port of the PBX. Similar to XDP mode, each DPT acts as an independent extension with its own extension number. In a Digital XDP connection, the DPT connected to the PBX is called the "master DPT", and the DPT connected to the other DPT is the "slave". Additionally, an SLT can be connected to the master DPT in either parallel or XDP mode.</p>	<p>DPT + DPT</p>  <p>DPT + DPT + SLT</p>  <p>Extn. 101 (in Parallel Mode) or Extn. 105 (in XDP Mode)</p>
<p>Wireless XDP Parallel Mode</p>	<p>For information on this type of parallel connection, refer to the Wireless XDP Parallel mode feature. (→ 1.22.3 Wireless XDP Parallel Mode)</p>	<p>APT/DPT/SLT + PS</p> 

Conditions

[APT + SLT]

- If one telephone goes off-hook while the other is on a call, a three-party call is established. If one user goes on-hook, the other user continues the call.

- An extension user cannot originate a call from the SLT if the APT is:
 - playing background music (BGM)
 - receiving a paging announcement over the built-in speaker.
- The SLT will always ring for incoming calls (if its ringer is turned on). It cannot be programmed to not ring.

[DPT + SLT]

- When in the parallel mode, XDP mode of the Super Hybrid port should be turned off through system programming.
- Whether the SLT rings for incoming calls is programmable.

Ring on: Both telephones ring when a call is received, except for when the digital proprietary telephone (DPT) is in Hands-free Answerback mode (→ 1.4.1.4 Hands-free Answerback) or voice-calling mode (Alternate Receiving Ring/Voice) (→ 1.5.3 Intercom Call).

Ring off: Only the DPT rings when a call is received; however, the SLT can be used to answer the call.
- If one telephone goes off-hook while the other is on a call, the call is switched to the telephone that goes off-hook. Note, however, that the call will not be switched when the extension is:
 - a) Being monitored by another extension. (→ 1.5.3 Intercom Call)
 - b) Receiving an Off-hook Call Announcement (OHCA) (→ 1.7.4.3 Off-hook Call Announcement (OHCA)) or Whisper OHCA. (→ 1.7.4.4 Whisper OHCA)
 - c) On a conference call (→ 1.13.1 Conference Features).
 - d) Using Live Call Screening (LCS) or Two-way Record is activated (→ 1.21.2 Voice Mail DPT (Digital) Integration).

[DPT + DPT]

- **Available Telephones**
KX-T7600 series (except KX-T7640)
- Digital XDP connection enables the maximum number of DPTs that the PBX supports to be increased. This increase is only available when an MEC card and high-capacity power supply unit are installed.
- The following features cannot be used on either the master or slave DPT:
 - a) OHCA: A call waiting tone will be heard even if the OHCA feature is set.
 - b) USB Module: The DPTs will not function properly if a USB Module is attached to either DPT. Do not connect a USB Module to either of the DPTs.

Note

To cancel a Digital XDP connection, disconnect the slave DPT from the master, then disconnect and reconnect the master DPT to the PBX.

[DPT + DPT + SLT]

- When an SLT is connected to the slave DPT in parallel mode, the SLT acts as a parallel extension of the master DPT. If connected in XDP mode, the SLT acts as an independent extension.

Connection References

2.7.2 Parallel Connection of the Extensions

2.7.3 Digital EXtra Device Port (Digital XDP) Connection

Operation References

1.7.10 Paralleled Telephone

1.10.10 Calling Party Control (CPC) Signal Detection

Description

The Calling Party Control (CPC) signal is an on-hook indication (disconnect signal) sent from an analog CO line when the other party hangs up. To maintain efficient utilization of CO lines, the PBX monitors each line's status and when CPC signal is detected on a line, the PBX disconnects the line and alerts the extension with a reorder tone.

Conditions

- CPC signal detection is programmable for incoming CO line calls (→ LCOT CPC Signal Detection Time—Incoming [414]), and for outgoing CO line calls (→ LCOT CPC Signal Detection Time—Outgoing [413]).
- If your telephone company sends signals similar to CPC, it is recommended not to enable CPC signal detection on outgoing CO line calls.
- If CPC signal is detected during a conference call (→ 1.13.1.2 Conference), the line is disconnected. The remaining parties stay connected.
- If CPC signal is detected during a call between a caller using the Direct Inward System Access (DISA) feature (→ 1.15.6 Direct Inward System Access (DISA)) and an extension or an outside party, the line is disconnected.

1.11 Transferring Features

1.11.1 Call Transfer

Description

An extension user can transfer a call to another extension or an outside party. The following features are available:

Feature	Transferring method
With Announcement	Transfer is completed after announcing the transfer to the destination party.
Without Announcement	Transfer is completed without an announcement. After dialing the transfer destination, the originator can replace the handset once a ringback tone is heard.

Call Transfer with Announcement is also known as Call Transfer—Screened.

Call Transfer without Announcement is also known as Call Transfer—Unscreened.

Conditions

- If Music on Hold is enabled, music can be sent to the held party while the call is being transferred. (→ 1.12.4 Music on Hold) It is programmable whether a ringback tone or music is sent to the caller. (→ Music for Transfer [712])
- If the transfer destination extension has set FWD to an outside party, the call will be transferred to the outside party. (→ 1.3.1.2 Call Forwarding (FWD))
- Class of Service (COS) programming determines the extensions that are able to transfer a call to an outside party (→ Call Transfer to CO Line [503]). COS can also prohibit transferring to an extension of another PBX via the TIE line service using the PBX code method (Access with PBX Code). (→ 1.27.1.2 PBX Code Method (Access with PBX Code))
- **Transfer Recall for Call Transfer without Announcement**
If the transfer destination does not answer within the preprogrammed Transfer Recall time (→ Transfer Recall Time [201]), the call will be redirected to the Transfer Recall destination assigned to the extension which transferred the call. If a Transfer Recall destination is not assigned, the call will return to the extension.

[Available destination for Transfer Recall]

Destination	Availability
Wired Extension (PT/SLT/T1-OPX)	✓
PS	✓
ICD Group	✓
PS Ring Group	
VM Group (DTMF/DPT)	
External Pager (TAFAS)	
DISA	

1.11 Transferring Features

Destination	Availability
Analog/ISDN Remote Maintenance	
Idle Line Access no. + Phone no.	
CO Line Group Access no. + CO Line Group no. + Phone no.	
Extension of Another PBX (via TIE Line, Access with PBX Code)	
Extension of Another PBX (via TIE Line, Access without PBX Code)	

- **One-touch Transfer**
DSS Console users and the proprietary telephone (PT) users can hold a call and quickly transfer it to an extension by pressing the DSS button directly. A One-touch Dialing button can also be used if the TRANSFER command is stored with an extension number or a telephone number (→ 1.6.1 Memory Dialing Features).
- **Consultation Hold**
When an extension user performs a Call Transfer, the call is placed automatically on consultation hold (→ 1.12.5 Consultation Hold).

Operation References

1.4.1 Call Transfer

1.12 Holding Features

1.12.1 Call Hold

Description

An extension user can put a call on hold. The following Hold features are available:

Feature	Description
Call Hold General	Any extension can retrieve a held call.
Exclusive Call Hold	Only the extension user who held the call can retrieve it.

The result of the holding operation can be determined through system programming. Pressing the HOLD button again just after the first time alternates the mode between General and Exclusive Call Hold.

Conditions

- Using the Call Hold feature, a proprietary telephone (PT) user can have one intercom call and multiple CO line calls on hold simultaneously. To hold multiple intercom calls, the user should use the Call Park feature. (→ 1.12.2 Call Park) Using the Call Hold feature, a single line telephone (SLT) user can have either one intercom call or one CO line call on hold. To hold multiple calls, the user should use the Call Park feature.
- Music on Hold**
Music, if available, is sent to the held party. (→ 1.12.4 Music on Hold)
- Hold Recall**
If a call on hold is not retrieved within a preprogrammed time period (→ Hold Recall Time [200]), the Hold Recall tone is heard at the extension which put the call on hold. If the extension is engaged in a call, the Hold Alarm will be heard.
- If an outside party is placed on hold and the call is not retrieved within a preprogrammed time period after the Hold Recall time expires, the call is automatically disconnected.
- Automatic Call Hold**
A PT can be configured through system programming to place the current call on hold when the PT user presses a CO, G-DN, or INTERCOM button to make or answer another call. If this feature is not enabled, the current call will be disconnected.
[Example of Automatic Call Hold]
It is possible to receive an incoming CO line call by pressing the flashing G-DN button. The current intercom call (on the INTERCOM button) is placed on hold. To return to the held call, press the INTERCOM button.
- Call Hold Retrieve Deny**
Internal Call Block (→ 1.1.2.2 Internal Call Block) also determines which extensions' calls an extension user can retrieve, i.e., if extension 101 cannot call extension 201, then it cannot retrieve extension 201's held calls either.
- SLT Hold Mode**
It is possible to choose how to hold and transfer a call with an SLT through system programming. The following methods are available:

	Hold	Transfer to CO Line	Transfer to Extension
Mode 1	Flashing the hookswitch + Going on-hook	Flashing the hookswitch + CO Line Access No.	Flashing the hookswitch + Extension No.
Mode 2 (Default)	Flashing the hookswitch + Hold Feature No. + Going on-hook	Flashing the hookswitch + CO Line Access No.	Flashing the hookswitch + Extension No.
Mode 3	Flashing the hookswitch + Hold Feature No. + Going on-hook	Flashing the hookswitch + Hold Feature No. + CO Line Access No.	Flashing the hookswitch + Extension No.
Mode 4	Flashing the hookswitch + Hold Feature No. + Going on-hook	Flashing the hookswitch + Hold Feature No. + CO Line Access No.	Flashing the hookswitch + Hold Feature No. + Extension No.

If one of the following occurs frequently with an SLT, choose "Mode 2", "Mode 3", or "Mode 4":

- a) When an SLT user answers a call, a reorder tone is heard or no one is heard on the other end.
- b) When an SLT user goes off-hook, a reorder tone is heard instead of a dial tone.

If a call is not terminated after going on-hook, the above cases occur. To avoid these problems, choose "Mode 2", "Mode 3", or "Mode 4". Every call will be terminated unless the Hold feature number is entered after flashing the hookswitch in Mode 2, Mode 3, and Mode 4.

- Hold Alarm tone pattern has a default (→ 5.2.1 Tones/Ring Tones).

Operation References

1.4.2 Call Hold

1.12.2 Call Park

Description

An extension user can place a call into a common parking zone of the PBX. The Call Park feature can be used as a transferring feature; this releases the user from the parked call to perform other operations. A parked call can be retrieved by any extension user.

Conditions

- **Automatic Call Park**
It is possible to select an idle parking zone automatically.

- **Retry**
If the specified parking zone is occupied or there is no vacant zone for Automatic Call Park, the originator will hear a busy tone. Retrying is possible while hearing a busy tone by selecting another parking zone or a vacant zone.
 - **Call Park Recall**
If a parked call is not retrieved within a preprogrammed time period, the Call Park Recall tone will be heard at the Transfer Recall destination assigned to the extension which parked the call. If the destination is engaged in a call, the Hold Alarm will be heard.
 - If a parked CO line call is not retrieved within a preprogrammed time period (Default: 30 minutes), it is automatically disconnected.
 - **Call Park Button**
Pressing the Call Park button parks or retrieves a call in a preset parking zone.
Any flexible button can be customized as the Call Park button. It shows the current status of the preset parking zone as follows:
- | Light pattern | Status |
|-------------------|---|
| Slow red flashing | A call is parked in the preset parking zone |
| Off | There are no parked calls |
- **Call Park (Automatic Park Zone) Button**
Pressing the Call Park (Automatic Park Zone) button parks a call in an idle parking zone automatically. Any flexible button can be customized as the Call Park (Automatic Park Zone) button.
 - **Call Park Retrieve Deny**
Internal Call Block (→ 1.1.2.2 Internal Call Block) also determines which extensions' calls an extension user can retrieve from a parking zone, i.e., if extension 101 cannot call extension 201, then it cannot retrieve extension 201's parked calls either.

Feature References

1.18.2 Flexible Buttons

Operation References

1.4.2 Call Hold

1.12.3 Call Splitting

Description

An extension user can speak alternately with two parties, similar to conventional call waiting. Placing the current call on hold allows the user to speak with the other party.

Conditions

- **Consultation Hold**
While having a conversation with one party, the other party is on consultation hold. (→ 1.12.5 Consultation Hold)

Operation References

1.4.3 Call Splitting

1.12.4 Music on Hold

Description

Music can be played to any party on hold. The following audio sources are available:

- a) Internal audio source
- b) External audio source
- c) Tone

Either a background music (BGM) number or tone can be selected as the Music on Hold (→Music on Hold [711]).

BGM numbers are the same as the external music port numbers (selecting BGM 1 in effect selects the audio from external music port 1, for example). However, BGM 2 includes internal audio sources 1 and 2 as well as external music port 2. It is possible to choose what audio source will be used as BGM 2 (→Audio Source Selection for BGM 2 [710]).

[BGM Number and the Audio Source]

BGM No.	Available Audio Sources
1	External music port 1
2	External music port 2/Internal audio source 1 or 2

Conditions

- **Hardware Requirement:** User-supplied audio device (CD player, radio, etc.)
- **Volume Control**
It is possible to change the volume of an internal and/or external audio source.
- Each tenant can be assigned an audio source. (→2.2.3 Tenant Service)

Connection References

2.10.1 Connection of Peripherals

1.12.5 Consultation Hold

Description

When an extension user is on a call and performs a Call Transfer (→ 1.11.1 Call Transfer), Call Splitting (→ 1.12.3 Call Splitting), or tries to establish a conference call (→ 1.13.1.2 Conference), the call is automatically placed on consultation hold. When the operation is completed or canceled, the consultation hold is released.

1.13 Conference Features

1.13.1 Conference Features

1.13.1.1 Conference Features—OVERVIEW

Description

A conference call allows three or more parties to have a conversation. The following features are available to establish a conference call:

Feature	Description	Details in
Conference	During a two-party conversation, an extension user can add other parties to establish a conference call with up to eight parties.	• 1.13.1.2 Conference
Executive Busy Override	An extension user can interrupt an existing call to establish a three-party conference call.	• 1.7.2 Executive Busy Override
Privacy Release	During a conversation with an outside party on the S-CO button, a proprietary telephone (PT) or portable station (PS) user can allow another extension to join the conversation.	• 1.13.1.3 Privacy Release

Conditions

- Up to 32 parties (including extension users and outside parties) can be engaged in different conference calls simultaneously. (4 eight-party conferences, 8 three-party conferences plus 2 four-party conferences, 10 three-party conferences, etc.)

1.13.1.2 Conference

Description

This PBX supports conference calls consisting of up to eight parties. During a two-party conversation, an extension user can add other parties to their conversation, thereby establishing a conference. Conferences of more than four parties are only possible when a proprietary telephone (PT) user originates the conference.

Unattended Conference

The PT user who originated the conference can leave a conference to allow other parties to continue the conversation. The user may return to the conference, if he or she desires.

Conditions

- **Conference Button**
For a PT which does not have the CONF (Conference) button, a flexible button can be customized as the Conference button.

- To allow a three-party conference call involving an outside party or parties to continue after the originator leaves, it is necessary to enable calls to be transferred to CO lines through COS programming.
- **Unattended Conference Call Duration**

The duration of an Unattended Conference can be restricted by the Unattended Conference Recall time. The Unattended Conference Recall time consists of the following programmable timers:

 - a) Unattended Conference Recall Start Time:** When the timer expires, Unattended Conference Recall starts to be heard at the conference originator. If the originator does not return to the conference, Unattended Conference Recall Continuous time before Sending Alarm Tone to CO will start.
 - b) Unattended Conference Recall Continuous Time before Sending Alarm Tone to CO:** When the timer expires, an alarm tone starts to be heard by parties in the Unattended Conference. If the originator does not return to the conference, Unattended Conference Recall & Alarm Continuous time before Disconnecting will start.
 - c) Unattended Conference Recall & Alarm Continuous Time before Disconnecting:** When the timer expires, the Unattended Conference call is disconnected.

If the originator returns to the conference before the Unattended Conference call is disconnected, the timer will be canceled. If not, Unattended Conference Recall and an alarm tone will continue to be heard until the Unattended Conference call is disconnected.
- **For Conferences of Six or More Parties**

An ECHO card is required, and Echocanceller should be enabled through system programming.
- **Consultation Hold**

When an extension user tries to establish a conference call, the current call is placed automatically on consultation hold until the conference is established (→ 1.12.5 Consultation Hold).

Connection References

2.6.4 ECHO16 Card

Feature References

1.18.2 Flexible Buttons

Operation References

1.4.5 Multiple Party Conversation

1.13.1.3 Privacy Release

Description

By default, all conversations which take place on CO lines, extension lines and doorphone lines are protected from others interrupting the conversations (**Automatic Privacy**).

Privacy Release allows a proprietary telephone (PT) or portable station (PS) user to suspend Automatic Privacy for an existing CO line call on the S-CO button in order to establish a three-party call.

System programming is required to enable or disable this feature.

Conditions

- **S-CO Button**
Any flexible button can be customized as the S-CO button.
- **Privacy Release Time**
Privacy is released for five seconds to allow the conversation to be joined.
- This feature overrides Data Line Security (→ 1.10.5 Data Line Security) and Executive Busy Override Deny (→ 1.7.2 Executive Busy Override).

Feature References

1.18.2 Flexible Buttons

Operation References

1.4.5 Multiple Party Conversation

1.14 Paging Features

1.14.1 Paging

Description

An extension user can make a voice announcement to several people at once. The announcement is heard through the built-in speakers of proprietary telephones (PTs) and/or external pagers (loudspeakers) which belong to a paging group. The paged person can answer the page from a nearby telephone. It is possible to page with a call on hold in order to transfer the call.


Paging Deny

It is possible to deny being paged on an extension basis.

Paging Group

Each paging group consists of extension groups and external pagers. One extension group or external pager can belong to several paging groups. (→ 2.2.2 Group)

[Example]

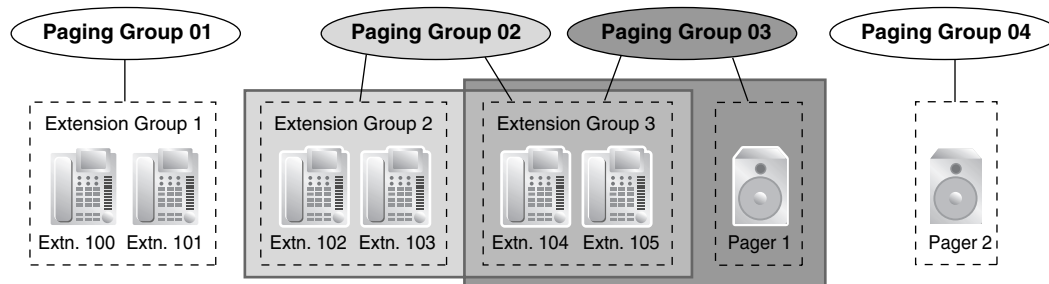

[Programming Example]

Paging Group No.	Extension Group No. ^{*1}				External Pager No. ^{*2}	
	001	002	003	...	1	2
01	✓					
02		✓	✓			
03			✓		✓	
04						✓
05	✓	✓	✓		✓	✓

- ✓ Constituent
- *1 → Extension Groups of a Paging Group [640]
- *2 → External Pagers of a Paging Group [641]

Conditions

- Extensions which cannot be paged are:
 - Portable stations (PSs)
 - Single line telephones (SLTs)
 - Ringing or busy PTs
 - PTs in Paging Deny mode
 - PTs in Paging DND mode

These extensions cannot be paged, but can answer a page.

- **External Pager Priority**

External pagers can be used with the following priorities:

Trunk Answer From Any Station (TAFAS) → Paging → Background Music (BGM)

(→ 1.15.3 Trunk Answer From Any Station (TAFAS), → 1.15.4 Background Music (BGM))

- **Volume Control**

The volume level of pages heard from PTs and external pagers can be changed through system programming.

- **Paging DND**

When Do Not Disturb (DND) (→ 1.3.1.3 Do Not Disturb (DND)) is set for incoming calls, it is programmable whether an extension receives paging through system programming.

Operation References

1.6.1 Paging

1.6.2 Answering/Denying a Paging Announcement

1.15 Optional Device Features

1.15.1 Doorphone Call

Description

A visitor can use a doorphone to call its preprogrammed destination. Extension users can call a doorphone.

Conditions

- **Hardware Requirement:** An optional doorphone, OPB card and DPH card.
- **Call Destination**
The destination of doorphone calls can be assigned to each doorphone port for each time mode (→ Doorphone Call Destination [720]). The Time Table is determined by the tenant number assigned to each doorphone port. (→ 2.2.4 Time Service)
Certain destinations cannot be the destination of doorphone calls. (→ 1.1.2.1 Internal Call Features—OVERVIEW)
- Class of Service (COS) programming determines the doorphone ports that are able to make an outgoing CO line call.
- Internal Call Block (→ 1.1.2.2 Internal Call Block) determines which extensions can call a doorphone.
- **Ring Duration**
If an incoming doorphone call is not answered within a preprogrammed time period, ringing stops and the call is canceled.
- **Call Duration**
The duration of doorphone calls can be restricted by a system timer. If the timer expires, the call will be disconnected.
- **Door Open**
While engaged on a doorphone call, an extension user can unlock the door to let the visitor in. (→ 1.15.2 Door Open)
- A doorphone number can be referenced for each doorphone port (→ Doorphone Number Reference [729]).

Connection References

2.6.1 OPB3 Card

2.6.2 DPH4 Card

2.9.1 Connection of Doorphones, Door Openers, External Sensors, and External Relays

Operation References

1.9.1 Doorphone/Door Opener

1.15.2 Door Open

Description

Using an extension telephone, an extension user can unlock a door for a visitor. The door can be unlocked by extension users who are allowed to unlock the door in the Class of Service (COS) programming (→ Permission for Door Open Access [512]). While engaged on a doorphone call, any extension user can unlock a door to let a visitor in (→ 1.15.1 Doorphone Call).

Conditions

- **Hardware Requirement:** A user-supplied door opener installed on each door.
- A door opener can unlock a door even if no doorphone is installed.
- **Door Open Duration**
An opened door will remain unlocked for a preprogrammed length of time (→ Door Open Duration [207]).

Connection References

2.9.1 Connection of Doorphones, Door Openers, External Sensors, and External Relays

Operation References

1.9.1 Doorphone/Door Opener

1.15.3 Trunk Answer From Any Station (TAFAS)

Description

A ring tone is sent through an external pager (loudspeaker) when an incoming call is received. Any extension user can answer the call.

Conditions

- **Hardware Requirement:** A user-supplied external pager
- **Floating Extension Number**
A floating extension number can be assigned to an external pager (→ External Pager Floating Extension Number [700]). An external pager is accessed by dialing its floating extension number.
- **Pager Volume**
It is possible to change the volume level of an external pager through system programming.

Connection References

2.10.1 Connection of Peripherals

Operation References

1.3.4 Trunk Answer From Any Station (TAFAS)

1.15.4 Background Music (BGM)

Description

A proprietary telephone (PT) user can listen to background music (BGM) through the built-in speaker while on-hook and idle.

BGM—External

BGM can also be broadcast in the office through external pagers (loudspeakers) and can be turned on and off by an extension assigned as a manager.

Conditions

[BGM]

- **Hardware requirement:** A user-supplied external audio source, such as a CD player or radio.
- The music heard through the PT is interrupted when going off-hook.
- Each extension user can select the audio source.

[BGM—External]

- **Hardware requirement:** A user-supplied external pager
- External pagers can be used with the following priorities:
Trunk Answer From Any Station (TAFAS) → Paging → BGM
(→ 1.14.1 Paging, → 1.15.3 Trunk Answer From Any Station (TAFAS))

Connection References

2.10.1 Connection of Peripherals

Operation References

1.7.7 Background Music (BGM)

2.1.4 External Background Music (BGM)

1.15.5 Outgoing Message (OGM)

Description

An extension assigned as a manager (manager extension) can record outgoing messages (OGMs) for the following features:


Feature	Usage	Details in
Direct Inward System Access (DISA)	When a call arrives on a DISA line, the caller will hear a message.	• 1.15.6 Direct Inward System Access (DISA)

Feature	Usage	Details in
Queuing Feature	If assigned in the Queuing Time Table of the incoming call distribution (ICD) group (→ Sequences in Queuing Time Table [631]), callers waiting in a queue will hear a message.	• 1.2.2.3 Queuing Feature
Timed Reminder	When answering the Timed Reminder Alarm, the user will hear a message.	• 1.25.4 Timed Reminder

Conditions

- **Hardware Requirement:** An OPB card and MSG card.
- **Number of Messages and Recording Time**
The PBX can record a maximum of 64 messages. Note that the total recording time of the PBX is 8 minutes.
- A floating extension number can be assigned to each outgoing message (OGM) (→ Outgoing Message (OGM) Floating Extension Number [730]).
- Each MSG card can play four messages simultaneously. Adding additional MSG cards increases the number of messages that can be played simultaneously, but does not increase the total recording time or the number of messages that can be recorded.

[Example]

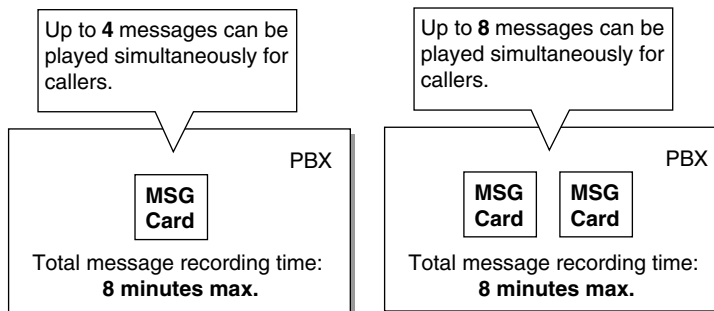

Note

When an additional MSG card is added, it is blank—all necessary messages will need to be stored in the new card. This can be done in two ways:

- By installing the new MSG card then recording each message again. The PBX will automatically store the new recordings in each MSG card.
 - By transferring messages from the PBX to a PC using KX-TDA Maintenance Console, then transferring them back to the PBX with the new MSG card installed.
- The same message can be played to multiple callers simultaneously.
 - **Recording Methods**
 - Record voice messages through the extension telephone.
 - Transfer prerecorded voice messages from an external audio source to the PBX via an external music port.

Note

Record voice messages only; avoid the recording of music.

- After recording messages, a manager extension can also play them back for confirmation.

- A progress tone is sent to a manager extension before recording messages for a preprogrammed time period, or while clearing a prerecorded message assigned to a floating extension number.
- Record a message when PBX traffic is light, such as early morning or late evening.
- When a manager tries to record a message, he or she will hear a ringback tone if a message channel is in use. When all ports of the MSG card(s) become idle, the manager will hear the progress tone for a preprogrammed time period, then the PBX will automatically switch to the recording mode.

Connection References

2.6.1 OPB3 Card

2.6.5 MSG4 Card

Operation References

2.1.5 Outgoing Messages (OGM)

1.15.6 Direct Inward System Access (DISA)

Description

Direct Inward System Access (DISA) allows outside callers to be connected to their desired PBX destinations without the use of an operator. Callers can listen to an outgoing message (OGM) instructing them as to which numbers to dial to be connected to the person or department they would like to speak with. DISA can also give PBX users access to PBX features, such as making CO line calls or changing their extension settings, when they are outside the office.

To use DISA, the incoming call must first be directed (via DIL or DID distribution) to a floating extension number assigned to an OGM used by DISA. This OGM can then guide callers and allow them to:

- Make an intercom call to an operator, extension, or to a floating extension number, such as an incoming call distribution (ICD) group or a modem used for remote system administration.
- Call another outside party via the CO lines of the PBX.
- Set or operate PBX features, such as Call Forwarding (FWD) or Extension Lock, remotely.

OGM

When a call is directed to a floating extension number assigned to an OGM used by DISA, callers will hear the OGM. If using the DISA Automated Attendant (AA) service, this OGM will direct callers to press the appropriate digit (DISA AA number) to be connected to a specific destination. To access other PBX features, such as making intercom or CO line calls, the caller may dial the appropriate numbers while the OGM is playing.

Any extension assigned as a manager can record an OGM. (→ 1.15.5 Outgoing Message (OGM))

DISA AA Service

DISA AA service allows a caller to dial a single-digit number (DISA AA number) and be connected to the desired party automatically. Each DISA OGM can be assigned up to ten destinations that can be called by dialing a DISA AA number (0–9). These destinations can be any destination within the PBX (or even another PBX connected by TIE Line service) which has an extension number or floating extension number. (→ 1.27.1 TIE Line Service)

After or while listening to the OGM, the caller may dial a DISA AA number as directed by the OGM. ("Press 1 to speak to Sales. Press 2 to speak to Support.") Each DISA AA number directs the call to a

preprogrammed location, which can even be another DISA floating extension number (**Multistep DISA AA Service**).

Since DISA AA numbers are single-digits, if the caller dials a second digit within a preprogrammed time period (DISA Second Digit Time for Automated Attendant), DISA AA service will be bypassed because the PBX will assume the caller is trying to access a specific feature.

Each DISA OGM can be assigned a floating extension number, a destination for each DISA AA number, and the OGM number of the OGM played when the called destination is busy or in Do Not Disturb (DND) mode.

[Programming Example: DISA OGM Setting]

OGM No.	Floating Extn. No.*1	Automated Attendant No.										Busy/DND Message No.
		0	1	2	3	4	5	6	7	8	9	
01	300	100	301	200	103	202	101	102	400	104	205	04
02	301											05

*1 → Outgoing Message (OGM) Floating Extension Number [730]

DISA Intercept Routing—No Dial

If the caller fails to dial any digits within a preprogrammed time period (DISA First Digit Time for Routing to Operator When No Dial) following the OGM, the call is redirected to an operator extension.

DISA Intercept Routing—Busy/DND

If the destination of a DISA call is in DND mode or is busy (and has not set Call Waiting or FWD), the call will be redirected to an idle extension in the destination's idle extension hunting group. (→ 1.2.1 Idle Extension Hunting) If no extension in the group is available, or if the destination of the DISA call is not a member of an idle extension hunting group, the call will be handled in one of the following ways, according to system programming:

- a) **Busy Tone:** The caller hears a busy tone.
- b) **Intercept Routing:** The call will be routed to the Intercept Routing—Busy/DND destination assigned for the extension.
- c) **OGM:** An OGM used only for when the destination is busy or DND can be played for the caller. ("The party you called is unavailable...")

DISA Intercept Routing—No Answer

If the destination of a DISA call does not answer the call within a preprogrammed time period (DISA Intercept time) (→ DISA Intercept Time [211]), the call will be redirected to the preprogrammed intercept destination. (→ 1.1.1.5 Intercept Routing)

If the intercept destination does not answer the call within a preprogrammed time period (DISA Disconnect Time after Intercept) after the DISA Intercept time expires, the call will be disconnected.

Call Retry

While hearing a ringback, reorder, or busy tone, the caller can press "*" to "retry" the call. When a DISA call is retried, the caller will hear the original DISA OGM once again and can make the same or a different selection.

During a CO-to-CO line call, the caller can press "*" to disconnect the CO line call and return to the original DISA OGM. If "Mode When DISA Receives DTMF *" is set to "Send DTMF *" the "*" tone will be sent—the call will not be retried.

DISA Security Mode

Security can be enabled for the PBX to control the types of calls that can be made by callers using DISA. (→ DISA Security Mode [732]) However, note that the security setting does not effect DISA AA calls (AA calls can only be made to preprogrammed destinations and security is not an issue) or Operator Calls (→ 2.2.5 Operator Features).

Security Mode	Intercom Calls	TIE Line Calls		CO Line Calls
		Without PBX Code	With PBX Code	
All Security				
CO Line Security	✓	✓		
No Security	✓	✓	✓	✓

✓ Permitted

Walking COS/Verified Code Entry through DISA

While the OGM is playing, DISA callers can use Walking COS (→ 1.8.4 Walking COS) and Verified Code Entry (→ 1.8.5 Verified Code Entry) to:

- a) Make calls via DISA which are prohibited by the DISA Security Mode
- b) Gain access to certain features, such as FWD, Extension Lock, etc. (Walking COS only)

This feature is particularly useful when a PBX user needs to make a business call while at home, or when an extension user forgets to set FWD on his or her extension before leaving the office.

All privileges and restrictions on making calls that apply when the user is using an extension telephone are also applied when using Walking COS or Verified Code Entry through DISA.

Additionally, setting features by using Walking COS through DISA can be enabled or disabled through system programming for each Class of Service (COS). (→ 1.25.5 Remote Extension Control by User)

CO-to-CO Line Calls through DISA

DISA callers can use DISA to make CO line calls in either of the following situations:

- a) When the DISA Security Mode allows CO line calls
- b) When the caller uses Walking COS or Verified Code Entry through DISA, and his or her COS allows CO line calls.


If a call between two outside parties is established via DISA, the length of the call can be limited to a preprogrammed duration. (→ 1.10.8 CO Line Call Limitation) A timer will activate when the call is connected, and a tone will be heard 15 seconds before the timer expires at five-second intervals.


At this point the call can be extended for a preprogrammed amount of time (→ DISA CO-to-CO Line Call Prolong Time [210]) by pressing any dialing button excluding "*". 15 seconds before the extended time runs out, the tone will be heard again.

The number of times a CO-to-CO line call can be extended is also programmable; if set to "0", calls can be extended as many times as available.

If the caller wishes to end the CO-to-CO line call but remain connected to the PBX in order to make other calls or access other DISA features, the caller can press "*" at any time to return to the original DISA OGM (Call Retry).

[Flowchart]

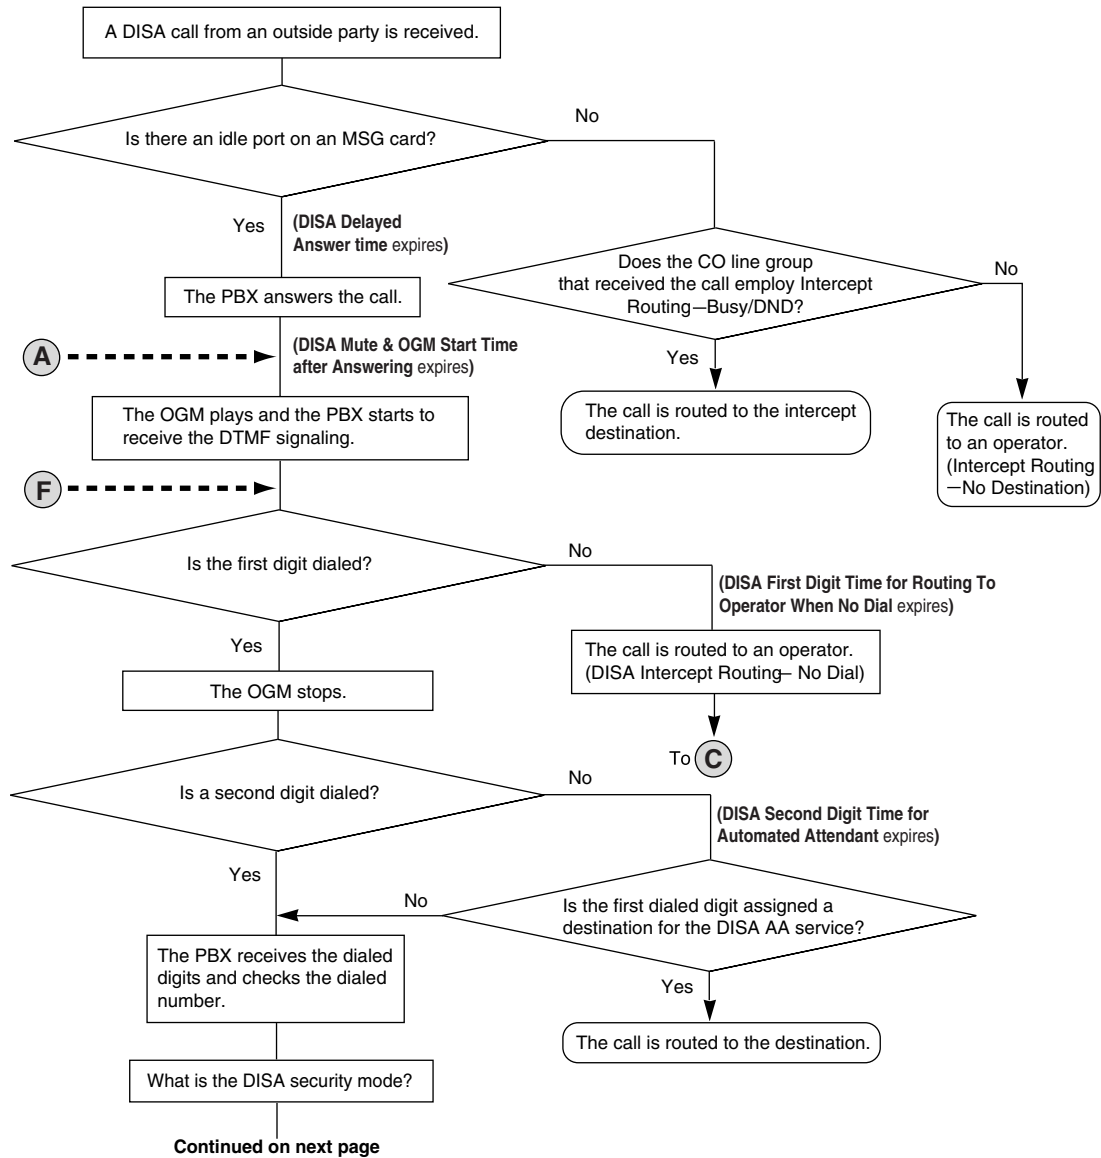

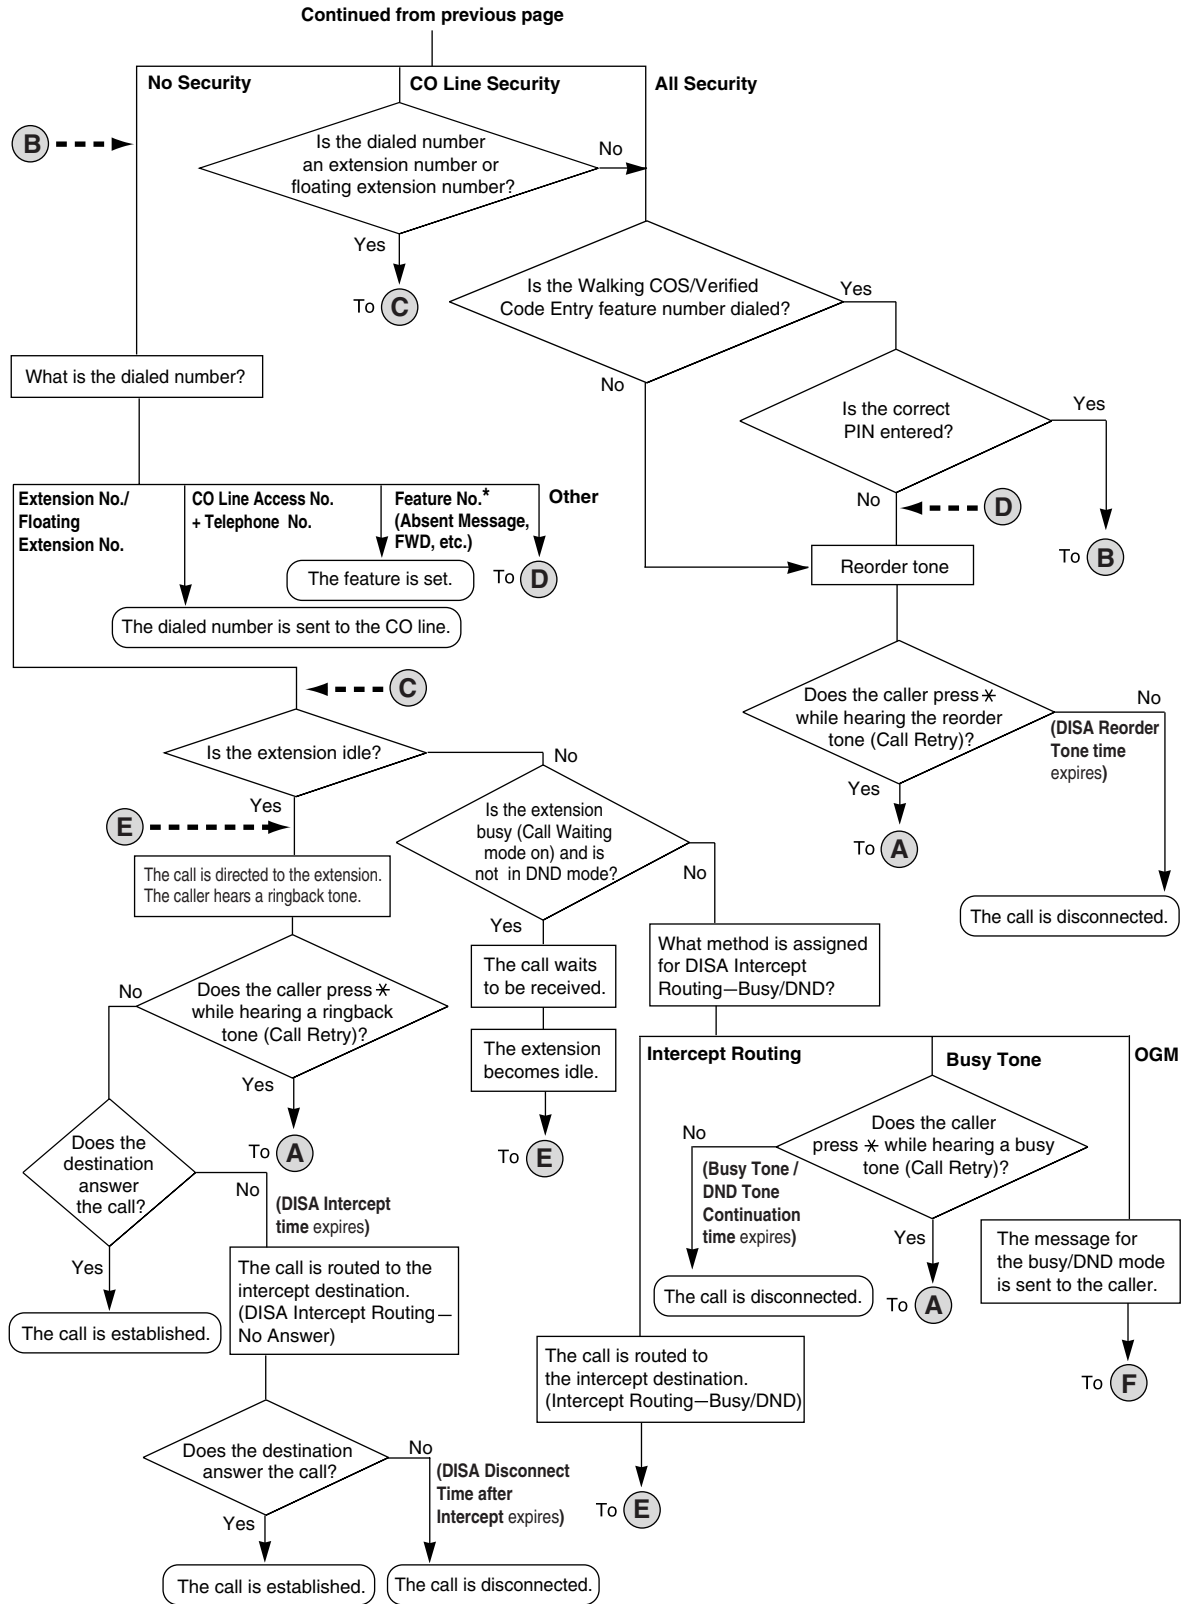

* Feature numbers are available only when the Walking COS feature is used.

Conditions

WARNING

There is a risk that fraudulent telephone calls will be made using the CO-to-CO Line Call feature of DISA.

The cost of such calls will be billed to the owner/renter of the PBX.

To protect the PBX from this kind of fraudulent use, we strongly recommend:

- a) Enabling DISA security (CO Line Security or All Security).
- b) Maintaining the secrecy of extension PINs and verified code PINs.
- c) Selecting PINs which are complex and random, so that the PINs may not be easily guessed.
- d) Changing PINs regularly.

- **Hardware Requirement:** An OPB card and MSG card.

- **DISA Delayed Answer Time**

It is possible to set the DISA Delayed Answer time (→ DISA Delayed Answer Time [209]) so that the caller will hear a ringback tone for a preprogrammed length of time before hearing an OGM.

- **DISA Mute Time**

Certain DTMF signals, such as Caller ID information, may be sent from the telephone company when a call is first connected. Because these signals may interfere with DISA, the PBX can be programmed to ignore DTMF signals for a specified amount of time (DISA Mute & OGM Start Time after Answering) after a call is connected. After the DISA Mute time passes, DTMF signals are recognized by the PBX and the OGM begins playing.

- **SMDR**

The following are logged by Station Message Detail Recording (SMDR) (→ 1.23.1 Station Message Detail Recording (SMDR)) for DISA calls:

- a) The floating extension number of the DISA OGM.
- b) The destination of the DISA call. (Extension number for internal calls, telephone number for CO-to-CO line calls.)
- c) The extension number used for Walking COS through DISA, or the verified code used for Verified Code Entry through DISA.

- **Tone Detection**

Three different types of tone detection can be used to disconnect a CO-to-CO line call via DISA. Each tone detection type can be enabled or disabled for each CO line group.

- Silence Detection (→ DISA Silence Detection [475])
- Continuous Signal Detection (→ DISA Continuous Signal Detection [476])
- Cyclic Signal Detection (→ DISA Cyclic Signal Detection [477])

- **DISA Reorder Tone Time**

If a caller makes an invalid selection, a reorder tone will be sent to the caller. The caller can retry the call by pressing "*", otherwise the call will be disconnected after a preprogrammed length of time (DISA Reorder Tone time).

- **Call Deny**

Each COS can be programmed to accept or deny incoming DISA calls. A DISA call will be accepted or denied by an extension based on the COS of the extension.

- When using Walking COS or Verified Code Entry, a PIN must be entered. If the PIN is entered incorrectly three times when using DISA, the line will be disconnected. If an incorrect PIN is entered a preprogrammed number of times, the PIN will be locked. Only an extension assigned as a manager can unlock a PIN, after which it will be reset.

1.15 Optional Device Features

- Each OGM can be assigned a name to be used as a reference while programming. (→ Outgoing Message (OGM) Name [731])
- Account Code Entry (→ 1.5.4.3 Account Code Entry) can be used when making a CO line call via DISA.

Connection References

- 2.6.1 OPB3 Card
- 2.6.5 MSG4 Card

Feature References

- 1.1.1.5 Intercept Routing
- 1.1.1.6 Intercept Routing—No Destination
- 1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND)
- 2.2.5 Operator Features

Operation References

- 1.2.7 Direct Inward System Access (DISA)
- 1.2.8 Remote Setting

1.15.7 External Sensor

Description

External sensing devices, such as security alarms or smoke detectors, can be connected to the PBX. When the PBX receives input from a sensor, a call is made to the preset destination, alerting the extension user.

The available destinations of a sensor call are as follows:

[Available Destinations]

Destination	Availability
Wired Extension (PT/SLT/T1-OPX)	✓
PS	✓
Incoming Call Distribution Group	
PS Ring Group	
VM Group (DTMF/DPT)	
External Pager (TAFAS)	
DISA	
Analog/ISDN Remote Maintenance	
Idle Line Access no. + Phone no.	
CO Line Group Access no. + CO Line Group no. + Phone no.	
Extension of Another PBX (via TIE Line, Access without PBX Code)	
Extension of Another PBX (via TIE Line, Access with PBX Code)	

When the call is answered, a special dial tone is heard, which continues until the user goes on-hook. If the sensor call is not answered within a specified time, the call will be canceled. It is possible to set a different ring tone pattern for calls received from each external sensor, to distinguish between them.

Conditions

- **Hardware Requirement:** An external sensor, the OPB card and EIO card
- Some devices may be unable to communicate correctly with the PBX. Confirm compatibility with the manufacturer of a device before installing it.
- After a sensor has been activated, the PBX will ignore any further alerts from the same sensor for the duration specified by a timer. This timer can be set separately for each sensor.
- As long as the previous sensor call is still being performed, any further alerts from the same sensor are ignored.
- The assigned sensor name and/or number are shown on the display of PTs and PSs when a sensor call is received.
- If the destination of a sensor call has set FWD, the sensor call will be redirected to the FWD destination. However, if the FWD destination is not supported as the destination of a sensor call (e.g., an outside party), the call will be received at the original destination. (→ 1.3.1.2 Call Forwarding (FWD))
- The following features cannot be used when a sensor call is received:
 - Alternate Receiving—Voice (→ 1.5.3 Intercom Call)
 - Hands-free Answerback (→ 1.4.1.4 Hands-free Answerback)
 - Consultation Hold/Call Hold (→ 1.12.1 Call Hold)
 - Call Transfer (→ 1.11.1 Call Transfer)
 - Executive Busy Override (→ 1.7.2 Executive Busy Override)
 - Remote Extension Control by User (→ 1.25.5 Remote Extension Control by User)
- Sensor call information is output on SMDR.

Connection References

2.6.1 OPB3 Card

2.6.3 EIO4 Card

2.9.1 Connection of Doorphones, Door Openers, External Sensors, and External Relays

1.15.8 External Relay Control

Description

By turning external device relays on and off, the PBX can control external devices such as alarms.

When an extension user enters the External Relay Control feature number, the specified relay turns on for a preprogrammed length of time. When this timer expires, the relay turns off automatically. This gives the PBX simple control over other equipment, allowing an extension user to, for example, activate an alarm from his extension.

If the relay cannot be accessed (for example, because use is not permitted by COS, or the port is not in service), a reorder tone will be heard at the extension.

Conditions

- **Hardware Requirement:** An external relay device, the OPB card and EIO card

1.15 Optional Device Features

- Some devices may be unable to communicate correctly with the PBX. Confirm compatibility with the manufacturer of a device before installing it.
- Each external relay port has a COS assigned. This and the COS of an extension determine the extension users who can use External Relay Control.
- The length of time that a relay is turned on can be specified separately for each relay through system programming.
- If the same or another extension tries to access an external relay that has already been switched on, the timer for that relay is reset.

Connection References

2.6.1 OPB3 Card

2.6.3 EIO4 Card

2.9.1 Connection of Doorphones, Door Openers, External Sensors, and External Relays

Feature References

2.2.1 Class of Service (COS)

Operation References

1.9.2 External Relay

1.16 Caller ID Features

1.16.1 Caller ID

Description

The PBX can receive Caller ID information (a caller's name and telephone number) from calls received on CO lines. This information can be shown on a proprietary telephone (PT) display when receiving a call and can be used to direct calls from specific callers to specific destinations automatically. Additionally, Caller ID information is logged in the Incoming Call Log of the extension which received the call, allowing the caller to view a record of incoming calls or make a call to a person in the call log later.

The PBX can be programmed to modify a caller's telephone number when it is received and, for example, add a CO Line Access number or add/delete certain digits of incoming telephone numbers automatically. This allows an extension user to be able to make a call later to a telephone number logged in his or her call log without worrying about CO Line Access numbers, area codes, etc.

Notes

- The term "Caller ID" used in this Feature Guide refers to features that can receive caller information sent from the telephone company and received on analog, ISDN, and T1 lines. Your network provider may use a different name for this type of service.
- To receive Caller ID information, you must subscribe to the telephone company's Caller ID service and enable Caller ID for the appropriate CO line through system programming.

Caller ID to SLT Port:

Caller ID information can also be shown on a single line telephone (SLT) display. This feature is available only for SLTs compatible with FSK-type Caller ID.

1. Caller ID Features

There are three features which can receive Caller ID information. The available feature depends on the type of CO line receiving the call.

Feature	Description	Details in
Caller ID	Receives caller information sent from the telephone company over analog CO lines.	–
Calling Line Identification Presentation (CLIP)	Receives caller information sent from the telephone company over ISDN lines.	–
Automatic Number Identification (ANI)	Receives caller information sent from the telephone company over T1 lines.	• 1.20.1 T1 Line Service

2. Caller ID-Related Features

Features	Description	Details in
Calling Line Identification (CLI) Distribution	Caller ID information received by the PBX is used to direct calls from specific callers to specific destinations. The caller's telephone number and a destination must be assigned in the System Speed Dialing Table.	• 1.1.1.4 Calling Line Identification (CLI) Distribution

Features	Description	Details in
Incoming Call Log	Caller information is automatically recorded in the call log of the extension which received the call. This information can be used to view a record of incoming calls or make calls to any number in the call log.	• 1.16.2 Incoming Call Log

3. Automatic Caller ID Number Modification

When a call is received, the PBX can automatically modify the caller's telephone number according to a preprogrammed set of rules (Caller ID Modification Table). This modified number will be automatically stored in the extension's Incoming Call Log, allowing the extension user to make a call to this number later without worrying about CO Line Access numbers, area codes, etc.

Each CO line group can be assigned a modification table. Each table has ten formulas for modifying local/international numbers, and one formula for modifying long distance numbers. When a call is received, the PBX compares the received telephone number to the area codes programmed under "Local/International Call Data" first. If a match is not found, the telephone number will be modified according to the method programmed under "Long Distance Code".

[Programming Example: Caller ID Modification]

<Table Selection>

CO Line Group No.	Modification Table
1	1
2	3

<Modification Table>

Modification Table 1			
	Area Code	Removed No. of Digits	Added No.
Local/International Call Data 1	212	3	0
Local/International Call Data 2	011	3	001
Local/International Call Data 10			
Long Distance Code	[Not programmable]	0	0

Note


When Caller ID information is received from a call on an ISDN line and the call type is International, National, or Subscriber, the following modification table is used instead of the above table:

<Modification Table>

	Removed No. of Digits	Added No.
International Call Data	0	011
National Call Data	0	1
Subscriber Call Data	0	

Data entered under "Removed No. of Digits" and "Added No." for International, National, and Subscriber call data will be applied respectively to international, long distance, and local calls.

<Modification Flowchart>

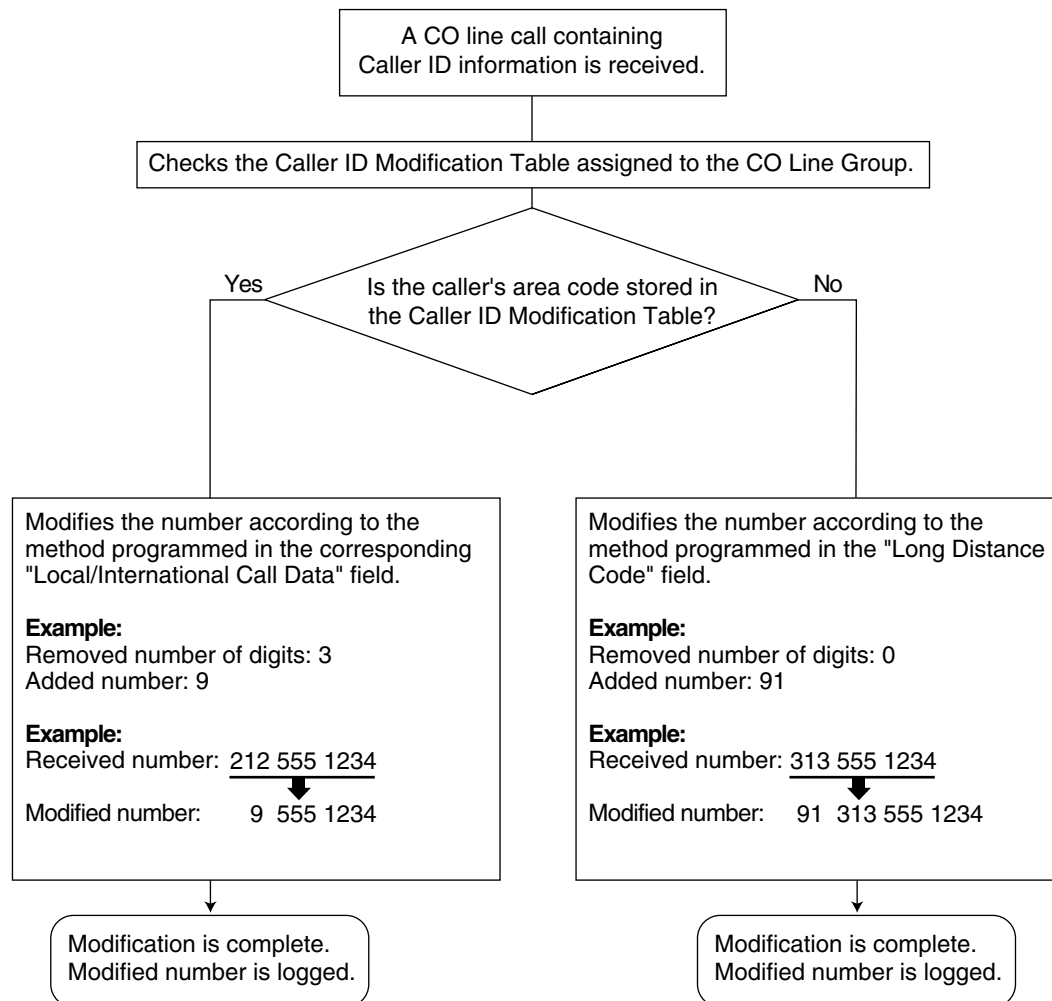

4. System Speed Dialing Table

The System Speed Dialing Table can store telephone numbers, names, and CLI destinations for hundreds of callers.

- a) **Telephone Number:** Contains a CO Line Access number and the caller's telephone number. If Automatic Caller ID Number Modification is used, telephone numbers should be stored in the System Speed Dialing Table in their modified format in order for CLI distribution to function.
- b) **Caller's Name:** Shown on the display and logged (Incoming Call Log, Station Message Detail Recording [SMDR]) when a call from this telephone number is received.
- c) **CLI Destination:** The destination to which an incoming call from the stored telephone number is directed via the CLI distribution feature.

[Programming Example: System Speed Dialing Table]

Location (System Speed Dialing No.)	System Speed Dialing Name ^{*1}	Telephone No. ^{*2}	CLI Destination
000	ABC Company	912125551234	200
001	XYZ Company	913135551234	300

*1 → System Speed Dialing Name [002]

*2 → System Speed Dialing Number [001]

5. Displaying the Caller's Name

In addition to the System Speed Dialing Table, each extension can store names and numbers in Personal Speed Dialing. Therefore, it is entirely possible for the same telephone number to be stored under a different name in different locations within the PBX.

When a call containing Caller ID information is received, the PBX will search for the caller's name in the following order, then show that name on the display and log it via SMDR.

- 1) Personal Speed Dialing data of the extension which received the call
- 2) System Speed Dialing Table
- 3) The Caller ID information received from the telephone company

If a caller's name is not stored in the PBX or sent from the telephone company, it will not be displayed or logged.

Conditions**[General]**

- Caller ID signaling type can be selected through system programming (→ Caller ID Signal Type [490]).

[Caller ID to SLT Port]

- **Hardware Requirement:** The EXT-CID card
- When the caller's number is sent to an SLT, a Trunk Access number can be automatically added to the telephone number through system programming for calling back.
- When the caller's number exceeds 16 digits, the SLT receives only the first 16 digits, not counting the preceding Trunk Access number (if it is programmed to be added).
- If a call is transferred to an SLT, the transferring extension's information will be shown on the SLT. If the transferring extension goes on-hook before the call is answered, the original caller's information will be shown.
- When the Caller ID has information, such as private, out of area, or long distance, the information will be shown instead of the caller's number and name.
- Even if the caller's name is sent, the name may not be shown depending on the type of SLT.
- Incoming Call Log information is not shown on the SLT.

Feature References

1.6.1.4 Speed Dialing—Personal/System

1.23.1 Station Message Detail Recording (SMDR)

1.16.2 Incoming Call Log


Description

When a call containing Caller ID information is received by an extension, the information is shown on the telephone display, notifying the extension user of the caller's identity. This information is also automatically logged in the Incoming Call Log of the extension, and can be viewed later or used to call that caller back. Each extension and incoming call distribution (ICD) group has its own Incoming Call Log.

Call Log button

The Call Log button will alert an extension user to any missed (unanswered) calls. A flexible button can be customized as the Call Log button, and will indicate the status of the Incoming Call Log for the extension or corresponding ICD group, as shown below.

Light pattern	Status of the corresponding call log
Red on	There are call records in the log which have not been viewed.
Off	There are no new call records in the log.

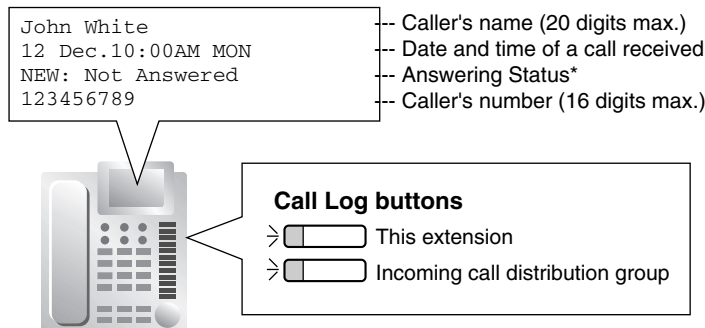

* "New" is displayed for call records which have not previously been viewed;
"Old" is displayed for call records which have previously been viewed.

Conditions

- The following information is logged.

Telephone	KX-T7636/KX-T7633/KX-T7630	3-line display PT except KX-T7735/ KX-T7633/KX-T7630	KX-T7735	1-line or 2-line display PT
	KX-NT136 KX-TD7690/KX-TD7680			Wireless phone (KX-T7885/KX-TD7895)
Information	6-line display PT			
Caller's Name	✓	✓	✓	✓
Date/Time call received	✓	✓	✓	—
Answered or Not Answered	✓	—	✓	—
Confirmed or Not Confirmed	✓	—	✓	—
Caller's Phone Number	✓	—	—	—*

- *: If the caller's name is not logged, the caller's phone number is displayed.
If the caller's name is logged, the caller's phone number is not displayed.

- **If the answering destination is not the original destination (Call Forwarding (FWD)—No Answer, Intercept Routing—No Answer, Overflow and Call Pickup):**
If a call is not answered and forwarded to another destination, or if an extension picks up a call ringing at another extension, the call is logged in the Incoming Call Logs of both the original and the answering destination. If a call is forwarded to multiple extensions before being answered, the call is logged in the call logs of all the extensions it was forwarded to. If a call is forwarded to an ICD group and is not answered, the call is not logged in the call log for the ICD group.
- **Incoming Call Log for Calls to an ICD Group**
If a call directed to an ICD group is not answered, the call is logged in the Incoming Call Log of the ICD group. If the call is answered, it is logged in the call log of the answering extension only.
- **Incoming Call Log for Calls to a PS**
Each portable station (PS) also has an Incoming Call Log. When a call is directed to a PS, the call will be logged in the call log of the PS even when:
 - a) The PS is out of range.
 - b) The PS is turned off.
 - c) The Cell Station (CS) is busy.
- **Incoming Call Log Display Lock**
The Incoming Call Log of an extension can be locked through personal programming (Directory and Call Log Lock) to prevent other users from viewing its contents. If locked, the Outgoing Call Log and Personal Speed Dialing are also locked.
An extension personal identification number (PIN) is required to use this feature. (→ 1.25.1 Extension Personal Identification Number (PIN))
- **Incoming Call Log Memory**
The total number of incoming calls that can be logged by the PBX is limited. (→ 5.1.1 Capacity of System Resources) The maximum number of calls that can be logged in the Incoming Call Log of each extension and ICD group can be specified through system programming. When a call log is full, the oldest call will be replaced each time a call is received.
- **Automatic Caller ID Number Modification**
If the PBX is programmed to automatically modify incoming telephone numbers, the modified numbers will be logged in the Incoming Call Log.

Feature References

- 1.6.1.4 Speed Dialing—Personal/System
- 1.16.1 Caller ID
- 1.18.2 Flexible Buttons

Operation References

- 1.11.1 Call Log
- 3.1.2 Settings on the Programming Mode

1.17 Message Features


1.17.1 Message Waiting

Description

When an extension user calls another extension that does not or cannot answer the call, he or she can leave a Message Waiting notification. The appropriate button or lamp on the called extension user's telephone will light, indicating that a call was missed or a message recorded by the Voice Processing System (VPS) is waiting. A Message button can be used to call the caller back or listen to the message.

When a message is left for a proprietary telephone (PT), the Message button on it lights or the Message/Ringer Lamp turns red. Pressing the lit Message button while on-hook shows the caller's information as shown below:


[Example]

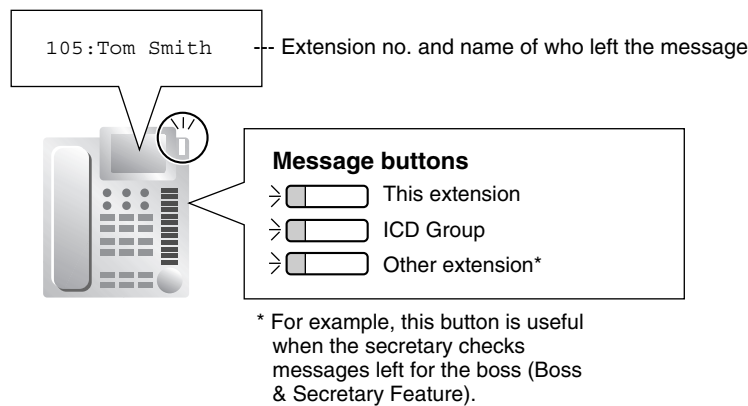


Conditions

- Message Button**
 Any flexible button can be assigned as a Message button. This button can be used on a PT which does not have the MESSAGE button (fixed button), or can be used on any PT to access messages left for another extension or for an incoming call distribution (ICD) group.
- Distinctive Dial Tone for Message Waiting**
 If Distinctive Dial mode is enabled, dial tone 4 will be sent to an extension when a message has been left on the extension. (→ 1.26.1 Dial Tone)
- SLT with a Message Waiting Lamp**
 The lamp activates in the same way as the MESSAGE button on a PT, provided an MSLC card is connected to the PBX. The preferred Message Waiting Lamp light pattern can be selected from the twelve patterns shown below. System programming for each extension port is required to use this feature.

[SLT Message Waiting Lamp Light Patterns]

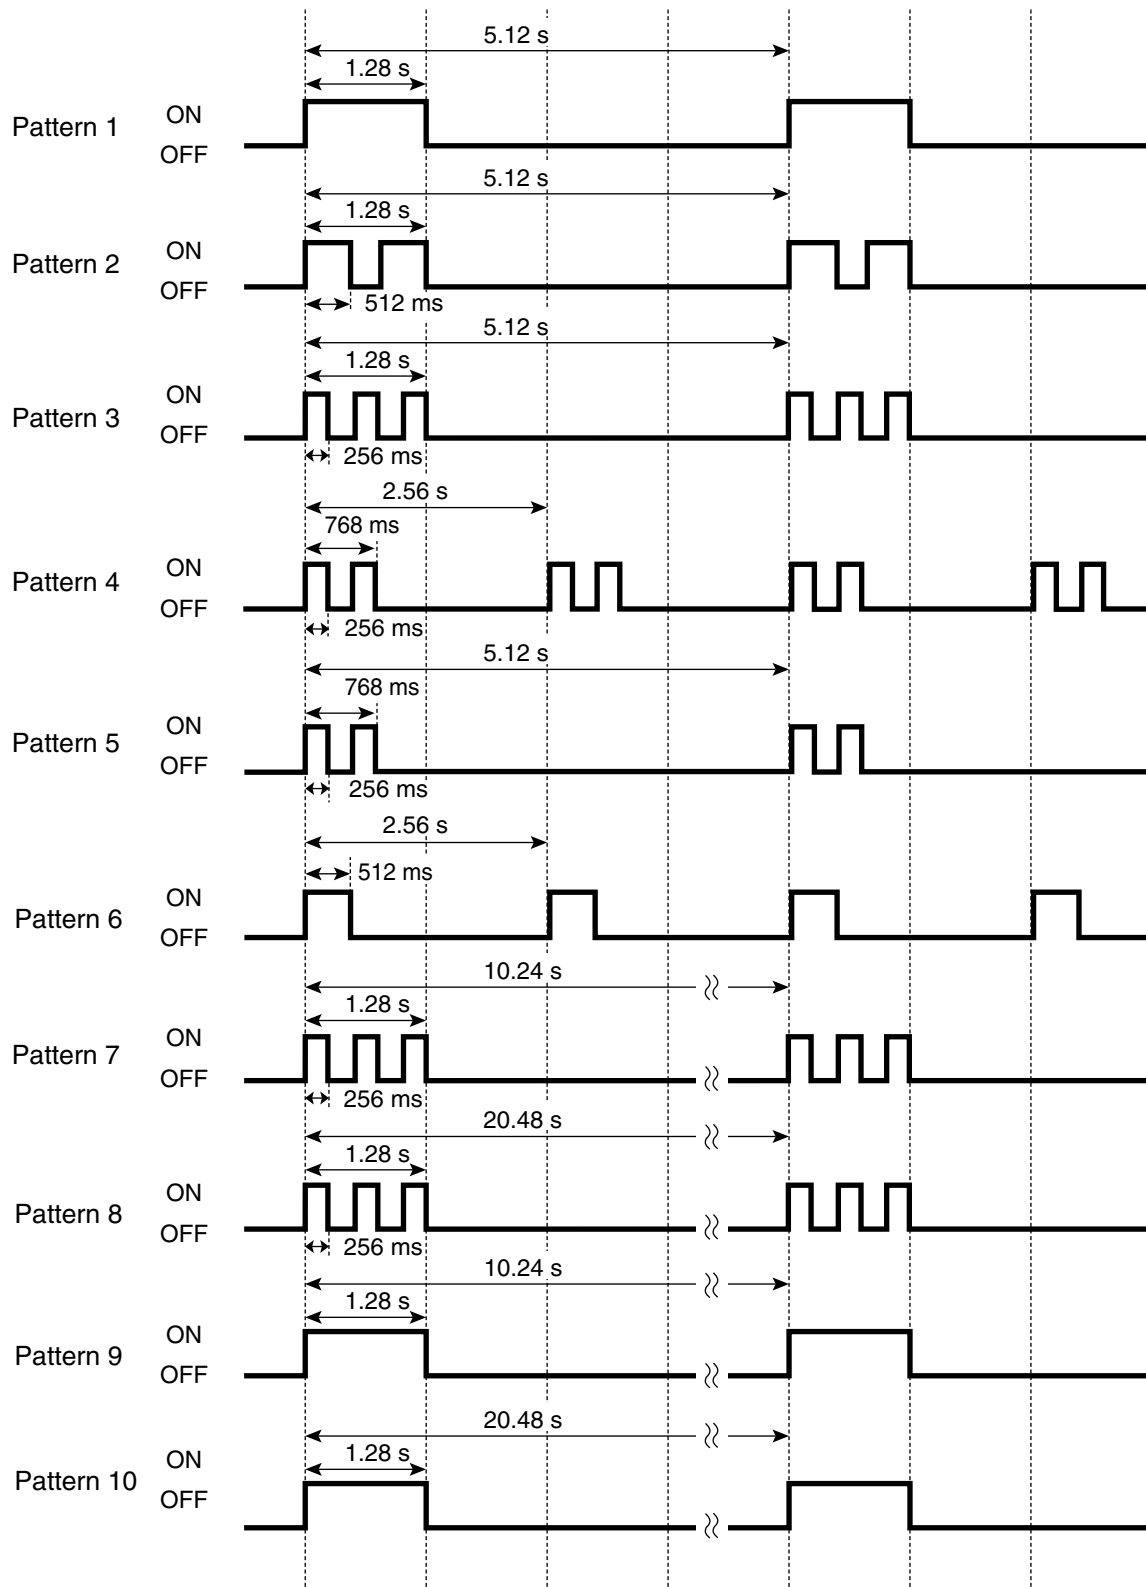

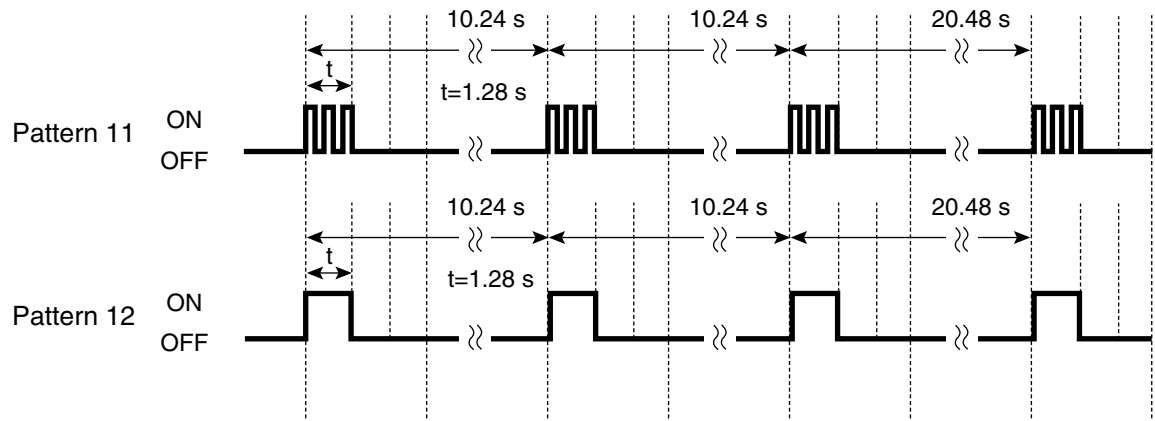

- It is possible to leave a Message Waiting notification while hearing a ringback tone, busy tone, or DND tone.
- Message Waiting notifications are always left on the original extension. Message Waiting notifications cannot be sent to a Call Forwarding (FWD) destination (→ 1.3.1.2 Call Forwarding (FWD)).
- Both the calling extension and the called extension can cancel a notification after it has been left.
- If a call is missed, the Message Waiting notification will be cleared when the called extension calls the caller back and the call is answered.
- **Message Waiting Notification via Voice Mail DPT (Digital) Integration**
If a voice message is left for the called extension, the notification will be cleared after each new message has been played. (→ 1.21.2 Voice Mail DPT (Digital) Integration)
- **Message Waiting Notification via Voice Mail DTMF Integration**
If a voice message is left for the called extension, the notification will be cleared either by the PBX after the MESSAGE button (or a Message button) is pressed, or by the VPS after each new message has been played, according to system programming. (→ 1.21.3 Voice Mail DTMF Integration)

Feature References

1.18.2 Flexible Buttons

Operation References

1.2.4 When the Dialed Line is Busy or There is No Answer

1.9.5 Voice Processing System

1.17.2 Absent Message

Description

Extension users can prepare a brief text message (Absent Message) that will be displayed to other extension users when they are called. These messages can explain the reason for their absence, and may be edited through system programming and personal programming.

The following Absent Messages may be programmed:

Type	Message No.	Message (Example)	Description
System message	1	Will Return Soon	Messages may be edited through system programming (→ Absent Message [008]). They can be used by any extension user.
	2	Gone Home	
	3	At Ext %%% (Extension Number)	
	4	Back at %:%% (Hour:Minute)	
	5	Out until %/%% (Month/Day)	
	6	In a Meeting	
	7		
	8		
Personal message	9		A message is programmable by each extension through personal programming (Personal Absent Message), which can only be used by that extension user.

Note

The "%" shown above indicates a parameter to be entered when assigning a message at an individual extension.

Up to seven "%"s can be stored for each message.

Conditions

- An extension user can select only one Absent Message at a time. The selected message is displayed at the extension while on-hook.
- The caller must use a display proprietary telephone (PT) to see the Absent Message.

Operation References

1.5.2 Absent Message

3.1.2 Settings on the Programming Mode

1.18 Proprietary Telephone (PT) Features

1.18.1 Fixed Buttons


 

 
Description

Proprietary telephones (PTs), DSS Consoles, and Add-on Key Modules feature a wide variety of feature buttons and Line Access buttons, explained below.

Note that certain models do not feature certain buttons.

For a description of the buttons found on portable station (PS), please refer to the Operating Instructions for each PS.

[PT and Add-on Key Module]

Button		Usage
Navigator Key, Jog Dial, Volume Key		Used to adjust the volume of the ringer, speaker, handset and headset, and also adjust the display contrast. The Navigator Key and Jog Dial can also be used to select data from the Call Directory and the System Feature Access Menu on the display.
		
		
		
ENTER		Used to confirm the selected item.
CANCEL		Used to cancel the selected item.
PROGRAM		Used to enter and exit programming mode.
FLASH/RECALL		Used to disconnect the current call and make another call without hanging up (Flash/Recall mode or Terminate mode), or used to send a flash/recall signal to the telephone company or host PBX to access external features (External Feature Access mode). This button can also be used as a CANCEL button while on-hook.
HOLD		Used to place a call on hold.
SP-PHONE (Speakerphone)		Used for hands-free operation. Also used to switch between handset and hands-free operation.
MONITOR		Used for hands-free dialing. Also used to monitor the other party's voice in hands-free mode.
MESSAGE		Used to leave a Message Waiting indication or call back the party who left the Message Waiting indication.
REDIAL		Used to redial the last number dialed.

Button	Usage
TRANSFER	Used to transfer a call to another party.
Flexible CO	Used to access a CO line or CO line group when making or receiving a call according to the button's preprogrammed CO Line Access method (Default: S-CO). Can also be customized as a different feature button.
INTERCOM	Used to make or receive intercom calls.
AUTO ANS (Auto Answer/ MUTE)	Used to receive an incoming call in hands-free mode, or used to mute the built-in microphone or handset during a conversation.
VOICE CALL/MUTE	Used to monitor an intercom call automatically (a hands-free conversation is not possible). Also used to mute the handset during a conversation.
AUTO DIAL/STORE	Used for System/Personal Speed Dialing and storing program changes.
CONF (Conference)	Used to establish a multiparty conversation.
FWD/DND	Used to set Call Forwarding (FWD) or Do Not Disturb (DND)
PAUSE	Used to insert a dialing pause in a stored number. Also used as the Program button on analog proprietary telephones (APTs) which do not have the PROGRAM button.
Soft	Used to select the item displayed on the bottom line of the display.
SELECT	Used to select the displayed item or to call the displayed number.
SHIFT	Used to access the second level of Soft button items.
MODE	Used to change the current display to access various features.

[DSS Console]

Button	Usage
ANSWER	Used to answer an incoming call, or place the current call on hold and answer another call with a one-touch operation.
RELEASE	Used to disconnect the line during or after a conversation, or to complete a Call Transfer.
Flexible CO	Used to access a CO line or CO line group when making or receiving a call according to the button's preprogrammed CO Line Access method. Can also be customized as a different feature button.
Flexible DSS (Direct Station Selection)	Used to call an extension with a one-touch operation. Each button is programmed to correspond to an extension. DSS buttons can also be customized as other different feature buttons.
PF (Programmable Feature)	Used to access a preprogrammed feature with a one-touch operation. (no default)

Conditions

- Certain buttons are equipped with a light to indicate the status of the corresponding line or feature.

1.18.2 Flexible Buttons

Description

Flexible buttons are customized through either system or personal programming. The following types of flexible buttons are found on proprietary telephones (PTs), DSS Consoles, Add-on Key Modules, and/or portable stations (PSs):

- a) Flexible CO buttons
- b) Flexible Direct Station Selection (DSS) buttons
- c) Programmable Feature (PF) buttons

[Button Usage]

Button	Usage
Single-CO (S-CO)	Used to access a specified CO line for making or receiving calls. (→ 1.5.5.3 CO Line Access)
Group-CO (G-CO)	Used to access an idle CO line in a specified CO line group for making calls. Incoming calls from CO lines in the assigned CO line group arrive at this button. (→ 1.5.5.3 CO Line Access)
Loop-CO (L-CO)	Used to access an idle CO line for making calls. Incoming calls from any CO line arrive at this button. (→ 1.5.5.3 CO Line Access)
Direct Station Selection (DSS)	Used to call an extension with a one-touch operation. (→ 1.5.3 Intercom Call)
Network Direct Station Selection (NDSS)	Used to access an extension at another PBX within the same network. (→ 1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required))
One-touch Dialing	Used to call a preprogrammed party or access a feature with a one-touch operation. (→ 1.6.1.2 One-touch Dialing)
Group Directory Number (G-DN)	Used to access a specified incoming call distribution (ICD) group for making or receiving calls. (→ 1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW)
Message	Used to leave a Message Waiting indication or call back the party who left the Message Waiting indication. (→ 1.17.1 Message Waiting)
FWD/DND (External/Internal/Both)*	Used to set the FWD or DND feature for the extension. The feature is applied to CO line calls, intercom calls, or both. (→ 1.3.1.1 Call Forwarding (FWD)/Do Not Disturb (DND)—OVERVIEW)
Group FWD (External/Internal/Both)	Used to set the FWD feature for a specified ICD group. The feature is applied to CO line calls, intercom calls, or both. (→ 1.3.1.1 Call Forwarding (FWD)/Do Not Disturb (DND)—OVERVIEW)
Account Code Entry (Account)	Used to enter an account code. (→ 1.5.4.3 Account Code Entry)
Conference	Used to establish a multiparty conversation. (→ 1.13.1.2 Conference)
Terminate	Used to disconnect the current call and make another call without hanging up. (→ 1.10.6 Flash/Recall/Terminate)

Button	Usage
External Feature Access (EFA)	Used to send a flash/recall signal to the telephone company or host PBX to access external features. (→ 1.10.7 External Feature Access (EFA))
Call Park	Used to park or retrieve a call in a preset PBX parking zone. (→ 1.12.2 Call Park)
Call Park (Automatic Park Zone)	Used to park a call in an idle PBX parking zone automatically. (→ 1.12.2 Call Park)
Call Log	Used to show a log of received calls. (→ 1.16.2 Incoming Call Log)
Log-in/Log-out*	Used to switch between Log-in and Log-out status. (→ 1.2.2.6 Log-in/Log-out)
Hurry-up	Used to redirect the longest waiting call in the queue of an ICD group to the overflow destination. (→ 1.2.2.3 Queuing Feature)
Wrap-up*	Used to switch between Wrap-up/Not Ready and Ready modes. (→ 1.2.2.6 Log-in/Log-out)
System Alarm	Used to display a PBX error. (→ 2.4.3 Local Alarm Information)
Time Service*	Used to change or display the current time mode (day/lunch/break/night). (→ 2.2.4 Time Service)
Answer	Used to answer an incoming call. (→ 1.10.4 Headset Operation)
Release	Used to disconnect the line during or after a conversation, or to complete a Call Transfer. (→ 1.10.4 Headset Operation)
Toll Restriction	Used to change the Toll Restriction (TRS) level of other extension users temporarily. (→ 1.8.3 Dial Tone Transfer)
Calling Line Identification Restriction (CLIR)*	Used to switch between CLIP and CLIR service. (→ 1.19.1.2 Calling Line Identification Presentation (CLIP), and 1.27.2.2 Calling/Connected Line Identification Presentation (CLIP/COLP) and Calling/Connected Name Identification Presentation (CNIP/CONP)—by QSIG)
Connected Line Identification Restriction (COLR)	Used to switch between COLP and COLR services. (→ 1.27.2.2 Calling/Connected Line Identification Presentation (CLIP/COLP) and Calling/Connected Name Identification Presentation (CNIP/CONP)—by QSIG)
Headset	Used to turn headset mode on/off while idle. Used to switch between hands-free mode and headset modes during a conversation. (→ 1.10.4 Headset Operation)
Time Service Switching Mode (Automatic/Manual)*	Used to switch between Automatic Switching and Manual Switching mode. (→ 2.2.4 Time Service)
Two-way Record	Used to record a conversation into your own mailbox. (→ 1.21.2 Voice Mail DPT (Digital) Integration)
Two-way Transfer	Used to record a conversation into the mailbox of a specified extension. (→ 1.21.2 Voice Mail DPT (Digital) Integration)
One-touch Two-way Transfer	Used to record a conversation into the mailbox of a specified extension with a one-touch operation. (→ 1.21.2 Voice Mail DPT (Digital) Integration)

Button	Usage
Live Call Screening (LCS)	Used to monitor your own voice mailbox while a caller is leaving a message and, if desired, intercept the call. (→ 1.21.2 Voice Mail DPT (Digital) Integration)
Voice Mail (VM) Transfer	Used to transfer a call to the mailbox of a specified extension. (→ 1.21.2 Voice Mail DPT (Digital) Integration, → 1.21.3 Voice Mail DTMF Integration)
Check-in	Used to switch the status of extensions from Check-out to Check-in. (→ 1.24.2 Room Status Control)
Check-out	Used to switch the status of extensions from Check-in to Check-out. (→ 1.24.2 Room Status Control)
CTI	Used to access CTI features. (→ 1.29.1 Computer Telephony Integration (CTI))

- * **One-touch Feature Setting Buttons:** Pressing these buttons while on-hook changes the feature settings. The new mode will be displayed for a preprogrammed time period.

Conditions

- The Flexible DSS button lights of the KX-T7040 and KX-T7240 can be either "Off" or "Red On". If a button is customized as a button which shows other light patterns, those patterns will be indicated as "Red On".

Operation References

3.1.3 Customizing the Buttons

1.18.3 LED Indication

Description

The LED of the Message/Ringer Lamp and the following buttons (Line Status Buttons and Corresponding Extension Status Button) can indicate line status with a variety of light patterns.

Line Status Buttons: S-CO, G-CO, L-CO, INTERCOM, G-DN

Corresponding Extension Status Button: DSS

1. Light Pattern of the Message/Ringer Lamp

[Digital proprietary telephone (DPT)]

- Incoming call from a CO line: Red flashing
- Incoming call from another extension: Green flashing
- Message(s) present (no incoming call): Red on
- No message(s) present (no incoming call): Off

[Analog proprietary telephone (APT)]

- Incoming call: Red flashing
- Message(s) present (no incoming call): Red on

- No message(s) present (no incoming call): Off

2. Light Pattern of the Line Status Buttons

Line Status Button: Light Pattern	CO Line Status			Intercom Line Status	Incoming Call Distribution (ICD) Group Line Status
	S-CO	G-CO	L-CO	INTERCOM	G-DN
Off	Idle				
Green on	This extension is using the line.				
Slow green flashing	This extension is holding the line.				
Moderate green flashing	This extension is holding the line using Exclusive Hold or using the line for an Unattended Conference.				
Rapid green flashing	Incoming call/Privacy Release	Incoming call			
Red on	Incoming call for another extension/ Another extension is using the line/Another extension has the line on Exclusive Hold.	Other extensions are using all CO lines in the CO line group.	–	–	This extension is logged out of the ICD group.
Slow red flashing	Another extension is holding the line.	–	–	–	–
Rapid red flashing	Incoming call to the ICD group in Ring distribution method			–	–


3. Light Pattern of the Corresponding Extension Status Button

Corresponding Extension Status Button Light Pattern	DSS
Off	Idle
Red on	Busy/Incoming call*1/DND for CO line calls
Rapid red flashing	Incoming call*2

*1: Only when Call Pickup by a DSS button is disabled.

*2: Only when Call Pickup by a DSS button is enabled.

4. Flashing Light Patterns

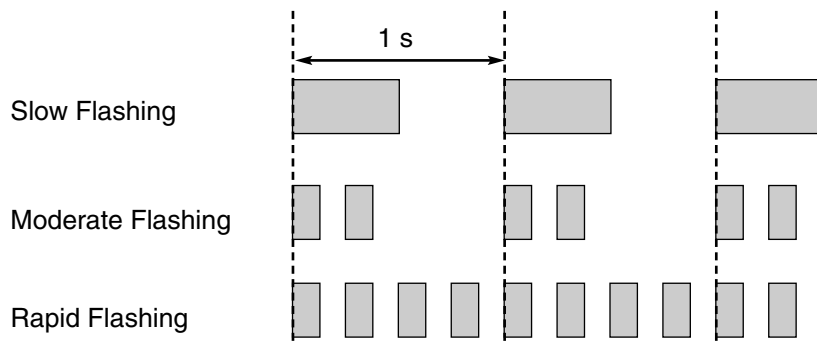

Conditions

- The incoming CO line call shows on the buttons in the following priority:
G-DN→S-CO→G-CO→L-CO→INTERCOM
- The light pattern of a DSS button for incoming calls can be set to "Off" through system programming. In this case, the DSS button light will not indicate the status of the corresponding extension.

Feature References

- 1.2.2.2 Group Call Distribution
- 1.2.2.6 Log-in/Log-out
- 1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND)
- 1.12.1 Call Hold
- 1.13.1.2 Conference
- 1.13.1.3 Privacy Release

1.18.4 Display Information

Description

A displaying proprietary telephone (PT) can relay the following information to the user while making or receiving calls:

Display Item	Display Example	Condition
The extension number and name of the calling or called extension, or Incoming Call Distribution (ICD) Group	123: Tom Smith	—
Status of the called extension	123: Busy	—
The number and name of the optional device	Door 02: 1st Door	—
The telephone number dialed	1234567890	—

1.18 Proprietary Telephone (PT) Features

Display Item	Display Example	Condition
The received call information a) Caller's name b) Caller's number c) CO line number/name d) Original Destination, if the call is forwarded e) DID name or number	ABC Company 12345678 Line 001: Sales →102:Mike Panasonic	The first line message can be either (a), (c), or (e) at each extension through system programming.
Duration of the current CO line call	Line 001 11:02'28	—

Conditions

- **Multilingual Display**
Each extension can select its display language through personal programming (Display Language Selection).
- **Display Contrast**
The display contrast can be adjusted through personal programming (Display Contrast Selection). This is available only for digital proprietary telephones (DPTs).
- **Display Backlight**
Each extension can select its display backlight preference (on or off) through personal programming (Display Backlight Selection). This is available for the KX-T7633, KX-T7636 and IP-PTs.
- Characters (name) or digits (number) exceeding the display's limitations are not displayed. Although in this case information may not be displayed properly, the received information is not altered.

Operation References

3.1.2 Settings on the Programming Mode

1.19 Integrated Services Digital Network (ISDN) Service Features

1.19.1 Integrated Services Digital Network (ISDN)

1.19.1.1 Integrated Services Digital Network (ISDN)—OVERVIEW

Description

Integrated Services Digital Network (ISDN) is a digital switching and transmission network. ISDN transmits voice, data, and image in digital format. ISDN lines can be connected to public line (CO line) or private line (QSIG).

1. ISDN Interface and Configuration

Interface Type	Description	Port Mode
Primary Rate Interface (PRI)	Provides twenty-three 64 kbps B channels for communication and one 64 kbps D channel for signaling (23B + D).	CO Line, QSIG—Master, QSIG—Slave

2. ISDN Supplementary Services for Public Network

Service	Description	Details in
Direct Inward Dialing (DID)	Directs a call with a DID number to the preprogrammed destination.	• 1.1.1.3 Direct Inward Dialing (DID)
Calling Line Identification Presentation (CLIP)	Sends the caller's telephone number to the network when making a call. The called party can see the number on his or her telephone display before answering the call.	• 1.19.1.2 Calling Line Identification Presentation (CLIP)
Calling Line Identification Restriction (CLIR)	Prevents the caller's CLI from being presented to the called party.	
Caller ID	The PBX receives Caller ID information, such as the caller's name and telephone number, when a call is sent from the network. A display proprietary telephone (PT) user can see this information before answering the call.	• 1.16.1 Caller ID

3. Private Networking Connection (QSIG)

Private networking with QSIG is possible using an ISDN line. Each ISDN port must be programmed so that each ISDN line has a "master" connection and a "slave" connection.

Conditions

- **En bloc**
The PBX sends all of dialed digits at once after the extension user completes dialing. The PBX recognizes the end of dialing as follows:
 - When the extension user dials "#", if programmed
 - When the extension user dials a preprogrammed telephone number
 - When the inter-digit time expires
- **Extension Number**
An extension number can be assigned to each ISDN port.
- **Network Type**
Each ISDN port can be set to the requirements of each country/area.
- **L1 Active Mode and L2 Data Link Mode**
The active mode of Layer 1 (L1) and the data link mode of Layer 2 (L2) can be selected individually (Permanent or Call by Call) for each ISDN port.
- **TEI Assignment Mode**
The Terminal Endpoint Identifier (TEI) assignment mode can be selected for each ISDN port.
- **Bearer Mode**
The bearer mode can be assigned for each ISDN port.

Feature References


1.27.2 QSIG Network

1.19.1.2 Calling Line Identification Presentation (CLIP)

Description

The PBX can send a preprogrammed telephone number to the network when an extension user makes a call. The called party can see the number on his or her telephone display before answering the call.

[Example]

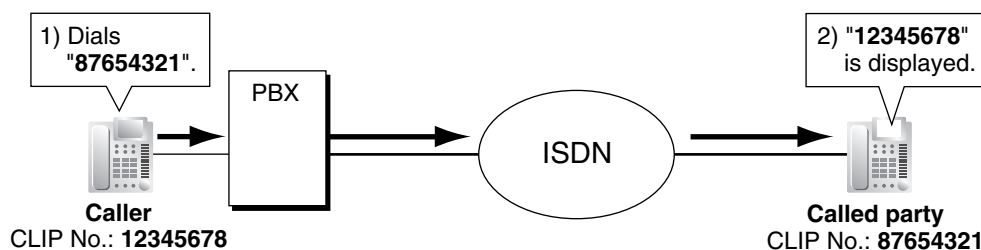

CLIP Number

Telephone numbers sent to the network for Calling Line Identification Presentation (CLIP) can be assigned as follows:

- A CLIP number for each ISDN port (subscriber's number)
- A CLIP number for each extension (→ CLIP Number [606])
- A CLIP number for each incoming call distribution (ICD) group

Each extension can select to use the CLIP number either assigned to the ISDN port or to the extension. The CLIP number for the ICD group is used when making a call by pressing the G-DN button.

Calling Line Identification Restriction (CLIR)

It is possible for each extension to prevent the sending of its telephone number to the network by pressing the CLIR button or entering the CLIR feature number.

Conditions

- The availability of this feature is dependent on the contract with the telephone company.
- The CLIP number for the connected ISDN port can be used for ISDN terminal devices which cannot be assigned their own CLIP number, such as doorphones.
- **CLIR Assignment for Each Port**
CLIR feature can be enabled or disabled for each ISDN port of the PBX.
- **CLIR Button**
It is possible to switch between CLIP and CLIR by pressing the CLIR button. Any flexible button can be customized as the CLIR button.
- The CLIP number must match the telephone number provided by the telephone company. Otherwise it will be ignored or replaced by another number.
- When using a private network, the extension number assigned for each extension through system programming (→ Extension Number [003]) is sent for CLIP. (→ 1.27.2.2 Calling/Connected Line Identification Presentation (CLIP/COLP) and Calling/Connected Name Identification Presentation (CNIP/CONP)—by QSIG)

Feature References

1.18.2 Flexible Buttons

Operation References

1.7.4 Calling Line Identification Presentation (CLIP)

1.7.5 Calling Line Identification Restriction (CLIR)

1.20 T1 Line Service Features

1.20.1 T1 Line Service

Description

A T1 line carries twenty-four 64 kbps-voice channels at 1.5 Mbps, and can be used as a public or private line. Voice is digitized by Pulse Code Modulation (PCM).

1. Channel Type

[LCOT/GCOT/DID/TIE/OPX]

The T1 card supports five different channel types to provide connection at minimum expense. One of the five channel types can be assigned to any one of the T1 card's 24 channels individually, according to usage rates and customer needs.

2. T1 Features


The following table shows the features available for each channel type:

Feature \ Channel Type	(1) TIE	(2) DID	(3) DIL	(4) OPX	(5) ANI
LCOT			✓		
GCOT			✓		
DID		✓	✓		✓
TIE (E & M)	✓	✓	✓		✓
OPX				✓	

✓ Available

Each T1 feature is explained in the following chart.

	Feature	Description
(1) TIE	TIE Line Service	Refer to the TIE Line Service feature. (→ 1.27.1 TIE Line Service)
(2) DID	Direct Inward Dialing (DID)	Refer to the DID feature. (→ 1.1.1.3 Direct Inward Dialing (DID))
(3) DIL	Direct In Line (DIL)	Refer to the DIL feature. (→ 1.1.1.2 Direct In Line (DIL))

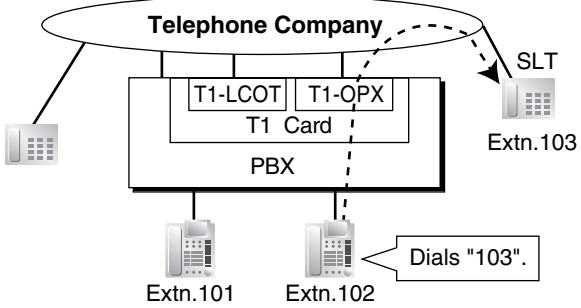	Feature	Description
(4) OPX	Off Premise Extension (OPX)	<p>A single line telephone (SLT) which is installed off site can perform as if it were installed locally. The SLT makes and receives calls through the PBX. An extension number can be given to the OPX, and extension data such as Class of Service (COS) is also applied.</p> <p>[Example]</p> 
(5) ANI	Automatic Number Identification (ANI)	<p>Receives the caller's number from a T1 line. When the ANI number is received, it can be treated the same as a Caller ID number. (→ 1.16.1 Caller ID)</p>

Conditions

- If a T1 line is used as a public line, the channel type depends on the contract with the telephone company.

1.21 Voice Mail Features

1.21.1 Voice Mail (VM) Group

Description

A Panasonic Voice Processing System (VPS) or similar product from another manufacturer can provide Voice Mail (VM) and Automated Attendant (AA) services when connected to the PBX.

VM service allows callers to leave voice messages in the VM mailboxes of the desired party. AA service allows callers to dial a number and connect themselves to an extension by following directions provided by a voice prompt. ("Enter the extension number of the desired party...", "Press 1 for Sales...", etc.)

A VPS is connected to either the DPT or the SLT ports of the PBX. The extension ports to which a VPS is connected make up a VM group. A VM group has a floating extension number, which allows the VPS to be set as the destination for incoming calls, or as the destination for redirected calls that are already being handled elsewhere in the PBX.


The type of VPS and/or the type of cards installed in the VPS determine whether the VPS is connected to the DPT ports of the PBX (DPT [Digital] Integration), or to the SLT ports (DTMF Integration).

A Panasonic VPS which supports DPT (Digital) Integration should be connected to the DPT ports of the PBX. These ports make up a VM group referred to hereafter as a "VM (DPT) group". DPT (Digital) Integration provides for effortless connection and setup, conveniences which are unachievable with non-Panasonic VPSs and DTMF Integration.

A non-Panasonic VPS can be connected to the SLT ports of the PBX. These ports make up a VM group referred to hereafter as a "VM (DTMF) group". Although DTMF Integration does not offer the ease of use that DPT (Digital) Integration does, the features available through DTMF Integration can satisfy many needs.

VM Group Type	Description	System Capacity
VM (DPT) Group	A group of DPT ports on the PBX connected to a Panasonic VPS which supports DPT (Digital) Integration.	<ul style="list-style-type: none"> Up to two VPSs which support DPT (Digital) Integration can be connected to the PBX. Each VM (DPT) group can be connected to only one VPS. Up to two VM (DPT) groups can be assigned to the PBX. Up to 12 ports (24 voice channels) can form one VM (DPT) group.
VM (DTMF) Group	A group of SLT ports on the PBX connected to a VPS. The PBX communicates with the VPS by sending DTMF tones through these SLT ports.	<ul style="list-style-type: none"> Up to two VM (DTMF) groups can be assigned to the PBX. Up to 32 ports can form one VM (DTMF) group.

[Example of VPS Configuration]

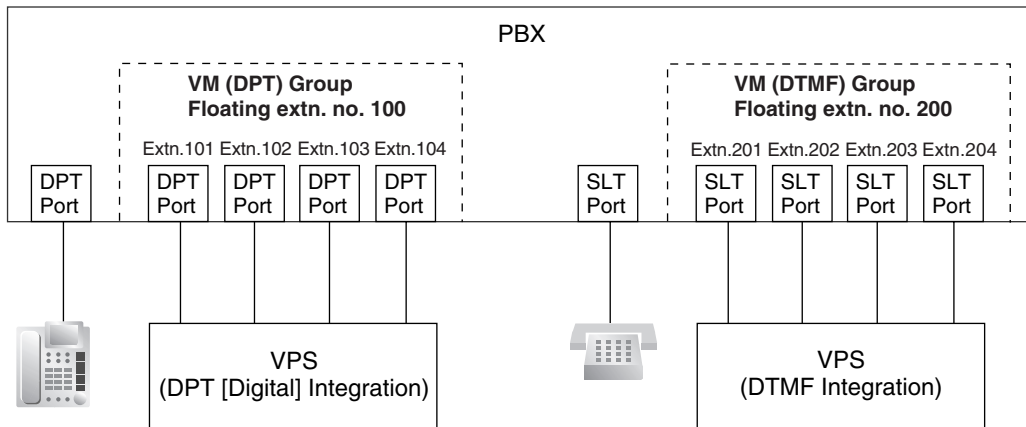

VM (DPT) Group Assignment

The VPS is connected to the DPT extension ports of the PBX. These extension ports, as well as VM (DPT) group settings, must be configured through system programming to allow DPT (Digital) Integration, as shown in the following programming examples, "Extension Port" and "VM (DPT) Group".

Note that every port in a VM (DPT) group must be connected to the same DHLC or DLC card.

VM (DTMF) Group Assignment

The VPS is connected to the SLT extension ports of the PBX. These extension ports, as well as VM (DTMF) group settings, must be configured through system programming to allow DTMF Integration, as shown in the following programming examples, "Extension Port" and "VM (DTMF) Group".

[Programming Example: Extension Port]

Slot	Port	Port Type	Extn. No.	DPT Property			
				Type*1	Unit No. of VPS	Port No. of VPS	
3	1	DPT	101	VM (DPT)	1	1	VM (DPT) Group 1
3	2	DPT	102	VM (DPT)	1	2	
4	1	S-Hybrid	201	VM (DPT)	2	1	VM (DPT) Group 2
4	2	S-Hybrid	202	VM (DPT)	2	2	
5	1	SLT	301	Not assignable	Not assignable	Not assignable	VM (DTMF) Group 1
5	2	SLT	302	Not assignable	Not assignable	Not assignable	
6	1	SLT	401	Not assignable	Not assignable	Not assignable	VM (DTMF) Group 2
6	2	SLT	402	Not assignable	Not assignable	Not assignable	

[Programming Example: VM (DPT) Group]

VM (DPT) Group No.	Floating Extension No.*2	Group Name
1	100	Company A
2	200	Company B

[Programming Example: VM (DTMF) Group]

VM (DTMF) Group No.	Floating Extension No.	Group Name	Service Mode	Extension No. of Port Connected to VPS Port		
				1	2	3
1	300	Company C	AA	301	302	303
2	400	Company D	VM	401	402	403

*1 → Terminal Device Assignment [601]

*2 → VM Group Floating Extension Number [660]

Incoming Calls to a VM Group

A VPS can receive calls through either the floating extension number assigned to one of its VM groups, or through one of the VM group's extension ports.

When calls are directed to a floating extension number assigned to a VM group, calls will hunt for an available extension port beginning with the lowest numbered extension port assigned to the group.

Conditions

- During typical use, the PBX should be configured through system programming to use a floating extension number assigned to a VM group for all VPS-related features. In the event that settings such as Call Forwarding (FWD) or Do Not Disturb (DND) are set for any of these ports (→ 1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND)), they are disregarded.
- An extension port assigned to a VM group can be called (or have calls directed to it) directly using the port's extension number. In this case, features such as FWD or DND can be enabled for the extension port and will function.
- When all extension ports assigned to a VM group are busy, additional calls to the group will be handled according to the "Call Waiting on VM Group" setting (enable or disable) made through system programming.
 - a) If enabled, callers will hear a ringback tone while waiting for a VPS port to become available. To prevent call waiting tones from interrupting VM operation, call waiting tones are not sent to the VPS.
 - b) If disabled, the calls will be redirected via Intercept Routing to the destination assigned to the CO line group carrying the call. (→ 1.1.1.5 Intercept Routing)

Feature References

1.21.2 Voice Mail DPT (Digital) Integration

1.21.3 Voice Mail DTMF Integration

1.21.2 Voice Mail DPT (Digital) Integration**Description**

A Panasonic Voice Processing System (VPS) which supports DPT (Digital) Integration can provide countless features and conveniences that are unachievable using traditional voice mail systems which rely on DTMF Integration.

Many of these features are explained below. For more information, refer to the Installation Manual supplied with your Panasonic VPS.

Basic Features

Voice Mail Service

Allows callers to leave voice messages for specific parties, such as an extension user or an incoming call distribution (ICD) group. Extension users can listen to messages left in their mailboxes at their convenience.

Automated Attendant (AA) Service

The VPS answers calls and directs callers to dial a number in order to connect themselves to the desired party. ("Enter the extension number of the desired party.")

Advanced Features

1. Automatic Configuration—Quick Setup

The PBX shares information with the VPS during setup which allows the VPS to automatically create the appropriate mailboxes for all extension numbers and floating extension numbers of ICD groups within the PBX.

2. FWD to a Mailbox of the VPS

An extension user can set his or her calls to be forwarded to the VPS. (→ 1.3.1.2 Call Forwarding (FWD)) When a call is received at the extension, the PBX sends the extension's mailbox number to the VPS and the VPS can answer the call with an outgoing message (OGM) ("Hi, I'm out of the office today...").

3. Intercept Routing to a Mailbox of the VPS

CO line calls can be programmed to be automatically redirected to an extension user's mailbox when the extension user does not or cannot answer them. (→ 1.1.1.5 Intercept Routing) The VPS can answer the call with an OGM ("I can't take your call now...") and callers can leave messages in the mailbox. In order to use this feature, a floating extension number used by the VPS must be assigned as the intercept destination for the original destination (extension, ICD group, etc.) which received the call, and "Intercept to Mailbox" must be enabled through system programming.

4. Transferring to a Mailbox of the VPS

Extension users can transfer calls to a mailbox, after which callers can leave a message for the desired party. (→ 1.11.1 Call Transfer) While answering a call, the extension user simply presses the Voice Mail (VM) Transfer button and enters the extension number of the party the caller wishes to leave a message for. The VPS will answer the transferred call and record a message.

VM Transfer Button

In order to use this feature, the extension user must use a flexible button customized as the VM Transfer button. A floating extension number of a VM group must be assigned to the button when creating it.

Note that when a user transfers a call to the VPS with the VM Transfer button, any caller ID information associated with the original call is not passed to the VPS.

5. Transfer Recall to a Mailbox of the VPS

When a call is directed to an extension via the VPS's AA service but is not answered within a preprogrammed amount of time (→ Transfer Recall Time [201]), the PBX can transfer the call to the extension's mailbox. The VPS can answer the call with an OGM ("I can't take your call now...") and the caller can leave a message. In order to use this feature, "Transfer Recall to Mailbox" must be enabled through system programming.

6. Listening to Recorded Messages (Direct Mailbox Access)

If the VPS receives a message, the VPS will set the Message Waiting feature (e.g., turning on the Message button light, and showing the number of messages waiting on the display of a 6-line display PT) on the corresponding telephone as notification. (→ 1.17.1 Message Waiting) Thereby, the VPS notifies the extension user that there is a message waiting in his mailbox. The extension user can play the message back simply by pressing the button used for mailbox access; he or she does not need to

enter a mailbox number. This button may be the MESSAGE button, depending on the proprietary telephone (PT) being used, or a One-touch Dialing button assigned to dial a floating extension number of a VM group. (→ 1.6.1.2 One-touch Dialing)

An extension user can, at any time, play back any messages in his or her mailbox, including old messages. The user simply dials a floating extension number used by the VM (DPT) group from his or her extension. (**Direct Mailbox Access**) A mailbox number does not need to be dialed. This feature is enabled or disabled according to the Class of Service (COS) assigned to the mailbox through VPS programming.

7. VPS CO Line Service & Automatic Time Mode Notification*

Multiple tenants can share a single VPS; a dedicated VPS port for each tenant is not required. This is possible because when CO line calls are directed or redirected to a VM (DPT) group, the PBX sends information to the VPS which determines the OGM that is heard by callers. ("Thank you for calling Company A", "Thank you for calling Company B", etc.)

If an incoming CO line call is directed via DIL or DID distribution to a VM (DPT) group, the PBX sends to the VPS the corresponding information that is assigned in the DIL Table or DID Table, namely, the VPS trunk (CO line) group number and the tenant number. (→ 1.1.1.2 Direct In Line (DIL), → 1.1.1.3 Direct Inward Dialing (DID))

This information is used to send the appropriate OGM to the caller for the current time mode (→ 2.2.4 Time Service), and is programmable for each CO line in the DIL Table, and for each DID number in the DID Table.

* The software contained in the VPS may need to be updated before this feature can be used.

[Example]

In order for callers to hear the correct OGM for the current time mode, the DIL Table or DID Table of the PBX must be programmed to match the settings of the VPS.

[Programming Example: DID Table]


Each DID number can be assigned a VPS trunk (CO line) group number as well as a tenant number.

Location No.	DID No.	DID Destination				DID Name	VPS Trunk (CO Line) Group No.	Tenant No.
		Day	Lunch	Break	Night			
0001	123-4567	105	100	105	100	Sales	1	
0002	123-2468	102	100	102	100	International	2	

[Programming Example: Trunk (CO Line) Group Assignment for VPS]

These settings are made on the VPS. The trunk (CO line) group number should correspond to the number programmed in the PBX's DIL Table or DID Table.

Trunk (CO Line) Group No.		Company Greeting No.
①	Day	1
	Lunch	2
	Break	3
	Night	4
2	Day	5
	Lunch	6
	Break	7

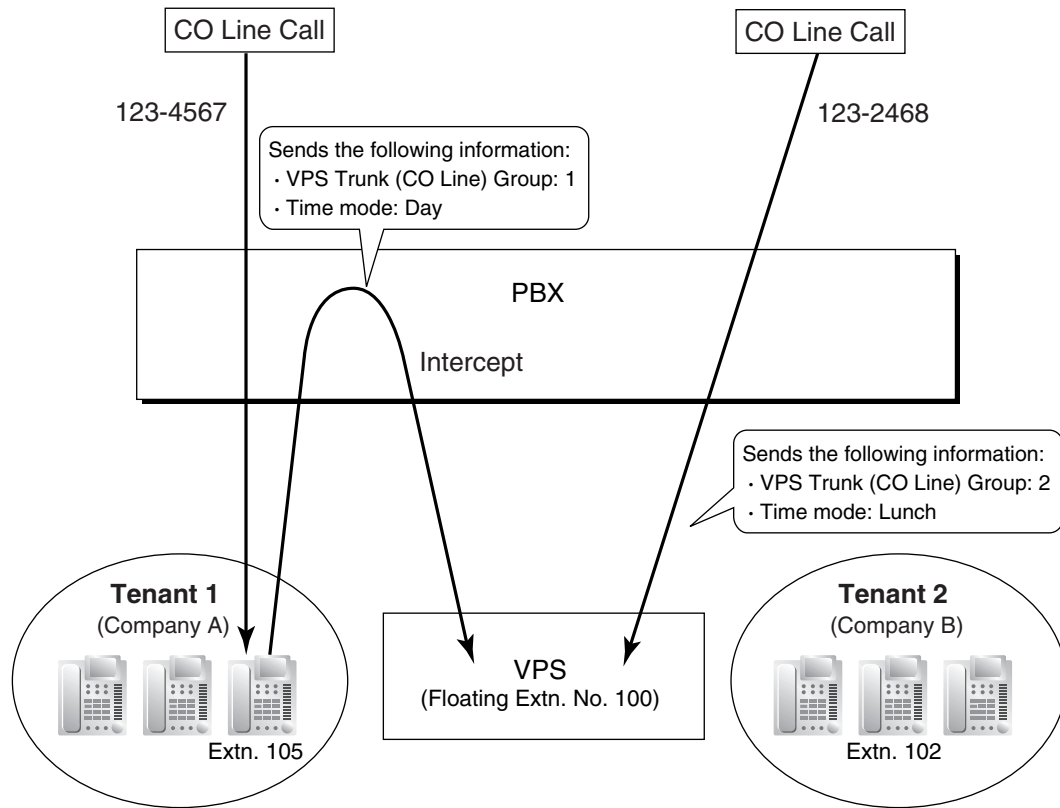

In this example:

A customer dials the telephone number for Company A, "123-4567".

The call is handled by DID distribution according to system programming. (Refer to the above system programming example, "DID Table".) The tenant number programmed for this DID number determines that the current time mode is Day (not shown here), and the call is therefore directed to extension 105.

If extension 105 does not answer the call, the call is redirected to extension 100 via Intercept Routing (not shown here), which is a floating extension number assigned to a VM (DPT) group. When the PBX redirects the call to the VPS, it also sends the VPS trunk (CO line) group number and tenant number as programmed in the DID Table.

The VPS answers the call with the greeting message assigned to the trunk (CO line) group number and current time mode, Company Greeting Number 1. (Refer to the above system programming example, "Trunk (CO Line) Group Assignment for VPS".)

A customer dials the telephone number for Company B, "123-2468".

The call is handled by DID distribution according to system programming. (Refer to the above system programming example, "DID Table".) The tenant number programmed for this DID number determines that the current time mode is Lunch (not shown here). The call is therefore directed to extension 100, which is a floating extension number assigned to a VM (DPT) group.

When the PBX directs the call to the VPS, it also sends the VPS trunk (CO line) group number and tenant number as programmed in the DID Table.

The VPS answers the call with the greeting message assigned to the trunk (CO line) group number and current time mode, Company Greeting Number 6. (Refer to the above system programming example, "Trunk (CO Line) Group Assignment for VPS".)

8. Caller ID Information

If the PBX receives Caller ID information (caller's name and telephone number) when receiving a CO line call, the PBX sends this information to the VPS. This information can be used to play specific OGMs to specific callers, or announce the name of the calling party when listening to recorded messages.

9. DID Number Notification to the VPS

When receiving a CO line call with a DID number, the PBX sends the DID number to the VPS. The number will be sent even if the call reaches the VPS after redirection by, for example, Intercept Routing. This number can be used to direct the call to a desired extension, mailbox, or custom service.

10. Paging by the VPS

The VPS can page a called party. (→ 1.14.1 Paging) If the names of staff members have been previously recorded into the VPS, the VPS can announce, "I have a call for (name of staff member)". If Caller ID information is received by the PBX, and if the name of a caller has been previously recorded, the VPS can also announce the name of the caller.

11. Status Notification to the VPS

When a call is redirected to the VPS, the PBX sends the status of the called extension to the VPS. This allows the VPS to quickly handle the call, playing the appropriate OGM for the caller.

12. Live Call Screening (LCS)

Similar to a conventional home answering machine, LCS allows a proprietary telephone (PT) or portable station (PS) user to monitor his or her own mailbox as a caller is leaving a message and, if desired, answer the call simply by pressing the LCS button.

PT users can choose one of two ways to perform LCS, through personal programming (Live Call Screening Mode Set):

Hands-free mode: The user can screen the call automatically through the built-in speaker.

Private mode: The user will hear an alarm tone when a message is being recorded in his or her mailbox. To screen the call, the user goes off-hook with the handset, MONITOR button, or SP-PHONE button.

Note

Only Private mode is available for PS users. When using LCS, PS users cannot monitor a call through the speakerphone.

LCS Button

Any flexible button can be customized as the LCS button. Once LCS is turned on, it will stay on until turned off, therefore extension users may wish to turn LCS off when they are away from their desks to prevent others from screening their calls.

13. Two-way Recording into the VPS

PT users can record their own telephone conversations. These recordings can be stored in the PT user's own mailbox (**Two-way Record**) or in another user's mailbox (**Two-way Transfer**), depending on which button the user presses to begin recording.

Two-way Record/Two-way Transfer Button

A flexible button can be customized as the Two-way Record or the Two-way Transfer button.

If an extension number is assigned when creating the Two-way Transfer button, conversations will be recorded into that extension's mailbox by simply pressing this button (**One-touch Two-way Transfer Button**).

Note

When you record Two-way telephone conversations, you should inform the other party that the conversation is being recorded.

14. Time Synchronization*

The VPS can automatically adjust its clock if the date and time settings of the PBX are adjusted. For example, if the PBX is programmed to automatically adjust to Daylight Saving Time, the VPS will adjust its clock as well. (→ 2.3.4 Automatic Time Adjustment)

- * The software contained in the VPS may need to be updated before this feature can be used.

15. Remote Call Forwarding Set*

While accessing the VPS from an extension or a remote location, a PBX user can set his or her calls to be forwarded, as well as select the destination of the forwarded calls.

Calls can be forwarded to an outside party provided this feature is enabled through system programming (→ Call Forwarding to CO Line [504]).

- * The software contained in the VPS may need to be updated before this feature can be used.

Conditions

[Live Call Screening (LCS)]

- To prevent the unauthorized screening of calls, it is recommended that extension users who use LCS assign an extension personal identification number (PIN). This PIN will be required when setting LCS. (→ 1.25.1 Extension Personal Identification Number (PIN))
- If an extension user is screening a call and then goes off-hook to answer it, the VPS will either stop or continue recording the message, according to personal programming (LCS Mode Set [After Answering]).
- If a single line telephone (SLT) is connected in parallel to a PT, and if LCS is activated for the PT in Private mode, both the PT and SLT can be used to screen calls while in idle status. The SLT will ring to indicate a message is being recorded. The call can be screened with the SLT by going off-hook. To intercept the call, press Flash/Recall button or flash the hookswitch. (→ 1.10.9 Paralleled Telephone)
- When using a PS that is in Wireless XDP Parallel Mode, LCS can be turned on or off from the wired telephone only. Turning LCS on or off on the PS has no effect. (→ 1.22.3 Wireless XDP Parallel Mode)

[Two-way Recording into the VPS]

- **If all ports of the VPS are busy when a user tries to record a conversation:**
 - a) The user hears an alarm tone when pressing the Two-way Record or the One-touch Two-way Transfer button.
 - b) The user hears an alarm tone after pressing the Two-way Transfer Button followed by an extension number.

Feature References

1.18.2 Flexible Buttons

1.21.1 Voice Mail (VM) Group

Operation References

1.9.5 Voice Processing System

3.1.2 Settings on the Programming Mode

3.2.2 Manager Programming

1.21.3 Voice Mail DTMF Integration

Description

A Panasonic Voice Processing System (VPS) or similar product from another manufacturer can provide Voice Mail (VM) and Automated Attendant (AA) services when connected to the SLT ports of this PBX.

Connecting a VPS to the PBX via SLT ports is called "DTMF Integration" because the VPS and PBX communicate with each other by sending analog DTMF tones. For more information, refer to the documentation provided with your VPS.

1. Voice Mail (VM) Service

Allows callers to leave voice messages for specific parties, such as an extension user or an incoming call distribution (ICD) group. Extension users can then listen to the messages left in their mailboxes at their convenience.

2. Automated Attendant (AA) Service

Allows your VPS to answer calls and direct callers to dial a number in order to connect themselves to the desired party. ("Enter the extension number of the desired party.")

VM Service

1. Accessing a Mailbox

There are two methods in which a call can reach an extension's mailbox. In the first method, the caller must dial a mailbox number. In the second method, the PBX sends DTMF tones to the VPS to indicate which mailbox should be accessed (**Follow on ID**).

Method 1:

1. An incoming CO line call is directed to a VM (DTMF) group.
2. The caller listens to an outgoing message (OGM) which directs the caller to dial a mailbox number. ("Press 101 to leave a message for Sales. Press 102 to leave a message for Support.")
3. The caller dials a mailbox number and then hears the called party's personal greeting. ("Please leave a message for our Sales team.")
4. The caller leaves a message and hangs up.

Method 2 (Follow on ID):

1. An incoming CO line call is directed to an extension or ICD group.
2. The PBX redirects the call to a mailbox via:
 - a) Call Forwarding (FWD)
 - b) Intercept Routing
 - c) Call Transfer

The PBX sends the appropriate DTMF tones to the VPS so that the caller does not need to dial a mailbox number.

3. The caller hears the called party's personal greeting. ("Please leave a message for our Sales team.")
4. The caller leaves a message and hangs up.

2. Transferring to a Mailbox

Extension users can transfer calls to a mailbox, after which callers can leave a message for the desired party. While answering a call, the extension user simply presses the Voice Mail (VM) Transfer button and enters the extension number of the party the caller wishes to leave a message for. The VPS will answer the transferred call and record a message.

VM Transfer Button

In order to use this feature, the extension user must use a flexible button customized as the VM Transfer button. A floating extension number of a VM group must be assigned to the button when creating it.

3. Listening to Recorded Messages

If the VPS receives a message, the VPS will set the Message Waiting feature on the corresponding telephone to notify the extension user that there is a message waiting in his mailbox. The Message button light of the extension will turn on (→ 1.17.1 Message Waiting), thereby notifying the extension user that there is a message waiting in his mailbox. The extension user can play the message back simply by pressing the button used for mailbox access. Depending on the proprietary telephone (PT) being used, this button may be the MESSAGE button, or a One-touch Dialing button assigned to dial a floating extension number of a VM group, the user's mailbox number, and other DTMF commands. (→ 1.6.1.2 One-touch Dialing) When the button is pressed, the PBX calls the floating extension number assigned to the appropriate VM group, then sends DTMF tones to the VPS to indicate the extension's mailbox number.

Whether the PBX turns off the message indication lamp after the button is pressed, or your VPS turns off the lamp after all new messages in the mailbox are played, is selectable by through system programming.

An extension user can also, at any time, play back any messages in his or her mailbox, including old messages, however this is not available as a one-touch operation with the MESSAGE button. The user must dial a floating extension number of a VM group, his or her mailbox number, and other DTMF commands manually, or customize a One-touch Dialing button.

AA Service

A VPS can also be used as an automated attendant. When a call is directed to a port of your VPS which is in AA service mode, the caller will hear an OGM. After or while listening to the OGM, the caller may dial an extension number as directed. ("Enter the extension number of the desired party.")

If the VPS transfers a call via the AA service, the PBX will inform the VPS of the status of the called party using a preprogrammed DTMF status signal so that the VPS will know the status without needing to listen to system tones, such as a busy tone or ringback tone. This enables the VPS to quickly play an appropriate OGM to the caller. ("I'm handling another call now...", "I'm away from my desk now...", etc.)

The default DTMF status signals sent by the PBX are explained below. Change the DTMF status signals through system programming to match the settings of your VPS.

[DTMF Status Signals]

Status	Condition	Default DTMF Status Signal
Ringback Tone	The PBX is ringing the corresponding extension.	1
Busy Tone	The called extension is busy.	2
Reorder Tone	The dialed number is invalid.	3
DND Tone	The called extension has set Do Not Disturb (DND). (→ 1.3.1.3 Do Not Disturb (DND))	4
Answer	The called extension has answered the call.	5
Confirm	The PBX confirms that a feature (such as Message Waiting) has been set or canceled on the extension.	9
Disconnect	The caller has hung up.	#9
FWD to VM Ringback Tone	The called extension has set FWD to VPS and the PBX is calling another port of the VPS.	6

Status	Condition	Default DTMF Status Signal
FWD to VM Busy Tone	The called extension has set FWD to VPS and all ports of the VPS are busy.	7
FWD to Extension Ringback Tone	The PBX is calling an extension other than the one dialed, most likely because the called extension has set its calls to be forwarded to another extension or because it is a member of an idle extension hunting group. (→ 1.2.1 Idle Extension Hunting)	8

System Programming

The service mode for each VM (DTMF) group and various DTMF settings must be programmed through system programming to match the settings of your VPS. If the settings of the PBX and your VPS do not agree, the VPS will not perform as expected.

1. Service Mode Assignment

Through system programming, assign a service mode (VM or AA) to each VM (DTMF) group to match the settings of your VPS.

2. DTMF Status Signal Assignment

When using AA service, the PBX will communicate with your VPS by sending DTMF tones to indicate the status of PBX extensions. Assign these DTMF status signals through PBX system programming to match the settings of your VPS.

3. DTMF Command Assignment

The PBX also sends DTMF tones to your VPS to command the VPS to play or record messages, or to switch between VM and AA service modes. Assign these DTMF commands through PBX system programming to match the settings of your VPS.

4. Redirecting Calls to the VPS via FWD or Intercept Routing

When a call is redirected to the VPS via FWD or Intercept Routing it will be redirected to either the VM service or the AA service of your VPS, based on system programming. This allows a caller to, for example, be connected to an extension via AA service, then be connected to that extension's mailbox if the extension does not answer.

FWD to the VPS

An extension user can set his or her calls to be forwarded to your VPS. The way in which the VPS will then handle these calls is determined through system programming.

- a) If "FWD to the VPS Sequence" is set to "Answer by Mailbox", the PBX will direct forwarded calls to the VM service of your VPS. The PBX will send the extension's mailbox number to the VPS via Follow on ID, allowing callers to leave a message for the extension user without dialing a mailbox number.
- b) If "FWD to the VPS Sequence" is set to "AA", the PBX will direct forwarded calls to the AA service of your VPS. Callers will hear the AA greeting ("Enter the extension number of the desired party.") and can connect themselves to a destination.
- c) If "FWD to the VPS Sequence" is set to "None", the PBX will direct forwarded calls to whichever service (VM or AA) is assigned to the VM (DTMF) group.

Intercept Routing to the VPS

CO line calls which are not answered can be programmed to be redirected to your VPS. The way in which the VPS will then handle these calls is determined through system programming.

- a) If "Intercept Routing to the VPS Sequence" is set to "Answer by Mailbox", the PBX will direct calls to the VM service of your VPS. The PBX will send the extension's mailbox

number to the VPS via Follow on ID, allowing callers to leave a message for the extension user without dialing a mailbox number.

- b) If "Intercept Routing to the VPS Sequence" is set to "AA", the PBX will direct calls to the AA service of your VPS. Callers will hear the AA greeting ("Enter the extension number of the desired party.") and can connect themselves to a destination.
- c) If "Intercept Routing to the VPS Sequence" is set to "None", the PBX will direct calls to whichever service (VM or AA) is assigned to the VM (DTMF) group.

DTMF Commands Sent to the VPS

In order to access the appropriate feature of your VPS (playing or recording messages, playing the OGM used by the AA service, etc.), the PBX sends preprogrammed DTMF tones which command the VPS. Assign these DTMF commands through system programming to match the settings of your VPS. If the settings of the PBX and VPS do not agree, the VPS will not perform as expected.

[Programming Example: DTMF Commands]

Feature	DTMF Command Sent to VPS*
Record a message	H
Play a message	×H
Switch to VM	#6
Switch to AA	#8

H = Mailbox Number. The appropriate mailbox number will be sent to the VPS in place of the "H".


* The DTMF commands here are the default commands used by the PBX. Program either the PBX or your VPS so that these settings match. Note, however, that non-Panasonic VPSs may use different feature names.

[DTMF Commands Sent to the VPS]

VPS Access Method		DTMF Command Sent to VPS*	
		When VM (DTMF) Group is in VM Service Mode	When VM (DTMF) Group is in AA Service Mode
FWD	Answer by Mailbox	H	#6 + H
	AA	#8	#8
	None	No command is sent.	
Intercept Routing	Answer by Mailbox	H	#6 + H
	AA	#8	#8
	None	No command is sent.	
Transfer (pressing the VM Transfer button and dialing an extension no.)		H	#6 + H
Pressing the MESSAGE button or similar operation		×H	#6 + ×H

- * The DTMF commands here are the default commands used by the PBX. Program either the PBX or your VPS so that these settings match.

[Example of a DTMF Command Sent to the VPS]

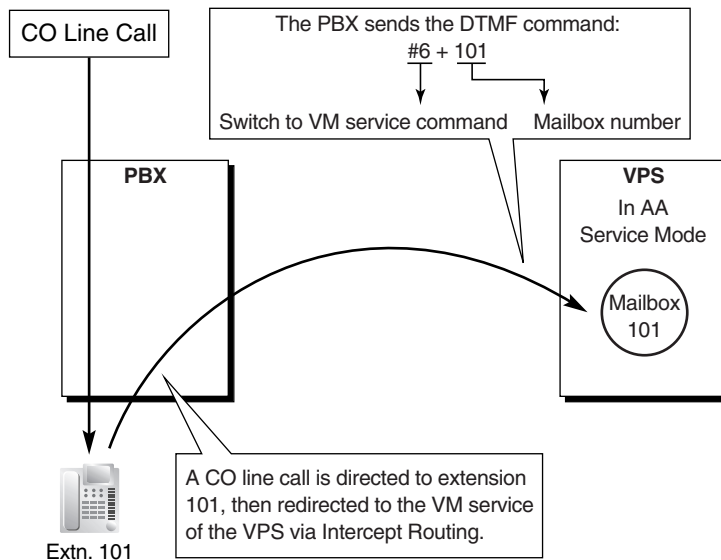

Conditions

- After the VPS answers a call, the PBX sends Follow on ID information to the VPS. The amount of time before the PBX sends this data is programmable.
- After the VPS transfers a call to the PBX via AA service, the PBX sends a DTMF status signal to indicate the status of the called party. The amount of time before the PBX sends this status signal is programmable.
- The amount of time (inter-digit time) between each individual DTMF tone sent by the PBX can be specified through system programming.
- The length of each DTMF tone sent by the PBX can be specified through system programming.
- By default, each extension's and ICD group's mailbox number is the same as its corresponding extension number/floating extension number, however, a different mailbox number can be specified through PBX system programming for each extension and ICD group. The specified mailbox number will be used when "Mailbox for Extension" is set to "Programmed Mailbox Number".
- In order to achieve proper recording quality, Data Line Security is turned on automatically for extensions in a VM (DTMF) group. (→ 1.10.5 Data Line Security)

Feature References

- 1.1.1.5 Intercept Routing
- 1.3.1.2 Call Forwarding (FWD)
- 1.11.1 Call Transfer
- 1.18.2 Flexible Buttons
- 1.21.1 Voice Mail (VM) Group

Operation References

- 1.9.5 Voice Processing System

1.22 Portable Station (PS) Features

1.22.1 Portable Station (PS) Connection

Description

A Panasonic KX-TD7680 or KX-TD7690 portable station (PS) can be used in place of a proprietary telephone (PT), providing wireless access to PBX features and call handling.

1. Registration

Before a PS can be used, it must be registered with the PBX through system programming (→ PS Registration [690]) and assigned an extension number.

Because a PS transmits radio waves, it is possible that a PS belonging to a neighboring PBX can be registered to your PBX. To prevent this sort of unauthorized registration, a personal identification number (PIN) can be programmed for this PBX that must be entered on the PS during registration. (→ Personal Identification Number (PIN) for PS Registration [692]). This PIN, if programmed, is only used during the PS registration process.

Each PS can be registered to more than one PBX if necessary, and registration can be canceled if a PS will no longer be used with one of these PBXs. (→ PS Termination [691])

2. Connection

There are two ways a PS can be used.

As an Extension

A PS is assigned its own extension number when it is registered to a PBX. The PS can use this extension number to make and receive calls, just as a wired telephone can. A PS can be a member of an incoming call distribution (ICD) group, can be assigned as the destination for redirected calls, etc., just as a wired telephone can.

A PS can also be a member of a PS ring group (→ 1.22.2 PS Ring Group). A PS ring group is a way for several PSs to be notified of an incoming call simultaneously, but does not offer all of the features provided by an ICD group. (→ 1.2.2 Incoming Call Distribution (ICD) Group Features)

In Wireless XDP Parallel Mode

A PS can share an extension number with a wired telephone, allowing extension users to use their PSs when they are away from their desks to answer or make calls as if they were using their wired telephones. (→ 1.22.3 Wireless XDP Parallel Mode)

3. PS Interaction with CS

Each PS communicates with the PBX wirelessly through a cell station (CS). Each CS is connected to the PBX and sends and receives radio waves to and from different PSs within its range, using different channels for different PSs. Each CS has three channels, i.e., up to three calls (conversations) can be handled simultaneously by one CS.


A PS must be within range of a CS in order to be used, however, multiple CSs can be used with the same PBX to offer a greater area of wireless coverage. Additionally, a PS does not need to be used with a specific CS; any PS can communicate with any CS provided the PS is registered to the PBX, and provided the CS has at least one channel available.

Handover

If a PS is within range of more than one CS, the PS will communicate with the CS which has the greatest signal strength and an available channel. When a PS user moves out of range of one CS and moves in range of another CS, the PS will "hand over" its communications to the new CS. Handover is possible when:

- a) The PS is on an intercom call or on a call with an outside party. (The call will not be disconnected during the handover.)
- b) A call is ringing at the PS. (The call will continue to ring after the handover.)
- c) The PS is in idle status (i.e., waiting to receive calls).

[Example of Handover]

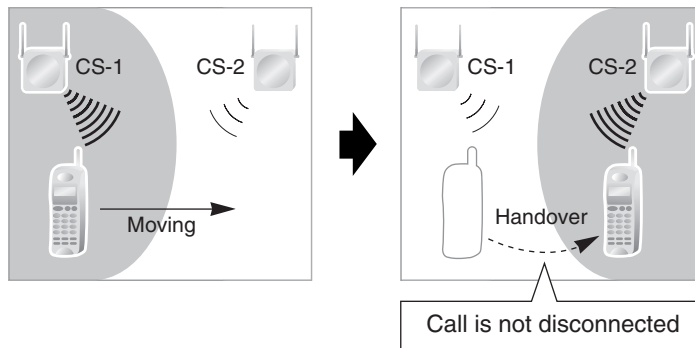

Handover is not possible when the PS is:

- a) Not within range of another CS.
- b) Within range of another CS but that CS is busy.
- c) Screening a call via Live Call Screening (LCS) or recording a call via Two-way Record (→ 1.21.2 Voice Mail DPT (Digital) Integration)
- d) Paging other extensions. (→ 1.14.1 Paging)
- e) On a doorphone call.
- f) Dialing digits to make a CO line call.
- g) On a call with an extension which is recording the conversation via PC Console or PC Phone.

Conditions

- If every CS that a PS is in range of is busy when that PS is called, the call will not be connected and the caller will hear a busy tone.

Connection References

2.8 Connection of 2.4 GHz Portable Stations

1.22.2 PS Ring Group

Description

A PS ring group is a way for several portable stations (PSs) to be notified of an incoming call simultaneously, while using only one channel of a cell station (CS).

1.22 Portable Station (PS) Features

Normally when a PS receives a call, one channel of a CS is used to ring the PS (→ 1.22.1 Portable Station (PS) Connection). If several PSs are members of an incoming call distribution (ICD) group, the available channels of a CS will become busy just by ringing each PS. Assigning a group of PSs to a PS ring group alleviates this strain on the CS because only one channel is needed to ring a PS ring group's members.

PS ring group members and related parameters are assigned through system programming, as explained below.


- a) **Floating Extension Number:** When this number is called, all PSs in the group ring.
- b) **Group Name:** Can be displayed on a ringing PS to indicate that the incoming CO line call is a group call, and not a call directed to the PS's extension number. This is only available when Incoming CO Line Call Information Display is set to "Called Number".
- c) **Incoming CO Line Call Information Display:** Determines which information is shown on the PS display when a group call is received. Select "Caller ID" to display the caller's telephone number or name, or "Called Number" to display the name of the PS ring group which is receiving the call.
- d) **Member PSs:** Select each PS that will be a member of the corresponding PS ring group. Note that a PS can belong to more than one PS ring group.

[Programming Example: PS Ring Group]

	PS Ring Group 1	PS Ring Group 2	PS Ring Group 3
Floating Extension No.	301	302	303
Group Name	Sales 1	Sales 2	Customer Service
Incoming CO Line Information Display	Caller ID	Called Number	Caller ID
PS 1	✓		
PS 2	✓		
PS 3	✓	✓	
PS 4		✓	
PS 5		✓	
PS 6			✓
PS 7			✓
PS 8			✓

✓ PS Ring Group Member

[Example of PS Ring Groups 1 and 2]

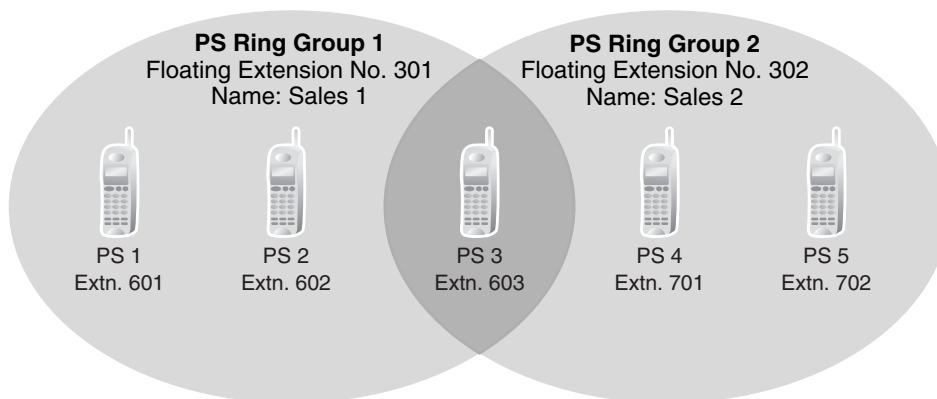

Explanation:

PS Ring Group 1

PS 1, PS 2, and PS 3 will ring simultaneously when a call is directed to floating extension number 301, and, in the case of a CO line call, will display the Caller ID information for the call.

These PSs will ring individually when a call is directed to their assigned extension numbers (programming not shown here).

PS Ring Group 2

PS 3, PS 4, and PS 5 will ring simultaneously when a call is directed to floating extension number 302, and, in the case of a CO line call, will display "Sales 2".


These PSs will ring individually when a call is directed to their assigned extension numbers (programming not shown here).

ICD Groups vs. PS Ring Groups

Assigning PSs to either an ICD group or a PS ring group will allow multiple PSs to receive group calls simultaneously. The differences between the two are highlighted below:

Features	PS Ring Group	ICD Group
Members can ring simultaneously when a call is received	✓	✓
Calls can be distributed to member extensions using different methods		✓
The CS is less likely to be busy; ringing all member PSs uses only one CS channel	✓	
Members can log-in, log-out, and use Wrap-up time, G-DN button		✓
Both PTs and PSs can belong to the same group		✓
Each member can belong to more than one group	✓	✓
Calls can wait in a queue if they cannot be answered		✓

[Example of CS Channels Used for PS Ring Group Calls and ICD Group Calls]

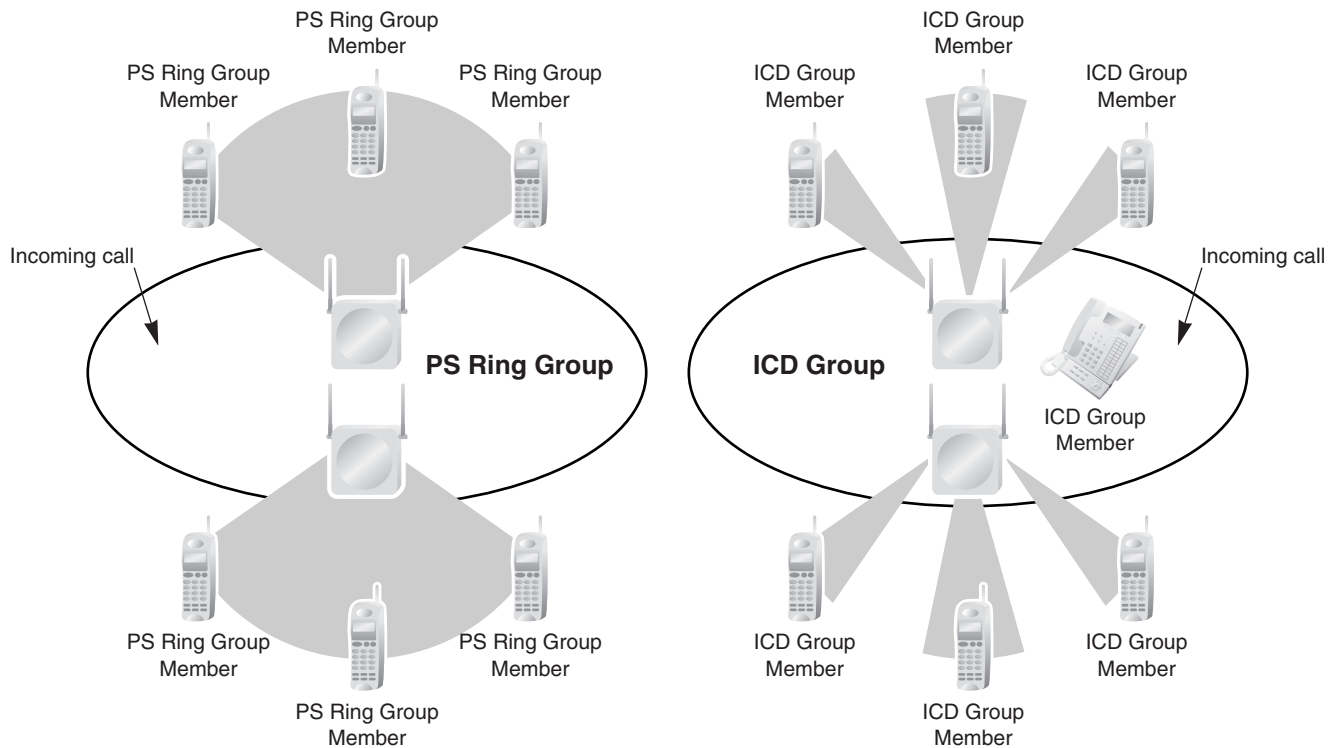

Explanation:

The PS ring group has six members which are in range of two different CSs. When a call arrives, each CS uses one channel to ring all member PSs within its range.

The ICD group has one proprietary telephone (PT) member, as well as six PS members which are in range of two different CSs. When a call arrives, each CS uses all three of its channels to ring each of the member PSs within its range.

Conditions

- A maximum of 32 PS ring groups can be programmed.
- Each member of a PS ring group must be a PS, but each member does not need to be in range of the same CS. When a call is directed to a PS ring group, all CSs connected to the PBX will try to ring members of the group.
- PS ring groups do not have Log-in or Log-out features. There is no way for a PS to log-in to or log-out from a PS ring group.
- A PS ring group may be assigned as a member of an ICD group, but the PS ring group cannot log-in to or log-out from an ICD group. The PS ring group (and therefore its members) will always be logged-in.
- When a PS is assigned to a PS ring group, the following settings are used if it receives a call directly, but are disregarded when it receives a group call:
 - a) Delayed Ringing (All PSs will ring simultaneously.)
 - b) The incoming call display preference assigned to the PS through system programming.
 - c) Features set on the PS, such as Call Forwarding (FWD). Note, however, that if a PS user has set Do Not Disturb (DND), that PS will not ring for group calls either.
- When a call is directed to a PS ring group, the PBX will try to ring the group's members regardless of whether or not they are already on another call. If all members of a PS ring group are busy when the group is called, their PSs will not ring but the caller will hear a ringback tone.

- A PS ring group will only ring one call at a time on its member PSs. If a PS ring group is ringing one call when another call is directed to the group, the group will appear busy to the caller. If a call is directed to a specific PS within the group in this situation and the PS is available to answer calls, the PS will ring as usual.
- Although each CS has three channels (i.e., can handle three conversations at once), the PBX will ring calls for only two PS ring groups at a time. In other words, if two calls directed to two different PS ring groups are ringing, no other PS ring group calls will ring until one of the other ringing calls is answered. This leaves one CS channel available for other calls.
- If a PS in a PS ring group has set the DND feature for CO line calls, the PS will not ring for CO line calls as well as intercom calls directed to the group.
- **Compatible PS**
A Panasonic KX-TD7680 and KX-TD7690 can be assigned to PS ring groups.

Feature References

1.2.2 Incoming Call Distribution (ICD) Group Features

1.3.1.3 Do Not Disturb (DND)

1.22.3 Wireless XDP Parallel Mode


Description

A portable station (PS) can be used in parallel with a wired telephone, i.e., a digital proprietary telephone (DPT), analog proprietary telephone (APT), or single line telephone (SLT), allowing an extension user to make or receive calls with either the wired telephone or the PS. The PS will use the same extension number as the wired telephone, and many of the wired telephone's extension settings (Call Forwarding [FWD], Class of Service [COS], etc.) are also used by the PS.

This mode is similar to XDP Parallel mode used to pair DPTs with SLTs. (→ 2.1.1 Extension Port Configuration)

In order to use a PS in Wireless XDP Parallel mode, the mode must be turned on using the PS.

[Example of Wireless XDP Parallel Mode, XDP Parallel Mode]

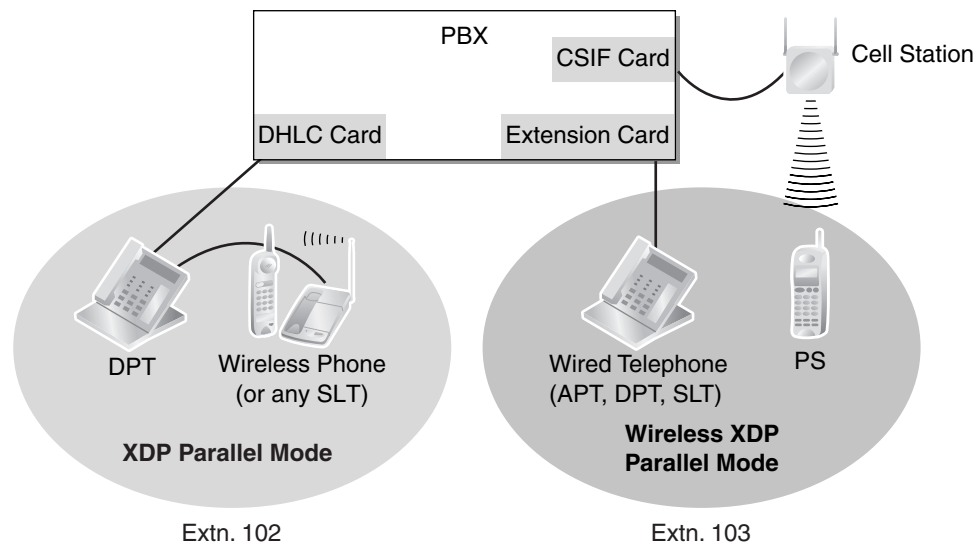

Conditions

- Whether or not a PS is allowed to pair itself with a wired telephone is determined by the COS assigned to the extension number of the wired telephone. (→ Wireless XDP Parallel Mode for Paired Telephone [515])
- Wireless XDP Parallel mode can be turned on or off using the PS only.
- To switch between the wired telephone and the PS during a conversation, simply go off-hook with the other telephone. Alternatively, to seize a separate line, use another method, such as pressing a CO or INTERCOM button.
In addition, going off-hook with the other telephone seizes a separate line when the extension is:
 - a) Engaged in a conference call. (→ 1.13.1 Conference Features)
 - b) Screening a call using Live Call Screening (LCS) or when recording a conversation using Two-way Record. (→ 1.21.2 Voice Mail DPT (Digital) Integration)
 - c) Receiving an Off-hook Call Announcement (OHCA). (→ 1.7.4.3 Off-hook Call Announcement (OHCA))
 - d) Being monitored by another extension. (→ 1.7.3 Call Monitor)
 - e) When the extension has a call on consultation hold. (→ 1.12.5 Consultation Hold)
- When a PS in Wireless XDP Parallel mode is on a call, other extension users cannot perform the following features when they call this extension:
 - Executive Busy Override
 - Whisper OHCA (→ 1.7.4.4 Whisper OHCA)
- When a PS is paired with a wired telephone, most of the extension settings assigned to the wired telephone (extension number, extension name, etc.) will be used by the PS, and the PS will use its own extension settings once again when Wireless XDP Parallel mode is canceled. Note, however, that the following extension settings of the wired telephone are copied to the extension settings of the PS when Wireless XDP Parallel mode is activated, and will remain in effect for the PS after the mode is canceled.
 - Call Waiting Setting (→ 1.1.3.3 Call Waiting)
 - FWD/Do Not Disturb (DND) Setting (→ 1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND))
 - Call Pickup Deny Setting (→ 1.4.1.3 Call Pickup)
 - Executive Busy Override Deny Setting
 - Itemized Billing Code for Automatic Route Selection (ARS) (→ 1.9.1 Automatic Route Selection (ARS))
 - Calling Line Identification Presentation (CLIP) Number (→ CLIP Number [606])
 - CLIP Number Selection
 - Calling Line Identification Restriction (CLIR) Setting
 - Connected Line Identification Restriction (COLR) Setting
 - Extension Personal Identification Number (PIN) (→ Extension Personal Identification Number (PIN) [005]) (→ 1.25.1 Extension Personal Identification Number (PIN))
 - COS Programming (→ Class of Service [602]) (→ 2.2.1 Class of Service (COS))
 - Extension Group (→ Extension Group [603]) (→ 2.2.2 Group)
 - Transfer Recall Destination for Call Transfer and Call Park
- The PS will retain its original settings for the following items even when in Wireless XDP Parallel mode. These settings can be set on the wired telephone and PS independently, and the settings can be different.
 - Ring Tone Pattern Table Selection (→ 1.1.3.2 Ring Tone Pattern Selection)
 - Preferred Line Assignment—Incoming (→ 1.4.1.2 Line Preference—Incoming)
 - Preferred Line Assignment—Outgoing (→ 1.5.5.2 Line Preference—Outgoing)
 - Hot Line Setting (→ 1.6.1.6 Hot Line)

- Display Language (→ 1.18.4 Display Information)
- ISDN Bearer Mode (→ 1.19.1.1 Integrated Services Digital Network (ISDN)—OVERVIEW)
- Flexible Button Assignment (→ 1.18.2 Flexible Buttons)
- Transfer Recall Destination for Call Transfer and Call Park (The setting assigned to the wired telephone will first be copied to the PS's extension settings, then can be changed for the PS if necessary.)

If an extension number is required when changing any PS settings while in Wireless XDP Parallel mode, use the original extension number assigned to the PS, not the extension number of the paired (wired) telephone.

- If the Extension Feature Clear is performed, the corresponding extension data for both the wired telephone and the PS will be cleared. (→ 1.25.2 Extension Feature Clear)
- When a call arrives, both the wired telephone and the PS will ring. However, when one of the following settings is made, only the telephone which was used to make the setting will ring.
 - Automatic Callback Busy
 - Transfer Recall
 - Hold Recall (→ 1.12.1 Call Hold)
 - Call Park Recall

Feature References

- 1.7.1 Automatic Callback Busy (Camp-on)
- 1.7.2 Executive Busy Override
- 1.11.1 Call Transfer
- 1.12.2 Call Park
- 1.19.1.2 Calling Line Identification Presentation (CLIP)

Operation References

- 1.7.11 Wireless XDP Parallel Mode

1.22.4 PS Directory

Description

A portable station (PS) user can make a call or access PBX features using information stored in the PS and PBX.

Refer to the Operating Instructions supplied with your PS for available directories and usage.

Directory Type	Description	Programming
PS Dialing Directory	A list of names and telephone numbers. Used to make a call to one of the stored parties.	Stored in the PS by the PS user.
Quick Dialing	A list of frequently dialed feature numbers as well as names and telephone numbers. Used to quickly access one of the stored features, or quickly make a call to one of the stored parties.	Stored in the PS by the PS user.

Directory Type	Description	Programming
System Speed Dialing Directory	A system-wide list of names and telephone numbers. Used to make a call to one of the stored parties.	Stored in the PBX. (→ System Speed Dialing Number [001], → System Speed Dialing Name [002])
PBX Extension Dialing Directory	A system-wide list of extension names. Used to make a call to one of the stored extensions.	Stored in the PBX. (→ Extension Name [004])

1.22.5 PS Feature Buttons

Description

Although a portable station (PS) does not feature as many buttons as a proprietary telephone (PT), a PS can be customized to give a PS user access to PBX features, just as the flexible buttons on a PT can be customized. (→ 1.18.2 Flexible Buttons)

1.23 Administrative Information Features

1.23.1 Station Message Detail Recording (SMDR)

Description

Automatically logs detailed information for each extension.

1. SMDR Output Port

The Serial Interface (RS-232C) port can be used to output Station Message Detail Recording (SMDR) data to a PC, printer, etc.

2. SMDR Output Data

The following data can be recorded and sent to the SMDR output port:

- a) CO line call information (incoming/outgoing)
- b) Intercom call information (outgoing)
- c) Log-in/Log-out information
- d) PBX error log (→ 2.4.3 Local Alarm Information)
- e) Hospitality feature information (→ 1.24.1 Hospitality Features—SUMMARY)
- f) Printing Message information (→ 1.23.2 Printing Message)

Memory for SMDR: A specified number of records (data) can be remembered by the PBX. When memory is full, the oldest data is overwritten by new data.

3. SMDR Format and Contents

The following three types of output format can be selected through system programming:

Pattern A: 80-column text without call charge information

Date (8 digits)	Time (7)	Ext (4)	CO (2)	Dial Number (25)	Ring (4)	Duration (8)	ACC Code (10)	CD (3)
01/02/02	10:03AM	1200	01	<I>12345678901234567890	5'15	00:00'00		NA
01/02/02	10:07AM	1200	01	<I>	0'05	00:01'05	9876543210	
01/02/02	10:15AM	1200	01	1234567890123456		00:01'05	9876543210	TR
01/02/02	10:30AM	*123	01	1234567890123456		00:01'05	9876543210	
01/02/02	01:07PM	1234	01	<I>ABC COMPANY12345678	0'05	00:01'05	9876543210	
01/02/02	01:07PM	1234	01	<D>CDE9876<I>Q COMPANY	0'05	00:01'05	9876543210	
01/02/02	01:07PM	1234	01	ABC COMPANY12345678		00:01'05		
01/02/02	01:07PM	1234	01	123.....		00:01'05		
01/02/02	01:07PM	1234	01	123456XX		00:12'05	98765	
01/02/02	08:33AM	1234		In the office				
01/02/02	01:07PM	1234		LOG IN				
01/02/02	03:35PM	1234		LOG OUT				
01/02/02	03:45PM	1234		EXT1235		00:03'05		
01/02/02	03:50PM	1234		Check in				
01/02/02	03:55PM	1234		Check out				
01/02/02	04:00PM	1234		Timed Reminder/Start				
01/02/02	04:01PM	1234		Timed Reminder/No Answer				
01/02/02	04:01PM	1234		Timed Reminder/Answer				
01/02/02	04:05PM	1234		<I>S003				RC
⋮	⋮	⋮	⋮	⋮	⋮	⋮	⋮	⋮
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)

Pattern B: 80-column text with call charge information

Date (8 digits)	Time (7)	Ext (4)	CO (2)	Dial Number (20)	Duration (8)	Cost (8+2)	ACC Code (10)	CD (3)
01/02/02	10:03AM	1210	01	<I>				NA
01/02/02	10:07AM	2005	01	12345678901234567890	00:00'05	00560.00	EU 9876543210	
⋮	⋮	⋮	⋮	⋮	⋮	⋮	⋮	⋮
(1)	(2)	(3)	(4)	(5)	(7)	(10)	(8)	(9)

Pattern C: 120-column text

Date (8 digits)	Time (7)	Ext (4)	CO (4)	Dial Number (50)	Ring (4)	Duration (8)	Cost (8+3)	ACC Code (10)	CD (3)
01/02/02	10:03AM	1230	0001	123456789012345678901234567890		00:00'05	00560.00	EUR 9876543210	TR
01/02/02	10:07AM	1230	0001	<I>ABC COMPANY123456789012345	0'05	00:00'05		9876543210	TR
⋮	⋮	⋮	⋮	⋮	⋮	⋮	⋮	⋮	⋮
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(10)	(8)	(9)

[Explanation]

The following table explains the types of data logged by SMDR. Each description below refers to data indicated above by the numbers in parentheses.

Number in the Pattern	Data	Description
(1)	Date	Shows the date of the call.
(2)	Time	Shows the end time of a call as hour/minute/AM or PM.
(3)	Ext (Extension)	Shows the extension number, floating extension number, etc., which was engaged in the call. Also shows the following codes: Dxxx : Outgoing CO line call from a doorphone (xxx=doorphone number) (→ 1.15.1 Doorphone Call) Txxx : Outgoing CO line call made via TIE line service (xxx=CO line group number) *xxx : Verified call (xxx=verified code) (→ 1.8.5 Verified Code Entry)
(4)	CO	Shows the CO line number used for the call. For patterns A and B, "00" will be shown for CO line numbers over hundred.

Number in the Pattern	Data	Description
(5)	Dial Number	<p>[CO Line Call] Outgoing CO Line Call Shows the dialed telephone number. Digits shown are as follows: 0 through 9, *, # P: Pause F: External Feature Access (EFA) signal =: Host PBX Access code (→ 1.5.4.6 Host PBX Access Code (Access Code to the Telephone Company from a Host PBX)) . (dot): Secret dialing -: Transferred call If the transfer destination extension enters additional digits, those digits will be added after "-".</p> <p>Incoming CO Line Call Shows <I> + the caller's identification name/number. It is also possible to show the DID call information. In this case, <D> + DID name/number is added before <I> .</p> <p>[Outgoing Intercom Call] Shows the dialed extension number followed by "EXT".</p> <p>[Log-in/Log-out] Shows the Log-in or Log-out status.</p> <p>[Check-in/Check-out] Shows the check-in or check-out status. (→1.24.2 Room Status Control)</p> <p>[Timed Reminder] Shows the status of a timed reminder, either "Start", "No Answer", or "Answer". (→ 1.25.4 Timed Reminder)</p> <p>[Printing Message] Shows the selected message. (→ 1.23.2 Printing Message)</p> <p>[Sensor Call] Shows calls from an external sensor as follows: <I> S + sensor number. (→ 1.15.7 External Sensor)</p>
(6)	Ring	Shows the ring duration before the call was answered in minutes/seconds.
(7)	Duration	Shows the duration of the CO line call in hours/minutes/seconds.
(8)	Acc Code (Account Code)	Shows the account code appended to the call. (→ 1.5.4.3 Account Code Entry)

Number in the Pattern	Data	Description
(9)	CD (Condition Code)	Shows other call information using the following codes: TR: Transfer FW: Call Forwarding (FWD) to CO line D0: Call using Direct Inward System Access (DISA) or TIE line service RM: Remote maintenance (modem) (→ 2.3.1 PC Programming) NA: Not answered call RC: Received call AN: Answered call VR: Received call with Call Waiting Caller ID (Visual Caller ID) VA: Answered call with Call Waiting Caller ID (Visual Caller ID)
(10)	Cost	Shows the call charge. This is not available if your telephone company does not provide a call charge reporting service.

The following data can be controlled through system programming to adjust whether (or how) they are printed or displayed by SMDR.

[Programmable Items]

Item	Description
Outgoing CO line call	Controls whether outgoing CO line calls are shown. This setting is common throughout the PBX (→ SMDR Outgoing Call Printing [804]). Class of Service (COS) programming is also required.
Incoming CO line call	Controls whether incoming CO line calls are shown (→ SMDR Incoming Call Printing [805]).
Outgoing intercom call	Controls whether outgoing intercom calls are logged.
Log-in/Log-out status	Controls whether the Log-in/Log-out status of extensions is logged.
ARS dial	Controls whether the user-dialed number or the ARS-modified number is shown. A Host PBX Access code ("=" followed by the access code) can be shown (as supplementary information) only when the modified number is selected in this setting. (→ 1.9.1 Automatic Route Selection (ARS))
Caller's identification	Controls whether a caller's telephone number, name, number and name, or nothing is shown. If "none" is selected, <I> will not be shown.
DID number	Controls whether DID numbers, names, numbers and names, or nothing is shown. If "none" is selected, <D> will not be shown.
Secret dialing	Controls the display of secret dialing, when ARS dial, above, is set to show ARS-modified numbers. If enabled, numbers dialed secretly will be shown as dots. If ARS dial is set to show user-dialed numbers, secretly dialed numbers are always shown as dots in SMDR, regardless of this setting.
Date order	Controls the date format. (MM-DD-YY, DD-MM-YY, YY-MM-DD, or YY-DD-MM)
Received call	Controls whether the time of receiving an incoming CO line call is shown.


Item	Description
Answered call	Controls whether the time of answering an incoming CO line call is shown.
Room status	Controls whether room status changes are shown.
Timed Reminder call	Controls whether Timed Reminder calls are shown. (→ 1.25.4 Timed Reminder)
Printing Message	Specifies the messages that can be selected from an extension. (→ 1.23.2 Printing Message)
Time format	Controls whether time is displayed in 12-hour or 24-hour format.

Conditions

- **SMDR Format**
The following SMDR format parameters can be set through system programming in order to match the paper size being used by the printer:
 - Page Length:** determines the number of lines per page (→ SMDR Page Length [802]).
 - Skip Perforation:** determines the number of lines to be skipped at the end of every page (→ SMDR Skip Perforation [803]).

The page length should be at least four lines longer than the skip perforation length.

Explanation:

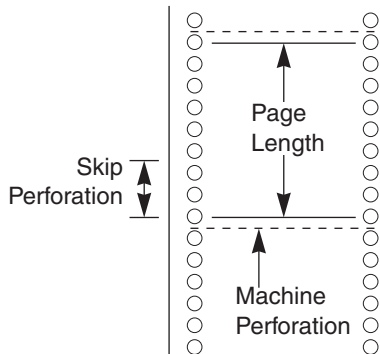

- SMDR data is not deleted even if the PBX is reset.
- If the PBX is reset during a conversation, the call will not be logged by SMDR.
- The following calls are regarded as two separated calls in the SMDR:
 - Calls before and after the flash/recall/EFA signal is manually sent during a conversation
 - CO-to-CO line calls by Call Transfer, FWD or DISA (each is logged as both an "incoming call" and an "outgoing call")
- The PBX waits for a preprogrammed length of time (→ Call Duration Count Starting Time for LCOT [208]) after the end of dialing before starting the SMDR timer for outgoing CO line calls. When the PBX has sent out all dialed digits to the telephone company and this timer expires, the PBX begins measuring the duration of the call. A display proprietary telephone (PT) shows the elapsed time of the call. The starting time and the total duration of the call are logged by SMDR.
- **Serial Interface (RS-232C) Parameters**
The following communication parameters can be assigned for the Serial Interface (RS-232C port) (→ RS-232C Parameter—New Line Code [800], → RS-232C Parameter—Baud Rate [800], → RS-232C

Parameter—Word Length [800], → RS-232C Parameter—Parity Bit [800], → RS-232C Parameter—Stop Bit Length [800]).

- a) **New Line Code:** Select the code appropriate for the PC or printer. If the PC or printer automatically feeds lines with carriage return, select "CR". If not, select "CR+LF".
- b) **Baud Rate:** Baud rate indicates the transmission speed of data from the PBX to the PC or printer.
- c) **Word Length:** Word length indicates how many bits compose each character.
- d) **Parity Bit:** Parity bit indicates what type of parity is used to detect errors in the string of bits composing a character. Make an appropriate selection depending on the requirements of the PC or printer.
- e) **Stop Bit Length:** Stop bit indicates the end of a bit string which composes a character. Select an appropriate value depending on the requirements of the PC or printer.

Connection References

2.10.1 Connection of Peripherals

Feature References

1.1.1.3 Direct Inward Dialing (DID)
 1.2.2.6 Log-in/Log-out
 1.11.1 Call Transfer
 1.15.6 Direct Inward System Access (DISA)
 1.27.1 TIE Line Service

1.23.2 Printing Message

Description

An extension user can select a message to be output on SMDR. Up to eight messages can be preprogrammed in the Printing Message table, and are available to all extensions connected to the PBX. A message can contain the "%" symbol, which requires a number to be entered in its place when the message is selected at an extension.

Depending on the content of the preprogrammed messages, this feature can be used to record a variety of information, which can be output on SMDR to, for example, a connected PC.

[Example]

If message 1 is preprogrammed as "Started work", and message 2 as "Finished work", employees can sign in by selecting message 1 when starting work, and sign out by selecting message 2 when finishing. A connected PC can then be used to generate employee work records.

Conditions

- Up to seven "%s" can be stored for each message.

Feature References

1.23.1 Station Message Detail Recording (SMDR)

Operation References

2.1.6 Hospitality Features

1.24 Hospitality Features

1.24.1 Hospitality Features—SUMMARY

Description

This PBX has several features that support its use in a hotel-type environment, where extensions correspond to guest rooms.

Feature	Description	Details in
Room Status Control	An extension designated as the hotel operator can set the check-in status of rooms remotely.	• 1.24.2 Room Status Control
Remote Wake-up Call	An extension designated as the hotel operator can set a timed reminder for a room remotely.	• 1.25.4 Timed Reminder
SMDR for External Hotel Application	Hospitality feature data, including check-in, check-out, and timed reminder times, can be output to SMDR for use in a PC-based hotel application.	• 1.23.1 Station Message Detail Recording (SMDR)

1.24.2 Room Status Control

Description

A PT with a 6-line display designated as the hotel operator extension can be used to view and change the check-in and check-out status of guest rooms associated with extensions.

Any wired extension can be used as a room extension without special programming.

Flexible buttons on the hotel operator's extension can be set as Room Status Control buttons. Two buttons are available:

- **Check-in**

Switches the status of selected extensions from Check-out to Check-in.

Remote Extension Lock is turned off, allowing calls to be made from the extension.

- **Check-out**


Switches the status of selected extensions from Check-in to Check-out.

Extension data, such as Timed Reminder or Last Number Redial data, is cleared, and Remote Extension Lock is turned on, preventing some calls. This can be useful to prevent the extension in the room from being used when no guest is checked in.

Pressing one of these buttons when the PT is idle switches to the applicable Room Status Control mode. When in Room Status Control mode, the relevant Room Status Control button's light flashes red. In addition, DSS buttons on the hotel operator's extension or a paired DSS Console show the room status of each extension as follows:

Light Pattern	Status
Off	Check-out
Red on	Check-in

[Example Use: Check-in Mode]

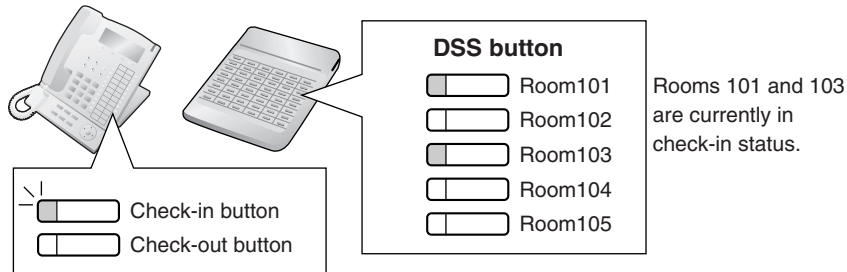

Conditions

- Only one of each type of Room Status Control button can be assigned.
- Extensions associated with rooms must be one of the following types:
PT (including IP-PT), SLT, T1-OPX
PSs cannot be checked in and out as room extensions.
- When using extensions to represent guest rooms, it is recommended to set the extension number the same as the room number, for convenience.
- Check-in and check-out information is recorded by SMDR.
- When in Room Status Control mode, the hotel operator's extension can only perform operations related to that room status (e.g. Check-in). All other operations, including pressing other Room Status Control buttons, will be ignored. In addition, the lights of fixed and flexible buttons do not show their normal display pattern. To perform other operations, first exit the current Room Status Control mode.
- When in Room Status Control mode, the hotel operator's extension is treated as a busy extension, similar to when performing PT programming. Callers to that extension will hear a busy tone.

Connection References

2.3.2 MEC Card

Feature References

1.6.1.3 Last Number Redial

1.8.2 Extension Lock

1.23.1 Station Message Detail Recording (SMDR)

1.25.4 Timed Reminder

Operation References

2.1.6 Hospitality Features

1.25 Extension Controlling Features

1.25.1 Extension Personal Identification Number (PIN)

Description

Each extension can be assigned a personal identification number (PIN) through system programming (→ Extension Personal Identification Number (PIN) [005]) or personal programming (Extension PIN [Personal Identification Number]). This PIN is used to set features or access the extension remotely.

The following features require a valid PIN:

- a) Live Call Screening (LCS)* (→ 1.21.2 Voice Mail DPT (Digital) Integration)
- b) Incoming and Outgoing Call Log Display Lock (→ 1.16.2 Incoming Call Log), Personal Speed Dialing Display Lock (→ 1.6.1.4 Speed Dialing—Personal/System)
- c) Walking Extension (→ 1.25.3 Walking Extension)
- d) Extension Lock (→ 1.8.2 Extension Lock)
- e) Remote Extension Control (→ 1.25.5 Remote Extension Control by User) and Walking COS (→ 1.8.4 Walking COS)
- f) Remote Extension Control and Walking COS using Direct Inward System Access (DISA) (→ 1.15.6 Direct Inward System Access (DISA))

*: If an extension user has assigned an extension PIN, the PIN is required when activating this feature.

Conditions

WARNING

When a third party discovers the personal identification number (PIN) (verified code PIN/extension PIN) of the PBX, there will be a risk that they will make fraudulent phone calls using the telephone line, and the cost will be charged to your own account. In order to avoid this problem, we strongly recommend the following points:

- a) **Carefully maintain the secrecy of the PIN.**
 - b) **Specify a complicated PIN as long and random as you can make it.**
 - c) **Change the PIN frequently.**
- **Extension PIN Lock**
If the extension PIN is entered incorrectly three times, the line will be disconnected. If an incorrect PIN is entered a preprogrammed number of times, the PIN will be locked. Only an extension assigned as a manager can unlock a PIN, after which it will be reset.
This feature is also known as Station Password Lock.
 - **Remote Extension PIN Clear**
If an extension user forgets his or her PIN, a manager can clear (reset) the PIN, and the extension user can assign a new PIN.
 - **Extension PIN Display**
It is possible to select whether to show the extension PIN on the display through system programming. By default, it is shown as dots.

Operation References

3.1.2 Settings on the Programming Mode

1.25.2 Extension Feature Clear

Description

Extension users can clear the following features set on their own telephone all at once:

Features	After Setting
Absent Message	Off
BGM	Off
FWD*/DND*	Off
Call Pickup Deny	Allow
Call Waiting*	Enable (Call Waiting tone)
Data Line Security	Off
Executive Busy Override Deny	Allow
Log-in/Log-out	Log-in
Message Waiting	All messages left by other extensions will be cleared.
Paging Deny	Allow
Paralleled Telephone	Paired SLT will ring.
Hot Line*	Off
Timed Reminder	Cleared

* These features can be programmed to not be canceled by Extension Feature Clear.

This feature is also known as Station Program Clear.

Conditions

- Extension Lock (→ 1.8.2 Extension Lock) and the extension personal identification number (PIN) (→ 1.25.1 Extension Personal Identification Number (PIN)) will not be cleared by this feature.
- **If dial tone 2 is heard after Extension Feature Clear:**
After performing Extension Feature Clear, Call Waiting will be enabled if "Extension Clear: Call waiting" is set to "Clear" through system programming. In this case, dial tone 2 will be heard when going off-hook. (→ 1.26.1 Dial Tone)

Operation References

1.7.12 Extension Feature Clear

1.25.3 Walking Extension

Description

It is possible for an extension user to trade extension settings with another extension.

When Walking Extension is executed, all extension settings (extension number, Class of Service (COS), One-touch Dialing memory, etc.) of the "old" extension are exchanged with the "new" extension.

This feature is useful when an extension user moves desks, or when an extension user has no permanent desk.

This feature is also known as Walking Station.

Conditions

- This feature is available by switching the telephone between proprietary telephone (PT) and PT, single line telephone (SLT) and SLT, PT and SLT. Moving across the tenants is also possible.
- This feature is not available when using an IP-PT.
- Incoming calls to your extension will reach you at your new location.
- An extension personal identification number (PIN) is required to use this feature. (→ 1.25.1 Extension Personal Identification Number (PIN))
- If a DSS Console is connected to a PT and the DSS Console is continuously used with the PT after the Walking Extension has been performed, the new extension number of the PT must be assigned as the paired extension through system programming (→ Console Paired Telephone [007]).

Operation References

1.10.1 Walking Extension

1.25.4 Timed Reminder

Description

An extension can be preset to ring at a certain time, to act as a wake-up call or reminder. This feature can be programmed to activate only once, or daily. If the user answers the alarm call, a special dial tone or a prerecorded voice message will be heard.

Timed reminders can be set in one of two ways:

- By the extension user, from his or her own extension.
- Remotely, by the hotel operator (Remote Wake-up Call)

Conditions

- Be sure that the PBX clock is set to the correct time.
- Only one timed reminder can be set for an extension at a time. Setting a new reminder clears the previous reminder. If both the extension user and the hotel operator set a timed reminder for the same extension, the timed reminder that was set most recently is effective.
- **Programmable Time**
The Alarm Ringing time, the number of alarm repeat times, and Interval time are programmable through system programming.

- **To use the voice message feature:**

An MSG card is required and a message must be recorded. An extension assigned as a manager can record messages. (→ 1.15.5 Outgoing Message (OGM)) A different message can be assigned for each time mode (→ 2.2.4 Time Service).

Connection References

2.6.5 MSG4 Card

Operation References

1.7.1 Timed Reminder

2.1.6 Hospitality Features

1.25.5 Remote Extension Control by User

Description

Extension users can remotely change the feature settings, such as Call Forwarding (FWD), and time service mode for their own extensions from inside or outside the PBX using Direct Inward System Access (DISA) (→ 1.15.6 Direct Inward System Access (DISA)). This feature can be used only on the extensions which, through Class of Service (COS) programming are allowed to be controlled remotely.

The following feature settings can be changed:

- a) FWD/Do Not Disturb (DND) (→ 1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND))
- b) Log-in/Log-out (→ 1.2.2.6 Log-in/Log-out)
- c) Absent Message (→ 1.17.2 Absent Message)
- d) Extension Lock (→ 1.8.2 Extension Lock)
- e) Time Service—Changing the Time Mode (day/lunch/break/night) (→ 2.2.4 Time Service)

This feature is also known as Remote Station Control by User.

Conditions

- **Extension PIN**

An extension personal identification number (PIN) (→ Extension Personal Identification Number (PIN) [005]) is required to use this feature. (→ 1.25.1 Extension Personal Identification Number (PIN)) If the PIN is entered incorrectly three times, the line will be disconnected.

- Internal Call Block (→ 1.1.2.2 Internal Call Block) also determines which extensions can perform remote operations on which extensions, i.e., if extension 101 cannot call extension 201, then it cannot remotely operate extension 201 either.

Operation References

1.2.8 Remote Setting

1.26 Audible Tone Features

1.26.1 Dial Tone

Description

The following dial tones inform extension users about features activated on their extensions:
Each dial tone type has two frequencies, such as dial tone 1A and dial tone 1B.

Type	Description
Tone 1A/1B	A normal dial tone is heard when: a) No features listed for dial tones 2 through 4 has been set, or b) Automatic Route Selection (ARS) is used.
Tone 2A/2B	Heard when any one of the following features is set. <ul style="list-style-type: none"> • Absent Message • BGM • Call Forwarding (FWD) • Call Pickup Deny • Call Waiting • Do Not Disturb (DND) • Extension Lock • Executive Busy Override Deny • Hot Line • Timed Reminder
Tone 3A/3B	Heard while a called PS is being searched, or when any one of the following features is performed. <ul style="list-style-type: none"> • Account Code Entry • Consultation Hold • Answering a Timed Reminder call with no message
Tone 4A/4B	Heard when messages are waiting for the extension.

Conditions

- **Dial Tone Type A/B**
Through system programming, it is possible to select dial tone type A or B for dial tones 1 through 4. If "Type A" is selected, all dial tones 1 through 4 will become dial tone type A. The dial tone type for ARS feature can be selected separately. If "Type A" is selected for ARS, dial tone 1A will be heard. If "Type B" is selected, dial tone 1B will be heard.
- **Distinctive Dial tone**
Distinctive dial tone mode can be disabled. In this case, dial tone 1 will be heard.
- **Dial Tone Patterns**
All dial tone patterns have a default (→ 5.2.1 Tones/Ring Tones).
- Only dial tone 1 is sent to the extensions in a VM (DPT/DTMF) group. (→ 1.21.1 Voice Mail (VM) Group)

1.26.2 Confirmation Tone

Description

At the end of feature operations, the PBX confirms the success of the operation by sending a confirmation tone to extension users.

Type	Description
Tone 1	<p>a) Sent when the setting is accepted.</p> <p>b) Sent when a call is received in voice-calling mode (Alternate Receiving—Ring/Voice). The caller's voice will be heard after the tone.</p>
Tone 2	<p>a) Sent from an external paging device or an extension before being paged.</p> <p>b) Sent when a call is received while an extension is in Hands-free Answerback mode.</p>
Tone 3-1	<p>a) Sent before a conversation is established using the Paging feature.</p> <p>b) Sent to the caller when a conversation is established with an extension in one of the following modes:</p> <ul style="list-style-type: none"> • Hands-free Answerback mode • Voice-calling mode (Alternate Receiving—Ring/Voice)
Tone 3-2	<p>Sent before a conversation is established when accessing the following features by their feature numbers:</p> <ul style="list-style-type: none"> • Call Park Retrieve • Call Pickup • Hold Retrieve • Paging Answer • Trunk Answer From Any Station (TAFAS)
Tone 4-1	Sent when a call changes from a two-party call to a three-party call. (For example, Executive Busy Override, Conference, Privacy Release, Two-way Record.)
Tone 4-2	Sent when a call changes from a three-party call to a two-party call. (For example, Executive Busy Override, Conference, Privacy Release, Two-way Record.)
Tone 5	Sent when a call is placed on hold (including a consultation hold).

Conditions

- **Confirmation Tone Patterns**
All confirmation tone patterns have a default (→ 5.2.1 Tones/Ring Tones).
- It is possible to eliminate each tone.

1.27 Networking Features

1.27.1 TIE Line Service

1.27.1.1 TIE Line Service—OVERVIEW

Description

Two PBXs can be connected by a privately leased telephone line, and calls can be made between PBXs using this "TIE line". TIE lines provide a cost-effective way to route calls and communications, and are often used to connect corporate offices located in different cities.

When two or more PBXs are connected by TIE lines, they can create a "private network" which is independent of the public network (i.e., the telephone company and its lines). Calls can be handled between extensions of the PBXs without using the services of a telephone company, even though the PBXs may be installed in different locations.

TIE lines can also be used in conjunction with CO lines. This allows an outside caller to call one PBX and be connected to an extension in a different PBX, or allows an extension user to make a call to an outside party which is routed first through another PBX in the private network. Routing calls this way can be very cost-effective. For example, an employee in Los Angeles can make a call to a customer in New York by routing the call through the PBX in the company's New York office. In such a case the call will be billed to the New York office as a local call.

In order to make and receive calls using TIE lines, various tables must be programmed to instruct each PBX on how to direct and receive calls that are made using TIE line service.

1. Interface

A private network can be established using the following methods.

Method	Port (Channel) Type*	Available Services	Network Specification	Details In
T1 Line	TIE (E&M)	<ul style="list-style-type: none"> TIE Line Service 	Digital (64 kbps × 24 channels)	—
PRI Line	QSIG (Master or Slave)	<ul style="list-style-type: none"> TIE Line Service QSIG Services 	Digital (ISDN 23B+D)	<ul style="list-style-type: none"> 1.27.2 QSIG Network
VoIP	Not assignable	<ul style="list-style-type: none"> TIE Line Service QSIG Services IP data send/receive 	Internet Protocol (IP)	<ul style="list-style-type: none"> 1.27.3 Voice over Internet Protocol (VoIP) Network

* In order to establish a private network, port (channel) type must be assigned through system programming as shown.

The interfaces that can be used depend on the cards installed in the PBX.

2. Types of Calls That Can be Made Using TIE Lines

TIE Line Calls

Calls can be made between extensions of different PBXs connected by a TIE line. These PBXs may be connected to each other directly, or through another PBX. To make a TIE line call, an extension user

will either need to dial an extension number, or a PBX code in addition to an extension number, depending on the method used to identify different PBXs on the private network. (See, "4. Identifying PBXs and their Extensions", below.)

TIE Line with CO Line Calls

TIE line calls can be made to or from parties that are outside the private network. There are three ways in which TIE lines can connect with CO lines. First, outside callers can call one PBX and then be connected to an extension of another PBX (CO-to-TIE Line Calls). Secondly, an extension user at one PBX can make a CO line call by using a CO line connected to another PBX in the private network (TIE-to-CO Line Calls). Finally, an outside caller can call one PBX and then be connected to another outside party after the call is first routed through another PBX (CO-to-TIE-to-CO Line Calls).

3. Routing Calls via TIE Lines

Normally to make a telephone call, a person dials a number and the call is connected. What happens between the dialing of the number and the ringing on the other end is usually never considered, because telephone companies handle all the routing for us.


To make or receive calls using TIE lines however, the PBXs must be programmed so they will know how to handle those calls as they are received and sent. In situations where only two PBXs connected by one TIE line make up the private network, this programming is straightforward. In situations where multiple PBXs are connected by several TIE lines however, programming is more complex.

No matter what kind of private network you use, careful programming will allow PBX users to make calls easily and also route calls in a way that is most cost-effective or efficient for your company or organization.

[Examples of Private Networks]

Example Network 1

Two PBXs connected by one TIE line.

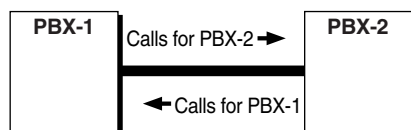


Example Network 2

Three PBXs connected by two TIE lines.


PBX-2 is connected to both TIE lines. This PBX links the other two PBXs, and passes calls from one PBX to the other.

PBX-2 must be programmed to send calls to PBX-1 via one TIE line, and calls to PBX-3 via another TIE line. This programming will also allow PBX-2 to receive and send calls made between PBX-1 and PBX-3.

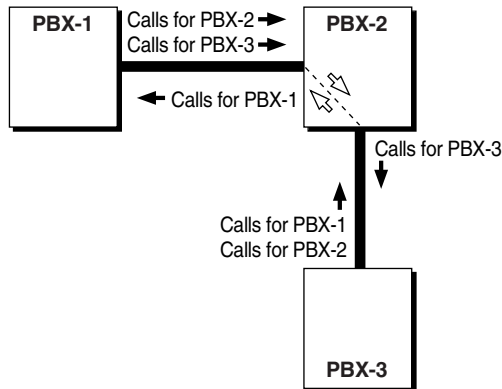**Example Network 3**

Three PBXs connected by three TIE lines.

Each PBX is connected to two TIE lines, and must be programmed to send calls to each PBX via the preferred TIE line, however, if the TIE line directly connecting two PBXs (PBX-1 and 2, for example) is busy, calls between these PBXs can be routed circularly through other PBXs (PBX-1 → PBX-3 → PBX-2).

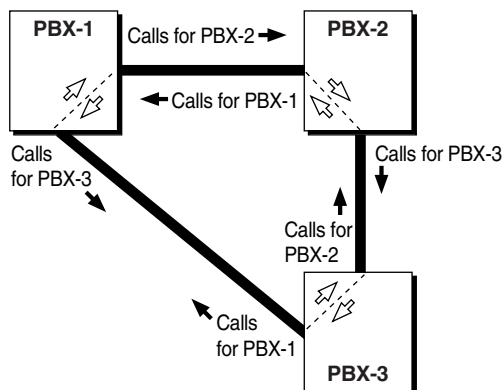


Example Network 4

Four PBXs connected by four TIE lines.

Each PBX is connected to two TIE lines, and must be programmed to send calls to each PBX via the preferred TIE line.

Calls between PBXs that are not directly connected must be routed through another PBX. Also, if the TIE line directly connecting two PBXs is busy, calls between these PBXs can be routed circularly through other PBXs. For example, a call from PBX-1 to PBX-4 can be routed as follows: PBX-1 → PBX-2 → PBX-3 → PBX-4.

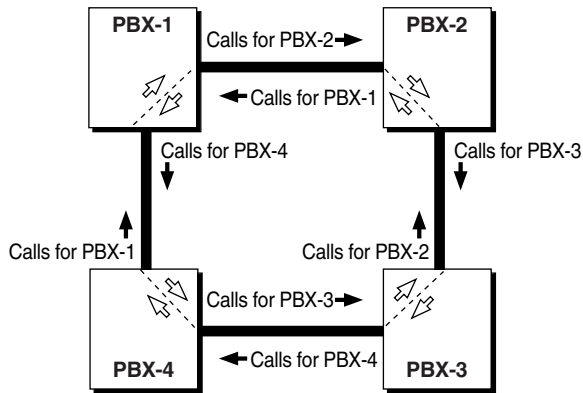


Example Network 5

Four PBXs connected to each other by four TIE lines.

Each PBX is connected to the public network via CO lines.

It is possible for any PBX extension to call an outside party by routing a call via TIE line to another PBX, then to the public network.

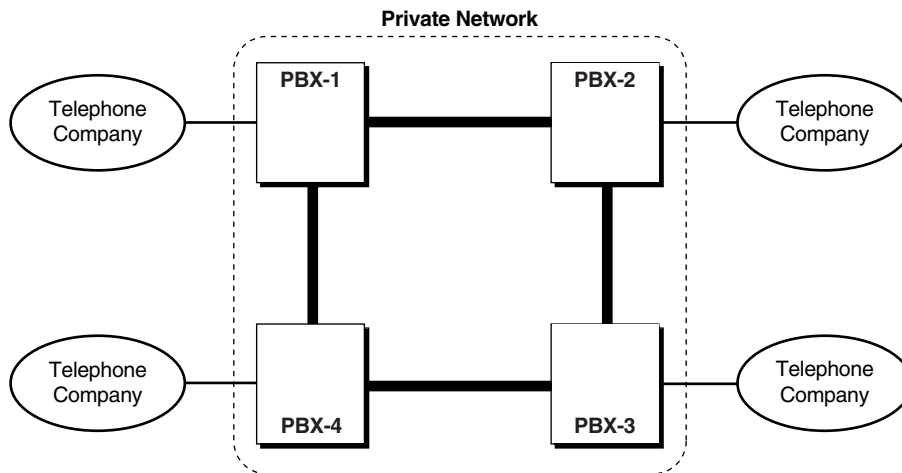

4. Identifying PBXs and their Extensions

When PBXs are connected to each other to form a private network, there must be some way to distinguish the PBXs from each other so that calls can be sent to the intended destination of the desired PBX. This can be done either by identifying each PBX specifically, or by making each extension number in the private network unique. Each PBX on a private network must be programmed to use the same method to identify itself, explained below.

a) PBX Code Method (Access with PBX Code)

PBXs can be distinguished from each other on a private network by assigning a PBX code to each one. These codes are used by the PBXs to determine how to route calls to other PBXs, and also let a PBX know when it receives a call that it should handle itself. If a call does not contain a PBX code, the call will not be handled correctly.

PBX codes also allow the same extension numbers to be used on different PBXs. (→ 1.27.1.2 PBX Code Method (Access with PBX Code))


b) Extension Number Method (Access without PBX Code)

PBXs can also be distinguished by the extension numbers they use. With this method, the extension number is all that is needed for a PBX to determine how to route calls to other PBXs; no PBX code is necessary.


While this method allows extensions in other PBXs to be called easily—there are fewer numbers to dial—the number of extension numbers which can be used throughout the private network will be limited. (→ 1.27.1.3 Extension Number Method (Access without PBX Code))

5. TIE Line Routing Flowcharts

[Making a Call via a TIE Line from an Extension]

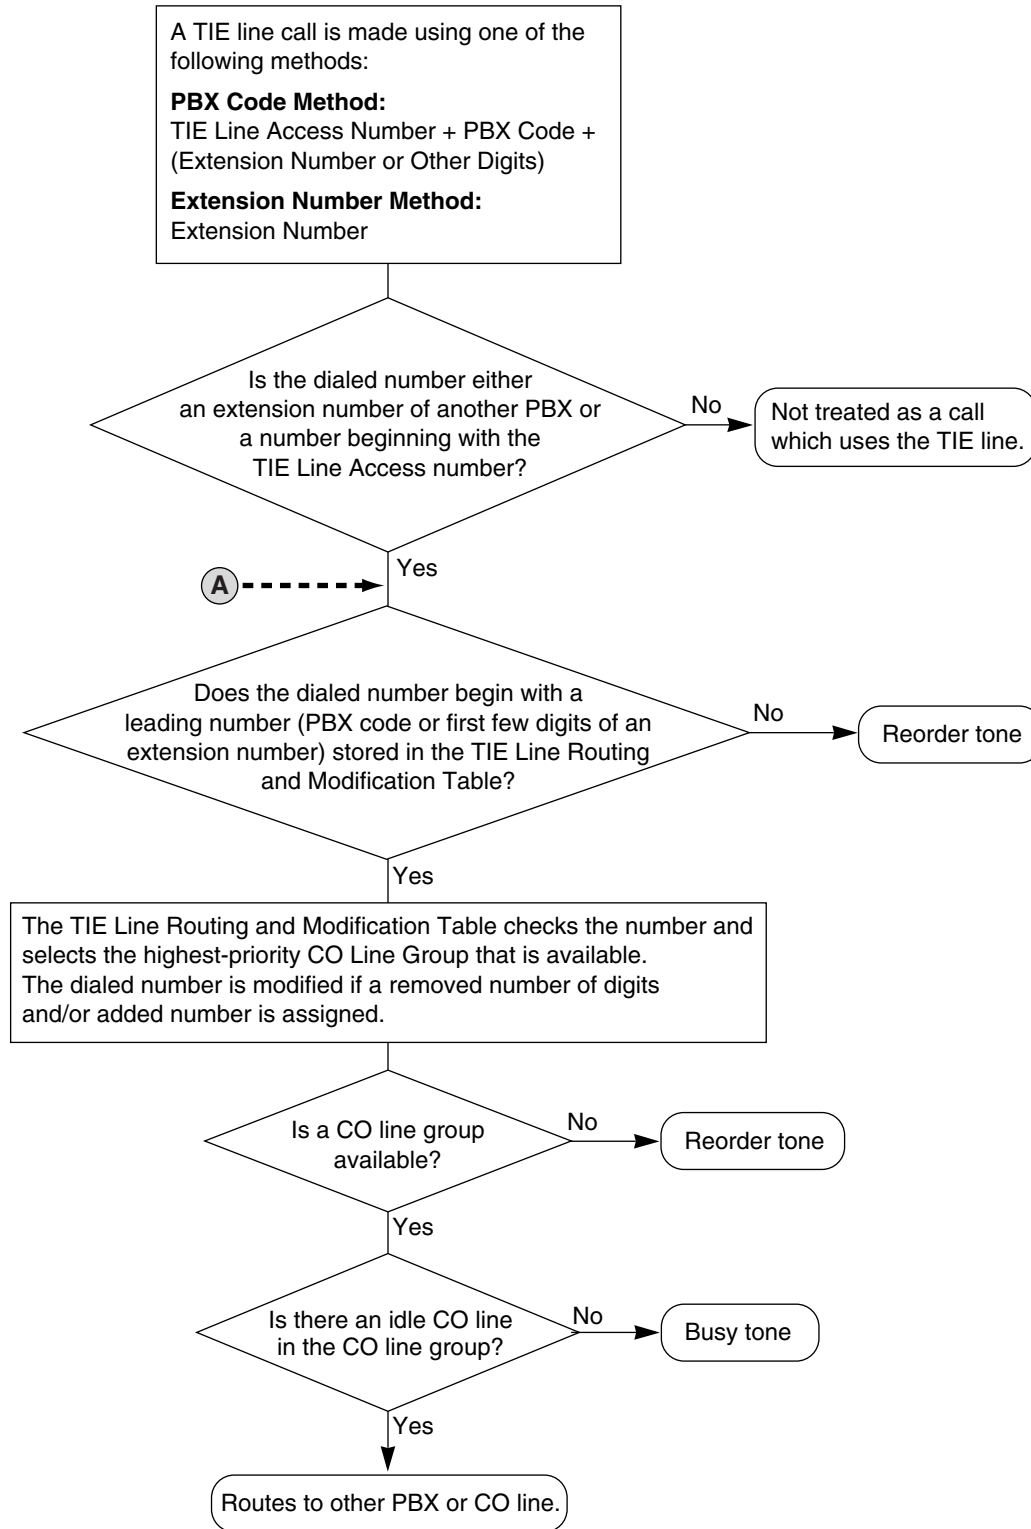

[Receiving a Call via a TIE Line]

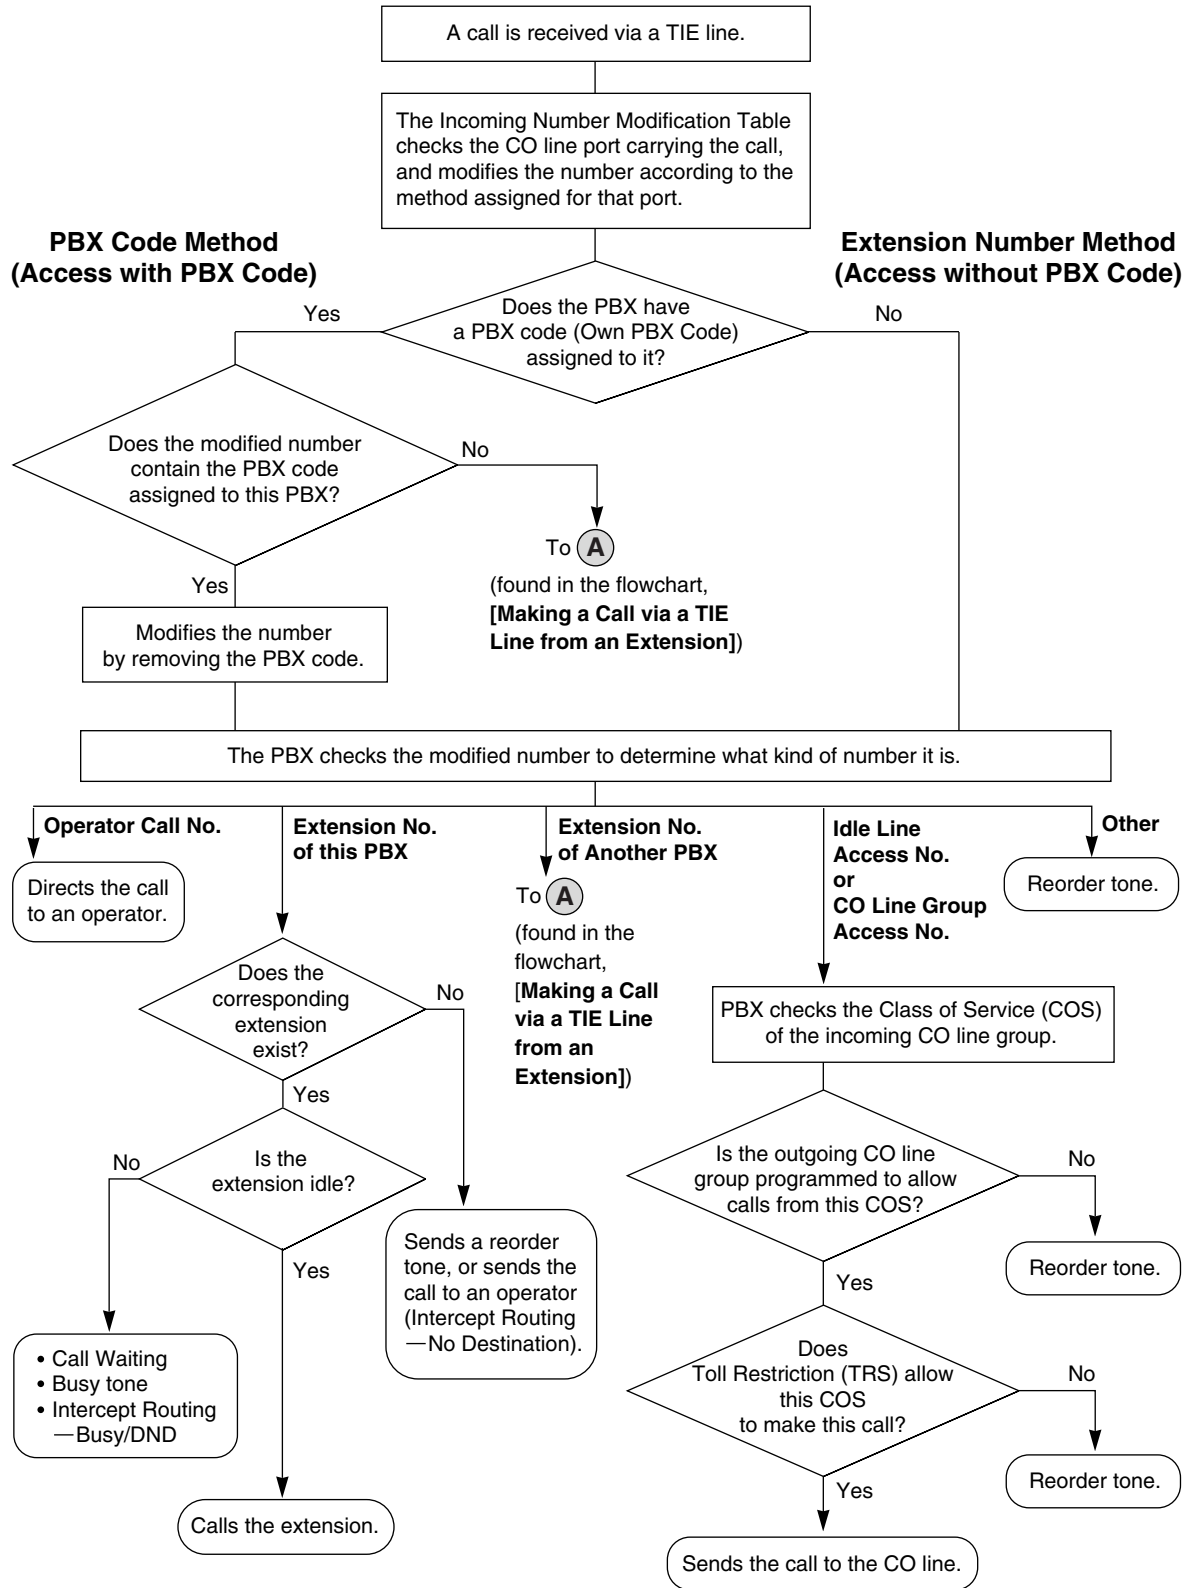

1.27.1.2 PBX Code Method (Access with PBX Code)

Description

PBXs on a private network can be distinguished from each other by assigning a PBX code to each one. When a PBX makes or receives a TIE line call that contains a PBX code, it can recognize right away if it should handle the call itself or pass it on to another PBX. If each PBX on a private network has a PBX code, the extension numbers used in one PBX can also be used again in another PBX.

If a PBX is assigned a PBX code, it will look for PBX codes when receiving calls on TIE lines; if a call does not contain a PBX code, it will not be handled correctly.

Using PBX codes to make or receive calls via a TIE line is called "PBX Code Method (Access with PBX Code)".

1. Programming for PBX Code Method (Access with PBX Code)

Each PBX in the private network will refer to some or all of following tables when making and receiving calls via TIE line using PBX Code Method (Access with PBX Code).

TIE Line Routing and Modification Table

This table is used when a PBX makes a call to another PBX, or passes a received call on to another PBX. It contains leading numbers as well as routing instructions for each leading number; it controls which calls are sent on which TIE lines.

Use this table to store the PBX codes of other PBXs on the network, the lines which can be used when sending calls to each PBX, and, if necessary, a method to modify dialed numbers before sending them down the TIE line.

When a PBX is about to send a number down a TIE line, it checks the number and finds the preprogrammed leading digits (PBX code) of that number in this table. It then checks the highest-priority (most preferred) CO line group assigned to that leading number. When it finds a line within the highest-priority CO line group that is available, it modifies the number as programmed in this table. This modification allows an identifying number or code to be attached to the beginning of calls made to certain PBXs, so that the receiving PBX will be able to handle the call properly. After modification, the number is sent down the line.

Incoming Number Modification Table

This table is referred to when a call is received on a TIE line.

When a PBX receives a call on a TIE line, it searches the Incoming Number Modification Table for instructions on how to modify the received telephone number depending on which CO line the call was received.

Next the PBX will look for its own PBX code at the beginning of the modified number and try to handle the call by itself, by sending the call to one of its own extensions, for example. If it does not find its own PBX code, it refers to the TIE line Routing and Modification Table in order to send the call down the TIE line.

Own PBX Code


This information is used to determine whether or not an incoming TIE line call is meant for the PBX receiving the call. If a PBX has been assigned a PBX code, it will look for its code at the beginning of all calls received via TIE line. If it finds its own code, it will handle that call by itself. If it does not find its code, it refers to the TIE Line Routing and Modification Table in order to pass the call to another PBX.

Note that PBX codes should not be assigned if the Extension Number Method (Access without PBX Code) is the preferred method for handling calls on the private network. (→ 1.27.1.3 Extension Number Method (Access without PBX Code))

2. Making and Receiving TIE Line Calls

To make a call to an extension of another PBX, an extension user dials the TIE Line Access number, PBX code, and an extension number.

[Example]

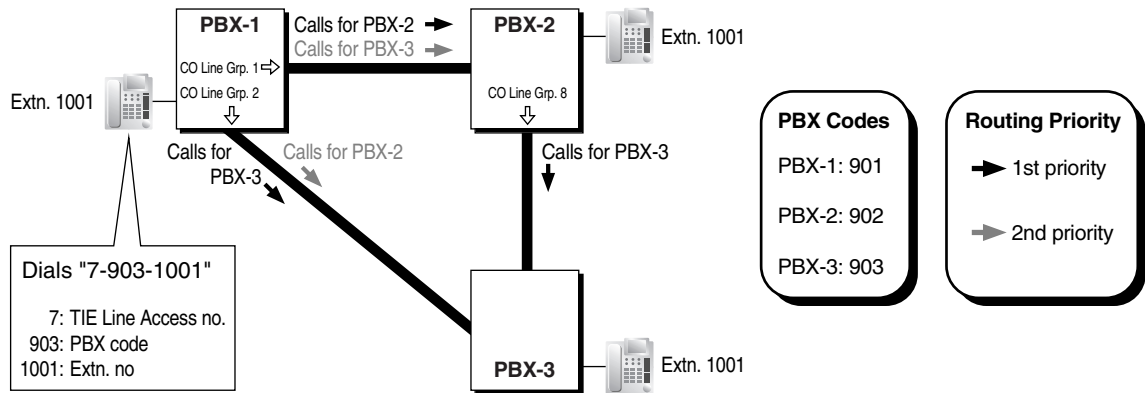

[Programming Example: TIE Line Routing and Modification Table for PBX-1]

Location No.	Leading No.	Priority 1			Priority 2		
		CO Line Group	Dial Modification		CO Line Group	Dial Modification	
			Removed No. of Digits	Added No.		Removed No. of Digits	Added No.
01	902	1	0		2	0	
02	903	2	0		1	0	

Explanation:

PBX-1 makes a call.

Extension 1001 of PBX-1 dials the TIE Line Access number "7", the PBX code "903", and an extension number "1001".

1. The TIE Line Access number was dialed, therefore PBX-1 checks its TIE Line Routing and Modification Table. Finds leading number "903". 1st priority CO line group is "2".
2. No lines are available in this CO line group. The PBX checks for an available line in the 2nd priority CO line group (CO line group 1), and finds an available line. No modification is programmed.
3. PBX-1 removes the TIE Line Access number and sends the remaining digits down the TIE line via CO line group 1. The number is now "903-1001".

PBX-2 receives the call.

1. PBX-2 checks its Incoming Number Modification Table (not shown here). No modification is programmed. The number is still "903-1001".
2. PBX-2 checks its TIE Line Routing and Modification Table (not shown here). Finds leading number "903". 1st priority CO line group is "8". No modification is programmed.

3. Sends the call down the TIE line via CO line group 8. The number is still "903-1001".

PBX-3 receives the call.

1. PBX-3 checks its Incoming Number Modification Table (not shown here). No modification is programmed. The number is still "903-1001".
2. PBX-3 recognizes its own PBX code and sends the call to extension 1001.

3. TIE Line with CO Line Calls


Three types of CO line calls can be made or received via TIE lines:

- 1) CO-to-TIE Line Calls
- 2) TIE-to-CO Line Calls
- 3) CO-to-TIE-to-CO Line Calls

3.1. CO-to-TIE Line Calls

A CO line call can be redirected to a destination of another PBX via Call Forwarding (FWD), Intercept Routing, or Call Transfer.

[Example]

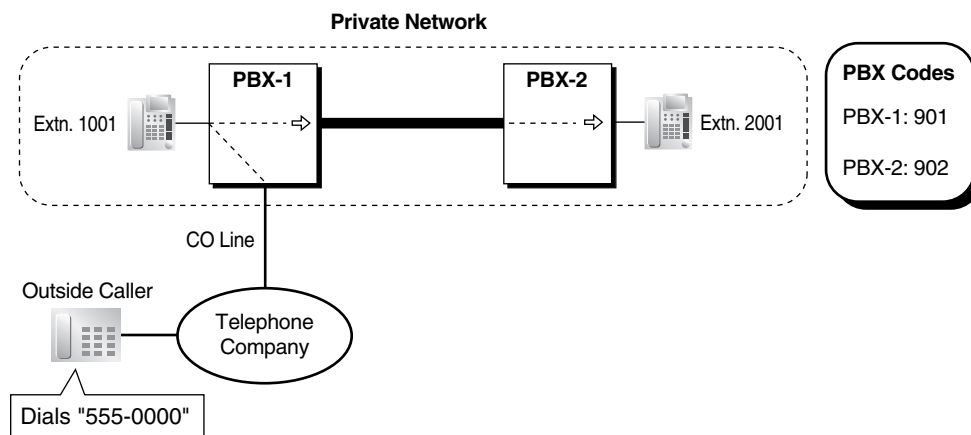

Explanation:

An outside caller dials "555-0000".


1. The call is received by PBX-1 and directed to extension 1001, which is assigned (not shown here) as the Direct Inward Dialing (DID) destination for the DID number "555-0000", in the DID Table of PBX-1. (→ 1.1.1.3 Direct Inward Dialing (DID))
2. Calls directed to extension 1001 of PBX-1 are redirected to extension 2001 of PBX-2 because of one of the following:
 - a) Extension 2001 of PBX-2 is programmed (not shown here) as the FWD or Intercept Routing destination for calls to extension 1001 of PBX-1. The destination is programmed as [TIE Line Access number] + [PBX code of PBX-2] + extension number "2001".
 - b) The extension 1001 user transferred the call to extension 2001 of PBX-2 by dialing the TIE Line Access number "7", the PBX code of PBX-2 "902", and the extension number "2001".

3.2. TIE-to-CO Line Calls

An extension user can make a CO line call by first routing the call through another PBX. These calls can be routed by Automatic Route Selection (ARS), or restricted based on the Class of Service (COS) of the CO line group carrying the call.

a) TIE-to-CO Line Calls

[Example]

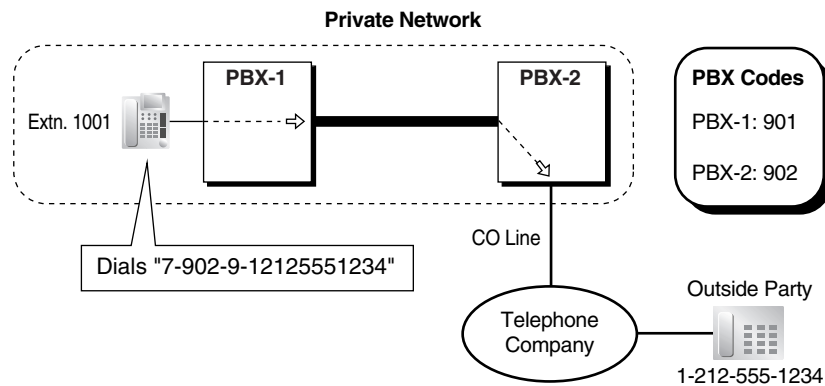

Explanation:

PBX-1 makes a call.

Extension 1001 dials the TIE Line Access number "7", the PBX code of PBX-2 "902", and the Idle Line Access number of PBX-2 "9", followed by the telephone number "1-212-555-1234".

1. The TIE Line Access number was dialed, therefore PBX-1 checks its TIE Line Routing and Modification Table (not shown here). Finds leading number "902". No modification is programmed.
2. PBX-1 removes the TIE Line Access number and sends the remaining digits down the TIE line. The number is now "902-9-12125551234".


PBX-2 receives the call.

1. PBX-2 checks its Incoming Number Modification Table (not shown here). No modification is programmed. PBX-2 removes its PBX code "902". The number is now "9-12125551234".
2. PBX-2 recognizes its Idle Line Access number, "9", and sends the remaining number, "12125551234", to the telephone company using an idle CO line.

b) TIE-to-CO Line Calls Routed by ARS

ARS can be used to route calls through other PBXs. This allows PBX users to dial telephone numbers as they normally would (i.e., by dialing the Idle Line Access number "9" then the telephone number) without having to think about which calls will be routed through another PBX via TIE line, and which calls will be sent to a CO line connecting their PBX to the telephone company.

[Example]

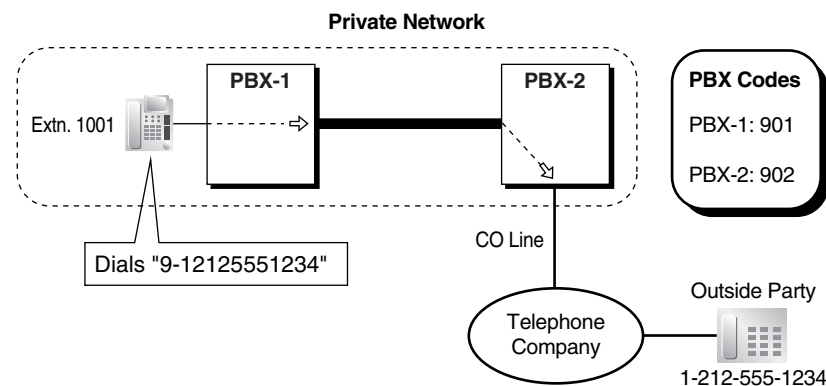

Explanation:

Extension 1001 dials the Idle Line Access number of PBX-1 "9", followed by the telephone number "1-212-555-1234".

1. The Idle Line Access number "9" was dialed, therefore PBX-1 modifies the dialed number via its ARS programming (not shown here). It removes the Idle Line Access number, adds the PBX code and Idle Line Access number of PBX-2 "902-9", and sends the number down the TIE line to PBX-2. The number is now "902-9-12125551234".
2. PBX-2 checks its Incoming Number Modification Table (not shown here). No modification is programmed. PBX-2 removes its PBX code (902). The number is now "9-12125551234".
3. PBX-2 recognizes its Idle Line Access number, "9", and sends the remaining number, "12125551234", to the telephone company using an idle CO line.

c) Blocking TIE-to-CO Line Calls

TIE-to-CO line calls can be prohibited based on the telephone number of the outside party that the extension user is trying to make a call to, or can be blocked completely based on the CO line group carrying the outgoing call.

When making TIE-to-CO line calls, the incoming TIE line call is received by one CO line of a PBX, and the outgoing CO line call is made using another CO line. Both lines belong to CO line groups, and both groups have a Class of Service (COS), therefore, Toll Restriction (TRS) can be used to allow certain TIE-to-CO line calls to be made while others are prohibited. (→ 1.8.1 Toll Restriction (TRS)) These restrictions are based on the COS of the CO line group carrying the incoming TIE line call.

Additionally, the outgoing CO line group can be programmed to completely block all calls from being made when incoming TIE line calls are received on CO line groups of a certain COS. (External Call Block)

Note that it is possible for a PBX user to bypass these restrictions by using Direct Inward System Access (DISA). By making a TIE line call to a floating extension number used by the DISA feature of the other PBX, then using Walking COS (→ 1.8.4 Walking COS) or Verified

Code Entry (→ 1.8.5 Verified Code Entry) through DISA, a PBX user can make a call that is normally restricted, provided his or her COS is authorized to make the call.


[Programming Example: CO Line Group COS, PBX-2]

CO Line Group No.	COS No.
1	3
2	2

[Programming Example: External Call Block, PBX-2]

COS of Incoming CO Line Group	CO Line Group of Outgoing Calls				
	CO Line Group 1	CO Line Group 2	CO Line Group 3	...	CO Line Group 64
COS 1		Block	Block		
COS 2	Block	Block			Block
COS 3		Block	Block		Block

[Example of TIE-to-CO Line Call, Blocked/Restricted Based on COS]

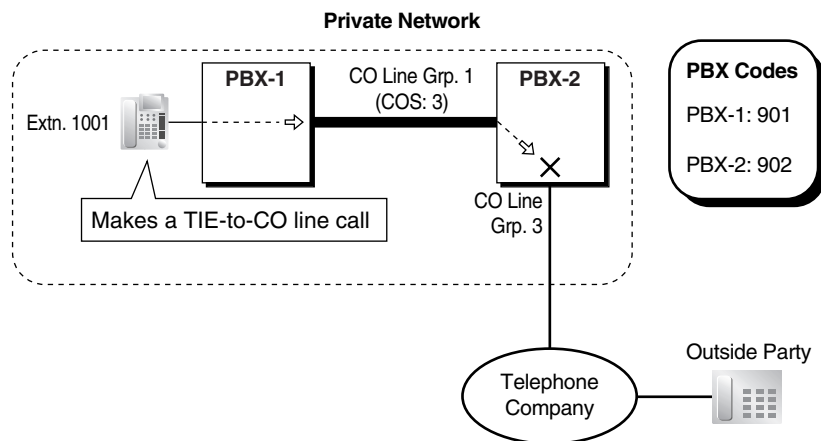

Explanations:

TIE-to-CO Line Call Blocked by External Call Block


Extension 1001 dials a number to make a TIE-to-CO line call.

1. The call is received at PBX-2 on CO line group 1, which has a COS of 3.
2. According to the TIE Line Routing and Modification Table of PBX-2 (not shown here), the CO line call should be made using CO line group 3, however, this CO line group is set to block COS 3 calls.

TIE-to-CO Line Call Restricted by TRS

Extension 1001 dials a number to make a TIE-to-CO line call.

1. The call is received at PBX-2 on CO line group 1, which has a COS of 3.
2. TRS programming for PBX-2 (not shown here) prohibits the call from being made based on the COS of CO line group 1.

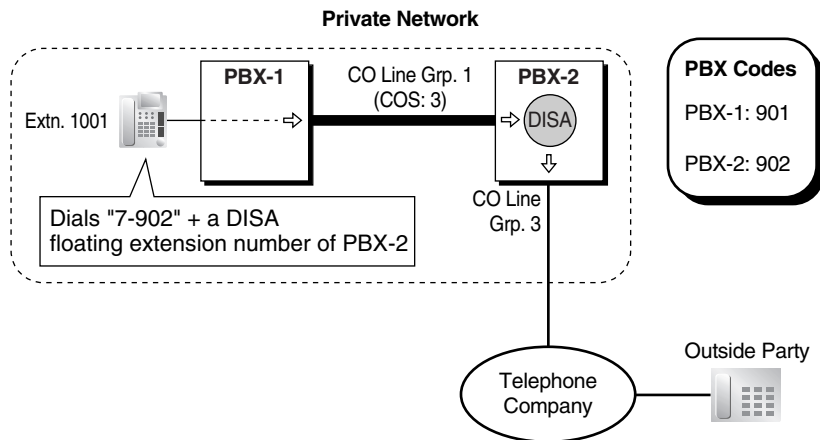[Example of Bypassing TIE-to-CO Line Call Restrictions]**Explanations:****PBX-1 makes a call.**

Extension 1001 dials the TIE line access number of PBX-1 "7", the PBX code of PBX-2 "902", followed by a DISA floating extension number of PBX-2.


1. The TIE Line Access number was dialed, therefore PBX-1 checks its TIE Line Routing and Modification Table (not shown here). Finds leading number "902". No modification is programmed.
2. PBX-1 removes the TIE Line Access number and sends the remaining digits down the TIE line. The number is now "902" plus the DISA floating extension number of PBX-2.

PBX-2 receives the call.

1. PBX-2 checks its Incoming Number Modification Table (not shown here). No modification is programmed.
2. PBX-2 recognizes its own PBX code and sends the call to its DISA feature. From this point, if the COS assigned to the caller's extension or verified code allows, the caller can use Walking COS or Verified Code Entry to bypass the restrictions and make a CO line call.

d) TIE Line Call Routed to CO Line via FWD/Intercept Routing/Call Transfer

A TIE line call can be redirected to an outside party via FWD, Intercept Routing, or Call Transfer.

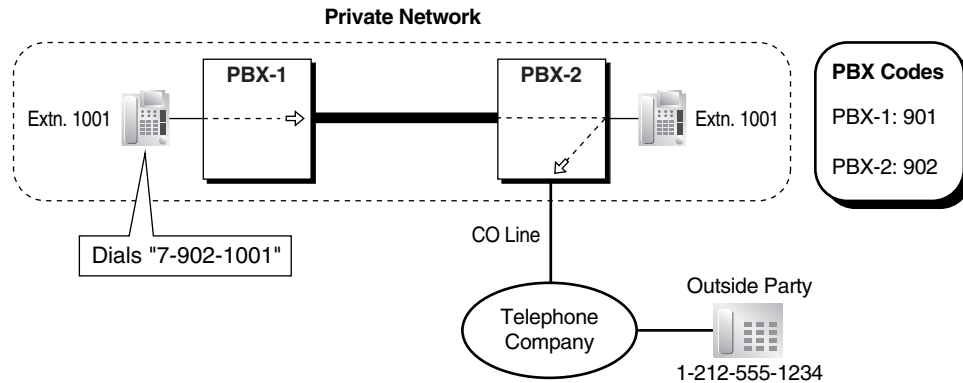[Example]**Explanation:****PBX-1 makes a call.**

Extension 1001 of PBX-1 dials the TIE Line Access number "7", the PBX code "902", and an extension number "1001".

1. The TIE Line Access number was dialed, therefore PBX-1 checks its TIE Line Routing and Modification Table (not shown here). Finds leading number "902". 1st priority CO line group is "1". No modification is programmed.
2. PBX-1 removes the TIE Line Access number and sends the remaining digits down the TIE line via CO line group 1. The number is now "902-1001".


PBX-2 receives the call.

1. PBX-2 checks its Incoming Number Modification Table (not shown here). No modification is programmed. The number is still "902-1001".
2. PBX-2 removes its own PBX code "902" and sends the call to extension 1001.
3. Calls directed to extension 1001 are redirected to the outside party (1-212-555-1234) because of one of the following:
 - a) This number is programmed (not shown here) as the FWD or Intercept Routing destination for calls to extension 1001. The destination is programmed as "9-12125551234".
 - b) The extension 1001 user transferred the call to the outside party by dialing "9-12125551234".

3.3. CO-to-TIE-to-CO Line Calls

An incoming CO line call can be routed to the DISA feature of a PBX, then the caller can make a CO line call which is routed via ARS through another PBX.

[Example]

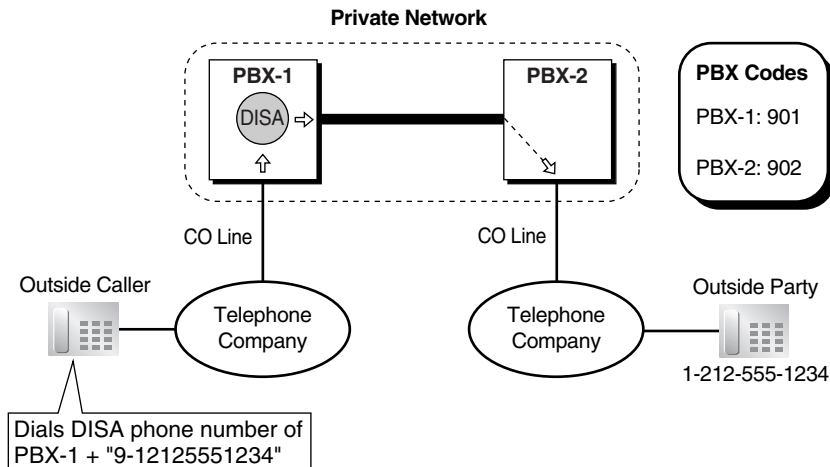

Explanation:

The outside caller dials a telephone number which is routed to the DISA feature of PBX-1, then dials the Idle Line Access number of PBX-1 "9", followed by the desired outside party's telephone number (1-212-555-1234).

1. The Idle Line Access number "9" was dialed, therefore PBX-1 modifies the dialed number via its ARS programming (not shown here). It removes the first digit "9", adds the PBX code and Idle Line Access number of PBX-2 "902-9", and sends the number down the TIE line to PBX-2. The number is now "902-9-12125551234".
2. PBX-2 checks its Incoming Number Modification Table (not shown here). No modification is programmed. PBX-2 removes its PBX code (902). The number is now "9-12125551234".
3. PBX-2 recognizes its Idle Line Access number, "9", and sends the remaining number, "12125551234", to the telephone company using an idle CO line.

Conditions

- When a TIE line call arrives at an extension, it is treated as a CO line call, not as an intercom call. If the called extension is busy and has disabled Call Waiting, the caller will hear a busy tone or be redirected to the Intercept Routing—Busy destination, if one is programmed. If the called extension has set Do Not Disturb (DND), the call will be redirected to the Intercept Routing—DND destination, if one is programmed. (→ 1.1.1.5 Intercept Routing)
- The amount of time the PBX waits for a digit to be dialed before sending a reorder tone or directing the call to an operator can be specified through system programming (TIE Receiving Dial Inter-digit time).
- Throughout the examples in this section, the CO Line Group Access number "8" and a CO line group number ("02", for example) can be dialed instead of the TIE Line Access number "7" if the caller wishes to select a specific CO line group with which to make a call. Note, however, that if the TIE Line Access number is not dialed, the PBX will not check the TIE Line Routing and Modification Table for instructions on how to modify the dialed number before sending it down the TIE line using the specified CO line group.

Feature References

- 1.1.1.5 Intercept Routing
- 1.3.1.2 Call Forwarding (FWD)
- 1.5.5.3 CO Line Access
- 1.9.1 Automatic Route Selection (ARS)
- 1.11.1 Call Transfer
- 1.15.6 Direct Inward System Access (DISA)
- 2.3.5 Flexible Numbering/Fixed Numbering

Operation References

- 1.2.1 Basic Calling

1.27.1.3 Extension Number Method (Access without PBX Code)

Description

PBXs can be distinguished from each other on a private network by the extension numbers they use. When a PBX makes or receives a TIE line call that contains an extension number, it can recognize right away if it should handle the call itself, or pass it on to another PBX. If each extension on a private network has a unique number, calling extensions in other PBXs can be greatly simplified.

Making or receiving calls via TIE line between PBXs that rely on unique extension numbers to distinguish themselves is called "Extension Number Method (Access without PBX Code)".

1. Programming for Extension Number Method (Access without PBX Code)

Each PBX in the private network will refer to some or all of following tables when making and receiving calls via TIE line using Extension Number Method (Access without PBX Code).

TIE Line Routing and Modification Table

This table is used when a PBX makes a call to another PBX, or passes a received call on to another PBX. It contains leading numbers as well as routing instructions for each leading number; it controls which calls are sent on which TIE lines.

Use this table to store the first few digits (leading digits) of the extension numbers used by other PBXs on the private network, the lines which can be used when sending calls to each PBX, and, if necessary, a method to modify dialed numbers before sending them down the TIE line.

When a PBX is about to send a number down a TIE line, it checks the number and finds the preprogrammed leading digits of that number in this table. It then checks the highest-priority (most preferred) CO line group assigned to that leading number. When it finds a line within the highest-priority CO line group that is available, it modifies the number as if programmed to do so. After modification, the number is sent down the line.

Incoming Number Modification Table

This table is referred to when a call is received on a TIE line.

When a PBX receives a call on a TIE line, it searches the Incoming Number Modification Table for instructions on how to modify the received telephone number depending on which CO line the call was received.

After modifying the number, the PBX will check to see if this modified number is stored in its Extension Numbering Plan or Other PBX Extension list (see "Flexible Numbering" below). If the PBX cannot handle the call itself (when a call is meant for an extension of a different PBX, for example), it refers to the TIE Line Routing and Modification Table in order to send the call down the TIE line.

Flexible Numbering

Flexible Numbering contains several numbering plans which will be referred to after an extension user dials a number, or after an incoming TIE line call is modified by the Incoming Number Modification Table.


If the dialed number or modified number is found in the Extension Numbering Plan or Feature Numbering Plan, the PBX will send the call to one of its own extensions or access the appropriate feature, respectively.

If the modified number is found in the Other PBX Extension list, the PBX will check the TIE Line Routing and Modification Table for instructions on how to send the call down the TIE line.

2. Making and Receiving TIE Line Calls

To make a call to an extension of another PBX, an extension user simply dials an extension number.

[Example]

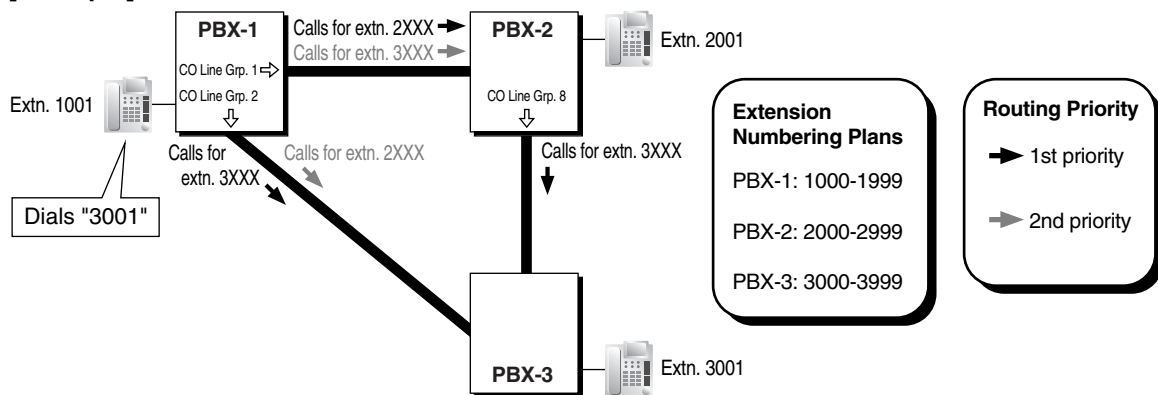

[Programming Example: TIE Line Routing and Modification Table for PBX-1]

Location No.	Leading No.	CO Line Group	Priority 1		CO Line Group	Priority 2	
			Dial Modification			Dial Modification	
			Removed No. of Digits	Added No.		Removed No. of Digits	Added No.
01	2	1	0		2	0	
02	3	2	0		1	0	

Explanation:

PBX-1 makes a call.

Extension 1001 of PBX-1 dials "3001".

1. PBX-1 checks its Extension Numbering Plan. "3001" is not one of its extensions.
2. PBX-1 checks its Other PBX Extension list, and finds an extension "3001".

3. PBX-1 checks its TIE Line Routing and Modification Table. Finds leading number "3". 1st priority CO line group is "2".
4. No lines are available in this CO line group. The PBX checks for an available line in the 2nd priority CO line group (CO line group 1), and finds an available line. No modification is programmed.
5. Sends the call down the TIE line via CO line group 1.

PBX-2 receives the call.

1. PBX-2 checks its Incoming Number Modification Table. No modification is programmed. The number is still "3001".
2. PBX-2 checks its Extension Numbering Plan. "3001" is not one of its extensions.
3. PBX-2 checks its Other PBX Extension list, and finds an extension "3001".
4. PBX-2 checks its TIE Line Routing and Modification Table (not shown here). Finds leading number "3". 1st priority CO line group is "8". No modification is programmed.
5. Sends the call down the TIE line via CO line group 8. The number is still "3001".

PBX-3 receives the call.

1. PBX-3 checks its Incoming Number Modification Table (not shown here). No modification is programmed. The number is still "3001".
2. PBX-3 checks its Extension Numbering Plan. "3001" is one of its extensions.
3. PBX-3 sends the call to extension 3001.

3. TIE Line with CO Line Calls

Three types of CO line calls can be made or received via TIE lines:

- 1) CO-to-TIE Line Calls
- 2) TIE-to-CO Line Calls
- 3) CO-to-TIE-to-CO Line Calls


3.1. CO-to-TIE Line Calls

An extension of a PBX can be the destination of a CO line call received by another PBX first.

a) Incoming CO Line Call Destination Assignment

An extension of a PBX can be the Direct In Line (DIL) or Direct Inward Dialing (DID) destination of a CO line call received first by another PBX.

[Example]

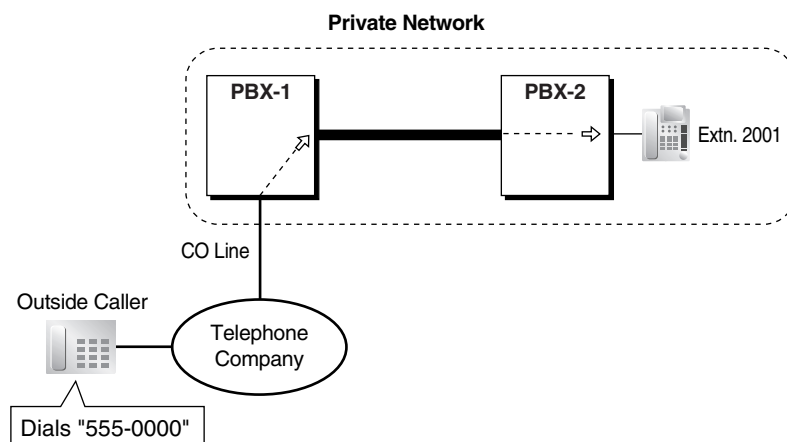

Explanation:


An outside caller dials "555-0000".

The call is received by PBX-1 and directed to extension 2001, which is assigned (not shown here) as the DID destination for the DID number "555-0000", in the DID Table of PBX-1.

b) FWD/Call Transfer/Intercept Routing to the TIE Line

A CO line call can be redirected to a destination of another PBX via Call Forwarding (FWD), Intercept Routing, or Call Transfer.

[Example]

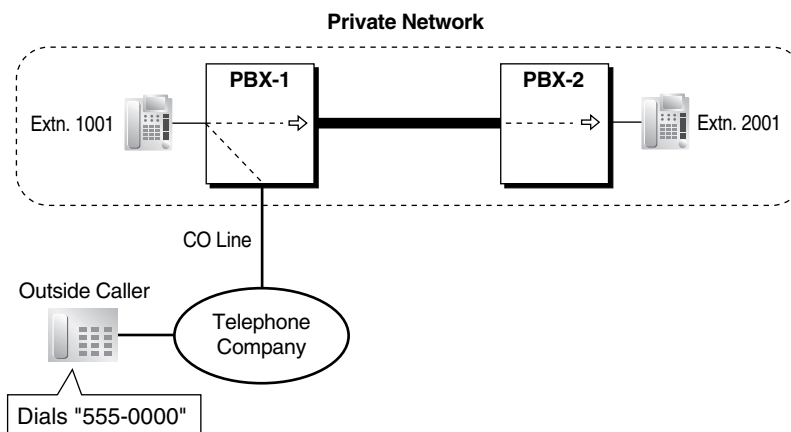

Explanation:

An outside caller dials "555-0000".

1. The call is received by PBX-1 and directed to extension 1001, which is assigned (not shown here) as the DID destination for the DID number "555-0000" in the DID Table of PBX-1.
2. Calls directed to extension 1001 are redirected to extension 2001 because of one of the following:
 - a) Extension 2001 is programmed (not shown here) as the FWD or Intercept Routing destination for calls to extension 1001. The destination is programmed as "2001".


- b) The extension 1001 user transferred the call to extension 2001 by pressing the Transfer button and dialing "2001".

3.2. TIE-to-CO Line Calls

An extension user can make a CO line call by first routing the call through another PBX. These calls can be routed by Automatic Route Selection (ARS), or restricted based on the Class of Service (COS) of the CO line group carrying the call.

a) TIE-to-CO Line Calls

[Example]

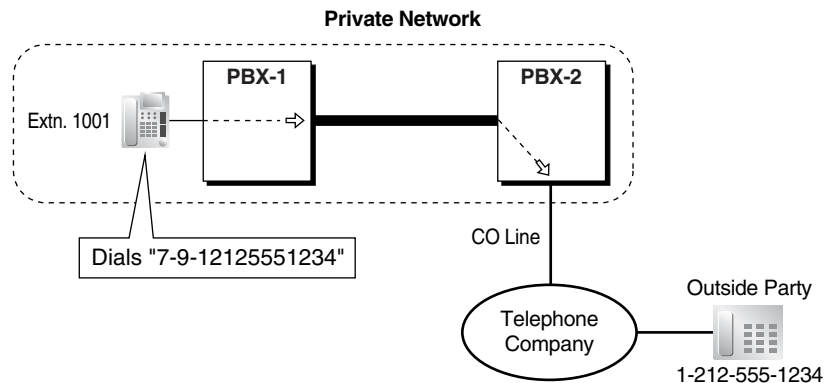

Explanation:

PBX-1 makes a call.

Extension 1001 dials the TIE Line Access number "7" and the Idle Line Access number of PBX-2 "9", followed by the telephone number "1-212-555-1234".


1. The TIE Line Access number was dialed, therefore PBX-1 checks its TIE Line Routing and Modification Table (not shown here). Finds leading number "9". No modification is programmed.
2. PBX-1 removes the TIE Line Access number and sends the remaining digits down the TIE line. The number is now "9-12125551234".

PBX-2 receives the call.

1. PBX-2 checks its Incoming Number Modification Table (not shown here). No modification is programmed. The number is still "9-12125551234".
2. PBX-2 recognizes its Idle Line Access number, "9", and sends the remaining number, "12125551234", to the telephone company using an idle CO line.

b) TIE-to-CO Line Calls Routed by ARS

ARS can be used to route calls through other PBXs. This allows PBX users to dial telephone numbers as they normally would (i.e., by dialing the Idle Line Access number "9" then the telephone number) without having to think about which calls will be routed through another PBX via TIE line, and which calls will be sent to a CO line connecting their PBX to the telephone company.

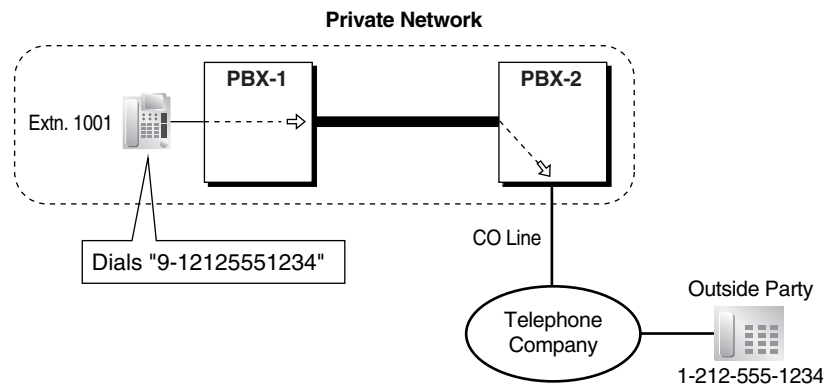[Example]**Explanation:**

Extension 1001 dials the Idle Line Access number of PBX-1 "9", followed by the telephone number "1-212-555-1234".

1. The Idle Line Access number "9" was dialed, therefore PBX-1 modifies the dialed number via its ARS programming (not shown here). It removes the first digit "9", adds the Idle Line Access number of PBX-2 "9", and sends the number down the TIE line to PBX-2. The number is now "9-12125551234".
2. PBX-2 checks its Incoming Number Modification Table (not shown here). No modification is programmed. The number is still "9-12125551234".
3. PBX-2 recognizes its Idle Line Access number "9", so it sends the call to the outside party "1-212-555-1234".

c) Blocking TIE-to-CO Line Calls

TIE-to-CO line calls can be prohibited based on the telephone number of the outside party that the extension user is trying to make a call to, or can be blocked completely based on the CO line group carrying the outgoing call.

When making TIE-to-CO line calls, the incoming TIE line call is received by one CO line of a PBX, and the outgoing CO line call is made using another CO line. Both lines belong to CO line groups, and both groups have a Class of Service (COS), therefore, Toll Restriction (TRS) can be used to allow certain TIE-to-CO line calls to be made while others are prohibited. (→ 1.8.1 Toll Restriction (TRS)) These restrictions are based on the COS of the CO line group carrying the incoming TIE line call.

Additionally, the outgoing CO line group can be programmed to completely block all calls from being made when incoming TIE line calls are received on CO line groups of a certain COS. (External Call Block)


Note that it is possible for a PBX user to bypass these restrictions by using Direct Inward System Access (DISA). By making a TIE line call to a floating extension number used by the DISA feature of the other PBX, then using Walking COS (→ 1.8.4 Walking COS) or Verified Code Entry (→ 1.8.5 Verified Code Entry) through DISA, a PBX user can make a call that is normally restricted, provided his or her COS is authorized to make the call.

[Programming Example: CO Line Group COS, PBX-2]

CO Line Group No.	COS No.
1	3
2	2

[Programming Example: External Call Block, PBX-2]

COS of Incoming CO Line Group	CO Line Group of Outgoing Calls				
	CO Line Group 1	CO Line Group 2	CO Line Group 3	...	CO Line Group 64
COS 1		Block	Block		
COS 2	Block	Block			Block
COS 3		Block	Block		Block

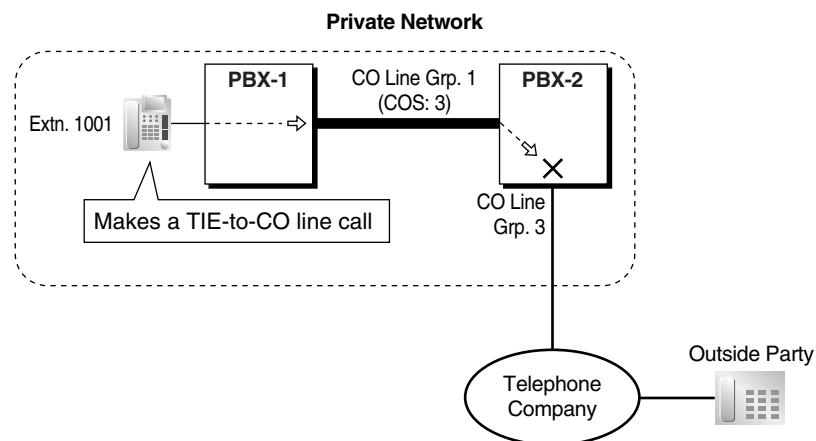[Example of TIE-to-CO Line Call, Blocked/Restricted Based on COS]**Explanation:****TIE-to-CO Line Call Blocked by External Call Block**

Extension 1001 dials a number to make a TIE-to-CO line call.


1. The call is received at PBX-2 on CO line group 1, which has a COS of 3.
2. According to the TIE Line Routing and Modification Table of PBX-2 (not shown here), the CO line call should be made using CO line group 3, however, this CO line group is set to block COS 3 calls.

TIE-to-CO Line Call Restricted by TRS

Extension 1001 dials a number to make a TIE-to-CO line call.

1. The call is received at PBX-2 on CO line group 1, which has a COS of 3.
2. TRS programming for PBX-2 (not shown here) prohibits the call from being made based on the COS of CO line group 1.

[Example of Bypassing TIE-to-CO Line Call Restrictions]

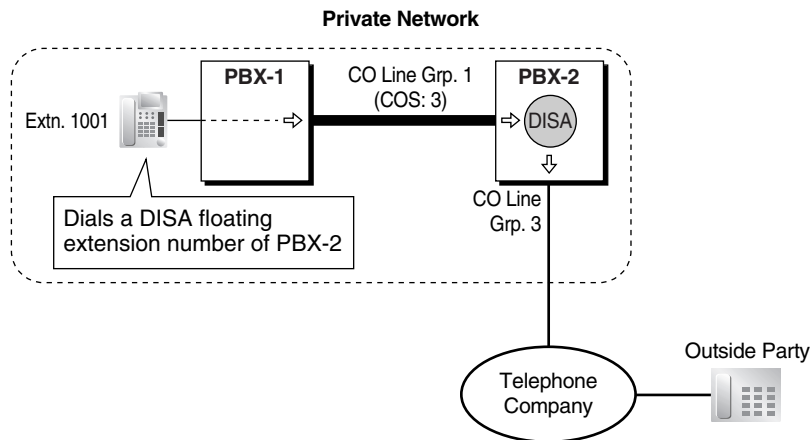


Explanation:

1. Extension 1001 dials a DISA floating extension number of PBX-2.
2. The DISA feature answers the call. From this point, if the COS assigned to the caller's extension or verified code allows, the caller can use Walking COS or Verified Code Entry to bypass the restrictions and make a CO line call.

d) TIE Line Call Routed to CO Line via FWD/Intercept Routing/Call Transfer

A TIE line call can be redirected to an outside party via FWD, Intercept Routing, or Call Transfer.

[Example]

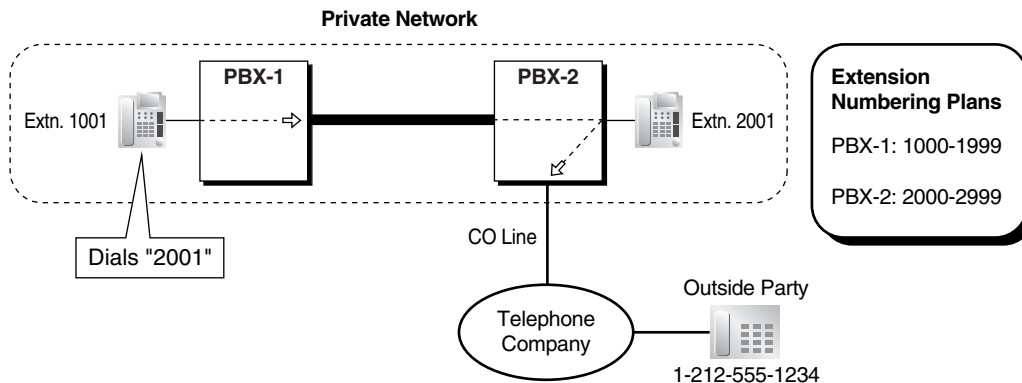

Explanation:

PBX-1 makes a call.

Extension 1001 of PBX-1 dials "2001".

1. PBX-1 checks its Extension Numbering Plan. "2001" is not one of its extensions.
2. PBX-1 checks its Other PBX Extension list, and finds an extension "2001".
3. PBX-1 checks its TIE Line Routing and Modification Table (not shown here). Finds leading number "2". No modification is programmed.
4. Sends the call down the TIE line.

PBX-2 receives the call.


1. PBX-2 checks its Incoming Number Modification Table (not shown here). No modification is programmed. The number is still "2001".

2. PBX-2 checks its Extension Numbering Plan. "2001" is one of its extensions.
3. PBX-2 sends the call to extension 2001.
4. Calls directed to extension 2001 are redirected to the outside party (1-212-555-1234) because of one of the following:
 - a) This number is programmed (not shown here) as the FWD or Intercept Routing destination for calls to extension 2001. The destination is programmed as "9-12125551234".
 - b) The extension 2001 user transferred the call to the outside party by dialing "9-12125551234".

3.3. CO-to-TIE-to-CO Line Calls

An incoming CO line call can be routed to the DISA feature of a PBX, then the caller can make a CO line call which is routed via ARS through another PBX.

[Example]

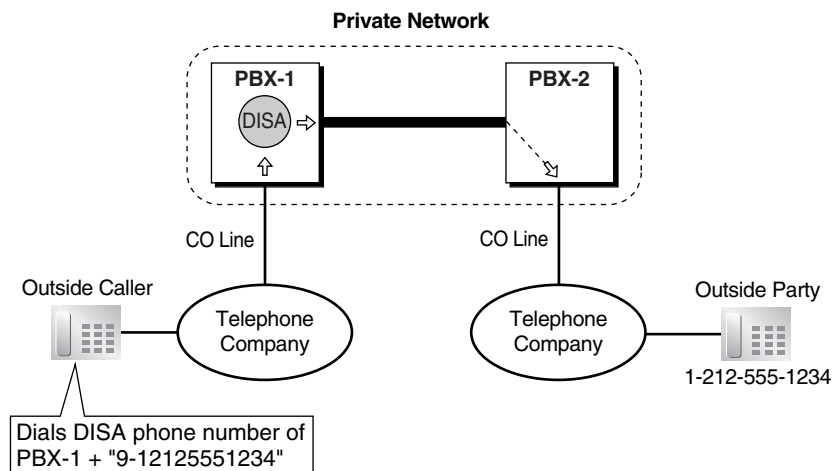

Explanation:

The outside caller dials a telephone number which is routed to the DISA feature of PBX-1, then dials the Idle Line Access number of PBX-1 "9", followed by the desired outside party's telephone number "1-212-555-1234"

1. The Idle Line Access number "9" was dialed, therefore PBX-1 modifies the dialed number via its ARS programming (not shown here). It removes the first digit "9", adds the Idle Line Access number of PBX-2 "9", and sends the number down the TIE line to PBX-2. The number is now "9-12125551234".
2. PBX-2 checks its Incoming Number Modification Table (not shown here). No modification is programmed.
3. PBX-2 recognizes its Idle Line Access number, "9", and sends the remaining number, "12125551234", to the telephone company using an idle CO line.

Conditions

- **PBX Code**

If a PBX is assigned a PBX code, it will not handle calls received via TIE line with the Extension Number Method (Access without PBX Code). Only assign a PBX code when using PBX Code Method (Access with PBX Code). (→ 1.27.1.2 PBX Code Method (Access with PBX Code))

- When a TIE line call arrives at an extension, it is treated as a CO line call, not as an intercom call. If the called extension is busy and has disabled Call Waiting, the caller will hear a busy tone or be redirected to the Intercept Routing—Busy destination, if one is programmed. If the called extension has set Do Not Disturb (DND), the call will be redirected to the Intercept Routing—DND destination, if one is programmed. (→ 1.1.1.5 Intercept Routing)
- The amount of time the PBX waits for a digit to be dialed before sending a reorder tone or directing the call to an operator can be specified through system programming (TIE Receiving Dial Inter-digit time).
- Throughout the examples in this section, the CO Line Group Access number "8" and a CO line group number ("02", for example) can be dialed instead of the TIE Line Access number "7" if the caller wishes to select a specific line group with which to make a call. Note, however, that if the TIE Line Access number is not dialed, the PBX will not check the TIE Line Routing and Modification Table for instructions on how to modify the dialed number before sending it down the TIE line using the specified CO line group.

Feature References

- 1.1.1.3 Direct Inward Dialing (DID)
- 1.1.1.5 Intercept Routing
- 1.3.1.2 Call Forwarding (FWD)
- 1.5.5.3 CO Line Access
- 1.9.1 Automatic Route Selection (ARS)
- 1.11.1 Call Transfer
- 1.15.6 Direct Inward System Access (DISA)
- 2.3.5 Flexible Numbering/Fixed Numbering

Operation References

- 1.2.1 Basic Calling

1.27.2 QSIG Network


1.27.2.1 QSIG Network—OVERVIEW

Description

TIE line service can be used on a private network that is established using ISDN (PRI) lines programmed to implement the QSIG protocol (Q.931). QSIG offers TIE line service as well as advanced caller and called party identification features.

When configuring Panasonic Hybrid IP-PBXs to establish a private network based on QSIG, the ports of each PBX must be programmed so that each ISDN line has a "master" connection and a "slave" connection.

[Example of Private Network Established via QSIG]

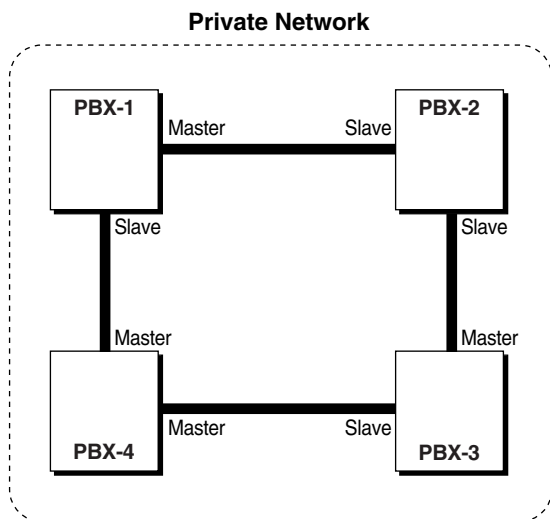

The following services are available when TIE line calls are made on a private network established via QSIG. They can be enabled or disabled for each ISDN (PRI) port.

Service	Description	Details in
Calling Line Identification Presentation (CLIP)	When a call is made, the caller's extension number is sent to the other PBX.	• 1.27.2.2 Calling/Connected Line Identification Presentation (CLIP/COLP) and Calling/Connected Name Identification Presentation (CNIP/CONP)—by QSIG
Calling Line Identification Restriction (CLIR)	When a call is made, the caller's extension number is not sent to the called party.	
Calling Name Identification Presentation (CNIP)	When a call is made, the caller's extension name is sent to the other PBX.	
Calling Name Identification Restriction (CNIR)	When a call is made, the caller's extension name is not sent to the called party.	
Connected line Identification Presentation (COLP)	When a call is answered, the extension number of the answering party is sent back to the caller's PBX.	
Connected Line Identification Restriction (COLR)	When a call is answered, the extension number of the answering party is not sent back to the caller's extension.	
Connected Name Identification Presentation (CONP)	When a call is answered, the answering party's extension name is sent back to the caller's PBX.	
Connected Name Identification Restriction (CONR)	When a call is answered, the answering party's extension name is not sent back to the caller's extension.	

Network Direct Station Selection

It is possible to assign Network Direct Station Selection (NDSS) buttons to monitor the status of extensions connected to other PBXs in the network, and to make or transfer calls to those extensions with one touch (→ 1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)).

Feature References

1.19.1 Integrated Services Digital Network (ISDN)

1.27.1 TIE Line Service


1.27.2.2 Calling/Connected Line Identification Presentation (CLIP/COLP) and Calling/Connected Name Identification Presentation (CNIP/CONP)—by QSIG

Description

When TIE line calls are made on a private network established via QSIG, QSIG offers several features which can be used to present or hide the identification of both the caller and the called party.


Calling Line/Name Identification Presentation (CLIP/CNIP)


Similar to Caller ID, when an extension user makes a TIE line call, the PBX can send the caller's extension number and/or extension name to the called party of the other PBX. This information can be shown on the display of the called party before answering the call.

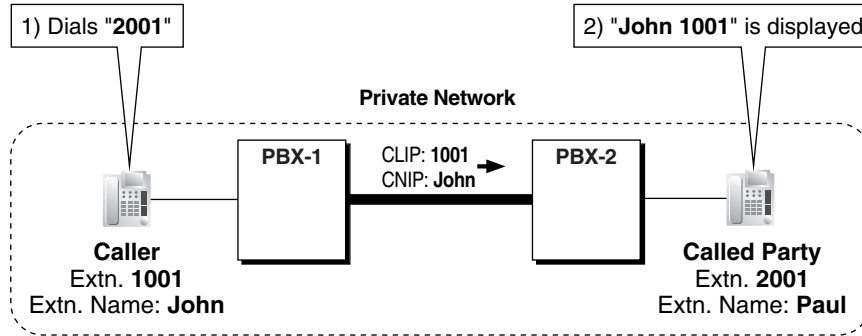[Example of CLIP/CNIP]**Connected Line/Name Identification Presentation (COLP/CONP)**

When an extension user answers a TIE line call, the PBX can send the answering party's extension number and/or extension name to the caller. This information can be shown on the display of the caller, so the caller will know who answered his or her call.

This feature is useful in situations where a call is answered by someone other than the called party, such as when the call is redirected to another extension by Call Forwarding (FWD) or Intercept Routing, for example, or when a call is directed to an incoming call distribution (ICD) group.

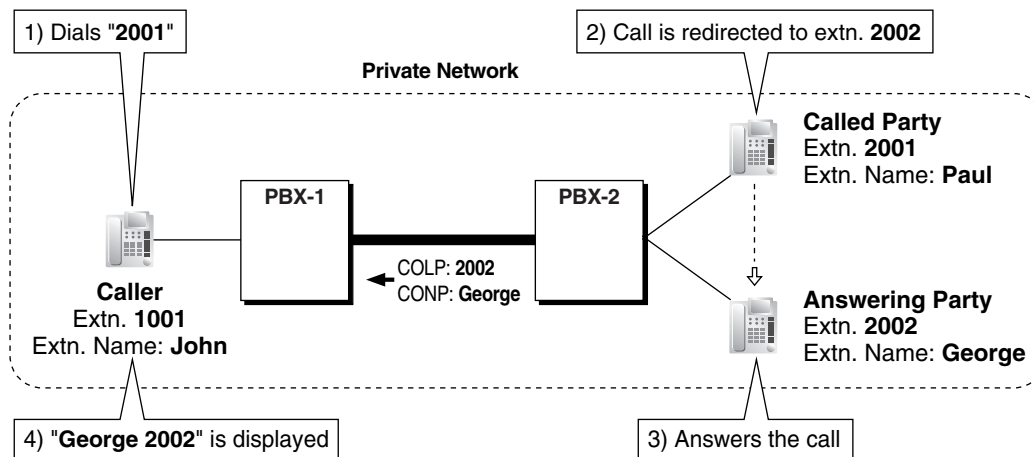[Example of COLP/CONP when the Call is Forwarded or Intercepted]

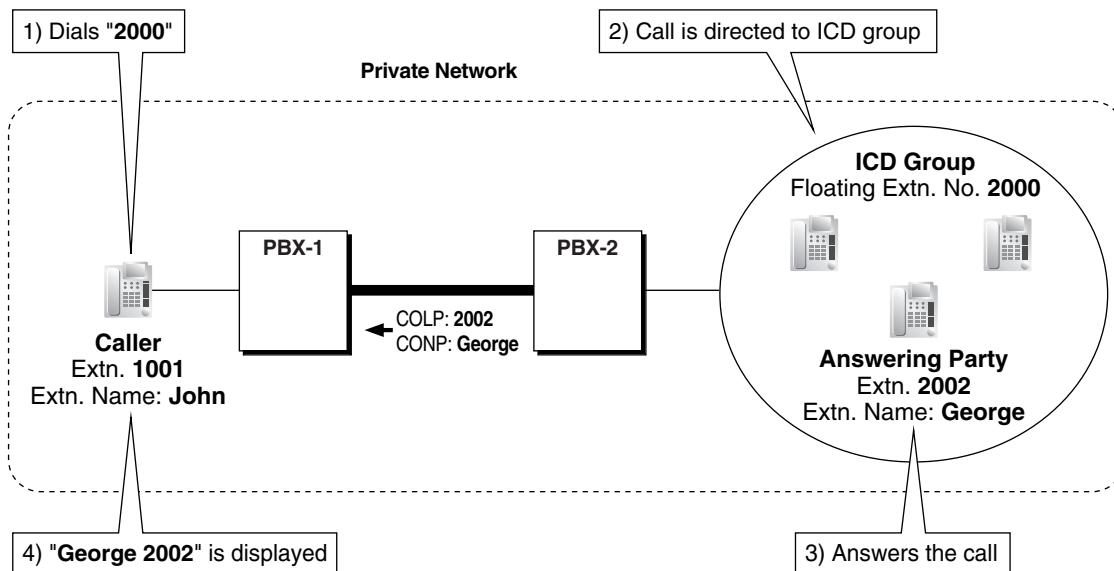[Example of COLP/CONP when the Call is Directed to an ICD Group]**CLIP/COLP Number**

The number sent to the other PBX by CLIP/COLP is the number assigned to the extension through system programming (→ Extension Number [003]).

CNIP/CONP Name

The name sent to the other PBX by CNIP/CONP is the name assigned to the extension through system programming (→ Extension Name [004]).

Calling Line/Name Identification Restriction (CLIR/CNIR)

An extension can select to restrict the sending of its extension number and name when making a call by entering the CLIR feature number or by pressing the CLIR button. When CLIR is activated, CNIR is activated automatically.

Connected Line/Name Identification Restriction (COLR/CONR)

An extension can select to restrict the sending of its extension number and name when answering a call by pressing the COLR button. When COLR is activated, CONR is activated automatically.

Conditions

- **Enabling/Disabling Each Service**

COLP/CLIR/COLR/CNIP/CONP/CNIR/CONR can each be enabled or disabled on each PRI (QSIG) port of the PBX through system programming.

CLIP is enabled by default for each PRI port and cannot be disabled. Extension users can prevent their extension numbers from being sent to the called party by activating CLIR using the CLIR button or by entering the CLIR feature number, provided CLIR is enabled through system programming for the CO line used to make the call.

- **CLIR Button and COLR Button**

Any flexible button can be customized as the CLIR or COLR button. Pressing each button will toggle between the "restriction" setting and the "presentation" setting. For example, if pressing the COLR button enables COLR, then pressing it again will enable COLP.

In order for an extension user's CLIR and COLR buttons to function, the respective service must be enabled through system programming for the CO line used to make/receive the call.

Feature References

1.18.2 Flexible Buttons

Operation References

1.7.5 Calling Line Identification Restriction (CLIR)

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)


Description

When PBXs are networked using ISDN or IP-GW cards, it is possible to assign flexible buttons as Network Direct Station Selection (NDSS) buttons. These buttons are used to monitor the status of extensions connected to other PBXs in the network, and to make or transfer calls to those extensions with one touch, like normal DSS buttons. This allows the functions of an operator to be centralized even when there are offices in remote locations.

NDSS buttons show the status of the monitored extension as follows:

Light pattern	Status
Off	The monitored extension is idle.
Red on	The monitored extension is busy or has set DND for CO line calls.

[Example Network]

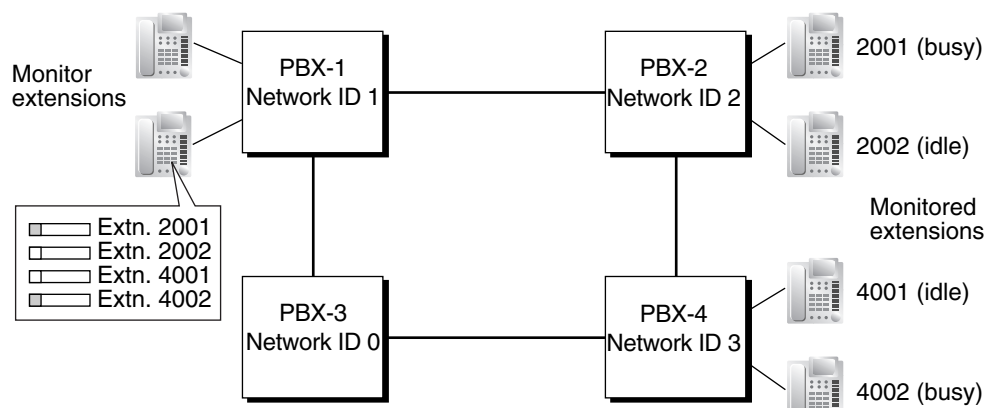

[Programming Procedure]

1. Routing Table Assignment

TIE Line Routing and Modification tables must have been programmed in advance for all PBXs in the network, to allow calls to be made and transferred between PBXs (→ 1.27.1 TIE Line Service).

In the programming example that follows, the PBXs in the network use the Extension Number method, as shown in the illustration above. However, the PBX Access Code method can also be used.

2. Network PBX ID Assignment

Assign a Network PBX ID to each PBX in the network.

There are three types of Network PBX ID:

ID Number	PBX Function
1	Supports centralized operators to monitor extensions at other PBXs.
2-8	Supports extensions to be monitored
0	Retransmits monitor data through the network.

The PBX whose extensions will monitor the status of extensions at other PBXs must be assigned Network PBX ID 1. The PBXs that have extensions that will be monitored must be assigned Network PBX IDs 2-8. IDs 1-8 can only be assigned to one PBX each within the network. A maximum of seven PBXs can have extensions that are monitored. Any other PBXs must be assigned Network PBX ID 0. They will only retransmit received monitor data sent by PBXs 2-8.

3. QSIG Port Setting [Monitored PBX]


ISDN-QSIG (PBX Direct Connection)

Each QSIG port of a PRI card that will be used to transmit extension status information must be set to do so through system programming. Even if a port is set to not transmit information, it will still receive information from other PBXs.

Transmit	Extension Status Information Functions
Enabled	<ul style="list-style-type: none"> Transmit information on own PBX extensions Receive information from other PBXs; forward it to other QSIG ports of the PBX Re-transmit information received by other QSIG ports of the PBX
Disabled	<ul style="list-style-type: none"> Receive information from other PBXs; forward it to other QSIG ports of the PBX

Set the transmission setting for each port according to the layout of your network, so that extension status information can travel from monitored PBXs to the monitor PBX.

[Example ISDN Network Port Setting]

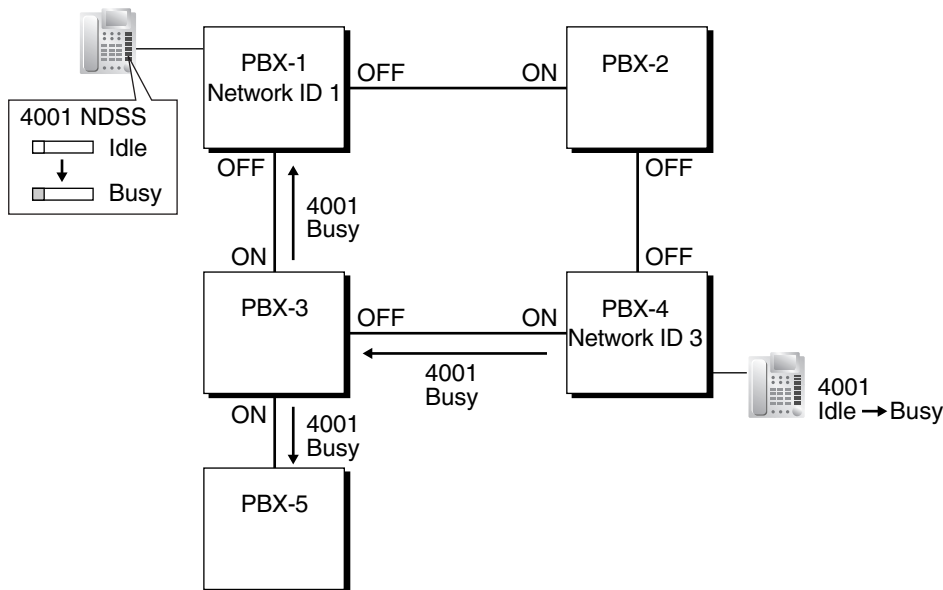


IP-GW-QSIG

IP data is routed through the network according to the routing tables of the IP-GW cards. When using VoIP, it is necessary to identify the monitor PBX, to which to transmit extension status information, for each card that will be used. This is done by specifying the extension number of any extension (for example, the PBX operator) at the monitor PBX.

Network Operator Extn. No.	IP-GW Card Slot No.
1001	01

[Example VoIP Network]

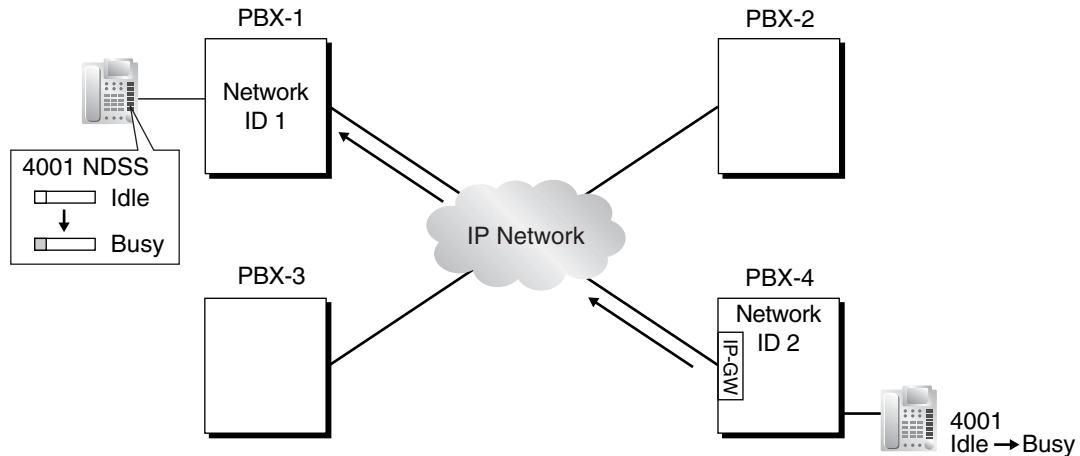

Mixed Network

When using the NDSS feature over a mixed network containing both VoIP portions and ISDN line portions, it is possible to set whether status information will be transferred between VoIP and ISDN cards within each PBX. For example, if the monitor PBX is on a VoIP network, and monitored PBXs are on an ISDN network, the PBX that acts as a gateway between the VoIP and ISDN networks must have this setting enabled for ISDN to VoIP.

4. Network Monitor Extension Registration [Monitor PBX]

Register the extensions (attached to other PBXs) that will be monitored. A maximum of 32 extensions can be registered. Only extensions that have been registered here can be assigned to NDSS buttons.

Network Monitor Extensions Table

Index No.	Network Extn. No.	Network Extn. Name
001	2001	Branch 1: T. Jones
002	2002	Branch 1: M. Davidson
003	4001	Branch 2: R. Powell
:	:	:
032		

When using the PBX Access Code numbering method, the relevant access code must be added before the extension number registered here.

5. NDSS Button Customization [Monitor PBX]

At any extension attached to the monitor PBX, customize a flexible button as an NDSS button for an extension registered above. Then go off-hook, press this button once, and go on-hook again. This activates the monitoring function. The monitored PBX will begin to transmit information about the status

of that extension, and the monitor PBX will begin to receive the information. The button light will display the status of the extension connected to another PBX.

Removing or Editing a Registered Extension [Monitor PBX]

To monitor a new extension when 32 extensions are already being monitored, it is necessary to remove the registration of an existing extension.

The NDSS Monitor Release feature is used to stop monitoring a certain extension. When this feature is performed at the monitor PBX:

- The monitored PBX stops transmitting status information for the selected extension.
- The monitor PBX stops receiving status information for the selected extension. All NDSS buttons for that extension stop displaying status information.

However, the related information is not deleted from the Network Monitor Extensions Table. Therefore, if an extension user at the monitor PBX subsequently goes off-hook and presses the NDSS button for that extension, monitoring will be reactivated. To completely remove monitoring of an extension, the registration data must also be deleted from the Network Monitor Extensions Table.

The monitor destination of each NDSS button is determined by the registration information for a particular index number in this table. Therefore, if the registration information for an index number is changed (for example, the Network Extension Number assigned to Index No. 001 in the example above is changed from "2001" to "4002"), any NDSS buttons that have been set for that extension will automatically point to the new monitor destination.

Conditions

- **Hardware Requirements:**

All PBXs in the network must be KX-TDA series version 2.0 or greater.

If using an IP-GW4E card (KX-TDA0484), the firmware (not LPR) of the card must be version 1.2 or greater. If using a PRI23 card (KX-TDA0290), the LPR software of the card must be version 1.009 or greater.

- Each of Network PBX IDs 1-8 can only be assigned to one PBX within a network. Assigning the same Network PBX ID to two PBXs will cause network data transmission problems.
- It is only possible to assign NDSS buttons for extensions that have been previously registered in the Network Monitor Extensions Table.
- Activation of an NDSS button is only required the first time that a button for a newly registered extension is created. Once an NDSS button has been activated by being pressed the first time, any further NDSS buttons for the same monitored extension will automatically display the extension status without needing to be activated.
- To use the NDSS Monitor Release feature, an extension must be assigned as a manager (→ Manager Assignment [511]).
- Through system programming, it is possible to assign a maximum number of "hops" (transfers between PBXs) that extension status information can travel. Each time a piece of extension status information is forwarded to another PBX, its counter is increased by one. When this counter reaches the assigned maximum, the data is discarded. This is used to prevent data from circling unnecessarily around the network.
- If it is not possible to remotely turn off transmission of extension status information using the NDSS Monitor Release feature because of network conditions, it is possible to perform the same operation directly through system programming at the monitored PBX.
- When using a VoIP network, if extension status information is lost by the network, in some cases an NDSS button may not be able to display the status of the relevant extension.

Feature References

- 1.27.1 TIE Line Service
- 1.27.2 QSIG Network
- 1.27.3 Voice over Internet Protocol (VoIP) Network

Operation References

- 1.2.1 Basic Calling
- 2.1.7 Network Direct Station Selection (NDSS) Monitor Release

1.27.3 Voice over Internet Protocol (VoIP) Network

Description


The Panasonic Hybrid-IP PBX can be used on a private network which implements Voice over Internet Protocol (VoIP).

On this type of network, information is sent over the private network in IP packets, which allows voice as well as data to be sent to other devices in the private network.

Each PBX in the private network is connected via an IP-GW card to a local area network (LAN). A LAN can consist of PBXs, computers, servers, routers, etc. Each LAN is connected to the private network by a router, which is used to direct voice and data to the routers of other PBXs. These routers can be connected by privately leased lines.

TIE line service and QSIG services can be used on a private network which implements Voice over Internet Protocol (VoIP). (→ 1.27.1 TIE Line Service, → 1.27.2 QSIG Network)

[Example]

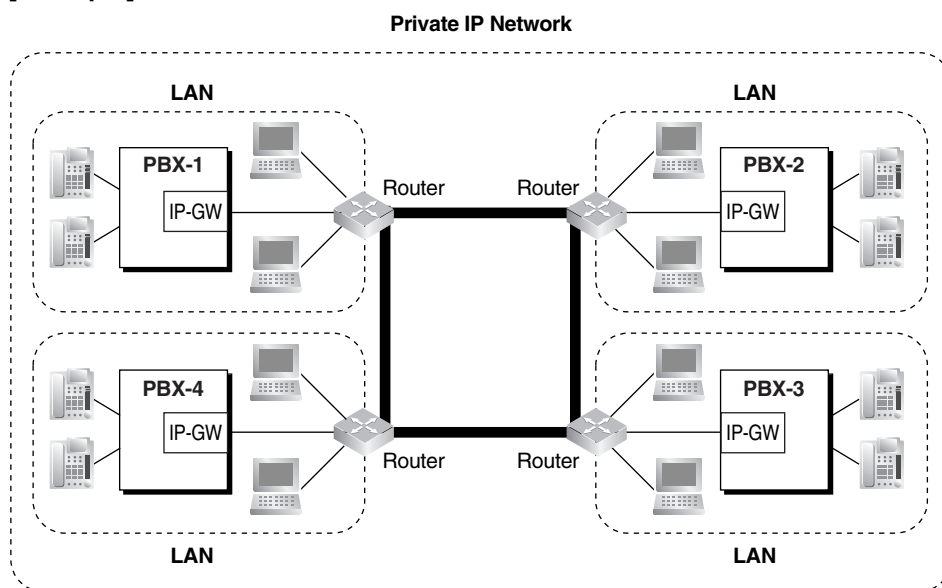

Conditions

- The IP address of every PBX in the private IP network must be programmed in each IP-GW.
- Some QSIG services are available. (→ 1.27.2 QSIG Network)

1.28 IP Proprietary Telephone (IP-PT) Features


1.28.1 IP Proprietary Telephone (IP-PT)

Description

This PBX supports the connection of IP proprietary telephones (IP-PTs), which function almost identically to normal PTs. However, they connect to the PBX over a Local Area Network (LAN), and send and receive calls using Internet Protocol (IP).

IP-PTs have two Ethernet ports for connection, primary and secondary. They are connected to the PBX through a network hub or other splitting device, and can have a PC connected to the secondary Ethernet port.

[Connection Example]

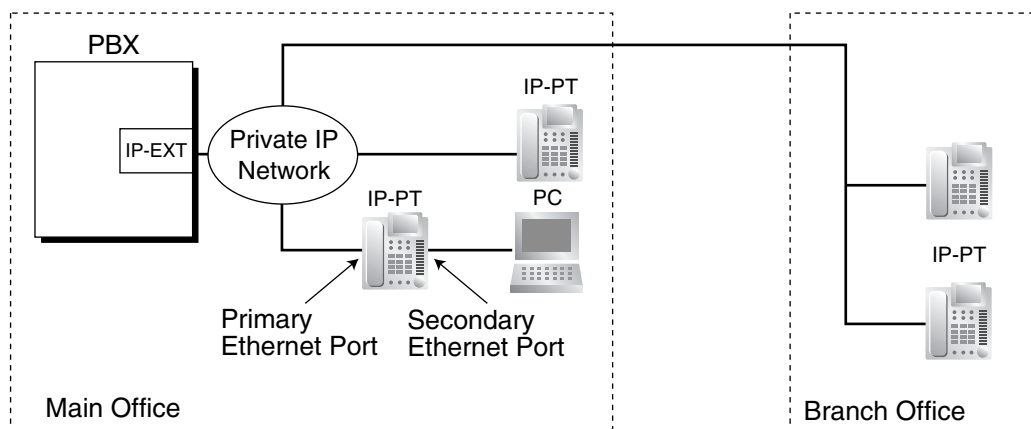

Conditions

- **Hardware Requirement:** An IP-EXT card
- IP-PT registration is required through system programming before an IP-PT can be used with the PBX. An IP-PT cannot be used unless an extension number is assigned. For details on how to register IP-PTs, see the Installation Manual.
- The following features cannot be used with an IP-PT:
 - XDP (→ 1.10.9 Paralleled Telephone)
 - Digital XDP (→ 1.10.9 Paralleled Telephone)
 - OHCA (→ 1.7.4.3 Off-hook Call Announcement (OHCA))
 - Walking Extension (→ 1.25.3 Walking Extension)
 - Using PC Phone or PC Console on a connected PC

Connection References

2.5.8 IP-EXT16 Card

1.29 Computer Telephony Integration (CTI) Features

1.29.1 Computer Telephony Integration (CTI)

Description

Computers can be connected to the PBX to provide extension users with access to advanced features such as pop-up display of caller information, computer-based speed dialing, etc. These features are made available by running customized Computer Telephony Integration (CTI) software, available from Panasonic (PC Console, PC Phone, etc.) as well as third-party software vendors.


CTI can be achieved in two ways:

- 1) First Party Call Control
- 2) Third Party Call Control

1. First Party Call Control

A PC is connected to a digital proprietary telephone (DPT) which supports an optional USB Module. Each PC acts independently; it is not necessarily connected to a server.


The PBX directs a call to the extension as normal, then depending on the CTI software being used the PC can control the DPT (answer calls, transfer calls, etc.) or monitor the status of the extension (display the billing information or customer profile of the caller when a call is received, etc.).

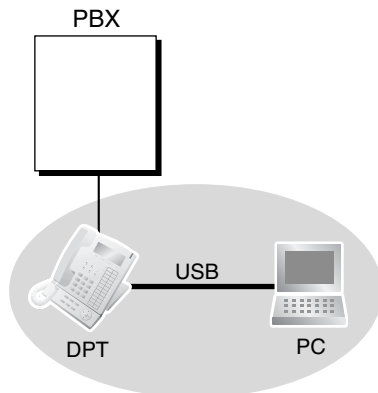

2. Third Party Call Control

Each extension's PC and a server form a LAN, and the server only—not each PC—is connected directly to the PBX's USB port (located on the MPR card) or to an optional CTI-LINK card.

When using Third Party Call Control, the server controls the "client" PCs. Depending on the CTI software being used, the server can determine how calls are distributed to the extensions of the PBX and can also control what information is sent to the PCs when their extensions receive calls.

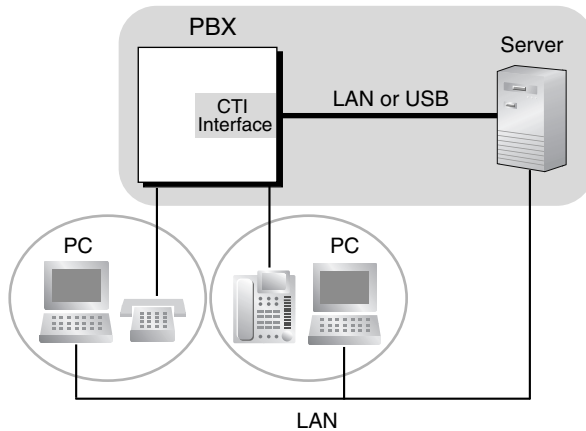

Conditions

[General]

- **Capable telephone:**
DPT: KX-T7600 series PT, USB module
IP-PT
- CTI application software must be installed on the connected PC. In addition, some features may require a KX-TDA0920 SD Memory Card for Software Upgrade to Enhanced Version.
- **Application Programming Interface (API)/Protocol**
Software used for CTI must support the following protocol(s):

Type	API/Protocol
First Party Call Control	<ul style="list-style-type: none"> • TAPI 2.1
Third Party Call Control	<ul style="list-style-type: none"> • ECMA CSTA Phase 3 • TAPI 2.1

- Operating system requirements for PCs and servers vary by the CTI software being used. Refer to your CTI software documentation for more information.
- Only one server can be connected to a PBX.

[IP-PT Call Control]

- A PC connected directly to an IP-PT cannot be used for First Party Call Control.
- IP-PTs do not support the use of PC Phone or PC Console software on a connected PC.

Connection References

- 2.3.1 MPR Card
- 2.6.6 CTI-LINK Card
- 2.7.4 First Party Call Control CTI Connection
- 2.10.1 Connection of Peripherals

Section 2

System Configuration and Administration Features

2.1 System Configuration—Hardware

2.1.1 Extension Port Configuration

Description

There are three types of extension ports, used to connect digital proprietary telephones (DPTs), analog proprietary telephones (APTs), single line telephones (SLTs), Cell Stations (CSs), DSS Consoles, and Voice Processing Systems (VPS) to the PBX. The devices which can be connected to each type of port are listed below.

- a) **DPT Port:** DPT, DSS Console, Panasonic VPS which supports DPT (Digital) Integration, and PT-interface CS (e.g., KX-TDA0141)
- b) **SLT Port:** SLT and VPS which supports DTMF Integration
- c) **Super Hybrid Port:** DPT, APT, SLT, DSS Console, VPS, and PT-interface CS

EXtra Device Port (XDP):

A Super Hybrid port can be used as an XDP port, allowing two telephones (a DPT and an SLT) to be connected to the same port of the PBX. This XDP port can be used in one of the following modes:

Mode	Description
XDP Mode	The DPT and SLT have different extension numbers and act as independent extensions. To use XDP mode, XDP mode must be enabled for the port through system programming (→ EXtra Device Port (XDP) Mode [600]).
XDP Parallel Mode	The DPT and an SLT share the same extension number so that they can act as one extension. The SLT uses the extension data (extension number, Class of Service [COS], etc.) of the DPT. (→ 1.10.9 Paralleled Telephone)

Conditions

- **Automatic Detection on Super Hybrid Port**
A DPT, APT, SLT, or CS can be connected to a Super Hybrid port with no programming required.
- A DSS Console or a Panasonic VPS which supports DPT (Digital) Integration can also be connected with an SLT in XDP mode.
- **APT and SLT in Parallel Mode**
An APT and an SLT can also be connected to a Super Hybrid port and used in parallel mode.
- **Digital XDP**
A DPT can be connected to another DPT and act as an independent extension with its own extension number. (→ 1.10.9 Paralleled Telephone)
- **Wireless XDP Parallel Mode**
A PS can be used in Wireless XDP Parallel mode with a wired telephone. (→ 1.22.3 Wireless XDP Parallel Mode)
- **DSS Console and Paired Telephone Assignment**
When a DSS Console is connected, a PT must be paired with the DSS Console through system programming (→ Console Paired Telephone [007]).

2.2 System Configuration—Software

2.2.1 Class of Service (COS)

Description

Each extension is assigned a Class of Service (COS) number (→ Class of Service [602]). The following features operate differently depending on an extension's COS.

- a) Internal Call Block (→ 1.1.2.2 Internal Call Block)
- b) Call Forwarding (FWD) (→ 1.3.1.2 Call Forwarding (FWD))
- c) Do Not Disturb (DND) Override (→ 1.3.1.3 Do Not Disturb (DND))
- d) Call Pickup (→ 1.4.1.3 Call Pickup)
- e) Account Code Entry (→ 1.5.4.3 Account Code Entry)
- f) External Call Block (→ 1.5.5.3 CO Line Access)
- g) Executive Busy Override (→ 1.7.2 Executive Busy Override)
- h) Call Monitor (→ 1.7.3 Call Monitor)
- i) Off-hook Call Announcement (OHCA) (→ 1.7.4.3 Off-hook Call Announcement (OHCA))
- j) Whisper OHCA (→ 1.7.4.4 Whisper OHCA)
- k) Toll Restriction (TRS) (→ 1.8.1 Toll Restriction (TRS))
- l) Extension Lock (→ 1.8.2 Extension Lock)
- m) Walking COS (→ 1.8.4 Walking COS)
- n) CO Line Call Limitation (→ 1.10.8 CO Line Call Limitation)
- o) Call Transfer (→ 1.11.1 Call Transfer)
- p) Door Open (→ 1.15.2 Door Open)
- q) Direct Inward System Access (DISA) (→ 1.15.6 Direct Inward System Access (DISA))
- r) Wireless XDP Parallel Mode (→ 1.22.3 Wireless XDP Parallel Mode)
- s) Station Message Detail Recording (SMDR) for Outgoing CO Line Call (→ 1.23.1 Station Message Detail Recording (SMDR))
- t) Time Service Switching (→ 2.2.4 Time Service)
- u) Manager Features (→ 2.2.6 Manager Features)
- v) PT Programming (→ 2.3.2 PT Programming)

Conditions

- **Walking COS**
Extension users can make a call from extensions of a less-privileged COS by using their own COS temporarily.

Operation References

- 1.2.6 Calling without Restrictions

2.2.2 Group

Description

This PBX supports various types of groups.

1. CO Line Group

CO lines can be grouped into CO line groups based on carrier, CO line type, etc. (→ LCOT CO Line Group Number [402]). Several settings can be assigned on a CO line group basis. All CO lines belonging to a CO line group follow the programming for that CO line group.

Each CO line can belong to only one CO line group. CO lines are assigned to a CO line group based on their port numbers (for LCOT and PRI cards) or their channel numbers (for T1 cards).

2. Extension Group


Extensions can be grouped into extension groups (→ Extension Group [603]). Extension groups then compose the following groups:

- a) Tenant (→ 2.2.3 Tenant Service)
- b) Call Pickup Group (See below.)
- c) Paging Group (See below.)

Every extension must belong to one extension group and cannot belong to more than one extension group.

Assignable Extensions: Proprietary telephone (PT)/single line telephone (SLT)/portable station (PS)/T1-OPX

[Example]

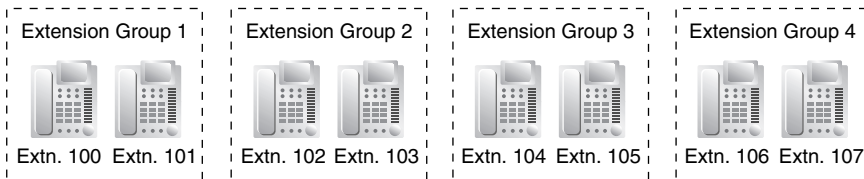


2.1. Call Pickup Group (→ Extension Groups of a Pickup Group [650])

Using the Group Call Pickup feature, extensions can answer any calls within the call pickup group to which they belong. One extension group can belong to several call pickup groups.

(→ 1.4.1.3 Call Pickup)

[Example]

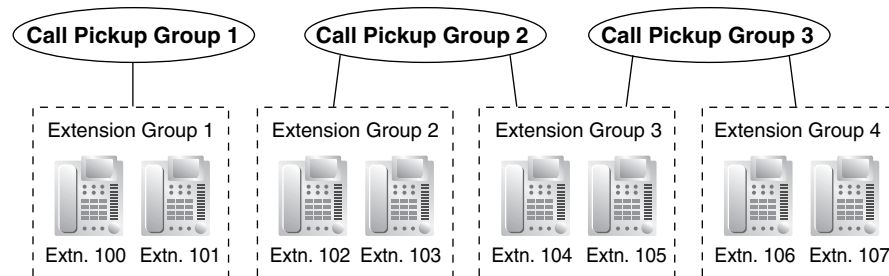


2.2. Paging Group (→ Extension Groups of a Paging Group [640])

Using the Paging feature, extensions can make a page to any paging group or answer a page to their own groups. One extension group or external pager (loudspeaker) can belong to several

paging groups.
 (→ 1.14.1 Paging)

[Example]

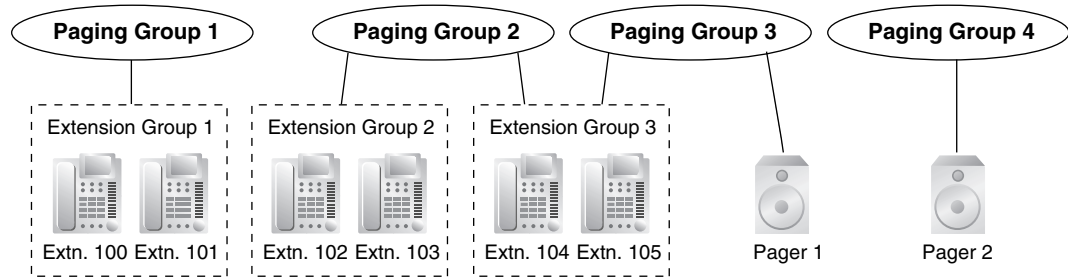

3. Idle Extension Hunting Group


If a called extension is busy or in Do Not Disturb (DND) mode, Idle Extension Hunting redirects the incoming call to an idle member of the same idle extension hunting group. Members are programmed through system programming (→ Idle Extension Hunting Group Member [681]). When calls are received, idle extensions are automatically searched for according to a preprogrammed hunting type: Circular Hunting or Terminated Hunting (→ Idle Extension Hunting Type [680]).
 (→ 1.2.1 Idle Extension Hunting)

4. Incoming Call Distribution Group (ICD Group)

An ICD group is a group of extensions which receives incoming calls directed to the group (→ ICD Group Member [620]). Each ICD group has a floating extension number (→ ICD Group Floating Extension Number [622]) and name (→ ICD Group Name [623]). One extension can belong to multiple ICD groups.

Assignable Extensions: PT/SLT/PS/T1-OPX/PS ring group
 (→ 1.2.2 Incoming Call Distribution (ICD) Group Features)

[Example]

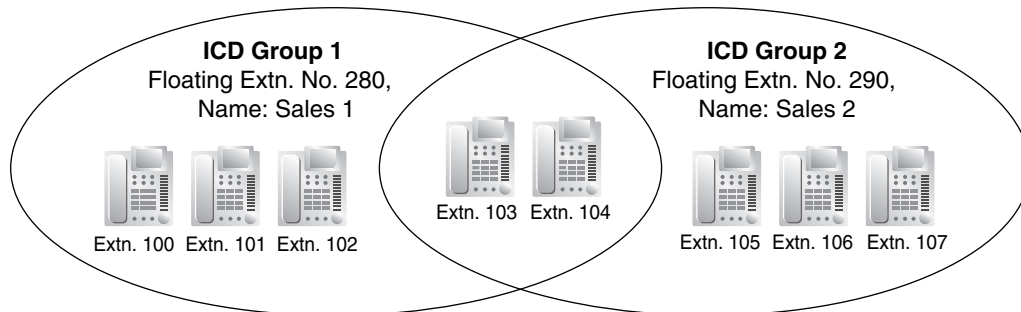


5. VM Group

There are two types of VM groups, explained below.

Type	Description
VM (DPT) Group	A group of DPT ports (→ VM Group Floating Extension Number [660]) which use Voice Mail DPT (Digital) Integration features. One DPT port can belong to only one group.
VM (DTMF) Group	A group of SLT ports which use Voice Mail DTMF Integration features. One SLT port can belong to only one group.

(→ 1.21.1 Voice Mail (VM) Group)


[Example]

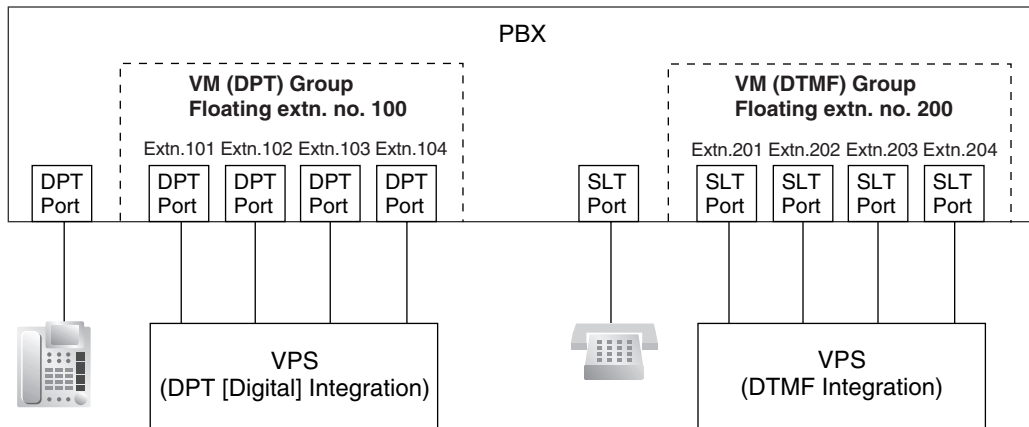

6. PS Ring Group

A PS ring group is a group of PS extensions which receives incoming calls directed to the group. Each group has a floating extension number and name assigned through system programming. One PS can belong to multiple PS ring groups.

(→ 1.22.2 PS Ring Group)

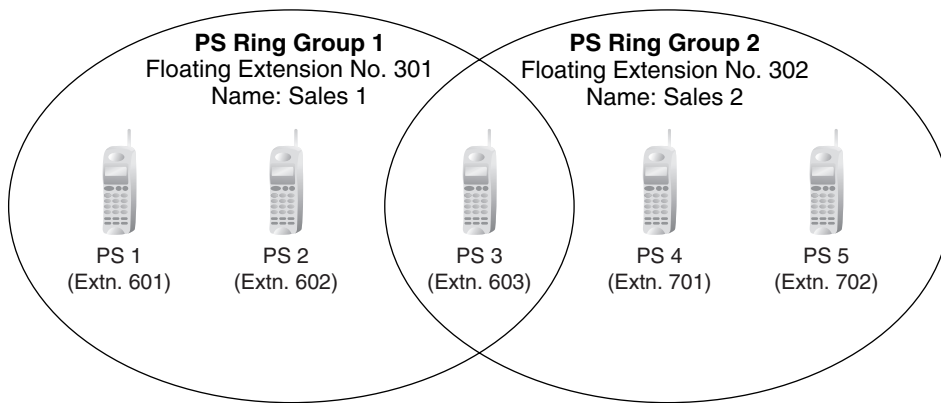

2.2.3 Tenant Service

Description

Tenant service is a cost-effective method of providing PBX services to different offices or companies located in the same building, while using only one PBX.

1. Tenant Configuration


1.1. Tenant Members

Extensions are assigned to a tenant indirectly; they are assigned to extension groups, and these extension groups are assigned to tenants. An extension can belong to only one extension group and an extension group can belong to only one tenant, therefore an extension can belong to only one tenant. (→ 2.2.2 Group)

1.2. Time Service

Time modes are used by many PBX features to determine how they will function during different times of day (→ 2.2.4 Time Service). The start and end times of each time mode (day/lunch/break/night) for each day of the week are programmed in a Time Table. Each Time Table has a number which corresponds to the tenant number of the tenant it serves. (Tenant 1 uses Time Table 1, etc.)

[Example of Tenant Configuration]

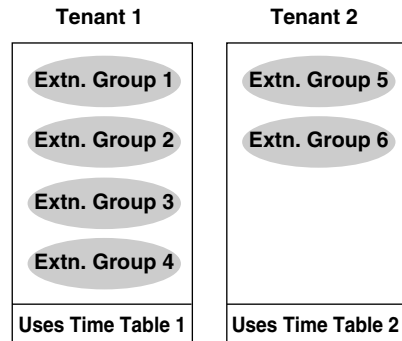

2. System Management

Each of the following system management items can be assigned to each tenant.

- Tenant Operator:** Determines the destination for calls directed to the tenant's operator. If no operator is designated, the PBX operator will serve as the tenant's operator. (→ 2.2.5 Operator Features)
- ARS Mode:** Determines under which circumstances Automatic Route Selection (ARS) operates for calls made by the tenant's extensions — either when a call is made using the Idle Line Access method, or when any CO Line Access method is used. (→ 1.5.5.3 CO Line Access). The ARS mode for each tenant can also be programmed to be the same ARS mode assigned to the entire PBX, or turned off. (→ 1.9.1 Automatic Route Selection (ARS))
- Audio Source for Music on Hold:** Determines the audio source for the Music on Hold heard by the tenant's callers. Either a tone or a specific background music (BGM) number can be used. The audio source for each tenant can also be programmed to use the same audio source used for Music on Hold assigned to the entire PBX. (→ 1.12.4 Music on Hold)

3. Call Blocking

Through Class of Service (COS) programming, it is possible to:

- Prevent extensions of one tenant from calling extensions of another tenant. (Tenant-to-Tenant Call Block)
- Limit the CO line groups which can be used by the extensions of each tenant. (External Call Block)

3.1. Tenant-to-Tenant Call Block

Using Internal Call Block, certain features, such as making intercom calls, can be restricted based on the COS assigned to extensions. (→ 1.1.2.2 Internal Call Block) Well-planned COS programming can prevent extensions of one tenant from:

- Calling an extension or doorphone which belongs to another tenant
- Picking up calls ringing at extensions belonging to another tenant (→ 1.4.1.3 Call Pickup)
- Retrieving calls being held by another tenant (→ 1.12.1 Call Hold)

[Programming Example: Internal Call Block]


Caller	Called Party					
	COS 1	COS 2	COS 3	COS 4	COS 5	COS 6
COS 1						
COS 2						
COS 3					Block	Block
COS 4					Block	Block
COS 5	Block	Block	Block	Block		
COS 6	Block	Block	Block	Block		

In this example:

Internal Call Block is employed to block calls between certain tenants.

Each extension in a tenant is assigned a COS that is not assigned to extensions which belong to another tenant.

- a) Extensions in Tenant 1 are either COS 1 or 2. They can make calls to extensions in Tenants 1, 2, and 3.
- b) Extensions in Tenant 2 are either COS 3 or 4. They can make calls to extensions in Tenants 1 and 2, but not 3.
- c) Extensions in Tenant 3 are either COS 5 or 6. They can make calls to other extensions in Tenant 3 only.

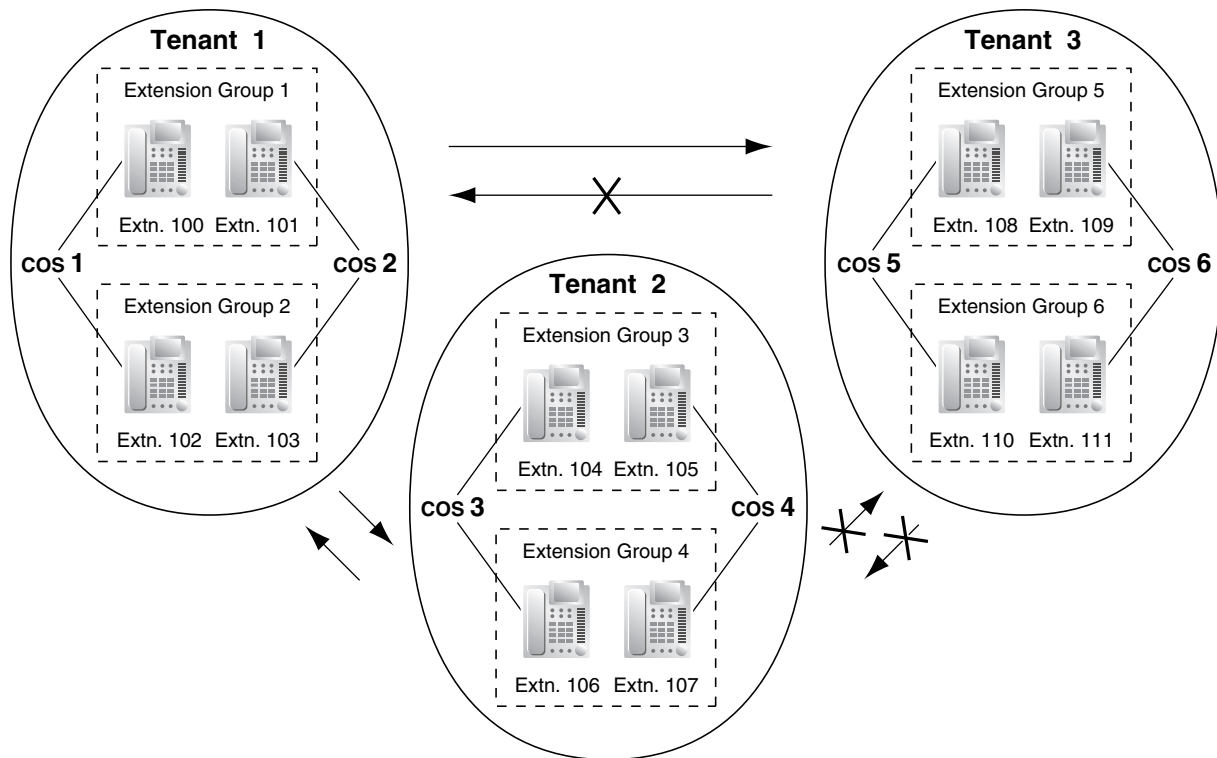

3.2. External Call Block

If multiple tenants are using the PBX, the External Call Block feature should be programmed to control which COS numbers are allowed to access which CO line groups. By preventing certain COS numbers from accessing certain CO line groups, each tenant can be given its own CO line groups which no other tenant can access.


[Programming Example: External Call Block]

COS	CO Line Group 1	CO Line Group 2	CO Line Group 3	CO Line Group 4	CO Line Group 5	CO Line Group 6
COS 1			Block	Block	Block	Block
COS 2			Block	Block	Block	Block
COS 3	Block	Block			Block	Block
COS 4	Block	Block			Block	Block
COS 5	Block	Block	Block	Block		
COS 6	Block	Block	Block	Block		

In this example:

External Call Block is employed to prevent tenants from accessing all CO line groups except the ones designated to them. Each extension in a tenant is assigned a COS that is not assigned to extensions which belong to another tenant.

- Extensions in Tenant 1 are either COS 1 or 2. They can access CO line groups 1 and 2.
- Extensions in Tenant 2 are either COS 3 or 4. They can access CO line groups 3 and 4.
- Extensions in Tenant 3 are either COS 5 or 6. They can access CO line groups 5 and 6.

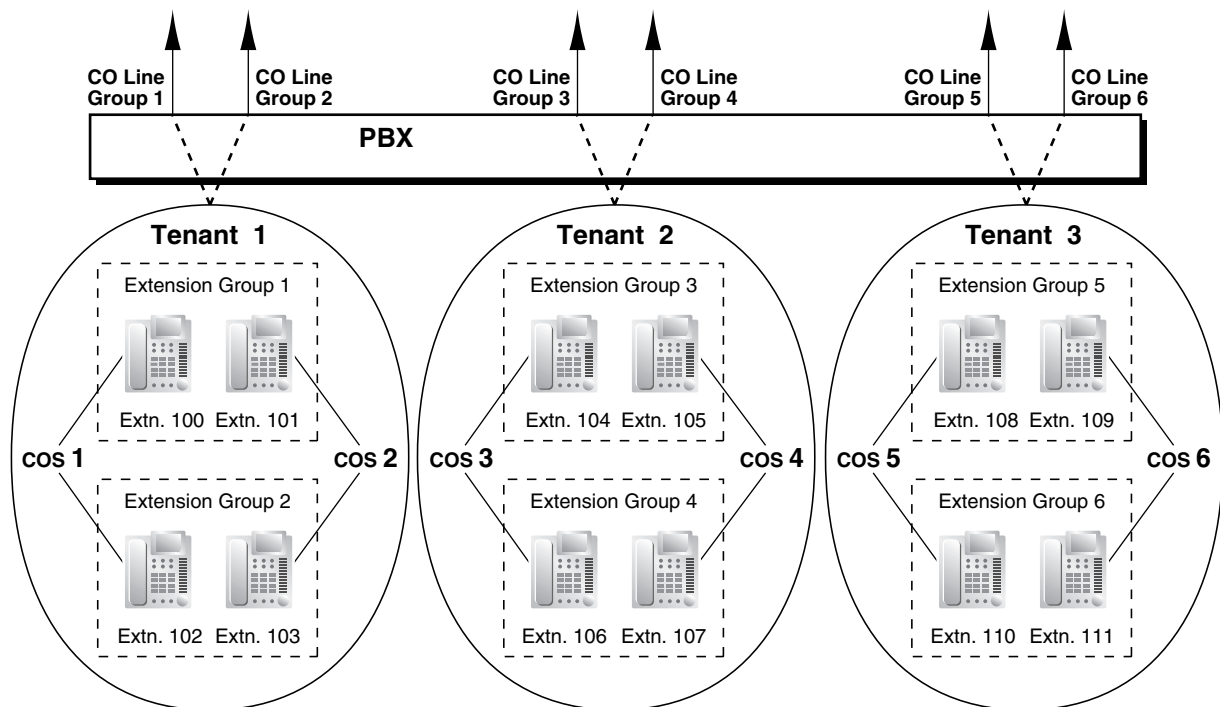

Conditions

- The following features used by incoming call distribution (ICD) group are determined by the tenant number assigned to them (→ 1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW):

- The Music on Hold heard by a caller while waiting in a queue.
- The Time Table used by the ICD group to determine the current time mode. An overflow destination and Queuing Time Table can be assigned for each time mode.

2.2.4 Time Service

Description

Time modes are used by many PBX features to determine how they will function during different times of day. For example, incoming calls can be directed to sales staff during the day and to a Voice Processing System (VPS) at night, extension users can be prohibited from making long distance calls during lunch time, etc.

There are four time modes—day, lunch, break, and night. The start and end times of each time mode are programmed for each day of the week in a Time Table. Each Time Table has a number which corresponds to the tenant it serves, i.e., Tenant 1 uses Time Table 1, etc.

1. Time Service Switching Mode

The current time mode can switch automatically to another time mode at the preprogrammed time assigned in the Time Table. It is possible, however, to switch time modes manually.

Whether time modes are normally switched manually or automatically is determined through system programming (→ Time Service Switching Mode [101]). Each tenant is assigned a switching mode.

Time Mode Switching	Description	Condition
Automatic	The current time mode will switch automatically to another time mode at the time programmed in the tenant's Time Table, and can be switched manually by pressing the Time Service button or by dialing the Time Service Switch feature number.	The current time mode (day/lunch/break/night) and the switching mode (automatic/manual) can be switched manually by an extension assigned as a manager, or by an extension whose Class of Service (COS) is authorized (→ Time Service Manual Switching [514]).
Manual	The current time mode will switch only when the Time Service button is pressed or when the Time Service Switch feature number is dialed.	

2. Time Table

Each tenant has a Time Table that is used when the tenant is in Automatic Time Service Switching mode. Each Time Table has four basic modes—day, lunch, break, and night—and also provides for multiple "breaks", such as morning breaks and afternoon breaks, and multiple "days", such as the morning shift and the afternoon shift following lunch.


A tenant's Time Table is programmed to control when each time mode starts (and therefore, ends) and can be programmed separately for each day of the week.

Each Time Table has a number which corresponds to the tenant number of the tenant it serves. (Tenant 1 uses Time Table 1, etc.)

[Programming Example: Time Table]


Time Schedule		Time Table No. (Tenant No.)			
		1	2	3	4
MON	Day 1	09:00	15:00	11:00	12:00
	Lunch	12:00	18:30		15:00
	Day 2	13:00	19:00		18:00
	Break 1 start	15:00	20:30		06:00
	Break 1 end	15:15	20:45		
	Break 2 start		22:30		21:00
	Break 2 end		22:45		21:15
	Night	18:00	01:00	22:00	06:15
TUE	Day 1	09:00	15:00	11:00	

[Visualization of Time Schedule for Tenant 1]

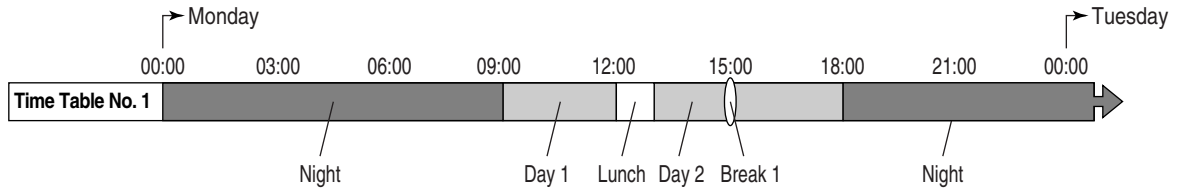

Note that in this example, the day mode (Day 2) resumes automatically when the break mode (Break 1) ends.

[Visualization of Time Schedule for Other Tenants]

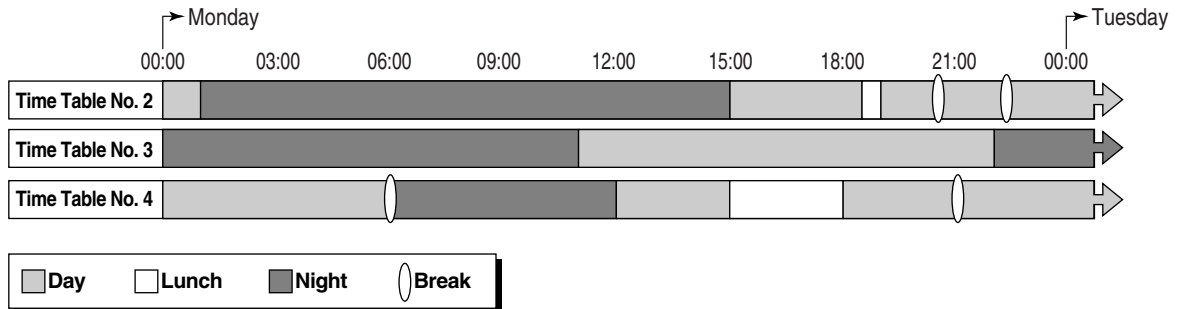

Note that time modes can be arranged as they are needed (for example, night mode can occur in the morning and afternoon, if necessary) and not all time modes need to be used in a tenant's time schedule.

Also note that Tenant 4's Break 1 is followed by the night mode because no end time is programmed for the break.

3. Features Using Time Service

The following features can be programmed separately for each time mode:

- a) Destination of incoming CO line calls (Direct In Line (DIL)/Direct Inward Dialing (DID)) (→ 1.1.1 Incoming CO Line Call Features)
- b) Destination of calls handled by Intercept Routing (→ 1.1.1.5 Intercept Routing)
- c) Destination of calls that are overflowed while waiting in a queue for an available agent of an incoming call distribution (ICD) group (→ 1.2.2.5 Overflow Feature)

- d) Destination of incoming doorphone calls (→ 1.15.1 Doorphone Call)
- e) Destination of Operator Calls (→ 2.2.5 Operator Features)
- f) Toll Restriction (TRS) level of each COS
- g) COS numbers which are permitted/restricted to access certain CO line groups (External Call Block) (→ 1.5.5.3 CO Line Access)
- h) Outgoing Message (OGM) for Timed Reminder (→ 1.25.4 Timed Reminder)
- i) Queuing Time Table used by an ICD group (→ 1.2.2.3 Queuing Feature)
- j) Intercept time for Intercept Routing—No Answer (→ 1.1.1.5 Intercept Routing)
- k) Intercept time for DISA Intercept Routing—No Answer (→ 1.15.6 Direct Inward System Access (DISA))

[Programming Example: DID Table]

The DID Table can be programmed to direct calls to a different destination for each time mode based on the number dialed by the caller. Calls can, for example, be directed to an ICD group during the day mode, or to the Voice Mail (VM) service of a VPS during the lunch and night modes.

Location	DID No.	Tenant (Time Table) No.	DID Destination			
			Day	Lunch	Break	Night
1	123-4567	1	105	150	105	150
2	123-2468	2	210	200	210	200

Explanation:

A CO line call with the DID number "123-4567" is received at 20:00.

- 1) The call will be handled by Time Table 1.
- 2) The current time mode is "night" (shown in "Programming Example: Time Table", above).
- 3) The call is directed to extension 150, which is a floating extension number used by the VPS (programming not shown here).

4. Holiday Mode

The PBX can also accommodate 24 different holidays. The start and end date of each holiday can be programmed, and all holidays are assigned a single time mode. For example, if the "night" mode is assigned as the time mode for holidays, and a holiday begins December 31st and ends January 1st, all PBX features will use their "night" settings from 0:00 A.M. on December 31st until 0:00 A.M. on January 1st.

5. Time Service Button

A flexible button can be customized as one of the following Time Service buttons:

- a) Day/Night button
- b) Day/Night/Lunch button
- c) Day/Night/Break button
- d) Day/Night/Lunch/Break button

These buttons can be used to switch the current time mode: pressing the Day/Night button will toggle between the day and night modes, for example.

Each Time Service button will display the current time mode using a different light pattern or color, as shown below.

Light Pattern	Current Time Mode
Off	Day
Red on	Night
Green on	Lunch
Slow green flashing	Break
Slow red flashing	Holiday

Note

Pressing a Time Service button will change the current time mode only if the COS assigned to the extension is authorized to do so (→ Time Service Manual Switching [514]) or if the extension is assigned as a manager. All other extension users can press this button on their proprietary telephones (PTs) to display the current time mode.

Conditions

- The start times of the following time modes can be specified through PC programming as well as PT programming (→ Time Service Starting Time [102]).
 - Day 1 and 2
 - Lunch
 - Night

The start and end times of the following break modes can be specified through PC programming only.

- Break 1
- Break 2
- Break 3

Note that if an end time is programmed for a break, the day mode will start or resume at this time, as shown previously in "Visualization of Time Schedule for Tenant 1" example. If no end time is programmed, the break will continue until the start of the next time mode, as shown in Time Table 4 in "Visualization of Time Schedule for Other Tenants".

- **Time Service Switching Mode (Automatic/Manual) Button**
Any flexible button can be customized as the Time Service Switching Mode (Automatic/Manual) button.

Feature References

- 1.8.1 Toll Restriction (TRS)
- 1.18.2 Flexible Buttons
- 2.2.3 Tenant Service

Operation References

- 1.7.9 Time Service
- 2.1.2 Time Service Mode Control

2.2.5 Operator Features

Description

This PBX supports separate operators for both the PBX and each tenant. Any extension or incoming call distribution (ICD) group can be designated as an operator. Operators are the destination of Operator Calls.

Type	Description
PBX operator	A different extension or ICD group can be assigned as a PBX operator for each time mode (→ Operator Assignment [006]).
Tenant operator	Each tenant can be assigned an operator. This operator is the same for all time modes and can be either an extension or an ICD group. A tenant's operator does not need to be an extension assigned to the tenant it serves.

Operator Call

An extension user can call an operator by dialing the preprogrammed Operator Call feature number, often simply, "0". When an Operator Call is made, the call is directed to the tenant operator of the calling extension's tenant. If no tenant operator is assigned, the call is routed to the PBX operator. The tenant number of the calling extension determines the current time mode which is then used to determine the current PBX operator.

If neither a tenant operator nor a PBX operator is assigned, the caller will hear a reorder tone.

Conditions

- An extension or ICD group can be assigned as both a tenant operator and the PBX operator.
- The same tenant operator can be assigned as the operator for multiple tenants.

Feature References

2.2.3 Tenant Service

Operation References

1.2.1 Basic Calling

2.2.6 Manager Features

Description

An extension assigned as a manager (manager extension) is allowed to use certain features which most extensions cannot. Class of Service (COS) programming determines which extensions are manager extensions (→ Manager Assignment [511]) and can therefore use the following manager features:

Feature		Description	Manager Password	Details in
Manager Programming	Manager Password Change	Changes the manager password.	Required	–
	Verified Code Personal Identification Number (PIN) Set	Sets a Verified Code PIN for each Verified Code.	Required	• 1.8.5 Verified Code Entry
	Remote PIN Clear	Clears the extension PIN of an extension remotely, or a verified code PIN. PIN Lock is also unlocked.	Required	• 1.25.1 Extension Personal Identification Number (PIN) • 1.8.5 Verified Code Entry
	Remote Extension Lock	Sets or cancels the Extension Lock on an extension remotely.	Required	• 1.8.2 Extension Lock
Dial Tone Transfer		Changes the Toll Restriction (TRS) level of an extension temporarily, allowing the extension user to make a normally unauthorized call.	Not required	• 1.8.3 Dial Tone Transfer
Outgoing Message (OGM)		Records and plays back OGMs.	Not required	• 1.15.5 Outgoing Message (OGM)
Time Service		Switches the time mode manually.	Not required	• 2.2.4 Time Service
BGM—External		Turns the External BGM on and off.	Not required	• 1.15.4 Background Music (BGM)
NDSS Monitor Release		Removes the monitor function from an NDSS button.	Not required	• 1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

Conditions

WARNING

When a third party discovers the personal identification number (PIN) (verified code PIN/extension PIN) of the PBX, there will be a risk that they will make fraudulent phone calls using the telephone line, and the cost will be charged to your own account. In order to avoid this problem, we strongly recommend the following points:

- a) Carefully maintain the secrecy of the PIN.
 - b) Specify a complicated PIN as long and random as you can make it.
 - c) Change the PIN frequently.
- **Manager Password**
Only one manager password can be assigned per PBX (→ Manager Password [112]).

Operation References

2.1 Control Features

3.2.2 Manager Programming

2.3 System Data Control

2.3.1 PC Programming

Description

Although many PBX features can be programmed using a proprietary telephone (PT) (→ 2.3.2 PT Programming), a PC connected to the PBX can use the KX-TDA Maintenance Console software to program in further detail. System programming, diagnosis, and data upload/download can be performed either through on-site programming or remote programming.

- 1) **On-site Programming:** Programming that is performed using an on-site PC connected directly to the PBX.
- 2) **Remote Programming:** Programming that is performed using an off-site PC that connects to the PBX via a CO line.

1. Connection Methods for On-site Programming

Method	Description	Required Hardware
Serial Interface (RS-232C port)	The PC is connected to the PBX via the Serial Interface (RS-232C port) of the PBX.	—
USB	The PC is connected to the PBX via the USB port located on the MPR card, or to the USB port of a USB Module attached to a digital proprietary telephone (DPT).	MPR card (preinstalled) or USB Module
LAN	The PC is connected to the PBX via Ethernet cable to the CTI-LINK card.	CTI-LINK card
Modem (connected to SLT port)*	The PC is connected to a modem, which is then connected to an SLT port of the PBX. Use the modem to dial the floating extension number assigned to the analog remote maintenance feature (→ Modem Floating Extension Number [811]) to access the PBX.	RMT card and user-supplied modem
ISDN TA (connected to ISDN extension line)*	The PC is connected to an ISDN terminal adapter (TA), which is then connected to the PBX via an ISDN extension line. Use the TA to dial the floating extension number assigned to the ISDN remote maintenance feature. (→ ISDN Remote Floating Extension Number [812])	User-supplied ISDN TA which supports CAPI

- * Remote access must be enabled through system programming (→ Remote Programming [810]) when performing on-site programming via modem or ISDN TA.

2. Connection Methods for Remote Programming

Method	Description	Required Hardware
Off-site modem	<p>Call the PBX and have the call directed to the floating extension number assigned to the analog remote maintenance feature (→ Modem Floating Extension Number [811]) using one of the following methods:</p> <p>Direct Access: Using the off-site modem, dial a telephone number with the modem which will direct your call (via Direct In Line (DIL) or Direct Inward Dialing (DID) distribution) to the floating extension number assigned to the analog remote maintenance feature.</p> <p>DISA: Using a telephone, dial a telephone number which will direct your call (via DIL or DID distribution) to a floating extension number used by the Direct Inward System Access (DISA) feature (→ 1.15.6 Direct Inward System Access (DISA)). Next, dial the floating extension number assigned to the analog remote maintenance feature. Then access the PBX with the modem.</p> <p>Call Transfer: Using a telephone, dial a telephone number which will direct your call to an operator (or other extension of the PBX) and request to be transferred to the floating extension number assigned to the analog remote maintenance feature. (→ 1.11.1 Call Transfer) Then access the PBX with the modem.</p>	RMT card and user-supplied modem
On-site modem	The modem is connected to the Serial Interface (RS-232C port) and also to either an extension port which is assigned as the DIL/DID destination, or to a CO line directly. AT commands can be sent to the modem automatically when it is connected to the Serial Interface (RS-232C port) and can be programmed beforehand, through system programming, to initialize the modem. AT commands can also be sent manually in the PT system programming mode (→ External Modem Control [801]).	User-supplied modem
ISDN TA	The TA is connected to the off-site PC and connects to the PBX via an ISDN CO line. Using the TA, dial a telephone number which will direct your call (via DIL or DID distribution) to the floating extension number assigned to the ISDN remote maintenance feature. (→ ISDN Remote Floating Extension Number [812])	User-supplied ISDN TA which supports CAPI

Conditions

- Only one system programming session is permitted at a time. Access will be denied when a second party tries to perform system programming, including system programming via a PT.

- **Programmer Code and Password for System Programming**
To access system programming, a programmer code and its password must be entered. For more details, see Section 3.1 Introduction.
- **Remote Programming Limitation**
It is possible to disable remote access through system programming (→ Remote Programming [810]). Disabling this feature will also disable the ability to perform on-site programming via modem or ISDN TA.
- If an extension user sets Walking Extension at the same time that the extension's data is being programmed through PC programming, the data may not be transferred properly. (→ 1.25.3 Walking Extension)

Connection References

- 2.3.1 MPR Card
- 2.3.3 RMT Card
- 2.6.6 CTI-LINK Card
- 3.1 Overview
- 3.2 Connection
- 3.3 Installation of the KX-TDA Maintenance Console

Feature References

- 1.1.1.2 Direct In Line (DIL)
- 1.1.1.3 Direct Inward Dialing (DID)
- 3.2 PC Programming

2.3.2 PT Programming

Description

A proprietary telephone (PT) can be used to customize the settings of the PBX or of an extension, using the following programming features:

Programming Type	Description	Example	Authorized Programmer
Personal Programming	Used by an extension user to customize the extension's settings.	PT Display Language, Call Waiting Tone, etc.	Extension user
System Programming	Used by an authorized party to customize the PBX.	Intercept Destination, ARS Mode, Date and Time, etc.	Authorized administrator or extension user
Manager Programming	Used by an extension assigned as a manager to customize the current state of an extension, or to grant special privileges temporarily to an extension user.	Switching the current time mode, Remote Extension Lock, Remote PIN Clear, etc.	Extension assigned as a manager

Conditions

- Class of Service (COS) programming determines the level of programming an extension user is authorized to perform (→ Programming Mode Limitation [516]):
 - System programming and personal programming
 - Personal programming only
 - No programming may be performed
- The extension which is connected to the lowest numbered port on the card installed in the lowest numbered slot can perform both personal programming and system programming regardless of the extension's COS.
- COS programming determines which extensions are manager extensions and can therefore perform manager programming.
- During programming, the PT is considered to be busy and will not receive calls.
- Only one system programming (including PC programming) or manager programming session is permitted at a time, i.e., these two programming features cannot be performed simultaneously by two users.
- The PBX will allow 16 simultaneous personal programming sessions, or one system or manager programming session and 15 personal programming sessions.
- **System Programming Password Level**
To access system programming, a valid password must be entered. For more details, see Section 3.1 Introduction.
- **Personal Programming Data Reset**
A PT user can return settings made through personal programming (Preferred Line Assignment, Live Call Screening Mode, etc.) to their default settings all at once.

Feature References

- 2.2.6 Manager Features
- 3.3 PT Programming

Operation References

- 3.1 Personal Programming
- 3.2 Manager Programming
- 3.3 System Programming

2.3.3 Quick Setup

Description

Basic PBX parameters can be programmed the first time the PBX is accessed with a PC using the KX-TDA Maintenance Console software.

When the PBX is accessed with the Installer Level Programmer Code and default password (→ 3.1 Introduction), for the first time (i.e., accessed after the PBX's settings have been initialized or when the PBX's settings are still set to their default values), Quick Setup will launch automatically. From here the following basic parameters can be programmed as desired:

Item	Parameter	Description
Date & Time Set	Year/Month/Date/ Hour/Minute	The date and time set on the PC can be used by default.
System Password for Installer	4–10 characters	Enter the system password for installer (→ 3.1 Introduction).
Operator & Manager	Extension Number	Assign a PBX operator. (→ 2.2.5 Operator Features) This extension will be the operator for all time modes, and is automatically assigned manager status to perform manager operations. (→ 2.2.6 Manager Features)
Flexible Numbering Type	<ol style="list-style-type: none"> Pattern 1 (with ✕) Pattern 2 (without ✕) 	<p>Select whether or not the prefix "✕" must be entered before dialing feature numbers.</p> <p>[Example] Call Pickup feature number</p> <p>Pattern 1 (with ✕): ✕41</p> <p>Pattern 2 (without ✕): 41</p> <p>Note that certain feature numbers (Line Access numbers, Operator Call, etc.) never need this prefix.</p> <p>For a list of the default flexible numbers, refer to the [Flexible Numbering Table (available while a dial tone is heard)] (→ 2.3.5 Flexible Numbering/Fixed Numbering).</p>
Operator/Local Access	<ol style="list-style-type: none"> 0/9 9/0 	Select the feature numbers for Operator Call and Idle Line Access. These will be either 0 and 9, respectively, or 9 and 0, respectively.
Remote Maintenance Number	Remote Maintenance Dial Number	Enter the complete telephone number of the PBX (including the country code). When necessary, this number will be used to access the PBX from a remote location for maintenance purposes.

2.3.4 Automatic Time Adjustment

Description

The PBX clock can be adjusted automatically in the following two ways:

1. Daylight Saving Time Setting

The start and end dates of Daylight Saving Time can be programmed. The PBX clock will automatically adjust itself one hour forward or backward at 2:00 A.M. on the programmed date, if enabled through system programming. At 2:00 A.M. on the start date, the clock will change to 3:00 A.M., and at 2:00 A.M. on the end date, the clock will change to 1:00 A.M.

Note

If a Timed Reminder (Wake-up call) is set:

- On the Daylight Saving Time start date, a reminder set for between 2:00 A.M. and 3:00 A.M. will not ring.
- On the Daylight Saving Time end date, a reminder set for between 1:00 A.M. and 2:00 A.M. will ring twice.

2. Time Information from Telephone Company

Time information can be received when

- An incoming or outgoing call through an ISDN line is received/made.
- An incoming call through an analog line with Caller ID which includes time information is received.

The PBX clock will be adjusted everyday with the first call after 3:05 AM, if enabled through system programming.

Note

If a Timed Reminder (Wake-up call) is set, the setting will not ring or will ring twice depending on the adjustment.

Conditions

- Station Message Detail Recording (SMDR) will log call information using the PBX clock so that the logging time will be overlapped at the end of Daylight Saving Time. (→ 1.23.1 Station Message Detail Recording (SMDR))

Feature References

1.25.4 Timed Reminder

2.3.5 Flexible Numbering/Fixed Numbering

Description

To dial another extension user or to access PBX features, access numbers (extension numbers or feature numbers) are required.

There are three types of numbering plans:

- 1) Flexible Numbering (available while a dial tone is heard)
- 2) Flexible Numbering (available while a busy, DND, or ringback tone is heard)
- 3) Fixed Numbering (available while dialing or talking)

1. Flexible Numbering (available while a dial tone is heard)

Extension numbers and feature numbers which are available while a dial tone is heard can be customized for easy use (→ Flexible Numbering [100]). The numbers must not conflict. It is also possible to use the default numbering (Pattern 1 or Pattern 2) shown in the following table:

- a) **Extension Numbers (Extension Numbering Scheme 1 through 32):** Extension numbers can consist of up to four digits. They consist of either a one- or two-digit leading number (0-9 or 00-99) and a one- or two-digit suffix (0-9 or 00-99). The default suffix is a two-digit number (00-99).

[Example]

If the number "3" is programmed as a leading number for the 1st extension numbering scheme, and "XX" is programmed as the additional digits, extension numbers 300 through 399 are available.

- b) **Feature Numbers:** Up to four-digit number consisting of 0–9, "*", and "#"

- c) **Other PBX Extension Numbers (Other PBX Extension Number [TIE] 01 through 16):** Up to three-digit number consisting of 0–9, "*", and "#"

[Flexible Numbering Table (available while a dial tone is heard)]

The default Flexible Numbering Table (Pattern 1 or Pattern 2) is selected when running Quick Setup (→ 2.3.3 Quick Setup).

Feature	Default	
	Pattern 1 (with *)	Pattern 2 (without *)
Extension Numbering Scheme 1—Leading Number	1	11
Extension Numbering Scheme 2—Leading Number	2	12
Extension Numbering Scheme 3—Leading Number	3	13
Extension Numbering Scheme 4—Leading Number	4	14
Extension Numbering Scheme 5—Leading Number	5	15
Extension Numbering Scheme 6—Leading Number	6	16
Extension Numbering Scheme 7–32—Leading Number	None	None
Operator Call	0	0
Idle Line Access (Local Access)	9	9
CO Line Group Access	8	8
TIE Line Access	7	None
Redial	#	#
Speed Dialing—System/Personal	**	*
Personal Speed Dialing—Programming	*30	30
Doorphone Call	*31	31
Group Paging	*33	33
External BGM on/off	*35	35
Outgoing Message (OGM) playback/record/clear	*36	36
S-CO Line Access	*37	37
Parallel Telephone Mode set/cancel	*39	39
Group Call Pickup	*40	40
Directed Call Pickup	*41	41
TAFAS—Calls through an External Pager	*42	42
Group Paging answer	*43	43
Automatic Callback Busy cancel	*46	46
User Remote Operation/Walking COS/Verified Code Entry	*47	47

2.3 System Data Control

Feature	Default	
	Pattern 1 (with ✕)	Pattern 2 (without ✕)
Wireless XDP Parallel Mode set/cancel	✕48	48
Account Code Entry	✕49	49
Call Hold/Call Hold Retrieve	✕50	50
Call Hold Retrieve—Specified with a Holding Extension Number	✕51	51
Call Park/Call Park Retrieve	✕52	52
Call Hold Retrieve—Specified with a Held CO Line Number	✕53	53
Door Open	✕55	55
External Relay	✕56	56
External Feature Access	✕60	60
COLR set/cancel	✕7✕0	7✕0
CLIR set/cancel	✕7✕1	7✕1
Switch CLIP of the CO Line/Extension	✕7✕2	7✕2
Message Waiting set/cancel/callback	✕70	70
FWD/DND set/cancel—Both	✕710	710
FWD/DND set/cancel—External	✕711	711
FWD/DND set/cancel—Internal	✕712	712
FWD/DND No Answer Timer set	✕713	713
Group FWD set/cancel—Both	✕714	714
Group FWD set/cancel—External	✕715	715
Group FWD set/cancel—Internal	✕716	716
Call Pickup Deny set/cancel	✕720	720
Paging Deny set/cancel	✕721	721
Walking Extension	✕727	727
Data Line Security set/cancel	✕730	730
Call Waiting for Intercom Calls set/cancel	✕731	731
Call Waiting for CO Line Calls (including doorphone calls, calls for an incoming call distribution group) set/cancel	✕732	732
Executive Busy Override Deny set/cancel	✕733	733
Not Ready Mode on/off	✕735	735
Log-in/Log-out	✕736	736

Feature	Default	
	Pattern 1 (with *)	Pattern 2 (without *)
Incoming Call Queue Monitor	*739	739
Hot Line program/set/cancel	*740	740
Absent Message set/cancel	*750	750
BGM set/cancel	*751	751
Remote Wake-up Call	*76*	76*
Timed Reminder set/cancel	*760	760
Printing Message	*761	761
Extension Lock set/cancel	*77	77
Time Service Switch	*780	780
Remote Extension Lock off	*782	782
Remote Extension Lock on	*783	783
NDSS Monitor Release	*784	784
Extension Feature Clear	*790	790
Extension Personal Identification Number (PIN) set/cancel	*799	799
Dial Information (CTI)	None	None
Other PBX Extension Number (TIE) 01–16	None	None
Quick Dialing 1–80	None	None

2. Flexible Numbering (available while a busy, DND, or ringback tone is heard)

Feature numbers which are available while a busy, DND, or ringback tone is heard can be customized for easy use. The numbers should be one digit (0–9, "*", or "#") and must not conflict. For a list of the default settings, refer to the following table:

[Flexible Numbering Table (available while a busy, DND, or ringback tone is heard)]

Feature	Default
Call Waiting/DND Override	1 or 2*
Executive Busy Override	3
Message Waiting set	4
Call Monitor	5
Automatic Callback Busy	6
Alternate Calling—Ring/Voice	*

* To use Call Waiting/DND Override, both "1" and "2" are available by default.

3. Fixed Numbering (available while dialing or talking)

Features which are available while dialing or talking have fixed numbers, as shown in the following table:

[Fixed Numbering Table (available while dialing or talking)]

Feature	Fixed Numbering
Pulse to Tone Conversion	*
Conference	3
Door Open	5

Conditions

- The following are examples of feature number conflicts: 1 and 11, 0 and 00, 2 and 21, 10 and 101, 32 and 321, etc.
- **Feature number + Additional number (Parameter)**
Certain flexible feature numbers require additional digits to make the feature active. For example, to set Call Waiting, the feature number for "Call Waiting" must be followed by "1" and to cancel it, the same feature number should be followed by "0".
- Rotary single line telephone (SLT) users cannot dial feature numbers which include "*" or "#".
- Portable station (PS) users cannot use the following features:
 - Personal Speed Dialing
 - OGM playback/record
 - S-CO Line Access
 - Parallel Telephone Mode set/cancel
 - Walking Extension
 - BGM set/cancel
 - Timed Reminder

Operation References

4.2.1 Feature Number Table

2.3.6 Floating Extension

Description

Virtual extension numbers can be assigned to resources to make them as easily accessible as extensions. These numbers are referred to as "floating extension numbers" and can be assigned as a destination of incoming calls, intercepted calls, etc.

This feature is also known as Floating Station.

Resource		Description
Device	External Pager	Used as the destination for the Trunk Answer From Any Station (TAFAS) feature (→ External Pager Floating Extension Number [700]). (→ 1.15.3 Trunk Answer From Any Station (TAFAS))
	Outgoing Message (OGM)	Used to play messages for callers via the Direct Inward System Access (DISA) feature (→ Outgoing Message (OGM) Floating Extension Number [730]). (→ 1.15.6 Direct Inward System Access (DISA))
	Analog Remote Maintenance	Used to access PC programming mode through a modem on a PC (→ Modem Floating Extension Number [811]).
	ISDN Remote Maintenance	Used to access PC programming mode through an ISDN terminal adaptor (TA) on a PC (→ ISDN Remote Floating Extension Number [812]).
Group	Incoming Call Distribution (ICD) Group	Used to call an ICD group (→ ICD Group Floating Extension Number [622]). (→ 1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW)
	PS Ring Group	Used to call a PS ring group. (→ 1.22.2 PS Ring Group)
	VM (DPT) Group	Used to call a VM (DPT) group (→ VM Group Floating Extension Number [660]).
	VM (DTMF) Group	Used to call a VM (DTMF) group.

Conditions

- Certain resources which are assigned a floating extension number can also be assigned a name (→ ICD Group Name [623], → Outgoing Message (OGM) Name [731]).

Feature References

- 1.21.1 Voice Mail (VM) Group
- 2.3.1 PC Programming

2.3.7 Software Upgrading

Description

It is possible to upload software from a PC to the PBX to upgrade the following:

Data File	Storing Area
Main Processing (MPR) software data	Operating system data area on the MPR card
Default system programming data for each country/area	Country/area data area on the MPR card
Language data for PT display	Each language data area on the MPR card. There are two types: Type 1: Proprietary telephone (PT) display except for PT system programming (→ 2.3.2 PT Programming) (five languages max.) Type 2: PT system programming data (one language max.)
LPR software data	Flash ROM on the appropriate optional service card (DHLC, DLC, T1, PRI, etc.)
Cell Station (CS) software data	Flash ROM on the CS

Conditions

- The software version of the MPR card can be confirmed through system programming (→ Main Processing (MPR) Software Version Reference [190]).

Connection References

2.3.1 MPR Card

2.4 Fault Recovery/Diagnostics

2.4.1 Power Failure Transfer

Description

If the power supply to the PBX fails, specific single line telephones (SLTs) are automatically connected to specific CO lines (**Power Failure Connections**). The PBX will switch from the current connections to Power Failure Connections, and all existing conversations will be disconnected.

Only CO line conversations handled by Power Failure Connections can be made during a power failure.

Conditions

- The analog CO line cards, extension cards, and the number of ports which can be used for Power Failure Connections are as follows:

CO Line Cards: LCOT16 (four ports) and LCOT8 (two ports).

Extension Cards: MSLC16 (four ports), SLC16 (four ports), DHLC8 (two ports) and SLC8 (two ports).

Connect only one extension card to one CO line card.

Note

When power is restored to the PBX and the MPR is recovering, Power Failure Connections remain established so that any existing conversations can be maintained.

- Only CO line conversations are possible during a power failure. All other features will not work.

Connection References

2.11.1 Power Failure Connections

2.4.2 Power Failure Restart

Description

When the electricity is turned back on, the PBX restarts, loads its stored data automatically, and logs the event as a System Restart in the error log.

Conditions

- In the event of a power failure, PBX memory is protected by a factory-installed lithium battery. There is no memory loss except the memories of Automatic Callback Busy (Camp-on) (→ 1.7.1 Automatic Callback Busy (Camp-on)) and Call Park (→ 1.12.2 Call Park).


2.4.3 Local Alarm Information

Description

When the PBX detects an error, the System Alarm button on the proprietary telephone (PT) of an extension which is allowed to use this feature through system programming (a maximum of two extensions per PBX), lights red. Pressing the button will show the error number on the display. If multiple errors occur, the error number will be displayed in order of highest priority to lowest. The System Alarm button light turns off automatically after all error numbers have been displayed.

For details regarding errors and their solutions, refer to the Installation Manual.

[Error Example]

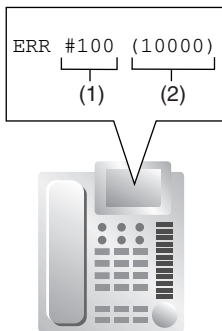

[Explanation]

Number in the Example	Item	Description
(1)	Error Code	Shows three-digit error code.
(2)	Sub Code	Shows five-digit sub code (XYYZZ). X: Cabinet number (1–4) YY: Slot number (00–11) ZZ: Physical port number (01–16)

Conditions

- **System Alarm Button**
Any flexible button can be customized as the System Alarm button.
- If an extension allowed to utilize this feature uses PC Console or PC Phone, the alarm information will also be displayed on the PC.
- If an extension allowed to utilize this feature uses PC Console or PC Phone, the alarm information will be sent to the preprogrammed party via PC Console or PC Phone. PC Console and PC Phone use e-mail to send the information.
- The alarm information will be logged on the Station Message Detail Recording (SMDR) if enabled through system programming.
- The PBX can be automatically diagnosed at a preprogrammed time everyday.

Connection References

4.1.5 Troubleshooting by Error Log

Feature References

1.18.2 Flexible Buttons

1.23.1 Station Message Detail Recording (SMDR)

Section 3

Programming Instructions

3.1 Introduction

3.1.1 Introduction

These programming instructions are designed to serve as an overall system programming reference for the Panasonic Hybrid IP-PBX.

The PBX has default settings which can be changed to meet your needs. These settings control the manner in which the PBX features described in this Feature Guide function, and changing these settings is referred to as "system programming".

System programming can be performed by only one person at a time. A second person attempting to program the system will be denied access to system programming.

Ways to Program

There are two programming methods:

- PC Programming**
 All system programming can be performed. Installing and starting the Maintenance Console is described in Section 3.2 PC Programming. Individual PC programming items are described in the on-line help of the Maintenance Console.
- PT (Proprietary Telephone) Programming**
 A subset of system programming can be performed. PT programming is described in Section 3.3 PT Programming. An extension user can perform system programming by entering 3-digit programming numbers with a PT.

3.1.2 Password Security

To maintain system security, system passwords are required to access programming functions of the PBX. The following system passwords are available:

Password		Description
PT	System Password (PT) for User	Used to access user-level PT programming. Permitted PT programming settings are available. Access to each system programming item can be controlled.
	System Password (PT) for Administrator	Used to access administrator-level PT programming. All PT programming settings are available.
PC	System Password (PC) for User	Used with the user-level programmer code to access user-level PC programming. The installer can specify which system programming settings are available.
	System Password (PC) for Administrator	Used with the administrator-level programmer code to access administrator-level PC programming. The installer can specify which system programming settings are available.
	System Password (PC) for Installer	Used with the installer-level programmer code to access installer-level PC programming. All system programming settings are available.

Warning to the Administrator or Installer regarding the system password

1. Please provide all system passwords to the customer.
2. To avoid unauthorized access and possible abuse of the PBX, keep the passwords secret, and inform the customer of the importance of the passwords, and the possible dangers if they become known to others.
3. The PBX has default passwords preset. For security, change these passwords the first time that you program the PBX.
4. Change the passwords periodically.
5. It is strongly recommended that passwords of 10 numbers or characters be used for maximum protection against unauthorized access. For a list of numbers and characters that can be used in system passwords, refer to Section 3.1.3 Entering Characters.
6. If a system password is forgotten, it can be found by loading a backup of the system data into a PC, and checking the password using the KX-TDA Maintenance Console software. If you do not have a backup of the system data, you must reset the PBX to its factory defaults and reprogram it. Therefore, we strongly recommend maintaining a backup of the system data. For more information on how to back up the system data, refer to the on-line help of the Maintenance Console. However, as system passwords can be extracted from backup copies of the system data file, do not allow unauthorized access to these files.

3.1.3 Entering Characters

The characters that can be used when performing system programming differ depending on whether programming is being done using a PT or a PC.

PT Programming

The following characters can be used when storing a name, message, or other text entry data using a PT. The tables below show you the characters available on each button.

Table 1 (Standard mode)

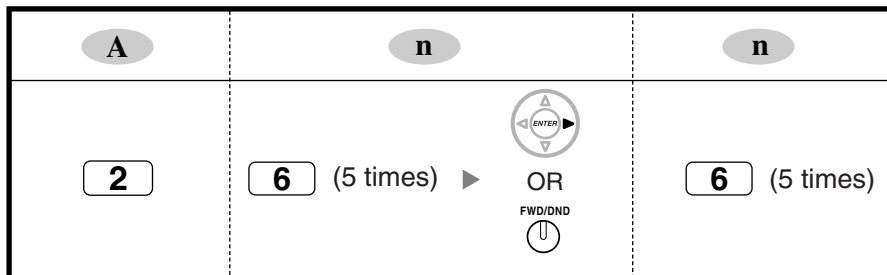
Times Buttons	1	2	3	4	5	6	7	8	9
1	!	?	"	1					
2	A	B	C	a	b	c	2		
3	D	E	F	d	e	f	3		
4	G	H	I	g	h	i	4		
5	J	K	L	j	k	l	5		
6	M	N	O	m	n	o	6		
7	P	Q	R	S	p	q	r	s	7
8	T	U	V	t	u	v	8		
9	W	X	Y	Z	w	x	y	z	9
0	(space)	.	,	'	:	;	0		
*	/	+	-	=	<	>	*		
#	\$	%	&	@	()	€	£	#

Table 2 (Option mode)

Times Buttons	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
1	!	?	"	ä	ö	ü	1								
2	A	B	C	a	b	c	À	Á	Â	Ã	Ä	Å	Æ	Ç	2
3	D	E	F	d	e	f	Ð	È	É	Ê	Ë	3			
4	G	H	I	g	h	i	Ì	Í	Î	Ï	4				
5	J	K	L	j	k	l	5								
6	M	N	O	m	n	o	Ñ	Ò	Ó	Ô	Õ	Ö	Ø	Œ	6
7	P	Q	R	S	p	q	r	s	Š	ß	7				
8	T	U	V	t	u	v	Û	Ú	Û	Ü	8				
9	W	X	Y	Z	w	x	y	z	Ý	Ž	9				
0	(space)	.	,	'	:	;	0								
*	/	+	-	=	<	>	*								
#	\$	%	&	@	()	€	£	#						

[Example of Character Entry]

To enter "Ann":

**Notes**

- To move the cursor left or right, press ◀ or ▶, respectively.
- To delete a character, move the cursor left or right to highlight it, then press CLEAR.
- Press SELECT to cycle through the characters located on a dialing button in reverse order.
- To toggle between Table 1 and Table 2 when using a KX-T7600 series PT, press the leftmost soft button.

PC Programming

The following characters can be used when storing a name, message, password or other text entry data using a PC.

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
20	SP	!	"	#	\$	%	&	'	()	*	+	,	-	.	/
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[/]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	DEL
80	€		,	f	„	...	†	‡	^	%o	š	≤	œ		ž	
90		‘	’	“	”	•	—	~	™	š	≥	œ		ž	ÿ	
A0	NBSP	ı	¢	£	¤	¥	¦	§	¨	©	ª	«	¬	SHY	®	¯
B0	°	±	²	³	´	µ	¶	·	,	¹	º	»	¼	½	¾	¿
C0	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
D0	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
E0	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
F0	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ	ÿ

3.2 PC Programming

3.2.1 Installing and Starting KX-TDA Maintenance Console

System programming, diagnosis, and data upload/download can be performed with a PC using the KX-TDA Maintenance Console software.

This section briefly describes how to install and start KX-TDA Maintenance Console on a PC which is connected to the PBX via USB.

System Requirements

Operating System

- Microsoft® Windows® 98 SE, Windows Me, Windows 2000, or Windows XP

Hardware

- CPU: 133 MHz Intel® Pentium® or faster
- RAM: At least 64 MB of available RAM (128 MB recommended)
- Hard disk space: At least 100 MB

Installing KX-TDA Maintenance Console

Notes

- Make sure to install and use the KX-TDA Maintenance Console version 2.0.
- To install or uninstall the software on a PC running Windows 2000 Professional or Windows XP Professional, you must be logged in as a user which is in either the "Administrators" or "Power Users" group.
- When the PBX is first connected to the PC via USB, a wizard should appear and ask you to select the appropriate USB driver. Browse for and select the KX-TDA USB driver, which is copied to the local drive during installation.




1. Copy the KX-TDA Maintenance Console setup file to a local drive on the PC. (Its icon is shown here, on the left.)
2. Double-click the setup file to run the installer.
3. Follow the on-screen instructions provided by the installation wizard.

Starting KX-TDA Maintenance Console

Note

The screenshots shown here are for reference only, and may differ from the screens displayed on your PC.


1. Connect the PC to the PBX with a USB cable.
2. Start **KX-TDA Maintenance Console** from the start menu.

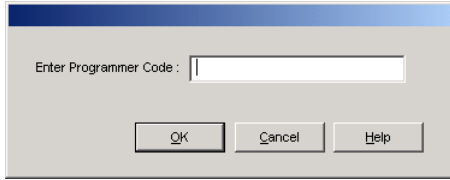

3. Enter a valid programmer code (**INSTALLER**, **ADMIN**, or **USER**), then click [OK].

Note


When starting KX-TDA Maintenance Console for the first time (i.e., either when the PBX is still set to the factory default settings, or after initializing the PBX), Quick Setup can be launched automatically by entering the Installer Level Programmer Code and password. (→ 2.3.3 Quick Setup)

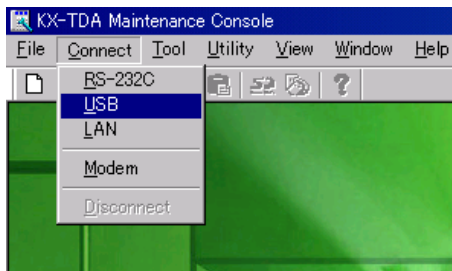

4. Click "**Connect**" → "**USB**" from the menu bar.

Note


To connect to the PBX via USB, the KX-TDA USB driver must be installed on the PC, as explained above in "Installing KX-TDA Maintenance Console".

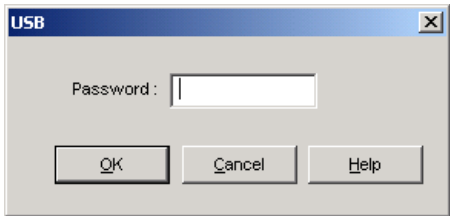


5. Enter the password appropriate to the programmer code entered in Step 2 and click [OK].

Note

The password for each programmer code is **1234** by default. (→ 2.3.1 PC Programming)

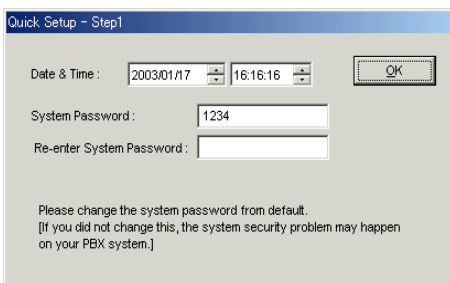

6. Follow the Quick Setup instructions if starting KX-TDA Maintenance Console for the first time, otherwise, proceed to the next step.

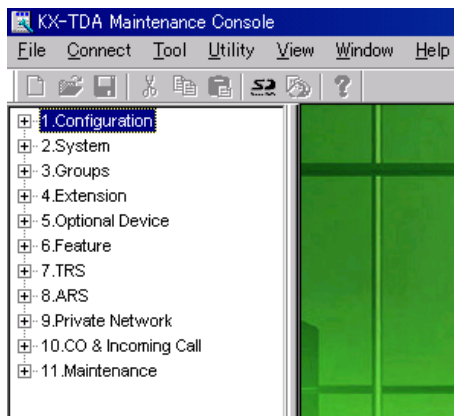

7. The program menu appears. You may now begin programming the PBX.

Notes

- During long programming sessions, it is highly recommended that you periodically save the system data to the SD Memory Card. If the PBX suffers a sudden power failure or if the system is reset for some reason and all system data is lost, it can be restored from the SD Memory Card. To save the system data to the SD Memory Card, either click the "**SD Memory Backup**" icon, or exit KX-TDA Maintenance Console and click "Yes" to save when prompted.
- When programming PBX data which can be displayed on a proprietary telephone (PT) (extension names, group names, System Speed Dialing names, etc.), it is possible to enter characters which cannot be displayed on a KX-T7600 series PT. Characters which can be displayed on a KX-T7600 series PT are shown below in the white cells.

	00	01	02	03	04	05	06	07	08	09	0a	0b	0c	0d	0e	0f
00																
10																
20		!	"	#	\$	%	&	'	()	*	+	,	-	.	/
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
80	€		,	f	„	...	†	‡	^	%	Š	<	Œ		Ž	
90		‘	’	“	”	•	—	—	~	™	š	>	œ		ž	ÿ
a0		ı	¢	£	¤	¥	¦	§	¨	©	ª	«	¬		®	¯
b0	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¼	½	¾	¿
c0	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
d0	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
e0	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
f0	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ	ÿ

- The PC will not perform any shutdown operation, or enter the power-saving system standby mode while the KX-TDA Maintenance Console is connected to the PBX. To perform either of the operations above, first close the connection to the PBX.
- Software features, design, and system requirements are subject to change.

CAUTION

Do not remove the SD Memory Card while power is supplied to the Hybrid IP-PBX. Doing so may cause the Hybrid IP-PBX to fail to start when you try to restart the system.

3.3 PT Programming

3.3.1 Programming Instructions




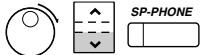

 



 

 
 
 
 




Requirements

PBX settings can be customized through system programming by using a proprietary telephone (PT) with a multiline display, such as the KX-T7636. To access system programming, the Class of Service (COS) assigned to the PT's extension must be programmed to allow system programming, or the PT must be connected to the lowest numbered port on the card installed in the lowest numbered slot.

Only one system programming session can be performed at a time, i.e., only one extension user can access system programming at a time. This includes PC programming.

For a list of characters that can be entered during system programming, see Section 3.1.3 Entering Characters.

 Buttons and Functions


Fixed Buttons		Function
T7600/IP-PT	T7200/T7400	
		PREVIOUS
		NEXT
		➡ (Page up)
		⬅ (Page down)
		ENTER
	—	Back to Previous Menu (CANCEL)
		SHIFT
		END
		CLEAR
		SELECT
		PROGRAM
		FLASH
		SECRET

Entering System Programming Mode


Using a PT to perform system programming allows an authorized extension user to set a wide range of PBX features and parameters.

There are two levels of system programming that can be performed with a PT—administrator level programming and user level programming.

Administrator Level: All system programming that can be performed with a PT is accessible.

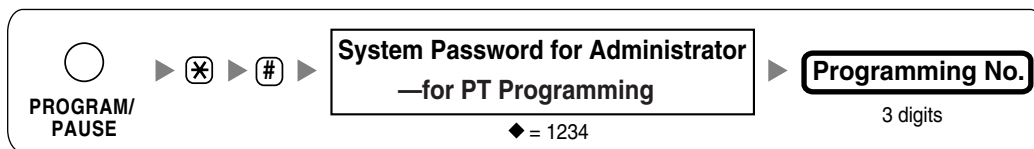

User Level: System programming that has been made accessible to PT users through PC programming can be performed.

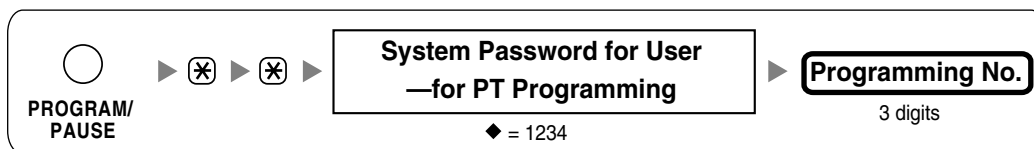

Note

◆ is used throughout these pages to indicate the default value for the given setting.

Programming Structure

Programming Number	Programming Group Title	Description
[0XX]	Basic Programming	Frequently used programming steps
[1XX]	System Management Programming	Global system parameters
[2XX]	Time Programming	Flexible system timers
[3XX]	TRS/ARS Programming	Toll Restriction (TRS) and Automatic Route Selection (ARS) parameters
[4XX]	CO Line Programming	CO line and CO line group settings
[5XX]	COS Programming	COS parameters
[6XX]	Extension Programming	Assignment of extension features
[7XX]	Resource/Interface Programming	Assignment of various interfaces of the PBX
[8XX]	SMDR & Maintenance Programming	Setting of Station Message Detail Recording (SMDR) and maintenance features
[9XX]	Card Programming	Used to display the cards currently installed in the PBX, or to "delete" a card from system programming before physically removing it.

Extension Personal Identification Number (PIN) [005]



WARNING

When a third party discovers the personal identification number (PIN) (verified code PIN/extension PIN) of the PBX, there will be a risk that they will make fraudulent phone calls using the telephone line, and the cost will be charged to your own account. In order to avoid this problem, we strongly recommend the following points:

- Carefully maintain the secrecy of the PIN.
- Specify a complicated PIN as long and random as you can make it.
- Change the PIN frequently.

Operator Assignment [006]




Console Paired Telephone [007]



Note


This program is available after the port connected to the DSS Console is assigned as "Console" in Terminal Device Assignment [601].

Absent Message [008]

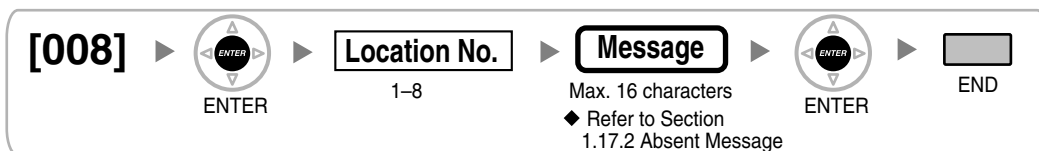


3.3.3 System Management Programming


Flexible Numbering [100]

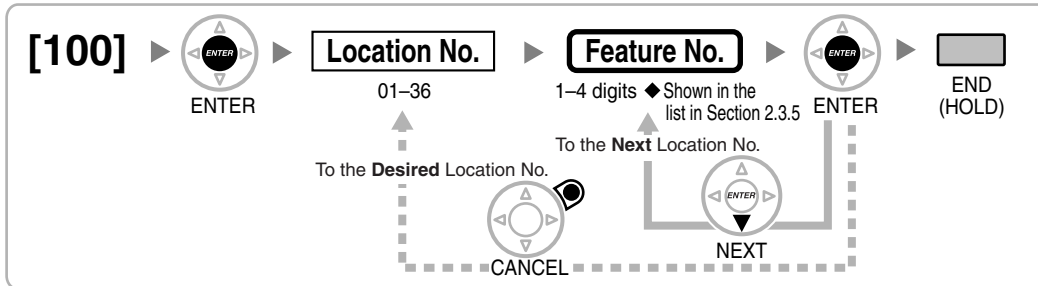


Time Service Switching Mode [101]

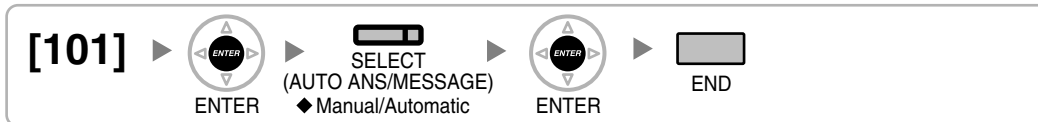

Time Service Starting Time [102]

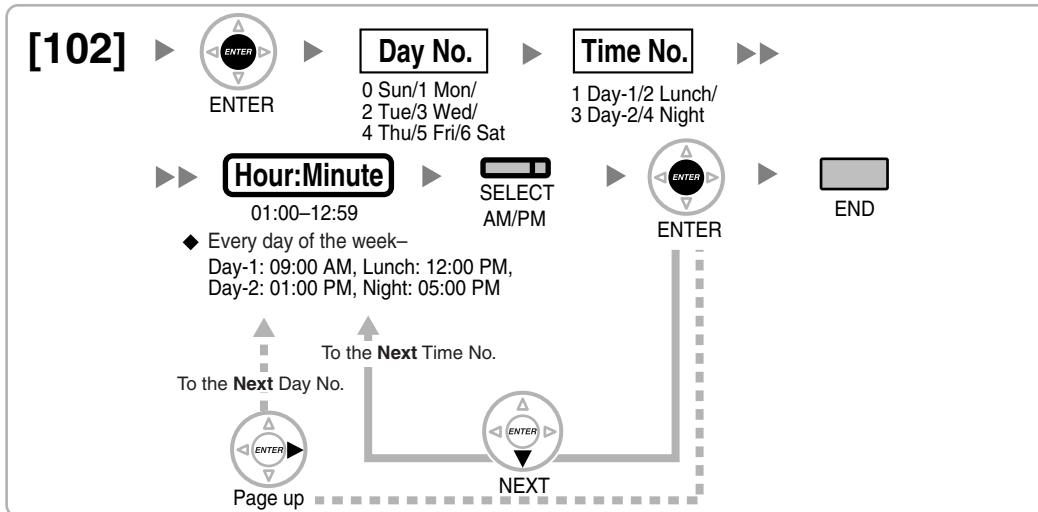

Idle Line Access (Local Access) [103]

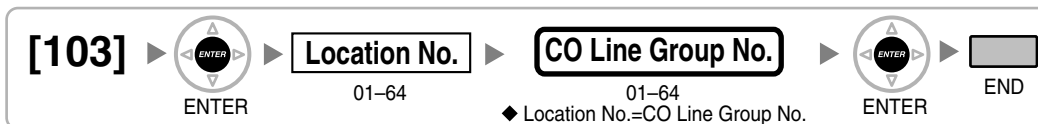

System Password for Administrator—for PT Programming [110]




System Password for User—for PT Programming [111]



Manager Password [112]




Verified Code [120]

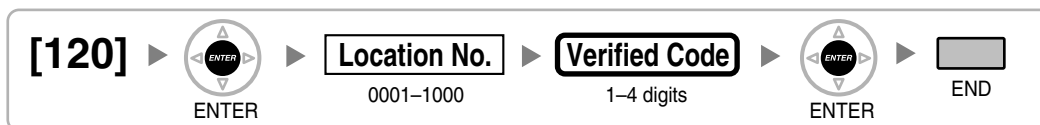

Verified Code Name [121]



Verified Code Personal Identification Number (PIN) [122]

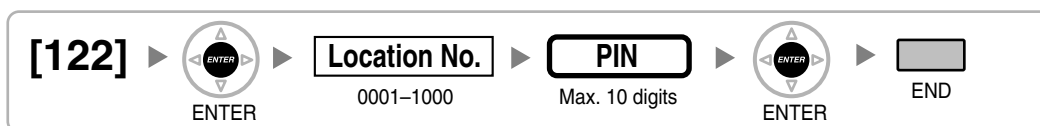


WARNING

When a third party discovers the personal identification number (PIN) (verified code PIN/extension PIN) of the PBX, there will be a risk that they will make fraudulent phone calls using the telephone line, and the cost will be charged to your own account. In order to avoid this problem, we strongly recommend the following points:

- a) Carefully maintain the secrecy of the PIN.
- b) Specify a complicated PIN as long and random as you can make it.
- c) Change the PIN frequently.

Verified Code COS Number [123]

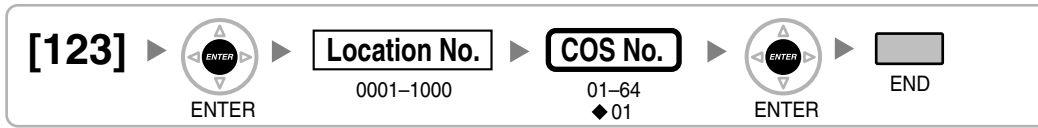

Main Processing (MPR) Software Version Reference [190]



3.3.4 Time Programming


Hold Recall Time [200]



Transfer Recall Time [201]



Intercept Time [203]




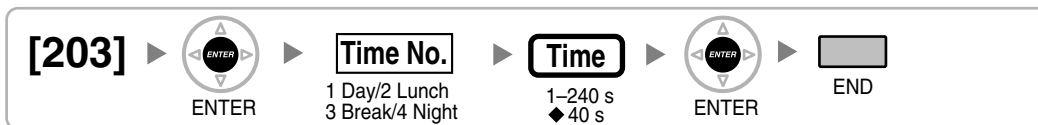


Hot Line Waiting Time [204]




Automatic Redial Repeat Times [205]

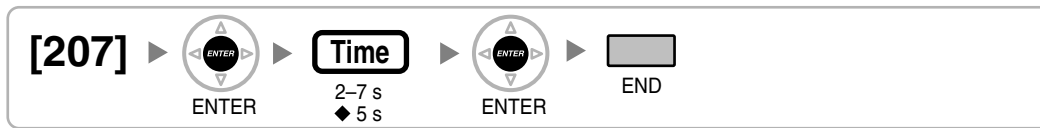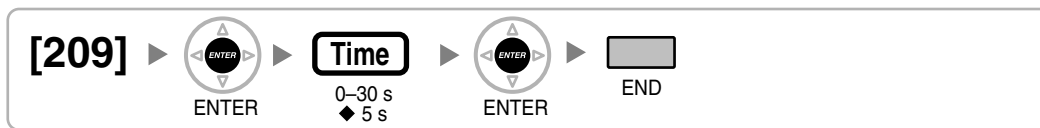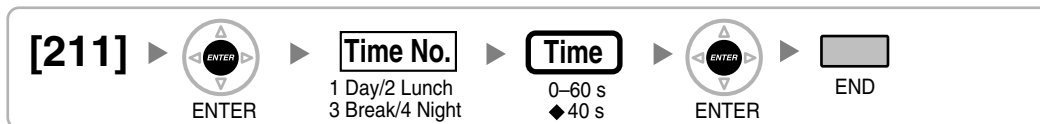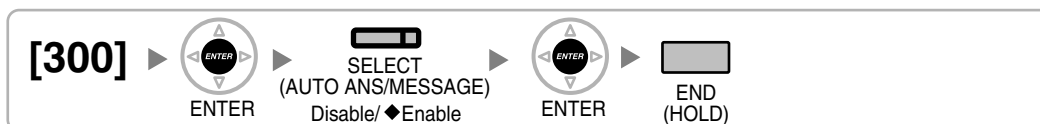


Door Open Duration [207]**Call Duration Count Starting Time for LCOT [208]****DISA Delayed Answer Time [209]****DISA CO-to-CO Line Call Prolong Time [210]****DISA Intercept Time [211]****3.3.5 TRS/ARS Programming****TRS Override by System Speed Dialing [300]**

TRS Denied Code [301]

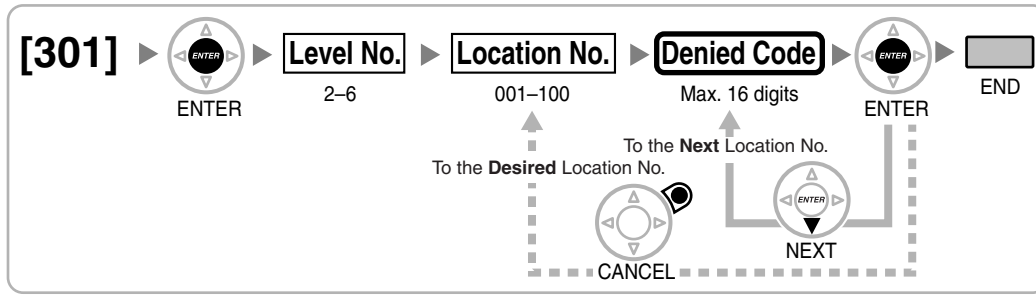


TRS Exception Code [302]

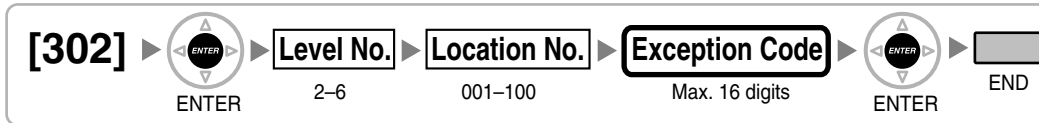

Special Carrier Access Code [303]



Emergency Number [304]

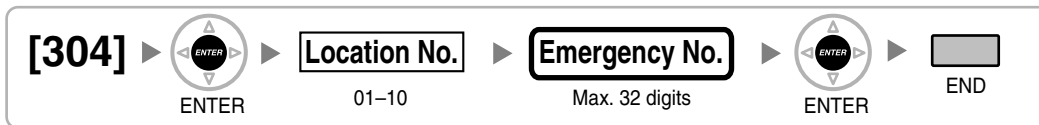

ARS Mode [320]



ARS Leading Number [321]




ARS Routing Plan Table Number [322]




ARS Exception Number [325]



ARS Routing Plan Time Table [330]

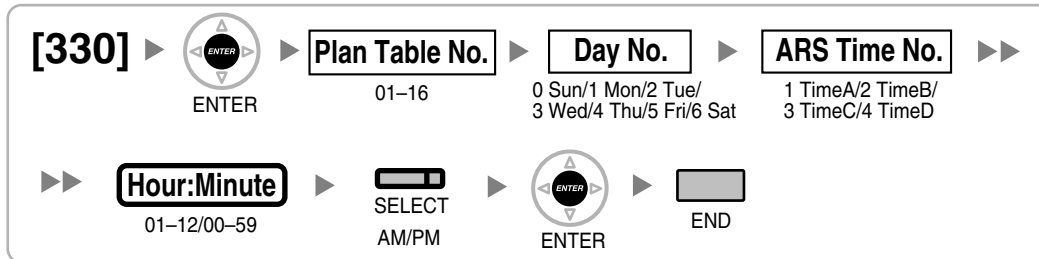


ARS Routing Plan Table (1-16) [331-346]

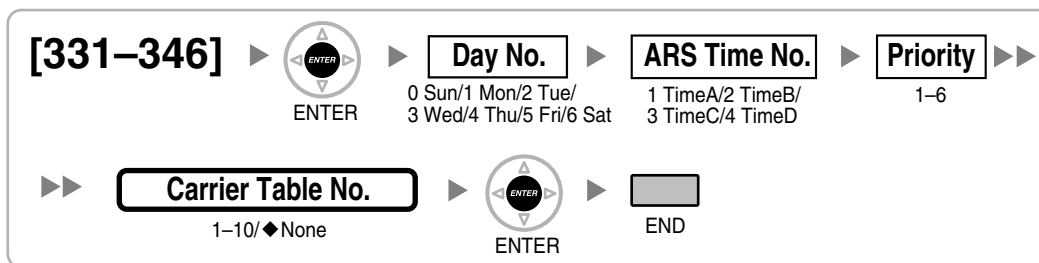


ARS Carrier Name [350]




ARS CO Line Group for Carrier Access [351]

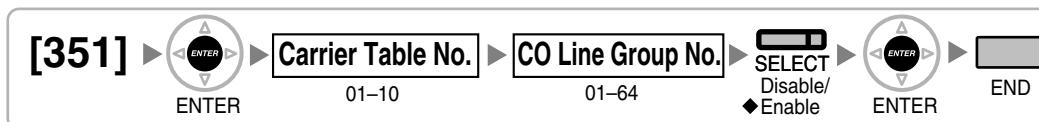

ARS Removed Number of Digits for Carrier Access [352]

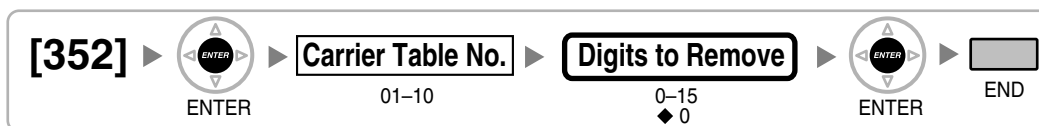


ARS Carrier Access Code [353]

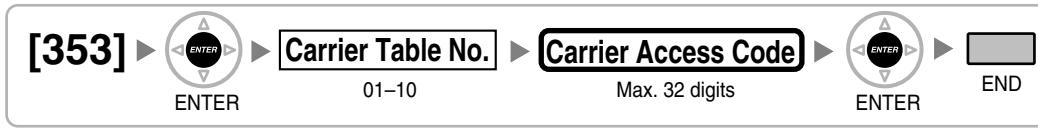

3.3.6 CO Line Programming

LCOT CO Line Connection [400]

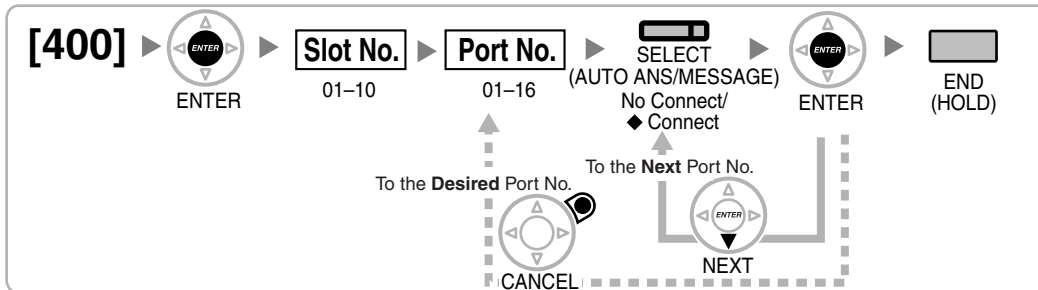

LCOT CO Line Name [401]



LCOT CO Line Group Number [402]




LCOT CO Line Number Reference [409]



LCOT Dialing Mode [410]




LCOT Pulse Rate [411]

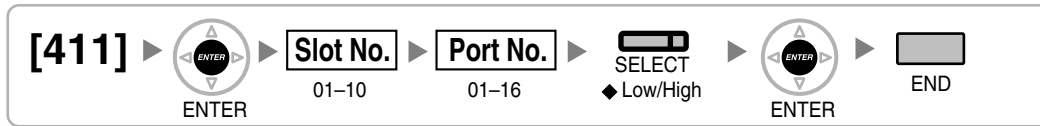


LCOT DTMF Minimum Duration [412]




LCOT CPC Signal Detection Time—Outgoing [413]

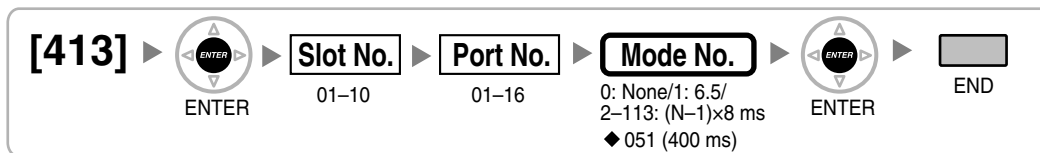

LCOT CPC Signal Detection Time—Incoming [414]

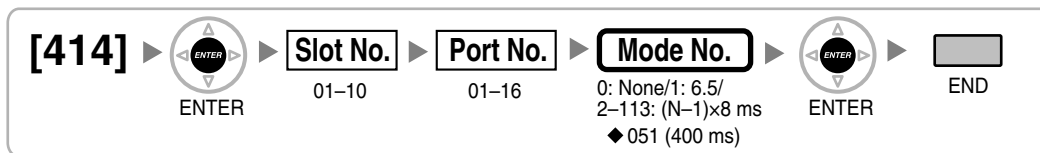


LCOT Pause Time [416]

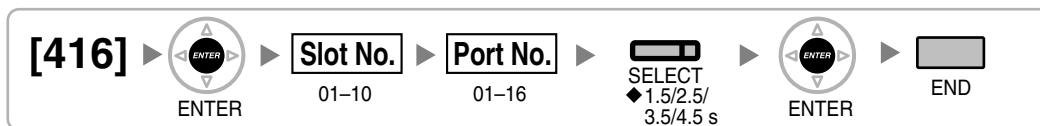


LCOT Flash/Recall Time [417]



LCOT Disconnect Time [418]

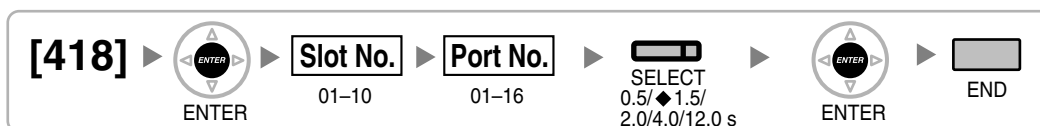

DIL 1:1 Destination [450]

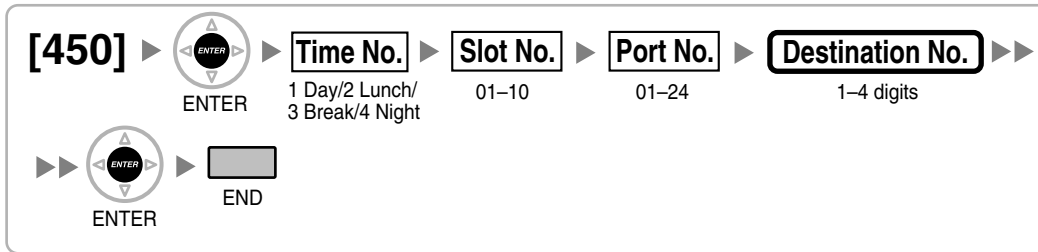


DID Number [451]




DID Name [452]




DID Destination [453]

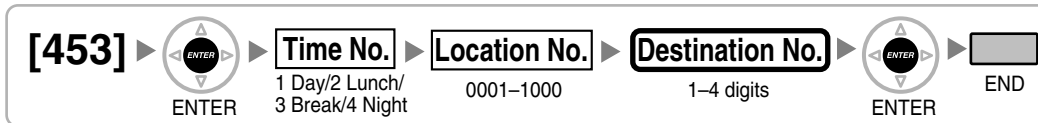


CO Line Group Intercept Destination [470]

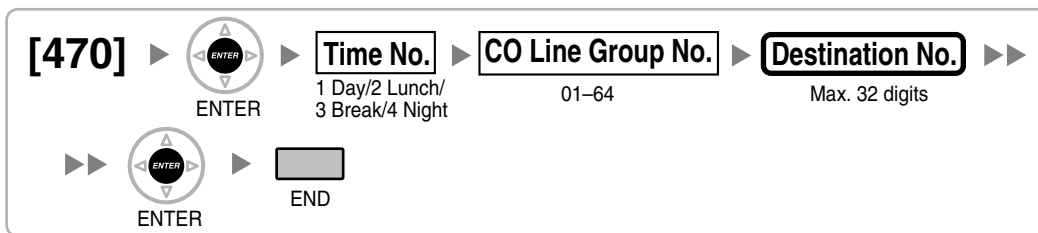

Host PBX Access Code [471]

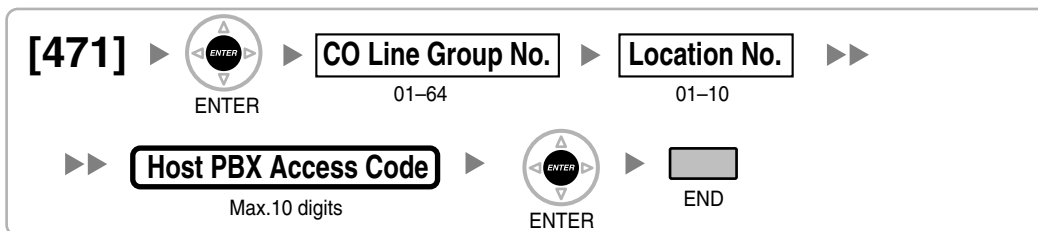


Extension-to-CO Line Call Duration [472]

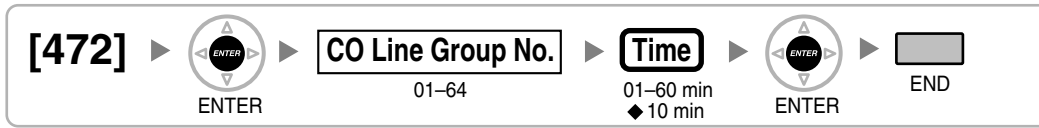

CO-to-CO Line Call Duration [473]



DISA Silence Detection [475]

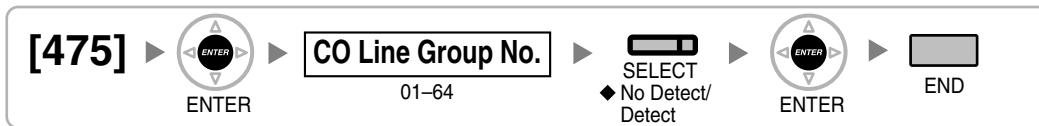

DISA Continuous Signal Detection [476]



DISA Cyclic Signal Detection [477]




Caller ID Signal Type [490]




3.3.7 COS Programming


CO Line Group Number [500]

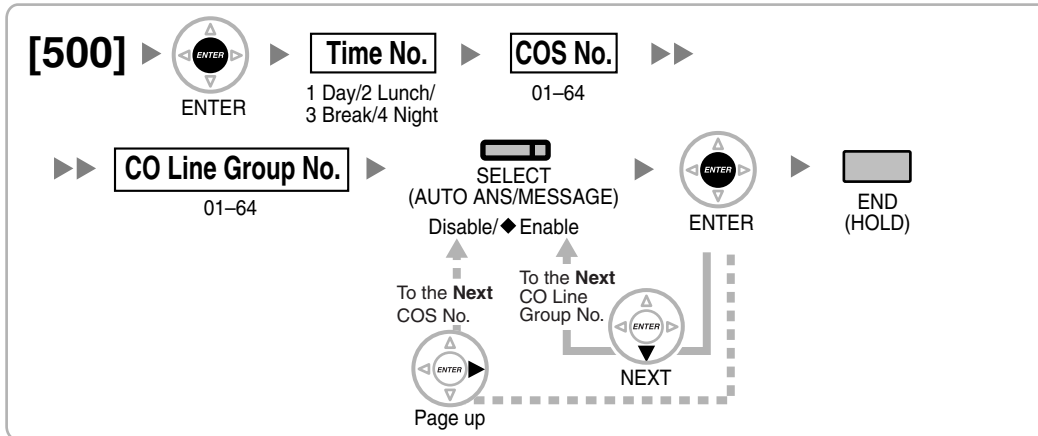


TRS Level [501]

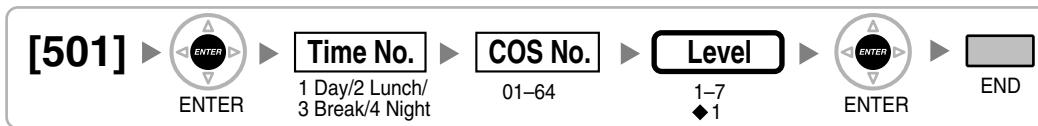


CO Line Call Duration Limitation [502]

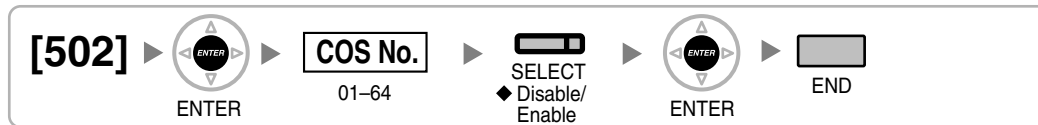


Call Transfer to CO Line [503]

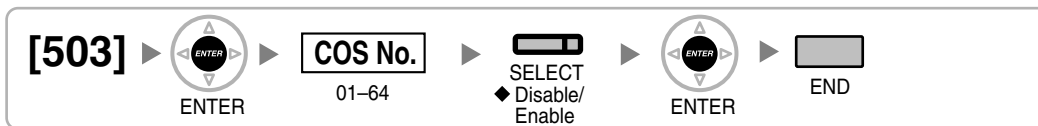


Call Forwarding to CO Line [504]

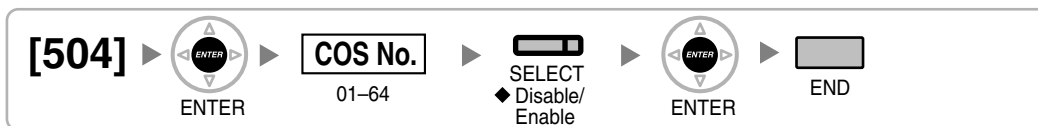


Executive Busy Override [505]

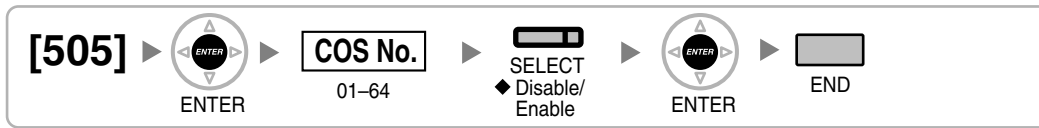


Executive Busy Override Deny [506]

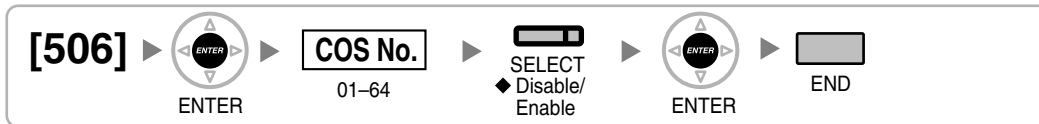

DND Override [507]

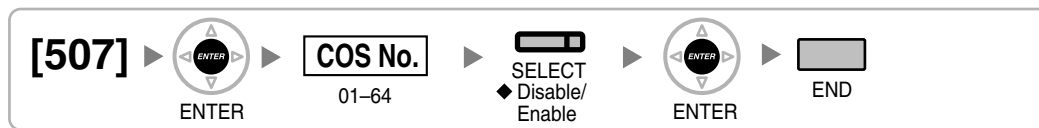

Account Code Mode [508]

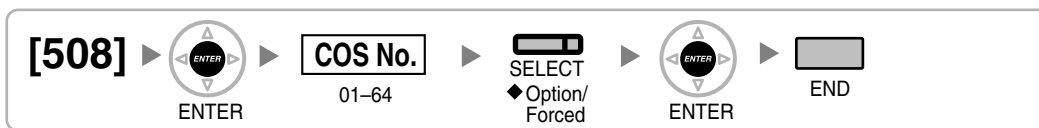


TRS Level for System Speed Dialing [509]




TRS Level for Extension Lock [510]




Manager Assignment [511]

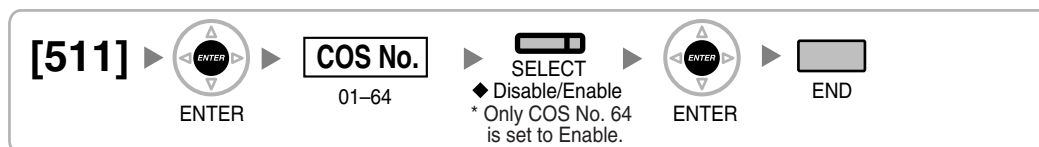


Permission for Door Open Access [512]

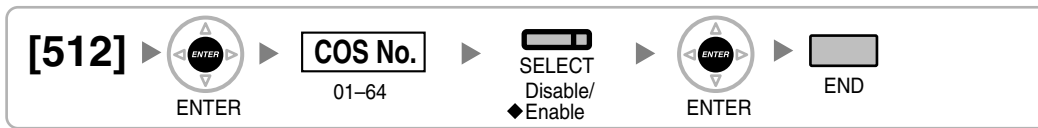

Time Service Manual Switching [514]

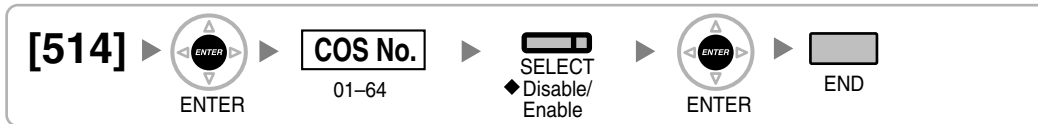

Wireless XDP Parallel Mode for Paired Telephone [515]

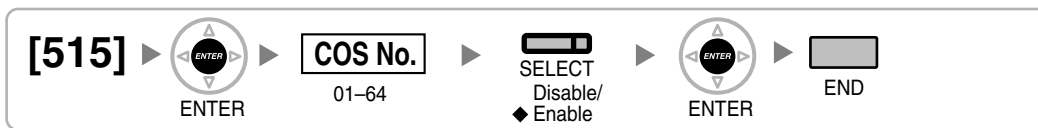


Programming Mode Limitation [516]




3.3.8 Extension Programming

EXtra Device Port (XDP) Mode [600]

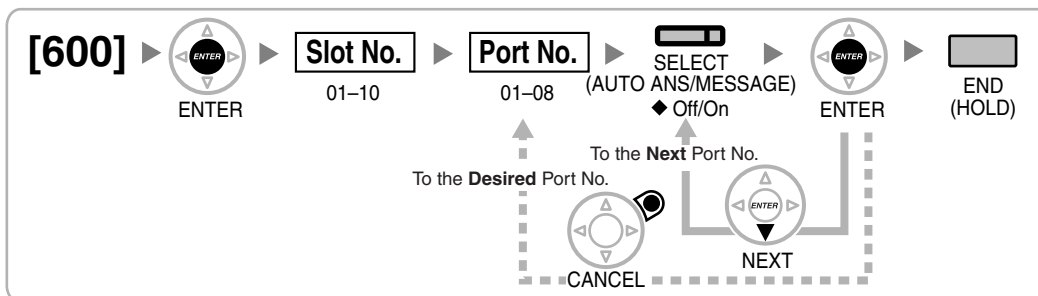

Terminal Device Assignment [601]

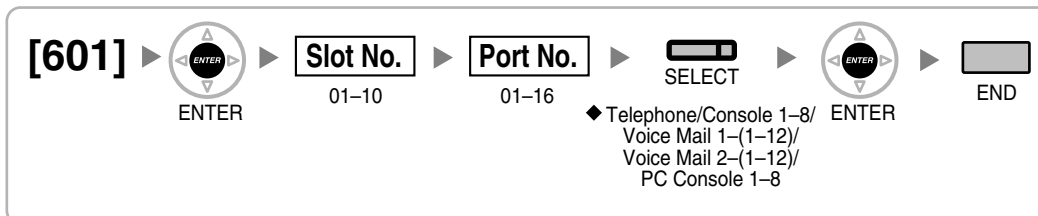


Class of Service [602]




Extension Group [603]



Extension Intercept Destination [604]

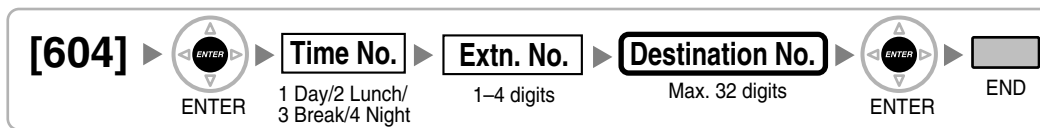


Call Forwarding—No Answer Time [605]

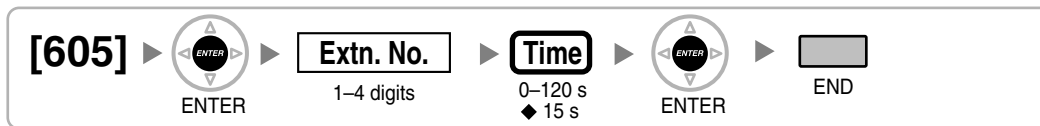


CLIP Number [606]




ICD Group Member [620]

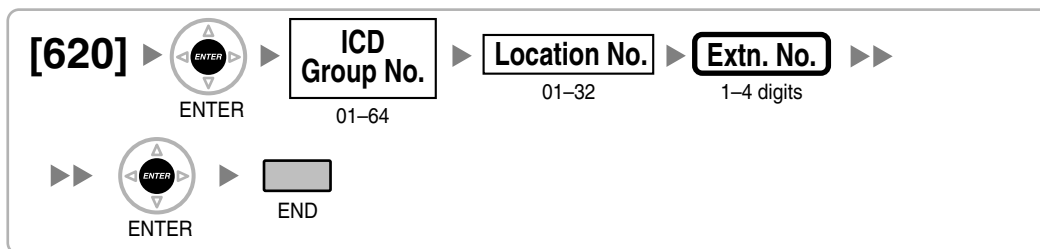


ICD Group Delayed Ringing [621]

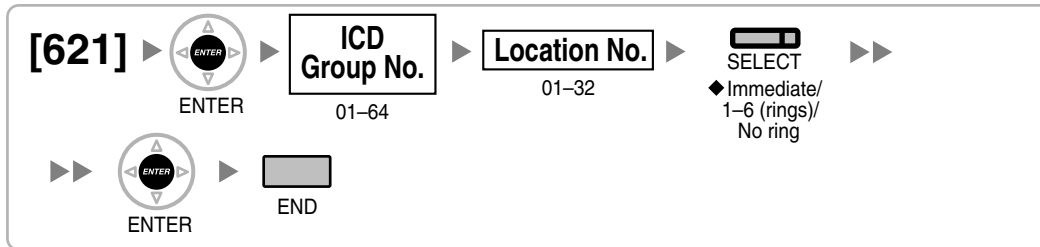


ICD Group Floating Extension Number [622]

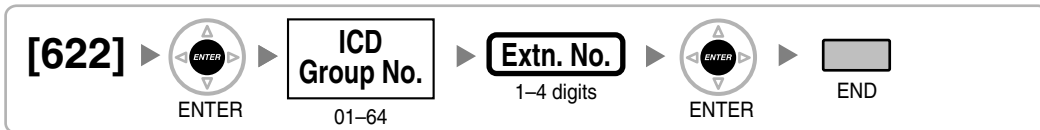


ICD Group Name [623]

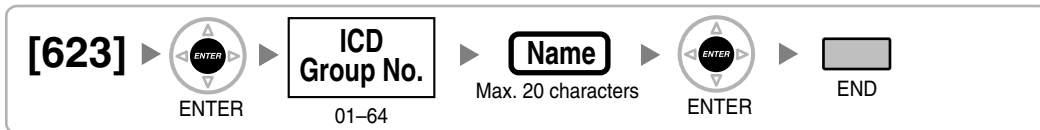

ICD Group Distribution Method [624]

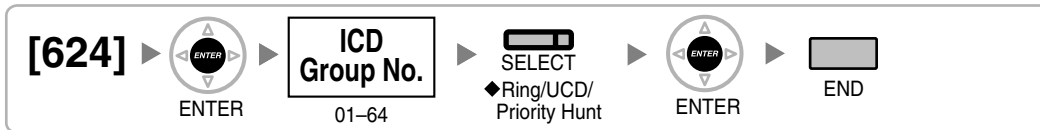


Destination for Overflow Time Expiration [625]

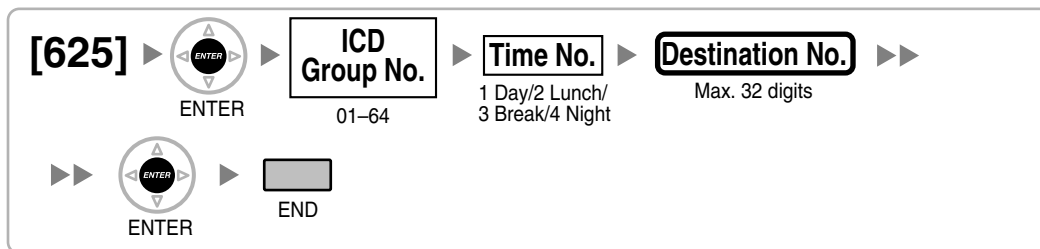


Overflow Time [626]



Destination When All Busy [627]

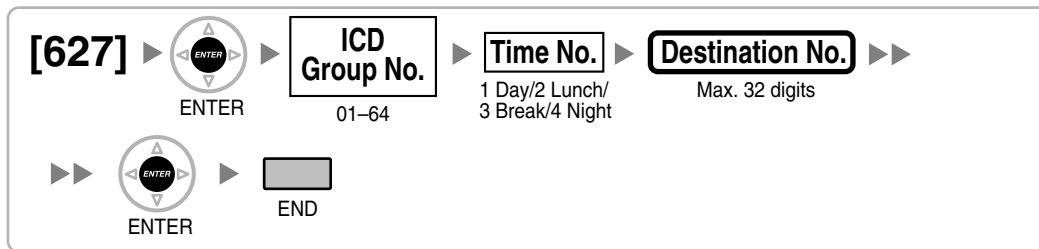


Queuing Call Capacity [628]

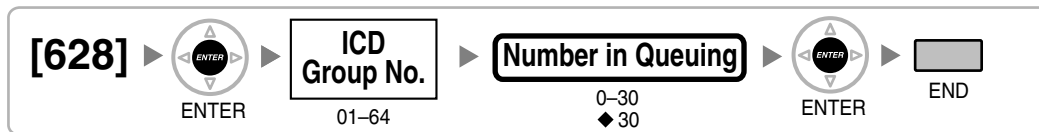


Queuing Hurry-up Level [629]



Queuing Time Table [630]

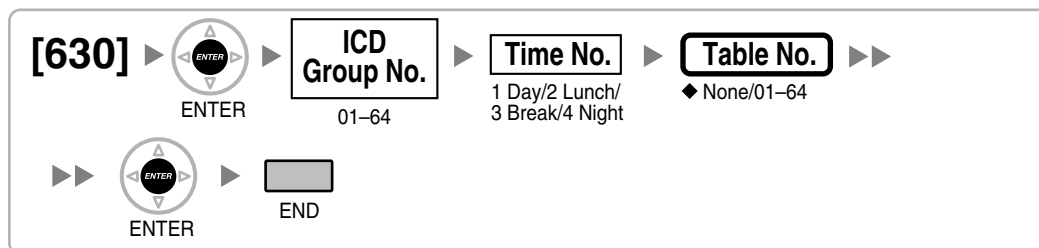


Sequences in Queuing Time Table [631]

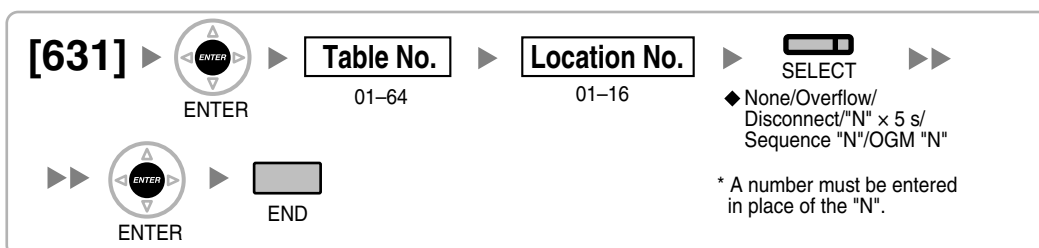


Maximum Number of Agents [632]




Extension Groups of a Paging Group [640]

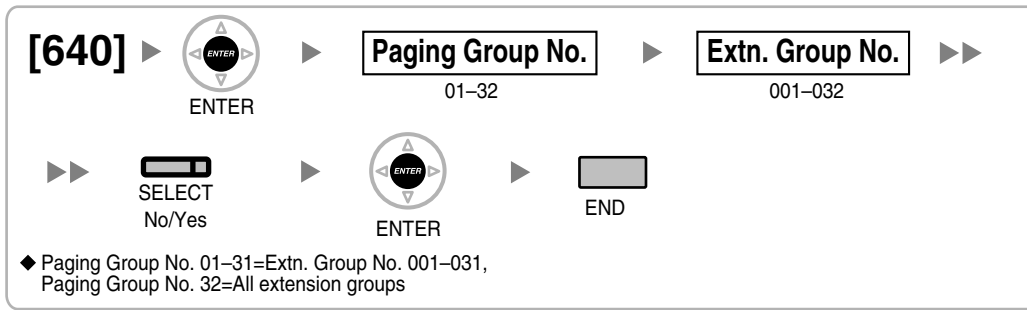

External Pagers of a Paging Group [641]

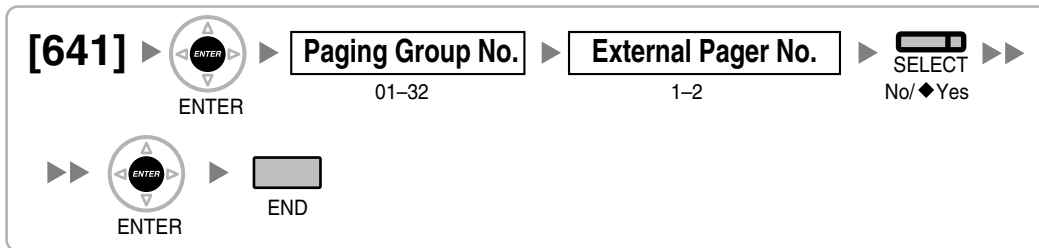


Extension Groups of a Pickup Group [650]

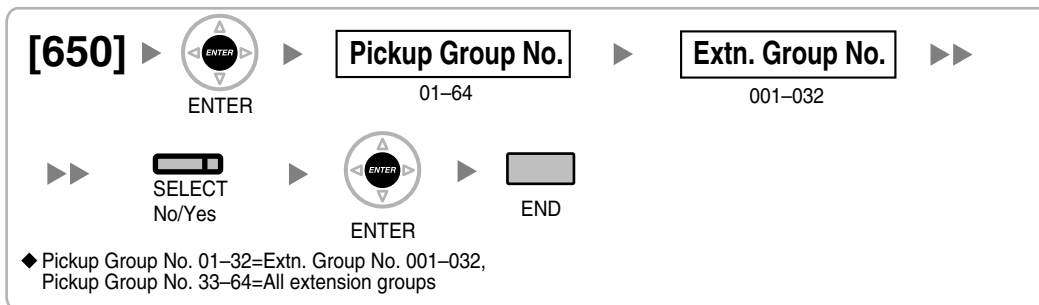


VM Group Floating Extension Number [660]




Idle Extension Hunting Type [680]

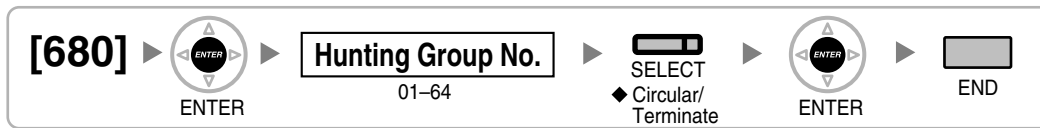

Idle Extension Hunting Group Member [681]

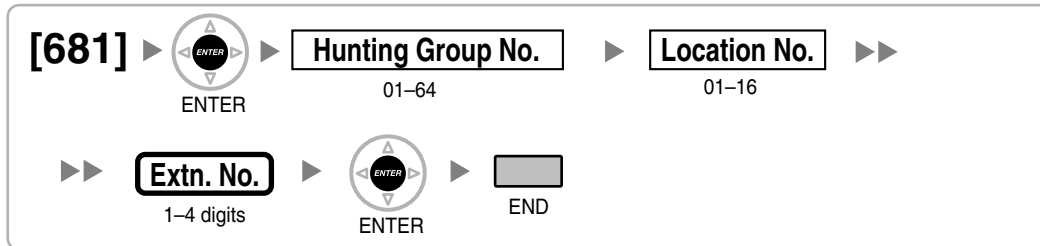

PS Registration [690]

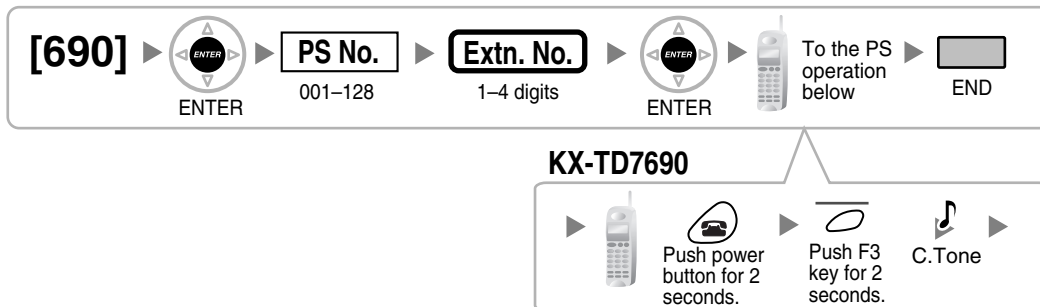

Note

Please refer to Installation Manual for more information regarding Portable Station (PS) registration.

PS Termination [691]



Personal Identification Number (PIN) for PS Registration [692]




CS Status Reference [699]



3.3.9 Resource/Interface Programming


External Pager Floating Extension Number [700]

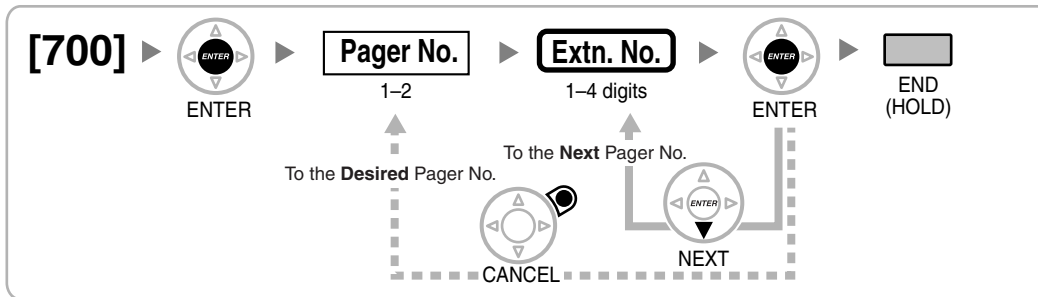

Audio Source Selection for BGM 2 [710]




Music on Hold [711]

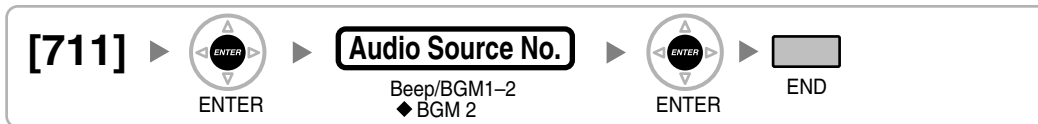


Music for Transfer [712]



Doorphone Call Destination [720]

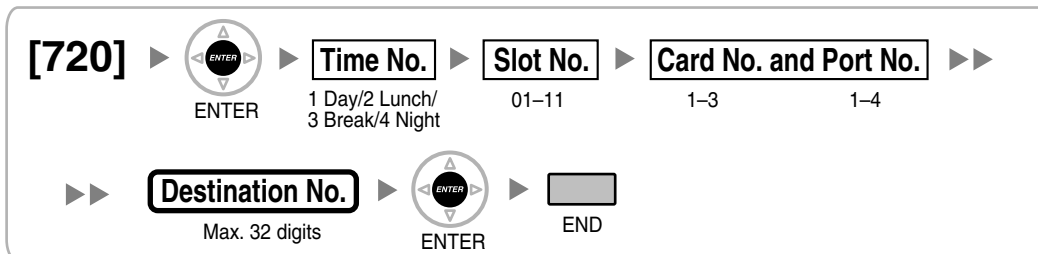


Doorphone Number Reference [729]

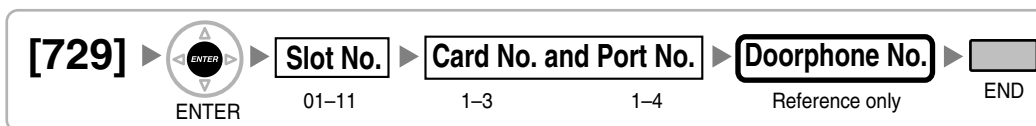

Outgoing Message (OGM) Floating Extension Number [730]



Outgoing Message (OGM) Name [731]

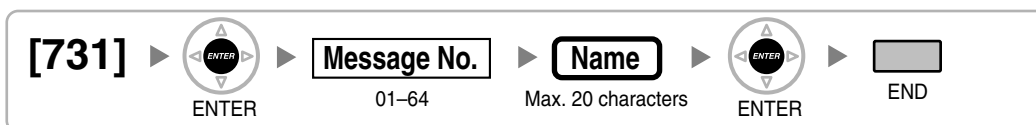


DISA Security Mode [732]




3.3.10 SMDR & Maintenance Programming

RS-232C Parameter—New Line Code [800]

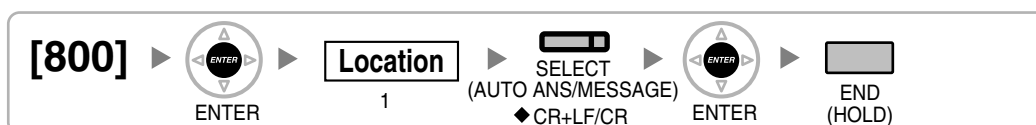

RS-232C Parameter—Baud Rate [800]

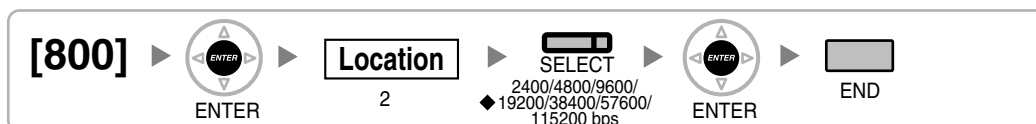


RS-232C Parameter—Word Length [800]



RS-232C Parameter—Parity Bit [800]



RS-232C Parameter—Stop Bit Length [800]

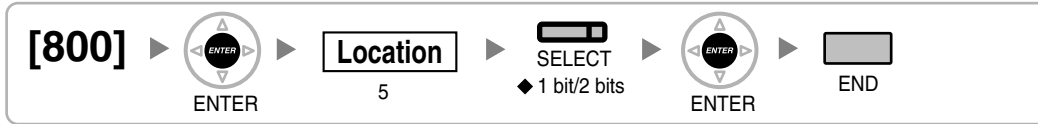

External Modem Control [801]



SMDR Page Length [802]



SMDR Skip Perforation [803]



SMDR Outgoing Call Printing [804]



SMDR Incoming Call Printing [805]



Remote Programming [810]



Modem Floating Extension Number [811]




ISDN Remote Floating Extension Number [812]




3.3.11 Card Programming

Slot Card Type Reference [900]

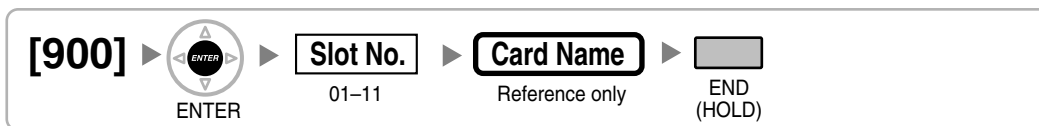

Slot Card Deletion [901]

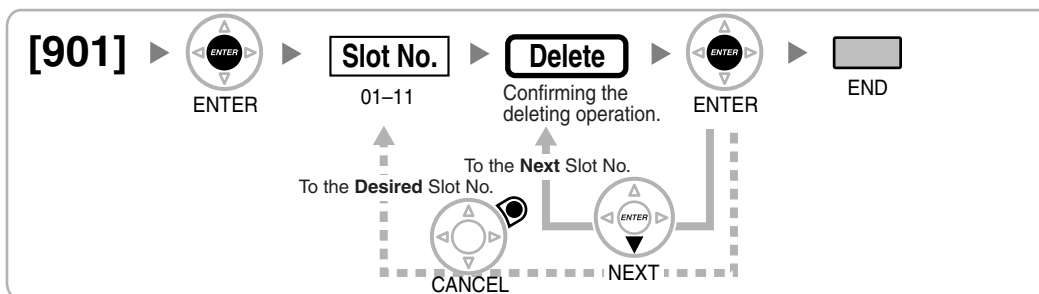

Slot Card Reset [902]



OPB3 Option Card Type Reference [910]



OPB3 Option Card Deletion [911]



Section 4

KX-TDA Maintenance Console Operating Instructions

4.1 Introduction

4.1.1 Software Modes

When the Maintenance Console is started, it enters Initial mode. From here, you can choose to enter either Batch mode or Interactive mode to program the PBX.

- **Batch mode**
Batch mode allows you to create new system data files, and make modifications to system data files stored on your PC, without being connected to the PBX. When you connect to the PBX, the modified data will be uploaded at one time. To enter Batch mode, select an option from the **File** menu.
- **Interactive mode**
Interactive mode allows you to directly modify the system data and settings stored in the PBX's memory from a PC that is connected to the PBX. This mode displays the system data that is currently being used by the PBX, rather than the system data stored on the SD memory card. Data can be modified and results displayed in real time. To enter Interactive mode, select an option from the **Connect** menu.

Note

In Initial mode, the only other option that can be accessed is **4.4.6 Tool—System data Convert**.

4.1.2 Status Bar

The status bar is the bar at the bottom of the Maintenance Console window, which displays information on the current state of the Maintenance Console.

Whether the status bar is displayed or not can be chosen by selecting **Status Bar** from the **View** menu.

The information displayed is as follows, in order from left to right:

Area	Values	Description
Program Mode	Initial Mode Batch Mode xxx Interactive Mode	See "4.1.1 Software Modes" above. "xxx" is replaced by the name of the current system data file.
PBX Type	Type: TDA100/ TDA200	Displays the type of PBX being programmed.
PBX System Data Version	Versionxxx-xxx	Displays the version number of the system software installed to the PBX. The first 3 digits are the version number, and the last 3 digits are the revision number.

4.1.3 Access Levels

There are 3 main levels of access to the Maintenance Console: User, Administrator and Installer. Each level has its own Programmer Code, which must be entered to run the Maintenance Console.

Access to menu options within the Maintenance Console is also restricted depending on the Programmer Code, and the current software mode (see "4.1.1 Software Modes"). When a menu option is limited to certain access levels, this is noted in the initial description of that menu option, for example:

"This option is only available at Installer level."

If a sentence like this is not included, the menu option is available at all levels.

The target users for each access level are as follows:

Access Level	User
User	For end users
Administrator	For system administrators
Installer	For dealers and system installers

The options available in each mode and access level are shown below.

The access levels are abbreviated as follows:

U: User; A: Administrator; I: Installer

A check mark indicates that the menu option is available for that access level.

File

Menu Option	Initial			Batch			Interactive		
	U	A	I	U	A	I	U	A	I
New			✓						
Open	✓	✓	✓						
Close				✓	✓	✓			
Save				✓	✓	✓			
Save As				✓	✓	✓			
eXit	✓	✓	✓	✓	✓	✓	✓	✓	✓

Connect

Menu Option	Initial			Batch			Interactive		
	U	A	I	U	A	I	U	A	I
RS-232C	✓	✓	✓						
USB	✓	✓	✓						
LAN	✓	✓	✓						
Modem	✓	✓	✓						
Disconnect							✓	✓	✓

Tool

Menu Option	Initial			Batch			Interactive		
	U	A	I	U	A	I	U	A	I
SD memory backup							✓	✓	✓
NDSS Link Data Clear							✓	✓	✓
Extension list View				✓	✓	✓	✓	✓	✓
Import → Feature - Speed Dial and Caller ID				✓	✓	✓	✓	✓	✓
Import → Incoming Call - DID Table						✓			✓
Import → ARS - Leading Digit						✓			✓
Import → ARS - Except Code						✓			✓
Import → ARS - Routing Plan						✓			✓
Export → Feature - Speed Dial and Caller ID				✓	✓	✓	✓	✓	✓
Export → Incoming Call - DID Table						✓			✓
Export → ARS - Leading Digit						✓			✓
Export → ARS - Except Code						✓			✓
Export → ARS - Routing Plan						✓			✓
System data Convert			✓						

Utility

Menu Option	Initial			Batch			Interactive		
	U	A	I	U	A	I	U	A	I
Diagnosis							✓	✓	✓
File Transfer PC to PBX (SD Card)									✓
File Transfer PBX (SD Card) to PC									✓
SD Card File View and Load									✓
SD Card File Delete									✓
Message File Transfer PC to PBX									✓
Message File Transfer PBX to PC									✓
Error Log							✓	✓	✓
T1 Signalling Bit Monitor									✓

Utility

Menu Option	Initial			Batch			Interactive		
	U	A	I	U	A	I	U	A	I
T1 Line Trace									✓
ISDN/QSIG Protocol Trace									✓
Digital Trunk Error Report									✓
IP Extension Statistical Information									✓
CS Information									✓
PS Information									✓
Timed Update									✓
System Reset —> Reset by the Command									✓
System Reset —> Reset by the Command									✓
Flash ROM ID Information									✓

View

Menu Option	Initial			Batch			Interactive		
	U	A	I	U	A	I	U	A	I
Toolbar	✓	✓	✓	✓	✓	✓	✓	✓	✓
Status Bar	✓	✓	✓	✓	✓	✓	✓	✓	✓

Window

Menu Option	Initial			Batch			Interactive		
	U	A	I	U	A	I	U	A	I
Cascade				✓	✓	✓	✓	✓	✓
Tile(Horz)				✓	✓	✓	✓	✓	✓
Tile(Vert)				✓	✓	✓	✓	✓	✓
Arrange Icon				✓	✓	✓	✓	✓	✓

Help

Menu Option	Initial			Batch			Interactive		
	U	A	I	U	A	I	U	A	I
Help				✓	✓	✓	✓	✓	✓

Help

Menu Option	Initial			Batch			Interactive		
	U	A	I	U	A	I	U	A	I
Additional Information	✓	✓	✓	✓	✓	✓	✓	✓	✓
About	✓	✓	✓	✓	✓	✓	✓	✓	✓

4.1.4 Standard Buttons

There are several standard buttons that are displayed on many screens within the Maintenance Console.

The standard buttons are as follows:

Button	Function
OK	Implements changes and closes the current screen.
Cancel	Abandons changes and returns to the previous screen.
Apply	Implements changes and remains on the same screen.
Help	Displays the relevant help topic for the current screen.

4.1.5 Card Status

Certain tools, utilities and settings require that the target card be set to out-of-service (OUS) or in-service (INS) status before the operation is carried out. Where required, this is noted in the description of each item.

"In service" means that the card is installed correctly in the PBX, and is capable of being used normally.

"Out of service" means that the card is installed correctly in the PBX, but has been temporarily removed from use. This allows settings to be modified or software to be upgraded.

To change the status of a card

1. Open the **Configuration—Slot** screen of the Maintenance Console (see "4.7.1 Slot [1-1]").
2. Select the card command of the desired card:
 - Click the desired cell in the **Status** column.
 - Use the arrow keys to select the desired cell in the **Status** column, and then click **Command**.
3. Select the desired status:
 - Click **INS** to set the card to in-service status.
 - Click **OUS** to set the card to out-of-service status.

4.1.6 Display Options

The View and Window menus provide options to control the display of items within the Maintenance Console.

- View
 - Toolbar: Displays or hides the toolbar of commonly used buttons.

- Status Bar: Displays or hides the bar at the bottom of the Maintenance Console window.
- Window
 - Cascade: When multiple data screens are open, displays all open screens overlapped, with the title bars visible.
 - Tile(Horz): When multiple data screens are open, displays all open screens side by side.
 - Tile(Vert): When multiple data screens are open, displays all open screens vertically.

4.2 File

4.2.1 File—New

Creates a new system data file, used to program the PBX in Batch mode. All settings are in their initial or default state, and any cards currently installed in the PBX are not displayed.

To upload the file created here to the SD memory card installed in the PBX, see "4.5.2 Utility—File Transfer PC to PBX (SD Card)".

Note

Since selecting this option creates a blank system data file, uploading this file to the PBX will overwrite all previous settings. Use only when necessary.

To create a new system data file

1. From the **File** menu, select **New**.
2. Click the appropriate model number.
3. Select whether an MEC card is installed or not.
4. Click **OK**.

4.2.2 File—Open

Opens a system data file previously saved on the PC, and enters Batch mode.

This option is only available at Installer level.

When opening a file created with an older version of the Maintenance Console (e.g. KX-TDA Maintenance Console version 1.0), you will be asked whether you want to convert the data for use with the current version or not. Using the data without converting may result in some data being loaded to an incorrect destination, and is not recommended.

For more details regarding file conversion, see "4.4.6 Tool—System data Convert".

If the file is not supported by the PBX (e.g. a system data file from an incompatible PBX), it will not be opened. The only files that can be opened are files that were created by the Maintenance Console for a supported PBX.

To upload a file opened here to the SD memory card installed in the PBX, see "4.5.2 Utility—File Transfer PC to PBX (SD Card)".

To open a system data file

1. From the **File** menu, select **Open**.
The Open dialog box will be displayed.
2. Navigate to the folder containing the system data file you want to open.
3. Select the file.
4. Click **Open**.

If the file was created with an older version of the Maintenance Console, you will be asked if you want to convert the data.

- Click **Yes** to convert the data for use with the current version of the Maintenance Console.

Enter a name for the new converted system file.

- Click **No** to open the file as it is.

4.2.3 File—Close

Closes the system data file that is currently being modified, and returns to Initial mode.

To close a system data file

- From the **File** menu, select **Close**.

If the system data file has not been saved, a warning message will be displayed, giving you the option to save the file.

- Click **Yes** to save the file.
- Click **No** to abandon the changes.

4.2.4 File—Save

Overwrites the previously saved system data file with the system data currently being modified in Batch mode.

To upload a file saved here to the SD memory card installed in the PBX, see "4.5.2 Utility—File Transfer PC to PBX (SD Card)".

To save a system data file

- From the **File** menu, select **Save**.

If the data has never been saved, the Save dialog box will be displayed. For more details, see "4.2.5 File—Save As".

4.2.5 File—Save As

Saves the system data file being modified in Batch mode with the name chosen by the user.

To upload a file saved here to the SD memory card installed in the PBX, see "4.5.2 Utility—File Transfer PC to PBX (SD Card)".

To save a system data file with a new name

1. From the **File** menu, select **Save As**.
2. Navigate to the folder in which you want to save the file.
3. Enter a file name, or select a file to overwrite.
4. Click **Save**.

If choosing to overwrite another file, a warning message will be displayed.

- Click **Yes** to overwrite.
- Click **No** to return to the previous screen.

4.2.6 File—eXit

Closes the Maintenance Console.

To exit the Maintenance Console

- From the **File** menu, select **eXit**.

If the system data file being modified has not been saved, a warning message will be displayed, giving you the option to save the file.

- Click **Yes** to save the file.
- Click **No** to abandon the changes.

4.3 Connect

4.3.1 Connect—RS-232C

Connects to the PBX in Interactive mode through the serial RS-232C interface of the PBX.

The settings are as follows:

Setting	Values	Description
Port	COM1–COMx	Specify the number of the COM port assigned to the PC's RS-232C interface. Only available COM ports will be displayed.
NL Code	CR, CR+LF	Specify the code to be sent to signify the end of a line. Choose CR+LF .
Baud Rate	2400bps, 4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps	Specify the speed of data transmission.
Flow Control	None, Hardware	Specify whether the rate of data transfer is managed by hardware or not. Choose Hardware .
Password	–	Enter the password corresponding to the Programmer Code used to log on to the Maintenance Console.

To connect using RS-232C

1. From the **Connect** menu, select **RS-232C**.
2. Enter the settings as required.
3. Click **OK**.

4.3.2 Connect—USB

Connects to the PBX in Interactive mode through the USB port on the PBX, or a USB port (USB Module) attached to a DPT.

To connect using USB

1. From the **Connect** menu, select **USB**.
2. Enter the password corresponding to the Programmer Code used to log on to the Maintenance Console.
3. Click **OK**.

4.3.3 Connect—LAN

Connects to the PBX in Interactive mode through the Local Area Network interface of the PBX.

A CTI-LINK card must be installed and the IP address of the PBX set, to use this feature. For more details, see "4.7.12 Slot [1-1] CTI-LINK Card Property".

The settings are as follows:

Setting	Description
IP	Enter the same IP address that was input in IP Address of 4.7.12 Slot [1-1] CTI-LINK Card Property.
Port	Enter the same port number that was input in Maintenance Port Number of 4.7.12 Slot [1-1] CTI-LINK Card Property.
Password	Enter the password corresponding to the Programmer Code used to log on to the Maintenance Console.

To connect using a LAN

1. From the **Connect** menu, select **LAN**.
2. Enter the settings as required.
3. Click **OK**.

4.3.4 Connect—Modem

Connects to the PBX in Interactive mode through the modem.

To access the PBX remotely using this feature, an RMT card must be installed and the analog remote maintenance floating extension number assigned. For more details, see "4.17.4 Miscellaneous [11-4]".

The settings are as follows:

Setting	Values	Description
Profile Name	–	Enter a name used to identify this set of values.
Port	COM1–COMx	Specify the number of the COM port assigned to the PC's modem interface. Only available COM ports will be displayed.
NL Code	CR, CR+LF	Specify the code to be sent to signify the end of a line. Choose CR+LF .
Baud Rate	1200bps, 2400bps, 4800bps, 9600bps, 19200bps, 38400bps	Specify the speed of data transmission.
Flow Control	None, Hardware	Specify whether the rate of data transfer is managed by hardware or not. Choose Hardware .

Setting	Values	Description
Command	–	Enter the modem initialize command. For more details, refer to your modem's instruction manual.
Dial Number	1-9, 0, *, and #	Enter the telephone number to be dialed to access the PBX.
Dial Type	Auto(Tone), Auto(Pulse), Manual	Specify the outgoing dialing method. If Manual is chosen, dialing must be done with a connected telephone.
Password	–	Enter the password corresponding to the Programmer Code used to log on to the Maintenance Console.
Save Password	Checked, not checked	Select whether to save the password when the profile is saved.
Comment	–	Enter a comment to help to identify this profile.

The functions of the buttons on this screen are as follows:

Button	Function
Save	Saves the current profile information.
Delete	Deletes the current profile information.
New	Creates a new, empty profile. Any unsaved modem data currently being edited is lost.
Initial	Sends the value entered in Command to the modem.
OK	Begins connection using the modem.
Cancel	Closes the current screen without connecting.

To connect using a modem

1. From the **Connect** menu, select **Modem**.
2. Enter the settings as required, or choose a previously stored profile from the **Profile Name** drop-down list.
3. Click **OK**.

4.3.5 Connect—Disconnect

Closes the connection between the Maintenance Console and the PBX. When this option is chosen, system data is automatically backed up from the PBX to the SD memory card (see "4.4.1 Tool—SD memory backup").

To disconnect

1. From the **Connect** menu, select **Disconnect**.

2. Click **OK**.

4.4 Tool

4.4.1 Tool—SD memory backup

Saves system data from the PBX to the SD memory card. Backup begins as soon as this option is chosen.

To back up system data

- From the **Tool** menu, select **SD memory backup**.

4.4.2 Tool—NDSS Link Data Clear

Clears NDSS Link Data stored in the connected PBX. While this tool clears both monitor extension and monitored extension data, it only clears it at the connected PBX. To clear this data at other PBXs in the network, it is necessary to run this tool at those PBXs.

To clear the NDSS Link Data

- From the **Tool** menu, select **NDSS Link Data Clear**.
A confirmation screen will be displayed.
 - Click **OK** to clear the data.
 - Click **Cancel** to keep the data, and close the screen.

4.4.3 Tool—Extension List View

Displays a list of all programmed extension numbers and types.

The types that can be displayed are as follows:

Type	Detail
Intercom	Wired Extension
VM	Voice Mail
Portable Station	Wireless Extension (Portable Station)
ICDG	Incoming Call Distribution Group
WG	PS Ring Group
VM (DPT)	VM (DPT) Group
VM (DTMF)	VM (DTMF) Group
Pager	External Pager
MODEM	Analog Modem
OGM (DISA)	DISA
DSS	DSS Console

To view extension information

- From the **Tool** menu, select **Extension List View**.

4.4.4 Tool—Import

Allows several types of system data files or tables to be imported.

Except for Speed Dial and Caller ID, this option is only available at Installer level.

The files from which data can be imported are files that were previously saved at this or another PBX using the Export tool (see "4.4.5 Tool—Export"), or comma-separated value (CSV) files. Unsupported file types cannot be opened.

For all tables except **ARS - Routing Plan**, it is possible to edit the CSV file directly using an appropriate editor, before importing.

The types of data that can be imported using this tool, and the matching destination fields, are as follows:

Feature - Speed Dial and Caller ID

Data Type	Import Destination	Reference
System Speed Dialing Number	Location	4.12.1 Speed Dialing & Caller ID—Main Table [6-1-1]
Name	Name	4.12.1 Speed Dialing & Caller ID—Main Table [6-1-1]
CO Line Access Number + Telephone Number	Dial	4.12.1 Speed Dialing & Caller ID—Main Table [6-1-1]
CLI Destination	CLI Destination	4.12.1 Speed Dialing & Caller ID—Main Table [6-1-1]

Incoming Call - DID Table

Data Type	Import Destination	Reference
Location	Location	4.16.3 DID Table [10-3]
DID Number	Dial In Number	4.16.3 DID Table [10-3]
DID Name	Dial In Name	4.16.3 DID Table [10-3]
DID Destination-Day	Destination-Day	4.16.3 DID Table [10-3]
DID Destination-Lunch	Destination-Lunch	4.16.3 DID Table [10-3]
DID Destination-Break	Destination-Break	4.16.3 DID Table [10-3]
DID Destination-Night	Destination-Night	4.16.3 DID Table [10-3]
Tenant Number	Tenant Number	4.16.3 DID Table [10-3]
VM Trunk Group No.	Group Number for VPS Answer	4.16.3 DID Table [10-3]
CLI Ring for DID-Day	CLI Ring - Day	4.16.3 DID Table [10-3]
CLI Ring for DID-Lunch	CLI Ring - Lunch	4.16.3 DID Table [10-3]
CLI Ring for DID-Break	CLI Ring - Break	4.16.3 DID Table [10-3]

Incoming Call - DID Table

Data Type	Import Destination	Reference
CLI Ring for DID-Night	CLI Ring - Night	4.16.3 DID Table [10-3]

ARS - Leading Digit

Data Type	Import Destination	Reference
No.	Location	4.14.2 Leading Number [8-2]
Leading Number	Leading Digit	4.14.2 Leading Number [8-2]
Additional Number of Digits	Additional Dial Digits	4.14.2 Leading Number [8-2]
Routing Plan Number	Route Plan Number	4.14.2 Leading Number [8-2]

ARS - Except Code

Data Type	Import Destination	Reference
No.	Location	4.14.6 Leading Number Exception [8-6]
Leading Number Exception	Exception Code	4.14.6 Leading Number Exception [8-6]

ARS - Routing Plan

Data Type	Import Destination	Reference
(no fields to select)	(no fields to select)	4.14.3 Routing Plan Time [8-3]

To import system data

1. From the **Tool** menu, point to **Import**, and then click the type of data to import.
2. Navigate to the folder containing the system data file you want to open.
3. Select the file.
4. Click **Open** to open the file.
A list of field names found in the imported file will be displayed.
5. For the **Feature - Speed Dial and Caller ID** table, when an MEC card is installed, select the Speed Dial table to which to import the data (system or tenant) from the drop-down list.
6. Click the name to select a field that you want to import.
7. Click **Import to**.
8. From the drop-down list, select the field in the destination table to receive this data.
Use the tables above for reference.
9. Click **OK** to link the fields.
If data in a field being imported does not match the required format for the import destination, an error message will be displayed when the import operation is attempted, and the operation will be cancelled.
This can occur when, for example, the destination field can only accept numeric data, but the data being imported contains alphabet characters, as the correct fields were not linked together.
10. Repeat steps 5 to 8 for other fields as required.
11. Click **OK** to perform the import operation.

4.4.5 Tool—Export

Allows several types of system data files or tables to be exported as comma-separated value (CSV) files. These files can be used with the Import tool (see "4.4.4 Tool—Import") to update another PBX.

Except for Speed Dial and Caller ID, this option is only available at Installer level.

Note

The separator used in CSV files created using the Export tool is decided by the unit specified in List Separator, in the Windows Regional Options Control Panel.

To export system data

1. From the **Tool** menu, point to **Export**, and then click the type of data to export.
2. Navigate to the folder in which you want to save the file.
3. Enter a file name.
4. Click **Save** to display the Export window.
5. For the **Feature - Speed Dial and Caller ID** table, when an MEC card is installed, select the Speed Dial table from which to export the data (system or tenant) from the drop-down list.
A list of field names that can be exported will be displayed.
6. Click the check box beside the name of each field that you want to export.
7. Click **OK**.

4.4.6 Tool—System data Convert

Converts system data (DSYS) files created with a previous version of the Maintenance Console for use with the currently loaded version.

This option is only available when the Maintenance Console is in Initial mode.

It is necessary to convert system data to use it with a version of the Maintenance Console other than the version that saved that data. This is because each new version of the Maintenance Console adds new options and settings that are not saved by older versions.

Note

When upgrading from a system without an MEC card installed to a system with an MEC card installed, after converting the system data using this utility, it is necessary to pre-install the MEC card by setting **Memory Expansion Card**: on the **4.7.2 Slot [1-1] MPR Card Property** screen to **PreInstall**.

To convert system data

1. From the **Tool** menu, select **System data Convert**.
2. In **Source File Name**, enter the file to convert.
 - Enter the path and name of the file in the text field.
 - Click the "... " button to navigate to and select the target file.
3. In **Destination File Name**, enter the desired name for the converted file.

The destination file name or location must be different from the source file name.

If another file with the same name already exists in that location, it will be automatically overwritten.

- Enter the path and name of the file in the text field.
If you do not specify a path, the new file will be saved in the same directory as the source file.
- Click the "... " button to navigate to and select the target file.

4. Click **OK**.

If the convert operation was successful, a message will be displayed.

5. Click **OK**.

4.5 Utility

4.5.1 Utility—Diagnosis

Performs diagnostic tests on cards installed in the PBX, to identify the source of problems. There are 2 types of test, Card Test and Pair Port Test.

If any of the tests listed here returns the result "NG" ("No Good"), contact your dealer. Test results can be saved, as a TXT-format (text) file.

When testing is complete, any cards that were set to OUS status must be returned to INS status if they are to be used again.

Card Test

Tests the relevant functions of a card to ensure that it is operating correctly. The tests carried out vary according to the type of card being tested.

The tests that are performed on each card are as follows:

A check mark indicates that the test is available for that card.

	DHLC	DLC	SLC8	SLC16/MSLC16	CSIF	LCOT	T1	PRI	OPB	CTI-LINK	IP-GW4 (TDA0484)	IP-GW16	IP-EXT
Local loop back diagnosis	✓	✓	✓	✓	✓	✓	✓	✓	✓				✓
Card CT Bus diagnosis	✓	✓	✓	✓	✓	✓	✓	✓	✓				✓
DTMF Receive test port	✓		✓	✓									
PT loop back diagnosis	✓	✓											
Caller ID Card DTMF Sending Out Diagnosis			✓										
DSP DTMF generator/receiver diagnosis							✓						
DSP DTMF receiver diagnosis							✓						
Framer IC alarm signal detection diagnosis							✓	✓					
Framer IC error detection diagnosis							✓	✓					
CS-INF loop back diagnosis					✓								
Super frame synchronization diagnosis					✓								

	DHLC	DLC	SLC8	SLC16/MSLC16	CSIF	LCOT	T1	PRI	OPB	CTI-LINK	IP-GW4 (TDA0484)	IP-GW16	IP-EXT
Caller ID card loop back diagnosis						✓							
Extension mode setting test													
CTI-LINK loop back diagnosis										✓			
IP-GW H.323 call simulate diagnosis											✓	✓	
LAN loop back diagnosis											✓		

To perform a card test

- From the **Utility** menu, select **Diagnosis**.
- Click on the **Status** cell of the card to be tested, and set it to "OUS".
- Click on the cell showing the card type.
A new window will be displayed.
- Select the **Card Test** option.
A new window will be displayed.
- Click **OK** to perform the test(s).
The error report will be displayed. When all tests are completed, the words "Test End!" will be shown on the last line of the output.
- Select an option:
 - Click **Capture** if you want to save the displayed information.
 - Enter a file name, or select a file to overwrite.
 - Click **Save**.
 - Click **Cancel** to return to the Diagnosis screen.

Pair Port Test

Tests the combination of an extension port and CO line port to ensure that communication with the CO line port can be carried out successfully.

The pair port test can be carried out using one LCOT card and one DHLC, SLC8, SLC16, or MSLC16 card.

The tests that are performed are as follows:

Line current OFF (Ext—>CO)	Line current from extension to CO line turns off.
Line current ON (Ext—>CO)	Line current from extension to CO line turns on.
Off hook detection (CO—>Ext)	Off-hook generation/detection from CO line to extension

DTMF detection (CO—>Ext)	DTMF generation/detection from CO line to extension
DP detection (CO—>Ext)	DP generation/detection from CO line to extension
BELL detection (Ext—>CO)	BELL generation/detection from extension to CO line
Speech path (Ext—>CO)	Speech path from extension to CO line
Speech path (CO—>Ext)	Speech path from CO line to extension

To perform a pair port test

1. From the **Utility** menu, select **Diagnosis**.
2. Click on the **Status** cell of the extension card to be tested, and set it to "OUS".
3. Click on the cell showing the card type.
A new window will be displayed.
4. Select the **Pair Port Test** option.
A new window will be displayed. The card you selected in Step 3 will be shown in the **Extension Line Slot No.** drop-down list.
5. From the **CO Line Slot No.** drop-down list, select the slot number of the CO line card you want to test.
6. From the **CO Line Port No.** drop-down list, select the port number of the CO line you want to test.
7. Click **OK**.
The error report will be displayed.
8. Select an option:
 - Click **Capture** if you want to save the displayed information.
 1. Enter a file name, or select a file to overwrite.
 2. Click **Save**.
 - Click **Cancel** to return to the Diagnosis screen.

4.5.2 Utility—File Transfer PC to PBX (SD Card)

Copies PBX system files (program files and data files) from the connected PC to the SD memory card installed in the PBX. Pre-existing files on the SD memory card are overwritten.

This option is only available at Installer level.

2 types of files can be copied using this tool:

- Program files: These contain the programs used to operate cards within the PBX and CSs, acting as on-board drivers.
- Data files: These contain the initial configuration data for individual cards and settings.

Not all files that are copied using this tool are automatically made active. To install new program files or main system data to the PBX, use the System Reset—Reset by the Command utility (see "4.5.17 Utility—System Reset—Reset by the Command") for PMPR and DSYS files, and the SD Card File View and Load utility (see "4.5.4 Utility—SD Card File View and Load") for all other files.

The PBX examines the header information of a file to determine 2 things: whether the file contains supported data, and which system component the file applies to.

Only files whose header information matches that of a system file supported by the PBX can be transferred. Attempting to transfer any other type of file results in an error message.

The names of all files that can be stored on the SD memory card are as follows:

Main Program

Name on SD Memory Card	Corresponding Card
PMPR	MPR
PMPR_SUB	MPR* ¹

*¹ PMPR-file-format data that is transferred to the PBX from the PC is saved as "PMPR_SUB".

LPR Program

Name on SD Memory Card	Corresponding Card
PCSINF	CSIF
PDHLC	DHLC8/DLC8/DLC16
PSLC	SLC8
PT1	T1
PIPGW	IP-GW4 (TDA0480)
PIPGWH	IP-GW4 (TDA0484)
PIPGW16	IP-GW16
PPRI23	PRI23
POPB3	OPB
PCTILINK	CTI-LINK
PIPEXT	IP-EXT16
PVOIPEX	IP-EXT16

CS Program

Name on SD Memory Card	Corresponding Unit
PCS24G	CS for 2.4 GHz Portable Station

System Data

Name on SD Memory Card	Corresponding Card
DSYS	MPR
DSYS_SUB	MPR* ¹

*¹ DSYS-file-format data that is transferred to the PBX is saved as "DSYS_SUB".

Language Data

Name on SD Memory Card	Corresponding Unit
DLNG0-DLNG1	PT

Language Data

Name on SD Memory Card	Corresponding Unit
DVMLNG1–DVMLNG5	VPS (Display Guidance data)

Initial Data

Name on SD Memory Card	Corresponding Card
DINI	MPR
DIDHLC	DHLC8
DISLC	SLC8
DIDLC	DLC8/DLC16
DIPRI	PRI
DICSINF	CSIF
DILCOT	LCOT8/LCOT16
DIT1	T1
DIOPB3	OPB3
DICTILIN	CTI-LINK
DIEIO	EIO
DIIPGW1	IP-GW4 (TDA0480)
DIIPGW2	IP-GW4 (TDA0484)
DIIPGW3	IP-GW16
DIPRI23	PRI23
DISLCLC	SLC16
DIPEXT	IP-EXT16

Installation Management File

Name on SD Memory Card	Corresponding Card
DKEYFR	MPR

To transfer files to the SD memory card

- From the **Utility** menu, select **File Transfer PC to PBX (SD Card)**.
The dialog box will be displayed.
- Select the file to upload.
A window showing the upload progress will be displayed.
During transfer, the PBX automatically renames files transferred to the SD memory card according to the header information.
A message will be displayed when the transfer is complete.
- Click **OK**.

4.5.3 Utility—File Transfer PBX (SD Card) to PC

Copies system data files from the SD memory card installed in the PBX to the connected PC. This option is only available at Installer level.

The files that can be downloaded from the SD memory card are as follows:

File Type	File Name
System Data	DSYS
Error Data	\$SYSERR
	\$SYSERR1–\$SYSERR9
Feature Restriction	DKEYSD

Downloading the DSYS system data file allows you to make a backup of the configuration of the PBX.

The error data files are snapshots of the configuration of the PBX taken automatically when a major error causes a system reset. They can be analyzed by your dealer to identify the source of a problem. If there is only one error data file, its name will be \$SYSERR. If there is more than one file, the files will be numbered in chronological order, up to a maximum of 9 files.

To transfer files to the PC

1. From the **Utility** menu, select **File Transfer PBX (SD Card) to PC**.
2. Select the file to download from the list of files on the SD memory card.
Only the files listed in the table above can be downloaded. Selecting any other file will cause an error message to be displayed.
3. Click **Transfer**.
The Save dialog box will be displayed.
4. Navigate to the folder in which you want to save the file.
5. Enter a file name.
6. Click **Save**.
A window showing the download progress will be displayed.
A message will be displayed when the transfer is complete.
7. Click **OK**.

4.5.4 Utility—SD Card File View and Load

Displays a list of files on the SD memory card, and allows you to update the programs stored in LPR cards (cards with local processors) and Cell Stations (CSs).

This option is only available at Installer level.

The name, date and time of creation, and size of files are displayed.

To view and load files on the SD memory card

1. From the **Utility** menu, select **SD Card File View and Load**.
2. Click on the name of the file whose information you want to view.
Only files containing program data (whose names start with "P") can be selected.

3. Click **Detail**.

The Detail screen will be displayed. Header information from the chosen SD memory card file is displayed on the left.

4. From the **Card** drop-down list on the right, select the card(s) whose software you want to update.

- To update a specific card or port:
 - LPR cards: select the slot number and card name.
 - CSs: select the slot number and card name, and then select the related CS port from the drop-down list directly below.
- To update all matching cards simultaneously:
 - Select "ALL".

These cards are displayed:

- All matching LPR cards currently in OUS status
- All matching CSIF cards currently in INS status.

When one is selected, all related CS ports currently in OUS status are displayed in the drop-down list directly below.

5. Click **View** to update the displayed header information of the selected files.

The file with the higher File Version and File Revision numbers is newer.

6. Click **Load** to update the file stored on the PBX.

When the update is finished, a message will be displayed.

7. Click **OK**.

The display will return to the Detail screen.

4.5.5 Utility—SD Card File Delete

Allows you to delete files from the SD memory card.

This option is only available at Installer level.

The following essential system files cannot be deleted by this utility: PMPR, DSYS, DKEYSD.

To delete files from the SD memory card

1. From the **Utility** menu, select **SD Card File Delete**.

2. Click on the file to be deleted.

3. Click **Delete**.

A confirmation screen will be displayed.

4. Click **OK**.

The display will return to the **SD Card File Delete** screen.

4.5.6 Utility—Message File Transfer PC to PBX

Transfers Outgoing Message (OGM) files from the PC to the selected OPB card.

This option is only available at Installer level, and requires that at least 1 MSG card is installed, and the OPB card that it is mounted on is set to OUS status.

Files are stored on the MSG card in the location specified by the file's header information. Uploaded files are automatically renamed as necessary. If this location already contains an OGM, it will be overwritten by the newly uploaded message.

To transfer OGMs to an OPB card

1. From the **Utility** menu, select **Message File Transfer PC to PBX**.
2. Select the target MSG card from the drop-down list, and click **OK**.
The Open dialog box will be displayed.
3. Select the message files to upload.
It is possible to select multiple files.
4. Click **OK**.
The files will be uploaded. Files that do not contain message data will be ignored.
When complete, the display will return to the main screen.

4.5.7 Utility—Message File Transfer PBX to PC

Transfers Outgoing Message (OGM) files from the OPB card to the PC.

This option is only available at Installer level, and requires that at least 1 MSG card is installed, and the OPB card that it is mounted on is set to OUS status.

To transfer OGMs to the PC

1. From the **Utility** menu, select **Message File Transfer PBX to PC**.
2. From the upper drop-down list, select the target MSG card.
3. From the lower drop-down list, select the messages to transfer.
 - To transfer a certain message, select the number of that message.
 - To transfer all messages at once, select "ALL".
 The Save dialog box will be displayed.
4. Enter a file name.
5. Click **Save**.
6. Click **OK**.
When you choose to transfer all messages, each message is saved as an individual file, with a number appended to the file name corresponding to that message's location on the OPB card.
When complete, the display will return to the main screen.

4.5.8 Utility—Error Log

Collects and displays system error information.

Whenever there is a system failure, the PBX stores the error code generated. The connected PC collects all of these codes, along with other information, and displays an explanatory error message.

The functions of the buttons on this screen are as follows:

Button	Function
Cancel	Closes the Error Log screen without saving.
Capture	Saves the currently displayed Error Log information as a text file.
Minor	Displays minor errors, which affect only a certain part of system operation.

Button	Function
Major	Displays major errors, which affect operation of the whole system, or result in system failure.
Clear	Erases the stored error log information from both the screen and the PBX.

The items displayed on screen are as follows:

Item	Description
Index	The ordinal number assigned to an error record in the current log.
Date	The date of the error detection.
Time	The time of the error detection.
Error Code	The 3-digit error code assigned by the PBX.
Sub Code	The 5-digit sub code of the relevant hardware. (1XXYY) 1: Cabinet number XX: Slot number KX-TDA100: 00 to 06 (00: MPR slot; 01 to 05: Free slot; 06: Option slot) KX-TDA200: 00 to 11 (00: MPR slot; 01 to 10: Free slot; 11: Option slot) YY: Physical port number (01 to 16) For OPB3 card, sub slot number + port number will be displayed. Sub slot 1: 11 to 14 Sub slot 2: 21 to 24 Sub slot 3: 31 to 34
Error Message	A description of the error.

Note

For a list of common errors and solutions, see "4.1.5 Troubleshooting by Error Log" of the Installation Manual.

To view the error log

- From the **Utility** menu, select **Error Log**.

4.5.9 Utility—T1 Signalling Bit Monitor

Displays reference signalling bit information for all channels of the T1 card, by monitoring sent and received A, B, C and D bits. This utility is intended for use by dealers.

This option is only available at Installer level, and requires that the target T1 card be set to INS status.

While monitoring is being performed, any displayed bits whose value changes from 0 to 1 or vice versa will be highlighted in red until the next screen refresh is performed.

To view signalling bit information

1. From the **Utility** menu, select **T1 Signalling Bit Monitor**.
2. From the **Slot No** drop-down list, select the target slot.
3. From the **Interval Timer** drop-down list, select the number of seconds between each automatic screen refresh.
4. Click **Start**.
Monitoring will be performed and the screen will refresh according to the interval specified.
To refresh the screen manually at any time, click **Refresh**.
5. Click **Stop** to end monitoring.

4.5.10 Utility—T1 Line Trace

Traces the sent and received signalling bits and dial numbers on the specified channel of the T1 line. This utility is intended for use by dealers.

This option is only available at Installer level, and requires that the target T1 card be set to INS status.

To view T1 trace data

1. From the **Utility** menu, select **T1 Line Trace**.
2. From the **Slot No** drop-down list, select the target slot.
3. From the **CH No** drop-down list, select the target channel.
4. Click **Start**.
Trace information will be displayed. The information is automatically updated whenever the data being monitored changes.
5. Click **Stop** to end the trace.
6. Select an option:
 - Click **Capture** to save the displayed trace information.
Information is saved as a text-format file.
 - Click **Clear** to erase the information.

4.5.11 Utility—ISDN/QSIG Protocol Trace

This utility collects protocol trace data from PRI or IP-GW cards, and displays it on the PC.

This option is only available at Installer level, and requires that the target PRI or IP-GW card be set to INS status.

Protocol trace data is continually accumulated on ISDN and IP-GW cards, and 3 types of data can be downloaded:

- **Real Time Trace:** Pseudo-real-time data is collected through data polling at one-second intervals. The displayed information is updated beginning when the **Start** button is clicked.
- **Accumulation Trace:** Previously accumulated data is retrieved and displayed.
- **Error Accumulation Trace:** Previously accumulated error data is retrieved and displayed. This trace shows the data snapshot that is taken just before a card resets.

To view trace data

1. From the **Utility** menu, select **ISDN/QSIG Protocol Trace**.

2. From the **Slot No** drop-down list, select the target slot.
3. From the **Trace Data Type** drop-down list, select the type of data to view.
4. Click **Start**.
Trace information will be displayed.
5. Select an option:
 - Click **Capture** to save the displayed trace information.
 - Click **Clear** to clear the screen display.
6. Click **Cancel** to return to the main screen.

4.5.12 Utility—Digital Trunk Error Report

Displays accumulated information on various types of errors occurring on digital CO lines.

This option is only available at Installer level.

The value displayed for each error item is the number of times that each error occurred during the time period selected. Average values for these items vary depending upon many factors, such as the equipment being used, and the distance from the telephone company.

The displayed items are as follows:

Item		Description
Time		Time of error
Slot		Relevant slot and card type
Counter of Digital Trunk Error Logs logged in Minor Error Log	Out of SYNC (#300)	Digital CO line out of sync (Loss of Signal)
	RAI (#301)	Digital CO line RAI signal reception
	AIS (#302)	Digital CO line Alarm Indication Signal reception
	Frame Failure (#300)	Digital CO line frame failure (Loss of Frame)
Counter of minor communication error	CRC	Cyclic Redundancy Check error
	SF	Severely errored frame (or Severe Framing Error)
	FE	Frame synchronisation bit-error
	LV	Line Code Violation
	SL	Controlled slip

To view digital CO line information

1. From the **Utility** menu, select **Digital Trunk Error Report**.
2. From the **Slot No** drop-down list, select the target slot.
 - To generate a report on a specific card, select the slot number and card name.
 - To generate a report on all matching cards simultaneously, select "ALL".
3. From the **Display form** drop-down list, select the time period to view.

4. Click **Execute**.

The error report will be displayed.

4.5.13 Utility—IP Extension Statistical Information

Displays accumulated statistical information on both IP extensions and IP-EXT cards.

The displayed items are as follows:

Item	Description
Collection Started Time	Date and time of the last reset of the port.
Port	Number of the port.
RTP Receive Packet Counter	Total number of packets received.
RTP Receive Lost Packet Counter	Total number of packets lost.
RTP Receive Abandoned Packet Counter	Total number of packets abandoned.
RTP Arrive Packet Interval (MAX.) [ms]	Maximum time taken for a packet to arrive.
RTP Arrive Packet Interval (MIN.) [ms]	Minimum time taken for a packet to arrive.

To view IP extension information

- From the **Utility** menu, select **IP Extension Statistical Information**.
- From the **Card Selection** drop-down list, select the slot number.
- Click **Execute**.
The statistical information will be displayed.
- Select an option:
 - Click **Capture** if you want to save the displayed information.
 - Enter a file name, or select a file to overwrite.
 - Click **Save**.
 - Click **Clear** to erase the information and reset the Collection Started Time.
- Click **Cancel** to return to the main screen.

4.5.14 Utility—CS Information

Displays information stored by the PBX regarding each Cell Station (CS).

This option is only available at Installer level, and requires that the target CSIF, DHLC or DLC card be set to INS status.

The displayed items are as follows:

Item	Description
Slot	Number of the slot

Item	Description
Port	Number of the port
CS Name	Name of the attached CS
Status	Service status of the attached CS: INS, OUS, or FAULT. If the status is FAULT, subsequent data items for that port will be left blank.
Version	Version number of the program file stored in the CS
Revision	Revision number of the program file stored in the CS
CSID	12-digit ID number of the CS
Path	Number of the wireless extension currently using each path. In the case of a group, several extensions may be using the same floating extension number. When an extension number is not registered, the display shows "OFF". 2.4 GHz PSs can use up to 3 paths. DECT PSs can use up to 4 paths.
Group Call	Number of PSs registered to the attached CS that are members of a PS Ring Group.

To view CS information

1. From the **Utility** menu, select **CS Information**.
2. From the **Target CSI/F Slot No** drop-down list, select the target slot.
 - To display information on a single card, select the slot number and name of that card.
 - To display information on all matching cards, select "ALL".
3. From the **Interval Timer** drop-down list, select the number of seconds between each automatic screen refresh.
4. Click **Start** to begin monitoring.
Monitoring will be performed and the screen will refresh according to the interval specified.
To refresh the screen manually at any time, click **Refresh**.
5. Click **Stop** to end monitoring.

4.5.15 Utility—PS Information

Displays Portable Station (PS) registration information, including the associated Cell Station (CS). This option is only available at Installer level.

The displayed items are as follows:

Item	Description
PS No.	PS location number. Only registered PSs will be displayed.
Extension Number	Extension number of the PS.
Location—Slot	Slot number of the CS that the PS is registered with.

Item	Description
Location—Port	Port number of the CS that the PS is registered with.

To view PS information

1. From the **Utility** menu, select **PS Information**.
2. Click **Refresh**.

4.5.16 Utility—Timed Update

Updates programs in the LPR cards (optional service cards with local processors) by comparing them with files found on the SD memory card on a preset schedule, and downloading newer files to the cards.

This option is only available at Installer level.

It is recommended to set the timed update to take place during the least active time period, for example late at night.

Cards are automatically set to OUS status during an update, and returned to INS status when the update is complete.

This utility does not apply to CS programs. These must be updated manually using the **SD Card File View and Load** utility (see "4.5.4 Utility—SD Card File View and Load").

When this utility has been set, all commands that would affect the status of cards are prevented from operating.

The list of these commands is as follows:

- Card status change (INS/OUS)
- Diagnosis commands
- Card installation
- Card deletion
- Remote reset
- LPR program download requests
- Signalling Bit Monitor requests (T1)
- Line trace start requests (T1)
- ISDN/QSIG Protocol Data Trace start requests
- Time setting
- CS program download requests
- File deletion

When a function other than those listed above, that cannot be performed while Timed Update has been set, is selected, an error message will be displayed.

To turn this utility on:

1. From the **Utility** menu, select **Timed Update**.
2. Select the **Set** option.
The time setting box will become available.
3. Enter the desired time using the number keys.

Click in the hour or minute field and use the up and down arrows to adjust the displayed time in increments of one unit.

4. Click **Apply**.
A message box will be displayed.
5. Click **OK**.

To turn this utility off:

1. From the **Utility** menu, select **Timed Update**.
2. Select the **Off (Cancel)** option.
3. Click **Apply**.
A message box will be displayed.
4. Click **OK**.

4.5.17 Utility—System Reset—Reset by the Command

Updates the main system program and data files stored within the PBX using files taken from the SD memory card, and resets the connected PBX.

This option is only available at Installer level.

2 copies each of the main system files can be stored on the SD memory card. The names of these files are as follows:

File Name	Description
DSYS	Main system data file. Contains all of the current configuration data for the PBX.
DSYS_SUB	Backup main system data file
PMPR	PBX program file. Contains the software to run the MPR board of the PBX.
PMPR_SUB	Backup PBX program file

When new DSYS and PMPR files are transferred from an attached PC to the SD memory card using the **File Transfer PC to PBX (SD Card)** utility (see "4.5.2 Utility—File Transfer PC to PBX (SD Card)"), they are stored as the backup files. To use these files on the PBX, it is necessary to first swap them with the currently active files on the SD memory card.

Requirements

- This utility functions on PBXs with MPR version 1.005 or later.
- On earlier versions, the reset request confirmation screen will be displayed, and files will not be updated.

To update system files and reset the PBX

1. From the **Utility** menu, point to **System Reset** and then click **Reset by the Command**.
2. Choose whether to back up current system data or not.
 - Click **SD Backup** to back up the current system data to the SD memory card before proceeding. Select this if you intend to use the current system data unchanged after reset.

- Click **Skip** to continue without backing up.
Select this if you intend to replace the current system data with data that was uploaded from the PC.

The second screen will be displayed. A list of matching files found on the SD memory card, with dates and times, is shown at the top.

3. Select whether to replace the DSYS and PMPR files or not.
When no backup file is found, the corresponding options are not available.
4. Click **OK**.
A confirmation screen will be displayed.
5. Select an option:
 - Click **OK** to reset the PBX.
If **OK** is clicked, a final confirmation screen will be displayed.
 - Click **Cancel** to return to the main screen without copying files.
6. Click **OK** to reset the PBX, or **Cancel** to return to the main screen without copying files.
If the reset command was not carried out correctly, an error message will be displayed, and you will be returned to the main screen.

After resetting the PBX with this command, it is necessary to reconnect to the PBX to continue programming.

4.5.18 Utility—Flash ROM ID Information

Displays the Flash ROM ID number pre-assigned to the PBX, used for PBX installation management.

To view the Flash ROM ID

- From the **Utility** menu, click **Flash ROM ID Information**.

4.6 Help

4.6.1 FAQ

Q The Maintenance Console cannot connect to the PBX via RS-232C cable.

- A**
- Is the cable firmly connected to both the PC and the PBX?
 - Is the serial port that the PC uses correctly specified?
 - Is the baud rate correct?
The default setting, and a safe rate, is 19 200 bps.
 - Is the password correct?
 - Is the Maintenance Console not connected to the PBX by another connection method?

Q The Maintenance Console cannot connect to the PBX via USB.

- A**
- Is the USB cable firmly connected to both the PC and the PBX?
 - Is the USB driver on the PC running?
To confirm, open the Windows Device Manager, and look for "Panasonic KX-TDA USB Main Unit driver" in the USB Controllers section. If it is not present, re-install the USB driver.
 - Is the password correct?
 - Is the Maintenance Console not connected to the PBX by another connection method?

Q The Maintenance Console cannot connect to the PBX via LAN.

- A**
- Is the PC connected to the LAN?
 - Have the IP address and port number of the PBX been set correctly? For more details, see "4.7.12 Slot [1-1] CTI-LINK Card Property".
 - Is the password correct?
 - Is the Maintenance Console not connected to the PBX by another connection method?

Q The Maintenance Console cannot connect to the PBX via modem.

- A**
- Is the dial number of the modem correct? For more details, see "4.17.4 Miscellaneous [11-4]".
 - Has a modem been installed to the PBX?
 - Are the modem settings of the PBX and Maintenance Console correct? For more details, see "4.17.4 Miscellaneous [11-4]".
 - Is the password correct?
 - Is the Maintenance Console not connected to the PBX by another connection method?

Q Can the background picture of the Maintenance Console be changed?

- A**
- Yes. The background picture is stored in the following location:

C:\Program Files\Panasonic\Maintenance Console\tda200.bmp

The picture is a 1024 × 768-pixel, BMP-format image. To change the image, replace this file with another BMP-format file of the same name.

Q Can I perform initial setup of the PBX without being connected to the PBX?

- A**
- Yes. This is possible in Batch mode. Create a new system data file using **File—New** (see "4.2.1 File—New"), edit settings as required, and then upload this file to the PBX later (see "4.5.2 Utility—File Transfer PC to PBX (SD Card)").

Q Modified settings have not been updated in the PBX.

- A**
- Click **Apply** or **OK** in the sub-menu screen.

Q If I reset the PBX directly after modifying settings, the modified settings are not updated in the PBX.

- A**
- When you click **Apply**, the settings are updated in the PBX, but are not yet saved to the SD memory card. If system data is not saved to the SD memory card, the PBX will restore the data that was last saved to the card in the event that the PBX is reset, or power is turned off and back on again. Therefore, before resetting the PBX, click the **SD memory backup** icon to save the system data to the SD memory card. Alternatively, exit the Maintenance Console. This automatically saves system data to the SD memory card.

Note

Do not remove the SD memory card during access. Doing so may result in failure to back up data correctly.

Q After reinitialising the PBX, I restored system data from a previous backup. However, some of the settings have not been restored to their previous values.

- A**
- The following setting data is not saved to the SD memory card, so will be deleted when the PBX is initialized. This data is stored in the PBX's battery backup memory.
 - Present Button Status of extension FWD/DND
 - Status of Group FWD
 - Call logs
 - Digital Trunk Error Report
 - Status of Station Lock
 - Status of Login
 - Charge amount

Q Not all of the characters of a setting can be displayed because the column is too narrow.

- A**
- Move the mouse to the line between the names of 2 setting items, at the top of the table. The pointer should change to a double arrow. Click and drag the line to the right until all characters are displayed.

Q How do I set card status to "INS"?

- A**
- In the **Configuration—Slot** screen (see "4.7.1 Slot [1-1]"), click the **Status** cell of the card, and select "INS".

Q How do I set card status to "OUS"?

- A**
- In the **Configuration—Slot** screen (see "4.7.1 Slot [1-1]"), click the **Status** cell of the card, and select "OUS".

Q The status of a new card will not change to "INS".

- A**
- With the new card installed, does the total number of extensions or CO lines exceed the maximum supported by the PBX?
 - Is the type of card installed in the slot different from the card type set as "Pre-INS" for that slot? Confirm that the correct card is installed in the slot.
 - Is the card firmly and fully installed in the slot? Confirm that the card is installed correctly in the slot.
 - Confirm that the card is not damaged.
- Q** **I want to set the status of only 1 port of the IP-GW4 card to "OUS".**
- A**
- The IP-GW4 card requires both ports to be set to "OUS"/"INS" together.
- Q** **When registering a Portable Station, I set an extension number, click the Select cell to set it to ON (blue), and click Registration, but the registration process does not execute.**
- A**
- After setting the extension number, click **Apply** to update the PBX with the change before continuing.
- Q** **I cannot register Portable Stations using the method described in Portable Station [1-2].**
- A**
- Is the status of the CSIF, DHLC or DLC card set to "INS"?
 - Is a CS connected to the CSIF, DHLC or DLC card? If not, connect one.
 - Do the PINs (Personal Identification Numbers) of the PBX and the Portable Station match? Confirm that they are the same.
 - Is the Portable Station within transmission range of the CS?
 - Has the Portable Station previously been registered at another location?
It is not possible to register a Portable Station at 2 locations, so use the **Forced De-registration** option to delete the previous registration.
- Q** **I cannot delete the extension number of a Portable Station.**
- A**
- First, de-register the Portable Station itself, and then delete the extension number.
- Q** **I cannot de-register a Portable Station.**
- A**
- Is the Portable Station turned on? If not, turn it on.
 - Is the Portable Station within transmission range of the CS? If not, move it closer to the CS and try the de-registration operation again.
- Q** **The Portable Station I want to de-register is broken, and will not turn on, or is not available, or the registration information was deleted first from the Portable Station, so it cannot be de-registered.**
- A**
- The Portable Station can be forcibly de-registered by the following steps.
 1. In the **Portable Station** screen (see "4.7.14 Portable Station [1-2]"), click the **Select** cell of the Portable Station you want to delete to set it to **ON** (blue).
 2. Click **Forced De-registration**.
 3. Confirm that the status changes to "None".
- Q** **I changed the extension number of a Portable Station, but the display of the Portable Station still shows the old extension number.**

- A** • Turn the Portable Station off and back on again, to force it to re-register its location.
- Q** **I changed the FCO of a Portable Station, but the display of the Portable Station still shows the old FCO.**
- A** • Turn the Portable Station off and back on again, to force it to re-register its location.
- Q** **If I delete the extension number of a Portable Station, and then turn the Portable Station off and back on again, it does not function correctly.**
- A** • Do not delete the extension number of the Portable Station.
- Q** **How do I prevent extension numbers being automatically assigned to a newly installed card?**
- A** • Change **Extension Number Set Mode** in the **Configuration—Option** screen (see "4.7.16 Option [1-4]") from **Automatic** to **Manual**.
- Q** **How do I prevent newly installed cards automatically being changed to "INS"?**
- A** • Change **Status after Card Install** in the **Configuration—Option** screen (see "4.7.16 Option [1-4]") from "In Service (INS)" to "Out of Service (OUS)".
- Q** **I cannot change an LCO port to INS status.**
- A** • Is the card installed in the appropriate slot?
 • Is the card installed in the correct slot, but not functioning correctly?
 Check the condition of the card.
 • Is the card itself in INS status?
 Set it to INS status.
 • Is a CO line connected to the appropriate port?
 • Is the port in FAULT status, even though a CO line is connected?
 Run diagnosis on the relevant slot.
- Q** **How do I change the dialing mode of an analog CO line?**
- A** • From the **Configuration—LCO Port** screen (see "4.7.17 LCO Port [1-5]"), change the **Dialing Mode** setting of the target port to "DTMF" or "Pulse", as required.
- Q** **How do I set disconnect detection (CPC Detection) for an analog CO line?**
- A** • From the **Configuration—LCO Port** screen (see "4.7.17 LCO Port [1-5]"), modify the **CPC Signal Detection Time—Outgoing, Incoming** setting of the target port.
 The required value varies by carrier. Transmission and reception can be set separately.
- Q** **How do I connect to another PBX using QSIG?**
- A** • From the **Configuration—PRI Port** (see "4.7.19 PRI Port [1-6]") screen, set the **Port Type** of the port you want to use to either "QSIG-Slave" or "QSIG-Master".
- Q** **I cannot open the subwindow for a certain card.**
- A** • First, either install the card, or set the status of a slot to "Pre-Install".
- Q** **How do I change the extension number of a wired extension?**

- A**
- Change the extension number of the target port to the new number, and click **Apply**. Then set the port to OUS status, and then back to INS status.
- Q** **During a conversation, I changed the extension number of a wired extension, but the display still shows the previous extension number.**
- A**
- The extension number will not change while the extension is in use. When the conversation is finished, set the port to OUS status, and then back to INS status.
- Q** **How do I change the type of an extension port?**
- A**
- Set the port to OUS status. Then, change **Type** in the **Configuration—Extension Port** window (see "4.7.23 Extension Port [1-8]").
- Q** **I have set the type of an extension port to "DSS Console", but I cannot apply this setting. (Error E000402)**
- A**
- The number entered in **Location No.** on the **Configuration—Extension Port** screen (see "4.7.23 Extension Port [1-8]") is the same as that entered for another DSS Console. Change this so that the numbers do not overlap.
- Q** **I have set the type of an extension port to "VM (DPT)", but I cannot apply this setting. (Error E000403)**
- A**
- The **VM Unit No.** and **Port No.** settings entered on the **Configuration—Extension Port** screen (see "4.7.23 Extension Port [1-8]") are the same as those entered for another VM (DPT). Change this so that the numbers do not overlap.
- Q** **I have set the type of an extension port to "PC Console", but I cannot apply this setting. (Error E000402)**
- A**
- The number entered in **Location No.** on the **Configuration—Extension Port** screen (see "4.7.23 Extension Port [1-8]") is the same as that entered for another PC Console. Change this so that the numbers do not overlap.
- Q** **What programming do I have to perform to use a headset with an extension?**
- A**
- Set **Headset OFF/ON** on the **Configuration—Extension Port** screen (see "4.7.23 Extension Port [1-8]") to "Headset ON".
- Q** **What programming do I have to perform to use XDP with an extension port?**
- A**
- Set **XDP Mode** on the **Configuration—Extension Port** screen (see "4.7.23 Extension Port [1-8]") to "On".
- Q** **Modified settings are not saved even when I press the Apply button.**
- A**
- To save the system data files, choose **Save** from the **File** menu.
- Q** **How do I change the extension numbering plan from 3-digit numbers to 4-digit numbers?**
- A**
- From the **System—Numbering Plan—Extension** screen (see "4.8.10 Numbering Plan—Extension [2-6-1]"), enter a 2-digit number in **Leading Number**, or change **Additional Digits** from "x" to "xx".
For more details, see **What is the procedure to modify the Numbering Plan?**.

Q How do I set a 3-digit numbering plan?

- A**
- There are 2 methods of creating a 3-digit numbering plan, using the **System—Numbering Plan—Extension** screen (see "4.8.10 Numbering Plan—Extension [2-6-1]"):
 1. Set the leading number to be 2 digits, with one additional digit. This method allows a maximum of 10 extensions.
Example: **Leading Number** = 10; **Additional Digits** = x
In this example, extension numbers 100 to 109 can be used.
 2. Set the leading number to be one digit, with 2 additional digits. This method allows a maximum of 100 extensions.
Example: **Leading Number** = 1; **Additional Digits** = xx
In this example, extension numbers 100 to 199 can be used.
- For more details, see **What is the procedure to modify the Numbering Plan?**.

Q What is the procedure to modify the Numbering Plan?

- A**
- Perform the following steps:
 1. Confirm that the Numbering Plan you will change is not currently being used by any extensions (see "4.4.3 Tool—Extension List View").
If it is being used by extensions, temporarily change the number of those extensions to that of another numbering plan, or delete the extension number (see "4.10.1 Wired Extension—Extension Settings [4-1-1]" and "4.10.9 Portable Station—Extension Settings [4-2-1]").
 2. Clear the **Leading Number** cell.
 3. Click **Apply**.
 4. Modify the **Additional Digits** cell as required.
 5. Click **Apply**.
 6. Enter the desired value in the **Leading Number** cell.
 7. Click **Apply**.
 8. Set all extension ports to OUS status, and then back to INS status.

Q When modifying the Numbering Plan, I cannot change the Leading Number.

- A**
- It is not possible to use the same Leading Number for 2 extension blocks, or to use a number that could possibly overlap with another Leading Number.
So, for example, if "2" is already set as a Leading Number it is not possible to set "21" as another Leading Number because of the possible overlap of extension numbers.
The number you are trying to store cannot be used if it is already being used by:
 - A feature number
 - Another extension block
 - A Dial setting (see "4.15.1 TIE Table [9-1]")
 - Quick Dialing (see "4.8.13 Numbering Plan—Quick Dialing [2-6-4]")
 In any of these cases, choose another number.

Q When modifying the Numbering Plan, how do I set a 1-digit extension number?

- A**
- Perform the following steps:
 1. Clear the **Leading Number** cell.
 2. Click **Apply**.
 3. Set **Additional Digits** to "None".
 4. Click **Apply**.
 5. Enter the desired value in the **Leading Number** cell.
 6. Click **Apply**.
 7. Set all extension ports to OUS status, and then back to INS status.

Q **How do I change a feature number?**

- A**
- Perform the following steps:
 1. Open the **System—Numbering Plan—Feature** screen (see "4.8.11 Numbering Plan—Feature [2-6-2]").
 2. Change the value in the **Dial** cell of the desired feature.
 3. Click **Apply**.

Q **I cannot change a feature number.**

- A**
- It is not possible to use the same number for 2 items. The number you are trying to store cannot be used if it is already being used by:
 - A feature number
 - An extension
 - A Dial setting (see "4.15.1 TIE Table [9-1]")
 - Quick Dialing (see "4.8.13 Numbering Plan—Quick Dialing [2-6-4]")In any of these cases, choose another number.

Q **How do I change the code used to access another PBX?**

- A**
- Perform the following steps:
 1. Open the **System—Numbering Plan—Other PBX Extension** screen (see "4.8.12 Numbering Plan—Other PBX Extension [2-6-3]").
 2. Change the value in the **Dial** cell of the desired feature.
 3. Click **Apply**.

Q **I cannot change an Other PBX Extension code.**

- A**
- It is not possible to use the same number for 2 items. The number you are trying to store cannot be used if it is already being used by:
 - A feature number
 - An extension
 - A Dial setting (see "4.15.1 TIE Table [9-1]")
 - Quick Dialing (see "4.8.13 Numbering Plan—Quick Dialing [2-6-4]")In any of these cases, choose another number.

Q **I cannot change a feature number on the B/NA DND Call Feature screen.**

- A**
- The number you are trying to store is already being used by another call feature. Please choose a different number.

Q How do I edit a Class of Service, or create a new Class of Service?

- A**
- Class of Service feature restrictions can be set from the **System—Class of Service—COS Settings** screen (see "4.8.15 Class of Service—COS Settings [2-7-1]").

Q How do I restrict calls between 2 extensions?

- A**
- Calls between extensions can be restricted from the **System—Class of Service—Internal Call Block** screen (see "4.8.17 Class of Service—Internal Call Block [2-7-3]"). Click in the relevant cells to select the COS levels whose extensions are blocked from calling each other.

Q How do I restrict CO line calls made by extensions?

- A**
- CO line calls made by extensions can be restricted from the **System—Class of Service—External Call Block** screen (see "4.8.16 Class of Service—External Call Block [2-7-2]"). Click in the relevant cells to select the trunk (CO line) groups that cannot be used by extensions associated with a particular COS in each time mode. To prevent extensions associated with a COS from making CO line calls, set all trunk groups for that COS to **Block** (blue).

Q How do I modify the hold operation for SLTs?

- A**
- It is possible to choose how to hold a line and transfer a call with an SLT using the **System—System Options—Option 2** screen (see "4.8.22 System Options—Option 2 [2-9-2]"). For more details, see "1.12.1 Call Hold" of the Feature Guide.

Q How do I set up an Incoming Call Distribution (ICD) group to receive CO line calls directly?

- A**
- Perform the following steps:
 1. On the **Groups—Incoming Call Distribution Group—Group Settings** screen (see "4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]"), enter the floating extension number you chose for the ICD group in the **Floating Extension Number** cell.
 2. Click **Apply**.
 3. On the **Groups—Incoming Call Distribution Group—Member** screen (see "4.9.7 Incoming Call Distribution Group—Member [3-5-2]"), select the ICD group you created from the **Incoming Call Distribution** drop-down list.
 4. Enter the extension numbers of member extensions in the **Extension No.** column.
 5. Click **Apply**.
 6. On the **DIL** tab of the **CO & Incoming Call—DIL Table & Port Setting** screen (see "4.16.2 DIL Table & Port Setting [10-2]"), enter the floating extension number of the ICD group as the **DIL Destination** of each time mode.
 7. Modify other settings as required from the **Group—Incoming Call Distribution Group** submenu.

Q How do I set the queuing operation for an Incoming Call Distribution group?

- A**
- Perform the following steps:
 1. On the **Groups—Incoming Call Distribution Group—Queuing Time Table** screen (see "4.9.8 Incoming Call Distribution Group—Queuing Time Table [3-5-3]"), set the actions as required for each queuing table.
 2. On the **Groups—Incoming Call Distribution Group—Group Settings** screen (see "4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]"), from the **Queuing Time Table** tab, select the number of the Queuing Time Table to use in each time mode.

Q How do I add an extension as a member of an Incoming Call Distribution (ICD) group?

- A**
- Perform the following steps:
 1. On the **Groups—Incoming Call Distribution Group—Member** screen (see "4.9.7 Incoming Call Distribution Group—Member [3-5-2]"), from the **Incoming Call Distribution** drop-down list, select the group you want to modify. The ICD group must have an extension number set.
 2. Enter the extension number of the extension you want to add in a blank cell of the **Extension No.** column.
 3. Set **Delayed Ring** and **Wrap-up Time** as necessary.
 4. Click **Apply**.

Note that it is necessary to set the extension number of the ICD group in advance.

Q I cannot set system speed dialing numbers from PC Console.

- A**
- Set the COS of the extension to which PC Console is connected to Manager class, by setting **Manager** on the **Options** tab of the **System—Class of Service—COS Settings** screen (see "4.8.15 Class of Service—COS Settings [2-7-1]") to "Enable".
 - System speed dialing numbers can only be edited by one PC Console at a time.

Q I have set FWD through system programming, but calls are still not being forwarded.

- A**
- Perform the following steps:
 1. Check that the **Present Button Status** of the target extension on the **Extension—Wired Extension—FWD/DND** screen (see "4.10.3 Wired Extension—FWD/DND [4-1-2]"), or **Extension—Portable Station—FWD/DND** screen (see "4.10.11 Portable Station—FWD/DND [4-2-2]") is set to "FWD".
 2. Create a FWD button on the target extension if one does not already exist.
 3. Press the FWD button so that it changes to FWD status.

4.7 Configuration [1]

4.7.1 Slot [1-1]

The operating characteristics associated with each service card can be programmed.

◆ Card Type

Indicates the type of service card that is installed or pre-installed in each slot (reference only). The last slot is provided only for OPB3 or CTI-LINK cards.

This column offers two ways to open the screen to specify the property of each card:

- Click the desired card in the column.
- Use the arrow keys to select the desired card in the column, and then click **Property**.

Default

Slot 00: MPR (Main Processing Card: fixed)

Other slots: Not stored.

Value Range

Card Type

DHLC8: 8-Port Digital Hybrid Extension Card

DLC16: 16-Port Digital Extension Card

DLC8: 8-Port Digital Extension Card

MSLC16: 16-Port Single Line Telephone Extension with Message Lamp Card

SLC8: 8-Port Single Line Telephone Extension Card

SLC16: 16-Port Single Line Telephone Extension Card

CSI/F: Cell Station Interface Card

LCOT16: 16-Port Analog Trunk Card

LCOT8: 8-Port Analog Trunk Card

PRI23: PRI Card

T1: T-1 Trunk Card

IP-GW4 (KX-TDA0480/KX-TDA0484): 4-Channel VoIP Gateway Card

OPB3: Optional 3-Slot Base Card

CTI-LINK: CTI Link Card

IP-GW16: 16-Channel VoIP Gateway Card

IP-EXT16: 16-Port IP Proprietary Telephone Card

Maximum Quantity

Extension card: 4 with KX-TDA100, 8 with KX-TDA200

CSI/F card: 2 with KX-TDA100, 4 with KX-TDA200

CO line card: 4 with KX-TDA100, 8 with KX-TDA200

PRI23 card: 2 with KX-TDA100, 4 with KX-TDA200

T1 card: 2 with KX-TDA100, 4 with KX-TDA200

PRI23 card + T1 card: 2 with KX-TDA100, 4 with KX-TDA200

IP-GW card: 2 with KX-TDA100, 4 with KX-TDA200

OPB3 card: 2 with KX-TDA100, 4 with KX-TDA200
CTI-LINK card: 1 with KX-TDA100, 1 with KX-TDA200

Installation Manual References

1.3.1 Options

Programming Guide References

4.7.3 Slot [1-1] Extension Card Property

4.7.4 Slot [1-1] CSI/F Card Property

4.7.5 Slot [1-1] LCO Card Property

4.7.6 Slot [1-1] PRI Card Property

4.7.7 Slot [1-1] T1 Card Property

4.7.8 Slot [1-1] IP-GW Card Property

4.7.10 Slot [1-1] OPB

4.7.12 Slot [1-1] CTI-LINK Card Property

Feature Guide References

None

◆ Status

Indicates the status of the service card in each slot (reference only).

This column offers two ways to open the screen to select the card command:

- Click the desired cell in the column.
- Use the arrow key to select the desired cell in the column, and then click **Command**.

Default

Slot 00: - (fixed)

Other slots: Current status

Value Range

INS: The card is in service.

OUS: The card is out of service.

Fault: The card has been removed from the slot, or is not communicating with the PBX.

Fault-OVER: The number of CO line and/or extension ports exceed the system capacity.

Fault-DIF: The card installed in the slot differs from the programmed card type.

Pre-Install: There is no card in the slot, but the card type is programmed for the slot.

Idle: There is no card in the slot, nor programming of the card type for the slot.

Programming Guide References

4.7.13 Slot [1-1] Card Command

Feature Guide References

None

◆ **Version**

Indicates the version of the installed card (reference only).

For IP-EXT cards, both the LPR version and the VoIP version are displayed. The LPR version is shown on the left, and the VoIP version on the right, as follows:

(Example) 1.002 / 1.001

Default

Current version number

Value Range

Version number

Feature Guide References

None

4.7.2 Slot [1-1] MPR Card Property

The properties for the MPR card can be specified.

◆ **Memory Expansion Card:**

Indicates whether an MEC card is mounted on the MPR card. To change the MEC card installation status, click on this cell, then click **OK** in the dialog box that appears. Clicking on the **Command** button performs the same function.

Removing the MEC card here also deletes related MEC card data.

Default

Current status

Value Range

None, Installed

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Memory Version:**

Indicates the hardware version of the MEC card when it is mounted on the MPR card (reference only).

Default

Current status

Value Range

- (not mounted), 1–15

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

4.7.3 Slot [1-1] Extension Card Property

The property for the extension cards can be specified.

◆ SLT Pulse Dial Mode

Selects the type of pulse dial transmission appropriate to your area.

Default

Normal

Value Range

Normal, Sweden, New Zealand

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ SLT Off Hook Time

Specifies the minimum time required by the PBX to recognize the pulse dial sent from an SLT as an off-hook signal.

Default

160 ms

Value Range

$8 \times n$ ($n=3-255$) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ SLT Off Hook Guard Time

Specifies the length of time used to prevent the PBX from mistaking an off-hook signal as a pulse dial.

Default

504 ms

Value Range $8 \times n$ ($n=12-63$) ms**Programming Guide References**

4.7.1 Slot [1-1]

Feature Guide References

None

◆ SLT Pulse Maximum Break Width

Specifies the maximum length of the break signal in a pulse dial.

Default

96 ms

Value Range $8 \times n$ ($n=9-20$) ms**Programming Guide References**

4.7.1 Slot [1-1]

Feature Guide References

None

◆ SLT Pulse Minimum Make Width

Specifies the minimum length of the make signal in a pulse dial.

Default

8 ms

Value Range $8 \times n$ ($n=1-5$) ms**Programming Guide References**

4.7.1 Slot [1-1]

Feature Guide References

None

◆ SLT Flash Detection

Enables the PBX to detect a flash signal an SLT user sent by pressing the hookswitch or the Flash/Recall button.

Default

Enable

Value Range

Disable: The PBX disconnects the line to prevent placing the call on hold.

Enable: The PBX places the call on consultation hold.

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Flash Timing - Min.**

Specifies the minimum time before the PBX starts recognizing a hookswitch flash signal sent from an SLT.

Default

112 ms

Value Range

$8 \times n$ ($n=3-63$) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Flash Timing - Range**

Specifies the length of time required by the PBX to recognize a hookswitch flash signal sent from an SLT.

Default

904 ms

Value Range

$8 \times n$ ($n=3-191$) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **DTMF-R STD Detection Time**

Specifies the minimum time required by the PBX to detect the DTMF tone.

Default

30 ms

Value Range $2 \times n$ ($n=1-31$) ms**Programming Guide References**

4.7.1 Slot [1-1]

Feature Guide References

None

◆ SLT Power Supply

Selects the voltage that enables an SLT to activate the Message Waiting lamp. This setting is only available with MSLC cards.

Default

85 V

Value Range

85 V, 145 V

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

1.17.1 Message Waiting

◆ Optional Equipment

Indicates whether an Extension Caller ID card is mounted on the SLC8 card (reference only). This is only available with SLC8 cards.

Default

Current status

Value Range

None, Caller ID

Installation Manual References

2.5.6 EXT-CID Card

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

4.7.4 Slot [1-1] CSI/F Card Property

The properties of the cell station (CS) interface card are displayed.

◆ Master CS Port

Indicates the location of the master CS port (reference only).

Default

Current slot number-Master CS port number

Value Range

Not applicable.

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Radio System ID

Indicates the radio system ID used to register a PS (reference only).

Default

Radio system ID

Value Range

Not applicable.

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

4.7.5 Slot [1-1] LCO Card Property

The properties of the analog CO line cards can be specified.

◆ Outgoing Guard Time

Specifies the length of time after a CO line is disconnected, during which the PBX cannot seize the line.

Default

3 s

Value Range

3–6 s

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ First Dial Timer (CO)

Specifies the minimum time that the PBX waits after seizing a CO line, before sending the dialed digits to the telephone company. This allows the telephone company to have enough time to accept the dialed digits correctly.

Default

1.0 s

Value Range

0.5 × n (n=1–16) s

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ CO Feed Back Tone

Specifies whether to turn on or turn off the pulse feedback tone. For outgoing CO line calls, the dialed number is toned out, which informs the extension user that the dialed number has been dialed out.

Default

Yes

Value Range

No, Yes

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Bell Detection—Bell Start Detection Timer

Specifies the minimum time required by the PBX to confirm the bell signal sent from the telephone company, before the PBX detects an arriving call.

Default

144 ms

Value Range

$24 \times n$ (n=1–50) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Bell Detection—Bell Off Detection Timer**

Specifies the minimum time required by the PBX to confirm that the bell signal is no longer sent from the telephone company, before the PBX realizes the call is lost.

Default

6.0 s

Value Range

1.0 s–15.0 s

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Pulse / DTMF Dial—DTMF Inter Digit Pause**

Specifies the length of the DTMF inter-digit pause. This allows the telephone company to have enough time to accept the dialed digits correctly.

Default

112 ms

Value Range

$64 + 16 \times n$ (n=0–11) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Pulse / DTMF Dial—Pulse Inter Digit Pause

Specifies the length of the pulse inter-digit pause. This allows the telephone company to have enough time to accept the dialed digits correctly.

Default

830 ms

Value Range

630 ms, 830 ms, 1030 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Low Speed Pulse Dial—Pulse % Break

Specifies the % break for a low speed pulse dial. This is the ratio between the break (on-hook) signal and make (off-hook) signal in a pulse dial.

Default

60 %

Value Range

Other, 60 %, 67 %

Programming Guide References

4.7.1 Slot [1-1]

4.7.17 LCO Port [1-5]

Feature Guide References

None

◆ Low Speed Pulse Dial—Break Width

Specifies the maximum length of the break signal in a low speed pulse dial. **Low Speed Pulse Dial—Pulse % Break** on this screen determines the value that can be specified here.

Default

60 ms

Value Range

$4 \times n$ ($n=6-20$) ms

Programming Guide References

4.7.1 Slot [1-1]

4.7.17 LCO Port [1-5]

Feature Guide References

None

◆ Low Speed Pulse Dial—Make Width

Specifies the minimum length of the make signal in a low speed pulse dial. **Low Speed Pulse Dial—Pulse % Break** on this screen determines the value that can be specified here.

Default

40 ms

Value Range

4 × n (n=3–15) ms

Programming Guide References

4.7.1 Slot [1-1]

4.7.17 LCO Port [1-5]

Feature Guide References

None

◆ High Speed Pulse Dial—Pulse % Break

Specifies the % break for a high speed pulse dial. This is the ratio between the break (on-hook) signal and make (off-hook) signal in a pulse dial.

Default

60 %

Value Range

Other, 60 %, 67 %

Programming Guide References

4.7.1 Slot [1-1]

4.7.17 LCO Port [1-5]

Feature Guide References

None

◆ High Speed Pulse Dial—Break Width

Specifies the maximum length of the break signal in a high speed pulse dial. **High Speed Pulse Dial—Pulse % Break** on this screen determines the value that can be specified here.

Default

32 ms

Value Range

4 × n (n=4–18) ms

Programming Guide References

4.7.1 Slot [1-1]

4.7.17 LCO Port [1-5]

Feature Guide References

None

◆ High Speed Pulse Dial—Make Width

Specifies the minimum length of the make signal in a high speed pulse dial. **High Speed Pulse Dial—Pulse % Break** on this screen determines the value that can be specified here.

Default

20 ms

Value Range

4 × n (n=3–15) ms

Programming Guide References

4.7.1 Slot [1-1]

4.7.17 LCO Port [1-5]

Feature Guide References

None

◆ Pulse Type

Selects the type of pulse dial transmission appropriate to your area.

Default

Normal

Value Range

Normal, Sweden, New Zealand

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Option Card Equipment—Option 1 and Option 2

Indicates the type of the card that is installed in the LCOT card (reference only).

Default

Current option card type

Value Range

None, Caller ID Card

Programming Guide References

4.7.1 Slot [1-1]

4.7.17 LCO Port [1-5]—Caller ID Detection

Feature Guide References

None

◆ **Caller ID—Caller ID Signaling**

Selects the signaling type of the Caller ID that the telephone company provides.

Default

FSK

Value Range

FSK, FSK (with Visual Caller ID), DTMF

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Caller ID—Max Receive Time**

Specifies the maximum number of times that the PBX receives a Caller ID series.

Default

1

Value Range

0 (no limit), 1, 2, 3

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Caller ID—Caller ID (FSK) Carrier Detection

Enables the PBX to detect the carrier when receiving Caller ID. To enable this setting, **Caller ID Signaling** on this screen should be assigned to **FSK**.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Caller ID—Caller ID (FSK) END Detection

Selects the method used to detect the end of Caller ID information.

Default

Length + Timer

Value Range

Length + Timer, Timer

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Caller ID—Caller ID (FSK) Header Examination

Enables the PBX to check the header of received Caller ID information. To enable this setting, **Caller ID Signaling** on this screen should be assigned to **FSK**.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Caller ID—Caller ID (FSK) Detection Start Timer

Specifies the length of time that the PBX waits before detecting Caller ID information, after receiving a call. To enable this setting, **Caller ID Signaling** on this screen should be assigned to **FSK**.

Default

80 ms

Value Range

None, 80 × n (n=1–15) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Caller ID—Caller ID (FSK) Detection Timer

Specifies the total time required by the PBX to detect Caller ID information. To enable this setting, **Caller ID Signaling** on this screen should be assigned to **FSK**.

Default

2000 ms

Value Range

80 × n (n=13–50) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Caller ID—Caller ID Header [03]

Selects the type of the 3rd header in a Caller ID signal.

Default

Caller ID

Value Range

DDN, Caller ID

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

4.7.6 Slot [1-1] PRI Card Property

The properties of the PRI card can be specified.

◆ ISDN CO / QSIG Master / QSIG Slave—T200

Specifies the maximum time the PBX waits for a reply after sending the L2 command to ISDN.

Default

10 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN CO / QSIG Master / QSIG Slave—T202

Specifies the maximum time the PBX waits for a reply after resending the TIE demanding to ISDN.

Default

20 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN CO / QSIG Master / QSIG Slave—T203

Specifies the length of time to detect no communication status of L2.

Default

100 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **ISDN CO / QSIG Master / QSIG Slave—T301**

Specifies the maximum time the PBX waits for a reply after making a call to ISDN.

Default

0 × 100 ms

Value Range

0–18000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **ISDN CO / QSIG Master / QSIG Slave—T302**

Specifies the maximum time allowed between each digit on an incoming call. Applies to the overlap receiving.

Default

150 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN CO / QSIG Master / QSIG Slave—T303

Specifies the maximum time the PBX waits for a reply after sending the SETUP (call setting) message to ISDN.

Default

40 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN CO / QSIG Master / QSIG Slave—T304

Specifies the maximum time allowed between each digit on an outgoing call. Applies to the overlap sending.

Default

300 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN CO / QSIG Master / QSIG Slave—T305

Specifies the maximum time the PBX waits for a reply after sending the DISC message to ISDN.

Default

300 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **ISDN CO / QSIG Master / QSIG Slave—T308**

Specifies the maximum time the PBX waits for a reply after receiving the Release message to ISDN.

Default

40 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **ISDN CO / QSIG Master / QSIG Slave—T309**

Specifies the length of time that the PBX tries to disconnect the data link, before saving the call.

Default

120 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **ISDN CO / QSIG Master / QSIG Slave—T310**

Specifies the maximum time the PBX waits for a continuance message after receiving the Incoming Call Proceeding message.

Default

1100 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN CO / QSIG Master / QSIG Slave—T313

Specifies the maximum time the PBX waits for a reply after sending the Connect message.

Default

40 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN CO / QSIG Master / QSIG Slave—T316

Specifies the maximum time the PBX waits for a reply after sending the Restart message.

Default

0 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN CO / QSIG Master / QSIG Slave—T318

Specifies the maximum time the PBX waits for a reply after sending the Resume message.

Default

0 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **ISDN CO / QSIG Master / QSIG Slave—T319**

Specifies the maximum time the PBX waits for a reply after sending the Suspend message.

Default

0 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **ISDN CO / QSIG Master / QSIG Slave—T322**

Specifies the maximum time the PBX waits for a reply after sending the Status enquiry message.

Default

40 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **ISDN CO / QSIG Master / QSIG Slave—T3D3**

Specifies the length of time that the PBX tries to establish L2 in "Permanent" mode.

Default

100 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN CO / QSIG Master / QSIG Slave—T3D9

Specifies the length of time that the PBX tries to disconnect L2 in "Call by Call" mode.

Default

200 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T200

Specifies the maximum time the PBX waits for a reply after sending the L2 command to ISDN.

Default

10 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T201

Specifies the maximum time the PBX waits for a reply after resending the TEI check request to ISDN.

Default

10 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T203

Specifies the length of time to detect no communication status of L2.

Default

100 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T301

Specifies the maximum time the PBX waits for a reply after making a call to ISDN.

Default

0 × 100 ms

Value Range

0–18000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T302

Specifies the maximum time allowed between each digit on an incoming call. Applies to the overlap receiving.

Default

150 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T303

Specifies the maximum time the PBX waits for a reply after sending the SETUP (call setting) message to ISDN.

Default

40 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T304

Specifies the maximum time allowed between each digit on an outgoing call. Applies to the overlap sending.

Default

200 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T305

Specifies the maximum time the PBX waits for a reply after sending the DISC message to ISDN.

Default

300 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T306

Specifies the maximum time that the PBX waits for a reply after sending the DISC (disconnection) message to ISDN. This setting is used when inband tone is supplied.

Default

300 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T307

Specifies the maximum time that the PBX waits after suspending, before restarting.

Default

1800 × 100 ms

Value Range

0–6000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T308

Specifies the maximum time the PBX waits for a reply after receiving the Release message to ISDN.

Default

40 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T309

Specifies the length of time that the PBX tries to disconnect the data link, before saving the call.

Default

120 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T310

Specifies the maximum time the PBX waits for a reply after receiving the Incoming Call Proceeding message.

Default

400 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T312

Specifies the maximum time the PBX waits for a reply after sending the SETUP (call setting) message to ISDN.

Default

60 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T316

Specifies the maximum time the PBX waits for a reply after sending the Restart message.

Default

0 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T320

Specifies the maximum time that the PBX waits for packet protocol.

Default

0 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T322

Specifies the maximum time the PBX waits for a reply after sending the Status enquiry message.

Default

40 × 100 ms

Value Range

0–600 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T3D3

Specifies the length of time that the PBX tries to establish L2 in "Permanent" mode.

Default

300 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ ISDN Extension—T3D9

Specifies the length of time that the PBX tries to disconnect L2 in "Call by Call" mode.

Default

200 × 100 ms

Value Range

0–3000 × 100 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

4.7.7 Slot [1-1] T1 Card Property

The properties of the T1 card can be specified.

◆ Line Coding

Selects the line coding type of T1 PCM (Pulse Code Modulation) for the T1 card.

Default

B8ZS

Value Range

B8ZS, AMI

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Frame Sequence**

Selects the type of frame sequence for the T1 card.

Default

ESF

Value Range

D4, ESF

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **ESF Frame Option**

Selects the values for C-bit and D-bit. To enable this setting, **Frame Sequence** on this screen should be assigned to **ESF**.

Default

C=A, D=B

Value Range

C=A, D=B; C=0, D=0; C=0, D=1; C=1, D=0; C=1, D=1

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **LIU Send Option**

Selects the transmitting level (Transmit Pulse Amplitude) of LIU.

Default

Mode-1

Value Range

Mode-1–Mode-8

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ LIU Receive Option

Selects the receiving level (Receive Equalization) of LIU.

Default

Automatic

Value Range

Automatic, 6 dB, 12 dB, 18 dB, 24 dB

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ First Dial Timer (CO)

Specifies the minimum time that the PBX waits after seizing a CO line, before sending the dialed digits to the telephone company. This allows the telephone company to have enough time to accept the dialed digits correctly.

Default

1.0 s

Value Range

0.5 × n (n=1–16) s

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ First Dial Timer (DID/TIE)

Specifies the minimum time that the PBX waits after seizing a DID or TIE line, before sending the dialed digits to the telephone company or to another PBX. This allows the telephone company or the other PBX to have enough time to accept the dialed digits correctly.

Default

64 ms

Value Range

$32 \times n$ ($n=1-255$) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Answer Detection Timer

Specifies the length of time required by the PBX to recognize the answer signal. This allows the telephone company to have enough time to accept the dialed digits correctly.

Default

32 ms

Value Range

$32 \times n$ ($n=1-255$) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Wink Signal Width

Specifies the length of time of a wink signal.

Default

224 ms

Value Range

$32 \times n$ ($n=4-9$) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ DTMF Tone—DTMF Inter Digit Pause

Specifies the length of the DTMF inter-digit pause. This allows the telephone company to have enough time to accept the dialed digits correctly.

Default

112 ms

Value Range

$64 + 16 \times n$ ($n=0-11$) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ DTMF Tone—DTMF Transmit

Specifies the volume of the DTMF tone to be transmitted.

Default

-3 dB

Value Range

$3-n$ ($n=0-15$) dB

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ DTMF Tone—DTMF Receive

Specifies the volume of the DTMF tone to be received.

Default

-26-0 dB

Value Range

$n-42-0$ ($n=0-31$) dB

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Pulse Dial—Pulse % Break

Specifies the % break for pulse digits. This is the ratio between the break signal and make signal in a pulse dial.

Default

60 %

Value Range

60 %, 67 %

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Pulse Dial—Pulse Type

Selects the type of pulse dial transmission appropriate to your area.

Default

Normal

Value Range

Normal, Sweden, New Zealand

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Pulse Dial—Pulse Inter Digit Pause

Specifies the length of the pulse inter-digit pause. This allows the telephone company to have enough time to accept the dialed digits correctly.

Default

830 ms

Value Range

630 ms, 830 ms, 1030 ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Pulse Dial—CO Feed Back Tone

Specifies whether to turn on or turn off the pulse feedback tone. For outgoing CO line calls, the dialed number is toned out, which informs the extension user that the dialed number has been dialed out.

Default

Yes

Value Range

No, Yes

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Pulse Dial—Maximum BREAK Width

Specifies the maximum length of the break signal in a pulse dial.

Default

112 ms

Value Range $8 \times n$ ($n=9-20$) ms**Programming Guide References**

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Pulse Dial—Minimum MAKE Width

Specifies the maximum length of the make signal in a pulse dial.

Default

8 ms

Value Range $8 \times n$ ($n=1-5$) ms**Programming Guide References**

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Flash—Flash Signal Detection (OPX)

Enables the PBX to detect the hookswitch flash signal from an SLT connected to OPX.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Flash—Minimum BREAK Width (OPX)

Specifies the maximum length of the break signal in a flash signal from an SLT connected to OPX.

Default

200 ms

Value Range

$8 \times n$ ($n=3-63$) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Flash—Flash Width (OPX)

Specifies the maximum length required by the PBX to recognize a hookswitch flash signal sent from an SLT connected to OPX.

Default

800 ms

Value Range

$8 \times n$ ($n=3-191$) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Flash—Flash Signal Detection (TIE)

Enables the PBX to detect a hookswitch flash signal sent from a TIE line.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Flash—Minimum BREAK Width (TIE)

Specifies the maximum length of the break signal in a flash signal sent from a TIE line.

Default

200 ms

Value Range

$8 \times n$ ($n=3-63$) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Flash—Flash Width (TIE)

Specifies the maximum time required by the PBX to recognize a hookswitch flash signal sent from a TIE line.

Default

800 ms

Value Range

$8 \times n$ ($n=3-191$) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Caller ID—Caller ID Start Code**

Selects a DTMF code used to detect the beginning of a Caller ID series.

Default

*

Value Range

*, #, A–D

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Caller ID—Caller ID Information End Code**

Selects a delimiter used to separate multiple parameters in a Caller ID series.

Default

*

Value Range

*, #, A–D

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Caller ID—Caller ID End Code**

Selects a DTMF code used to detect the end of a Caller ID series.

Default

*

Value Range

*, #, A–D

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

4.7.8 Slot [1-1] IP-GW Card Property

The properties of the VoIP Gateway card can be specified.

◆ En-bloc Dialing setting

Selects the call dialing mode.

Default

Overlap

Value Range

Overlap: The PBX sends dialed digits one by one.

En-bloc: The PBX sends all of dialed digits at once after the extension user completes dialing. The PBX recognizes end of dialing at the time when 1) dialing #, if programmed; 2) dialing a preprogrammed telephone number, or 3) the inter-digit timer expires.

Programming Guide References

4.7.1 Slot [1-1]

4.8.5 Timers & Counters—CO / Extension [2-4-1]—Extension Inter Digit Timer

4.8.22 System Options—Option 2 [2-9-2]—ISDN En bloc Dial End Code "#"

4.12.9 Dialing Plan [6-7]

Feature Guide References

1.27.3 Voice over Internet Protocol (VoIP) Network

4.7.9 Slot [1-1] IP-Extension Card Property

The properties of the VoIP Extension card can be specified.

◆ IP Address

Specifies the IP address of the card.

Default

0.0.0.0

Value Range

1.0.0.0–223.255.255.255

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ Subnet Mask

Specifies the subnet mask of the card.

Default

0.0.0.0

Value Range

0.0.0.1–255.255.255.254

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ Keep Alive Time Out

Specifies the length of time that the PBX will continue to consider an IP-PT to be active even if it receives no transmissions from that IP-PT. The PBX constantly confirms the status of IP-PTs. If no communications are received from an IP-PT for the duration specified here, the PBX considers the IP-PT to be unreachable, and sets the port status to **Fault**.

During operation, set between 10 s and 60 s. Settings over 60 s, and **Disable**, are used for debugging purposes, and IP-PTs cannot be guaranteed to function normally in these circumstances. Do not use debugging settings unless instructed to do so.

Default

10 s

Value Range

Disable, 10–120 s

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ Echo Canceler Ability

Specifies the echo canceler ability time.

Default

48 ms

Value Range

None, 48 ms, 128 ms

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ DSP Digital Gain (Down)

Specifies the DSP Digital Gain for the down voice path.

Default

0 dB

Value Range

-14–6 dB

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ DSP Digital Gain (Up)

Specifies the DSP Digital Gain for the up voice path.

Default

0 dB

Value Range

-14–6 dB

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ EC Gain

Specifies the Echo Cancellation Gain.

Default

0 dB

Value Range

-14–6 dB

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ **NLP Setting**

Selects whether the NLP (Non-Linear Processor) is used to control echo sound quality.

Default

Use Non-Linear Processor

Value Range

Use Non-Linear Processor, Use Fixed TX Gain

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

4.7.10 Slot [1-1] OPB

The properties of the Optional Base card can be specified.

◆ **Slot**

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Sub-slot

Indicates the sub-slot number (reference only).

Default

Current sub-slot number

Value Range

Sub-slot number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Feature Card Type

Indicates the type of option card that is installed or pre-installed in each sub-slot (reference only). Note that only one ECHO16 card is available for one OPB3 card.

Default

Current card type

Value Range

Card Type:

MSG4: 4-Channel Message Card

DPH4: 4-Port Doorphone Card

DPH2: 2-Port Doorphone Card

ECHO16: 16-Channel Echo Cancellor Card

EIO4: 4-Port External Input/Output Card

Maximum Quantity:

MSG4: 2 with KX-TDA100, 4 with KX-TDA200

DPH4: 2 with KX-TDA100, 4 with KX-TDA200

DPH2: 4 with KX-TDA100, 8 with KX-TDA200

ECHO16: 2 with KX-TDA100, 2 with KX-TDA200

EIO4: 2 with KX-TDA100, 4 with KX-TDA200

Installation Manual References

1.3.1 Options

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Status**

Indicates the status of the option card in each slot (reference only).

This column offers two ways to open the screen to select the card command:

- Click the desired cell in the column.
- Use the arrow keys to select the desired cell in the column, and then click **Command**.

Default

Current status

Value Range

INS: The card is in service.

OUS: The card is out of service.

Fault: The card has been removed from the sub-slot, or is not communicating with the PBX.

Pre-Install: There is no card in the sub-slot, but the card type is programmed for the sub-slot.

Idle: There is no card in the sub-slot, no programming of the card type for the sub-slot.

Programming Guide References

4.7.1 Slot [1-1]

4.7.11 Slot [1-1] OPB Card Command

Feature Guide References

None

◆ **Port Number**

Indicates the port number of the mounted option card (reference only).

Default

Current port number

Value Range

Port number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Port Status**

Indicates the port status of the mounted option card (reference only).

Default

Current port status

Value Range

INS: The card is in service.

OUS: The card is out of service.

Fault: The card is pulled out from the sub-slot, or is not communicating with the PBX.

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ For Output (EIO)—Device Type

Selects the type of connected output device (for output ports only).

Default

Relay

Value Range

Relay, Ringer

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

1.15.8 External Relay Control

◆ For Sensor (EIO)—Input Signal Decision Time

Specifies the minimum duration of continuous input from the triggered sensor before the PBX recognizes the input and makes a sensor call.

Default

1024 ms

Value Range

$32 \times n$ ($n=2-255$) ms

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

1.15.7 External Sensor

◆ For Sensor (EIO)—Input Signal Detection Reopening Time

Specifies the length of time after the sensor has been triggered during which any further input from the sensor will be ignored.

Default

10 s

Value Range

10 × n (n=1–255) s

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

1.15.7 External Sensor

4.7.11 Slot [1-1] OPB Card Command

Commands for the service cards installed in the OPB card can be programmed.

◆ **INS**

Puts the card in service.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **OUS**

Takes the card out of service.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Pre-INS

Assigns the card type to a certain sub-slot (Pre-installation).

Default

Not applicable.

Value Range

MSG4: 4-Channel Message Card

DPH4: 4-Port Doorphone Card

DPH2: 2-Port Doorphone Card

ECHO16: 16-Channel Echo Canceller Card

EIO4: 4-Port External Input/Output Card

Installation Manual References

1.3.1 Options

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Delete

Assigns the card type to be deleted from the sub-slot.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

4.7.12 Slot [1-1] CTI-LINK Card Property

The properties of the CTI-LINK card can be specified.

Note that the IP address information must be specified in accordance with the settings of the network that it will be used on.

◆ IP Address

Specifies the IP address of the PBX.

Default

192.168.0.1

Value Range

1.0.0.0–223.255.255.255

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

1.29.1 Computer Telephony Integration (CTI)

◆ Subnet Mask

Specifies the subnet mask of the PBX.

Default

255.255.255.0

Value Range

0.0.0.1–255.255.255.254

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

1.29.1 Computer Telephony Integration (CTI)

◆ Gateway

Specifies the gateway address.

Default

192.168.0.1

Value Range

1.0.0.0–223.255.255.255

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

1.29.1 Computer Telephony Integration (CTI)

◆ Maintenance Port Number

Specifies a port number used to operate KX-TDA Maintenance Console via LAN.

Default

35300

Value Range

10000–65535

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

1.29.1 Computer Telephony Integration (CTI)

◆ CTI Port Number

Specifies a port number used to operate CTI via LAN.

Default

33333

Value Range

10000–65535

Programming Guide References

4.7.1 Slot [1-1]

4.8.25 CTI [2-10]

Feature Guide References

1.29.1 Computer Telephony Integration (CTI)

4.7.13 Slot [1-1] Card Command

Commands for the service cards can be programmed.

◆ INS

Puts the card in service.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ OUS

Takes the card out of service. This enables a temporary non-use of the card, for example, for the purpose of repair.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Pre-INS

Assigns the card type to a certain sub-slot (Pre-installation).

Default

Not applicable.

Value Range

DHLC8: 8-Port Digital Hybrid Extension Card

DLC16: 16-Port Digital Extension Card

DLC8: 8-Port Digital Extension Card

MSLC16: 16-Port Single Line Telephone Extension with Message Lamp Card

SLC8: 8-Port Single Line Telephone Extension Card

SLC16: 16-Port Single Line Telephone Extension Card

CSI/F: Cell Station Interface Card

LCOT16: 16-Port Analog Trunk Card

LCOT8: 8-Port Analog Trunk Card

PRI23: PRI Card

T1: T-1 Trunk Card

IP-GW4: 4-Channel VoIP Gateway Card

OPB3: Optional 3-Slot Base Card

CTI-LINK: CTI Link Card

IP-GW16: 16-Channel VoIP Gateway Card

IP-EXT16: 16-Port IP Proprietary Telephone Card

Installation Manual References

1.3.1 Options

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Delete

Assigns the card type to be deleted from the slot.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

4.7.14 Portable Station [1-2]

Various portable station (PS) settings can be programmed. A maximum of 128 PS can be registered.

PS Registration and De-registration

A PS must be registered to the PBX by programming both the PBX and PS before it can be used. Programming instructions of the PBX are given below; programming instructions of the PS are found in the Installation Manual.

If desired, it is possible to de-register the PS later on.

◆ Registration

Follow the steps below to register the PS.

1. Specify the extension number of the PS, and then click **Apply**.
2. Select the PS by clicking the **Select** cell and set it to **ON**.
More than one PS can be selected at a time (only the unregistered PS with an extension number can be selected).
3. Click **Registration**.
A dialog box will appear when the registration starts to execute.
4. While the registration is executing, program the PS referring to "2.8.7 Connecting a Cell Station to the Hybrid IP-PBX" of the Installation Manual.
5. Click **Confirm**.

- If the registration is still in the process, the dialog box will show "Waiting: PS Registration". Click **Close**.
- If the registration is successful, the dialog box will show "Registration Succeed". If there are more PSs to be registered, click **Continue** to resume or **Quit** to terminate the registration. If not, click **Close**.
- If the registration is unsuccessful, the dialog box will show "Registration Error". Click **Close**. The registration will be terminated.

Once the PS is successfully registered, the status of the PS will update to show "Registered".

While the registration is executing, it is possible to abort registration by clicking **Halt** in the step 5 above. However, if the registration is already completed, the registration cannot be aborted and the dialog box will show "Registration Halt: NG". Click **Continue** and confirm the progress of registration.

◆ De-registration

Follow the steps below to de-register the PS.

1. Select the PS by clicking the **Select** cell and set it to **ON**.
More than one PS can be selected at a time (only the registered PS can be selected).
2. Click **De-registration**.
 - If the de-registration is successful, the dialog box will show "De-registration Succeed". If there are more PSs to be de-registered, click **Continue** to resume or **Quit** to terminate the de-registration. If not, click **Close**.
 - If the de-registration is unsuccessful, the dialog box will show "De-registration Error". Click **Close**. De-registration will be terminated.

Once the PS is successfully de-registered, the status of the PS will update to show "None".

◆ Forced De-registration

Follow the steps below to forcibly de-register the PS when normal de-registration has been unsuccessful or de-registration has been performed only on the PS.

1. Select the PS by clicking the **Select** cell and set it to **ON**.
More than one PS can be selected at a time (only the unregistered PS with an extension number can be selected).
2. Click **Forced De-registration**.
3. Click **OK**.
If the forced de-registration is successful, the dialog box will show "Forced De-registration Succeed".
If there are more PSs to be de-registered, click **Continue** to resume or **Quit** to terminate the forced de-registration. If not, click **Close**.

Once the PS is successfully de-registered, the status of the PS will update to show "None".

◆ Index

Indicates the PS number (reference only).

Default

Not applicable.

Value Range

1–128

Programming Guide References

None

Feature Guide References

1.22 Portable Station (PS) Features

◆ Extension No.

Specifies the extension number of a PS.

In Wireless XDP Parallel Mode, the PS can be used as a sub telephone with a wired main telephone (PT/SLT), and two of them will share one extension number of the main telephone. However, note that the PS extension number specified here will not be altered by the extension number of the main telephone even if the PS is in Wireless XDP Parallel Mode.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.22.1 Portable Station (PS) Connection

◆ Status

Indicates whether a certain PS is registered (reference only).

Default

None

Value Range

None, Registered

Programming Guide References

None

Feature Guide References

1.22.1 Portable Station (PS) Connection

◆ Select

Selects the PS to be registered or deregistered.

Default

OFF

Value Range

ON, OFF

Programming Guide References

None

Feature Guide References

1.22.1 Portable Station (PS) Connection

◆ Personal Identification Number

Specifies the Personal Identification Number (PIN) of the PBX used to avoid unexpected registration to another PBX.

Note that the same PIN of the PBX should be registered into the PS, before the PS is registered to the PBX.

Default

1234

Value Range

4 digits (consisting of 0–9)

Installation Manual References

2.8.7 Connecting a Cell Station to the Hybrid IP-PBX

Programming Guide References

None

Feature Guide References

1.22.1 Portable Station (PS) Connection

4.7.15 Clock Priority [1-3]

◆ Slot

Selects and prioritizes slot numbers for the PRI and T1 cards that provide the external clock pulse to the PBX.

Obtain the master clock from the CO line that the telephone company provides.

To change Clock Priority, follow the steps below:

1. Assign a Clock Priority to each PRI and/or T1 card.
2. Set the status of the present clock source card to "OUS", then "INS".

Note

If multiple PBXs are used to establish a private network (TIE line service, QSIG network, etc.) without being connected through the telephone company, assign only one PBX as the clock source on the network.

Default

None

Value Range

None, PRI23, T1

Feature Guide References

None

4.7.16 Option [1-4]

System options can be programmed.

◆ Extension Number Set Mode

Selects whether extension numbers are assigned to extension ports automatically or manually.

Default

Automatic

Value Range

Automatic, Manual

Feature Guide References

None

◆ Status after Card Install

Selects the initial status of the card after the installation.

Default

In Service (INS)

Value Range

In Service (INS), Out of Service (OUS)

Feature Guide References

None

4.7.17 LCO Port [1-5]

Various settings can be programmed for each analog CO port.

◆ Slot

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ **Port**

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Feature Guide References

None

◆ **Connection**

Indicates the port status (reference only).

This column offers two ways to open the screen to select the port command:

- Click the desired cell in the column.
- Use the arrow keys to select the desired cell in the column, and then click **Command**.

Default

Current status

Value Range

INS: The port is in service.

OUS: The port is out of service.

Programming Guide References

4.7.18 LCO Port [1-5] Port Command

Feature Guide References

None

◆ **Dialing Mode**

Selects the type of signal used to dial out to the analog CO line.

Default

DTMF

Value Range

DTMF, Pulse

Feature Guide References

None

◆ CPC Signal Detection Time—Outgoing, Incoming

Specifies the length of time required by the PBX to detect a CPC signal on outgoing or incoming CO line calls before disconnecting the line .

Default

400 ms

Value Range

None, 6.5 ms, $8 \times n$ ($n=1-112$) ms

Feature Guide References

None

◆ DTMF Width

Selects the length of the DTMF tone sent to the analog CO line.

Default

80 ms

Value Range

80 ms, 160 ms

Feature Guide References

None

◆ Pulse Speed

Selects the speed at which pulse dials are sent to the analog CO line.

Default

Low

Value Range

Low, High

Feature Guide References

None

◆ Caller ID Detection

Enables the PBX to detect a Caller ID signal from the analog CO line.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.7.5 Slot [1-1] LCO Card Property

Feature Guide References

None

◆ Pause Time

Specifies the length of a pause.

Default

1.5 s

Value Range

1.5 s , 2.5 s , 3.5 s , 4.5 s

Feature Guide References

None

◆ Flash Time

Specifies the length of a flash signal.

Default

608 ms

Value Range

None, 16 × n (n=1–255) ms

Feature Guide References

None

◆ Disconnect Time

Specifies the length of time after a CO line is disconnected, during which the PBX cannot seize the line.

Default

1.5 s

Value Range

0.5 s, 1.5 s, 2.0 s, 4.0 s, 12.0 s

Feature Guide References

None

4.7.18 LCO Port [1-5] Port Command

Commands for the LCO ports can be programmed.

◆ INS

Puts the port in service.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.17 LCO Port [1-5]

Feature Guide References

None

◆ OUS

Takes the port out of service. This enables a temporary non-use of the port, for example, for the purpose of repair.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.17 LCO Port [1-5]

Feature Guide References

None

4.7.19 PRI Port [1-6]

Various settings can be programmed for each PRI port.

Main

◆ Slot

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Feature Guide References

None

◆ Port Type

Selects the port type.

Notes

- Each ISDN connection in a QSIG network must have a master port on one PBX and a slave port on another PBX.
- ISDN extensions can belong to an incoming call distribution group or idle extension hunting group. In this case, an MSN can be assigned.

Default

CO

Value Range

CO: For connecting to public network

Extension: For connecting to extension

QSIG-Slave: For connecting to private network (slave port)

QSIG-Master: For connecting to private network (master port)

Programming Guide References

None

Feature Guide References

- 1.19.1.1 Integrated Services Digital Network (ISDN)—OVERVIEW
- 1.27.2.1 QSIG Network—OVERVIEW

◆ Connection

Indicates the port status (reference only).

This column offers two ways to open the screen to select the port command:

- Click the desired cell in the column.
- Use the arrow keys to select the desired cell in the column, and then click **Command**.

Default

Current status

Value Range

INS: The port is in service.

OUS: The port is out of service.

Fault: The port is not communicating with the network.

Programming Guide References

- 4.7.20 PRI Port [1-6] Port Command

Feature Guide References

None

◆ Status Message

Specifies whether the Status Message is sent to the network.

Default

No Transmission

Value Range

No Transmission: Status Message is not sent.

When Mandatory error detection: Send the Status Message when an error (Mandatory) is detected.

When Option / Mandatory error detection: Send the Status Message when an error (Option or Mandatory) is detected.

Feature Guide References

None

◆ Status Receive

Selects what happens to a call when the Status Message from the network does not match the actual status of the call.

Default

Ignore

Value Range

Ignore: Ignore the Status Message from the network.
Disconnect: Disconnect the call.

Feature Guide References

None

◆ **Line Coding**

Selects the line coding type of the PRI PCM (Pulse Code Modulation) for the port.

Default

B8ZS

Value Range

B8ZS, AMI

Feature Guide References

None

◆ **Frame Sequence**

Selects the type of frame sequence for the port.

Default

Extend Multi frame (EFS)

Value Range

Extend Multi frame (EFS), 4-Frame Multi frame (F4), 12-Frame Multi frame (F12)

Feature Guide References

None

CO Setting

Parameters for CO Setting are not applicable for the PRI extension port.

◆ **Slot**

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Feature Guide References

None

◆ Port Type

Selects the port type.

Notes

- Each ISDN connection in a QSIG network must have a master port on one PBX and a slave port on another PBX.
- ISDN extensions can belong to an incoming call distribution group or idle extension hunting group. In this case, an MSN can be assigned.

Default

CO

Value Range

CO: For connecting to public network

Extension: For connecting to extension

QSIG-Slave: For connecting to private network (slave port)

QSIG-Master: For connecting to private network (master port)

Feature Guide References

None

◆ Connection

Indicates the port status (reference only).

This column offers two ways to open the screen to select the port command:

- Click the desired cell in the column.
- Use the arrow keys to select the desired cell in the column, and then click **Command**.

Default

Current status

Value Range

INS: The port is in service.

OUS: The port is out of service.

Fault: The port is not communicating with the network.

Programming Guide References

4.7.20 PRI Port [1-6] Port Command

Feature Guide References

None

◆ **Subscriber Number**

Specifies the number used as the CLIP number.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ **Sending Ring Back Tone to Network**

Enables the PBX to send a ringback tone to the caller when there is no ringback tone sent from the network.

Default

Enable

Value Range

Disable, Enable

Feature Guide References

None

◆ **ISDN In / Out Call Type**

Selects the method used to send dialed digits to the network.

Default

CO port: En-bloc

QSIG (slave/master) port: Overlap

Value Range

En-bloc: The PBX sends all of dialed digits at once after the extension user completes dialing. The PBX recognizes the end of dialing when (1) # is dialed, if programmed, (2) programmed telephone number is dialed, or (3) the inter-digit timer expires.

Overlap: The PBX sends dialed digits one at a time.

Programming Guide References

4.7.1 Slot [1-1]

4.8.5 Timers & Counters—CO / Extension [2-4-1]—Extension Inter Digit Timer

4.8.22 System Options—Option 2 [2-9-2]—ISDN En bloc Dial End Code "#"

4.12.9 Dialing Plan [6-7]

Feature Guide References

1.19.1.1 Integrated Services Digital Network (ISDN)—OVERVIEW

◆ Networking Data Transfer

Enables transmission of extension status data to connected PBXs in a network. This setting is only available when **Port Type** on this screen has been set to **QSIG-Slave** or **QSIG-Master**.

Default

No

Value Range

No, Yes

Programming Guide References

4.15 Private Network [9]

Feature Guide References

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

Extension Setting

Extension Setting parameters are applicable only for the PRI extension port.

◆ Slot

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Feature Guide References

None

◆ **Port Type**

Selects the port type.

Notes

- Each ISDN connection in a QSIG network must have a master port on one PBX and a slave port on another PBX.
- ISDN extensions can belong to an incoming call distribution group or idle extension hunting group. In this case, an MSN can be assigned.

Default

CO

Value Range

CO: For connecting to public network

Extension: For connecting to extension

QSIG-Slave: For connecting to private network (slave port)

QSIG-Master: For connecting to private network (master port)

Feature Guide References

None

◆ **Connection**

Indicates the port status (reference only).

This column offers two ways to open the screen to select the port command:

- Click the desired cell in the column.
- Use the arrow keys to select the desired cell in the column, and then click **Command**.

Default

Current status

Value Range

INS: The port is in service.

OUS: The port is out of service.

Fault: The port is not communicating with the network.

Programming Guide References

4.7.20 PRI Port [1-6] Port Command

Feature Guide References

None

◆ Ring Mode (ISDN MSN Last No. 0 or 00)

Selects the ring mode when receiving an incoming call with an MSN ending with "0" or "00".

Default

Ring All Extension for MSN

Value Range

Ring All Extension for MSN: Ring all ISDN extensions that are addressed with MSN.

Ring an Extension for MSN: Ring only one of the ISDN extensions that are addressed with MSN.

Feature Guide References

None

Network Configuration**◆ Slot**

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Feature Guide References

None

◆ Port Type

Selects the port type.

Notes

- Each ISDN connection in a QSIG network must have a master port on one PBX and a slave port on another PBX.
- ISDN extensions can belong to an incoming call distribution group or idle extension hunting group. In this case, an MSN can be assigned.

Default

CO

Value Range

CO: For connecting to public network

Extension: For connecting to extension

QSIG-Slave: For connecting to private network (slave port)

QSIG-Master: For connecting to private network (master port)

Feature Guide References

None

◆ **Connection**

Indicates the port status (reference only).

This column offers two ways to open the screen to select the port command:

- Click the desired cell in the column.
- Use the arrow keys to select the desired cell in the column, and then click **Command**.

Default

Current status

Value Range

INS: The port is in service.

OUS: The port is out of service.

Fault: The port is not communicating with the network.

Programming Guide References

4.7.20 PRI Port [1-6] Port Command

Feature Guide References

None

◆ **Network Type**

Selects the network type of the port.

Default

51 US National ISDN 2

Value Range

0–56

(2 UK (Domestic), 5 Netherlands, 6 SwissNET2, 7 SwissNET3, 8 Euro ISDN (Standard), 14 France (Domestic), 19 Finland, 20 Norway, 27 Australia, 51 US National ISDN 2)

Feature Guide References

None

Network Numbering Plan

◆ Slot

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Feature Guide References

None

◆ Port Type

Selects the port type.

Notes

- Each ISDN connection in a QSIG network must have a master port on one PBX and a slave port on another PBX.
- ISDN extensions can belong to an incoming call distribution group or idle extension hunting group. In this case, an MSN can be assigned.

Default

CO

Value Range

CO: For connecting to public network

Extension: For connecting to extension

QSIG-Slave: For connecting to private network (slave port)

QSIG-Master: For connecting to private network (master port)

Feature Guide References

None

◆ Connection

Indicates the port status (reference only).

This column offers two ways to open the screen to select the port command:

- Click the desired cell in the column.
- Use the arrow keys to select the desired cell in the column, and then click **Command**.

Default

Current status

Value Range

INS: The port is in service.

OUS: The port is out of service.

Fault: The port is not communicating with the network.

Feature Guide References

None

◆ Trunk Property (for CO port)

Selects the trunk property of the port.

Default

Public

Value Range

Public: Public network

VPN: Virtual Private Network

Feature Guide References

None

◆ Calling Party number—Numbering Plan ID—Public, Private

Selects the numbering plan ID that applies to outgoing CO line calls routed through a public and private network.

Default

Public: Unknown
Private: Private

Value Range

Unknown, ISDN-Telephony, National Standard, Private

Feature Guide References

None

◆ Calling Party number—Type of Number—Public, Private

Selects the type of number that applies to outgoing CO line calls routed through a public and private network.

Default

Unknown

Value Range

Unknown, International, National, Network, Subscriber

Feature Guide References

None

◆ Called Party number—Numbering Plan ID—Public, Private

Selects the numbering plan ID that applies to incoming CO line calls routed through a public and private network.

Default

Public: Unknown
Private: Private

Value Range

Unknown, ISDN-Telephony, National Standard, Private

Feature Guide References

None

◆ Called Party number—Type of Number—Public, Private

Selects the type of number that applies to incoming CO line calls routed through a public and private network.

Default

Unknown

Value Range

Unknown, International, National, Network, Subscriber

Feature Guide References

None

Supplementary Service

◆ **Slot**

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ **Port**

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Feature Guide References

None

◆ **Port Type**

Selects the port type.

Notes

- Each ISDN connection in a QSIG network must have a master port on one PBX and a slave port on another PBX.
- ISDN extensions can belong to an incoming call distribution group or idle extension hunting group. In this case, an MSN can be assigned.

Default

CO

Value Range

CO: For connecting to public network

Extension: For connecting to extension

QSIG-Slave: For connecting to private network (slave port)

QSIG-Master: For connecting to private network (master port)

Feature Guide References

None

◆ Connection

Indicates the port status (reference only).

This column offers two ways to open the screen to select the port command:

- Click the desired cell in the column.
- Use the arrow keys to select the desired cell in the column, and then click **Command**.

Default

Current status

Value Range

INS: The port is in service.

OUS: The port is out of service.

Fault: The port is not communicating with the network.

Feature Guide References

None

◆ COLP, CLIR, COLR, CNIP, CONP, CNIR, CONR

Specifies whether each ISDN or QSIG supplementary service is used.

Default

No

Value Range

No, Yes

Feature Guide References

None

4.7.20 PRI Port [1-6] Port Command

Commands for the PRI ports can be programmed.

◆ INS

Puts the port in service.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.19 PRI Port [1-6]

Feature Guide References

None

◆ **OUS**

Takes the port out of service. This enables a temporary non-use of the port, for example, for the purpose of repair.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.19 PRI Port [1-6]

Feature Guide References

None

4.7.21 T1 Port [1-7]

Various settings can be programmed for each T1 channel.

◆ **Slot**

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ CH

Indicates the channel number (reference only).

Default

Current channel number

Value Range

Channel number

Feature Guide References

None

◆ Connection

Indicates the channel status (reference only).

This column offers two ways to open the screen to select the channel command:

- Click the desired cell in the column.
- Use the arrow keys to select the desired cell in the column, and then click **Command**.

Default

Current status

Value Range

INS: The channel is in service.

OUS: The channel is out of service.

Fault: The channel is not communicating with the network.

Programming Guide References

4.7.22 T1 Port [1-7] Channel Command

Feature Guide References

None

◆ Subscriber Number

Specifies the number used as the CLIP number.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ CO Dial Mode

Selects the type of signal used to dial out to a CO line.

Default

DTMF

Value Range

DTMF, Pulse

Feature Guide References

None

◆ Channel Type

Selects the channel type.

Default

Undefined

Value Range

Undefined: Not assigned
GCOT: Ground Start Central Office
LCOT: Loop Start Central Office
DID: Direct Inward Dialing
TIE (E & M): TIE Line
OPX: Off Premise Extension

Programming Guide References

None

Feature Guide References

1.20.1 T1 Line Service

◆ Trunk Property (for TIE channel)

Selects the trunk property of the TIE channel.

Default

Private

Value Range

Public: Use the DIL/DID method to distribute incoming CO line calls.
Private: Use the TIE line service between two or more PBXs.

Feature Guide References

None

◆ CPC Detection (DID)—Outgoing, Incoming (for DID channel)

Specifies the length of time required by the PBX to detect a CPC signal on outgoing or incoming CO line calls before disconnecting the line.

Default

160 ms

Value Range

None, $80 \times n$ ($n=2-75$) ms

Feature Guide References

None

◆ CPC Detection (LCO/GCO)—Outgoing, Incoming (for GCOT or LCOT channel)

Specifies the length of time required by the PBX to detect a CPC signal on outgoing or incoming CO line calls before disconnecting the line.

Default

160 ms

Value Range

None, $80 \times n$ ($n=2-75$) ms

Feature Guide References

None

◆ DTMF Width

Selects the length of the DTMF tone sent to the T1 channel.

Default

80 ms

Value Range

80 ms, 160 ms

Feature Guide References

None

◆ CO Pulse Speed

Selects the speed at which pulse dials are sent to the T1 channel.

Default

10 pulse/s

Value Range

10 pulse/s, 20 pulse/s

Feature Guide References

None

◆ Wink Signal Time Out

Specifies the length of time that the PBX waits before receiving a wink signal after seizing a CO line.

Default

1024 ms

Value Range

$64 \times n$ ($n=1-128$) ms

Feature Guide References

None

◆ Start Signal Type

Selects the type of the start signal.

Default

Wink

Value Range

Immediate: Sends the dialed digits to the CO line when the First Dial Timer expires.
Wink: Sends the dialed digits to the CO line when the wink signal is received.

Feature Guide References

None

◆ Sending Caller ID to TIE/DID

Specifies whether Caller ID information is sent when the channel type is TIE or DID.

Default

No

Value Range

Yes, No

Feature Guide References

None

◆ Receiving Caller ID from TIE/DID

Specifies whether Caller ID information is received when the channel type is TIE or DID.

Default

Yes

Value Range

Yes, No

Feature Guide References

None

◆ Ring Back Tone to Network (for DID or TIE channel)

Enables the PBX to send a ringback tone when the ringback tone cannot be received from the network.

Default

Enable

Value Range

Disable, Enable

Feature Guide References

None

◆ Dial Tone to Extension

Enables the PBX to send a dial tone when the dial tone cannot be received from the network.

Default

Disable

Value Range

Disable, Enable

Feature Guide References

None

◆ Pause Time

Specifies the length of a pause.

Default

1.5 s

Value Range

1.5 s , 2.5 s , 3.5 s , 4.5 s

Feature Guide References

None

◆ Flash Time

Specifies the length of a flash signal.

Default

608 ms

Value Range

None, 16 × n (n=1–255) ms

Feature Guide References

None

◆ Disconnect Time

Specifies the length of time after a CO line is disconnected, during which the PBX cannot seize the line.

Default

1.5 s

Value Range

0.5 s, 1.5 s, 2.0 s, 4.0 s, 12.0 s

Feature Guide References

None

4.7.22 T1 Port [1-7] Channel Command

Commands for the T1 channels can be programmed.

◆ INS

Puts the channel in service.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.21 T1 Port [1-7]

Feature Guide References

None

◆ OUS

Takes the channel out of service. This enables a temporary non-use of the port, for example, for the purpose of repair.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.21 T1 Port [1-7]

Feature Guide References

None

4.7.23 Extension Port [1-8]

Various settings can be programmed for each extension port.

◆ Slot

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Programming Guide References

None

Feature Guide References

2.1.1 Extension Port Configuration

◆ **Port Type**

Indicates the port type (reference only).

Default

Current port type

Value Range

DPT: DPT port (DLC)

SLT: SLT port (SLC)

S-Hybrid: Super Hybrid port (DHLC)

S-Hybrid(SLT): XDP port of Super Hybrid port (DHLC)

S-Hybrid(S-DPT): Digital XDP port of Super Hybrid port (DHLC)

DPT(S-DPT): Digital XDP port of DPT port (DLC)

Programming Guide References

None

Feature Guide References

2.1.1 Extension Port Configuration

◆ **Telephone Type**

Indicates the connected telephone type (reference only).

The number of all connected telephones and Cell Stations can be viewed by clicking **Port Type View**.

Default

Current connected telephone type

Value Range

DPT(T76xx): KX-T7600 series DPT is connected.

DPT(Other): DPT other than KX-T7600 series is connected.

APT: APT is connected.

DSS: DSS Console is connected.

VM: VPS is connected.

SLT: SLT is connected (or no telephone is connected to the Super Hybrid port).

CS: CS is connected.

Programming Guide References

4.7.25 Extension Port [1-8] Port Type View

Feature Guide References

2.1.1 Extension Port Configuration

◆ Connection

Indicates the port status (reference only).

This column offers two ways to open the screen to select the port command as follows:

- Click the desired cell in the column.
- Use the arrow keys to select the desired cell in the column, and then click **Command**.

Default

Current status

Value Range

INS: The port is in service.

OUS: The port is out of service.

Fault: The port is not communicating with the PBX.

Programming Guide References

4.7.24 Extension Port [1-8] Port Command

Feature Guide References

None

◆ Extension Number

Specifies the extension number of the port.

To change the extension number of a wired extension, follow the steps below:

1. Type the new extension number, then click **Apply**.
2. Set the status of the extension port to "**OUS**", then "**INS**".

When changing the extension number, make sure that the extension port is not in use. If the extension number is changed while the port is in use, the new extension number will not come into effect.

Default

Starting at 101 (For port 01 of the first extension card that is installed. Extension numbers are preset for subsequent extensions by adding one to the previous extension number.)

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.24 Extension Port [1-8] Port Command

Feature Guide References

None

◆ Extension Name

Specifies the extension name of the port. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ **XDP Mode (for S-Hybrid port)**

Turns XDP mode on or off for the port.

Default

Off

Value Range

On: XDP enabled (The main telephone and sub telephone have different extension numbers.)

Off: XDP disabled (The main telephone and sub telephone have same extension number [main telephone's extension number]. = Parallel Mode)

Programming Guide References

None

Feature Guide References

2.1.1 Extension Port Configuration

◆ **Parallel Telephone Ringing (for S-Hybrid port)**

Specifies whether a sub telephone (SLT) rings at the same time with the main telephone (DPT) for an incoming call.

Default

Yes

Value Range

Yes, No

Programming Guide References

None

Feature Guide References

1.10.9 Paralleled Telephone

◆ **DPT Property—Type (for DPT or S-Hybrid port)**

Selects the port type.

To change the port type of an extension port, follow the steps below:

1. Set the status of the extension port to "OUS".
2. Change the port type of the extension port, then click **Apply**.
3. Set the status of the extension port to "INS".

When changing the port type of an extension port for which **Wireless XDP** has been set on the **4.10.1 Wired Extension—Extension Settings [4-1-1]** screen, the **Wireless XDP** setting must be deleted first.

Default

Normal

Value Range

Normal: For connecting a DPT

DSS: For connecting a DSS Console (A maximum of 8 DSS Consoles can be connected to the PBX.)

VM (DPT): For connecting a Panasonic VPS through DPT Integration

PC Console: For connecting a PC Console (A maximum of 8 PC Consoles can be connected to the PBX.)

Programming Guide References

4.7.24 Extension Port [1-8] Port Command

Feature Guide References

None

◆ DPT Property—Location No. (for DPT or S-Hybrid port)

Specifies the location number of the connected DSS Console or PC Console.

Note that, depending on system traffic, there may be a limit to the number of PC Consoles that can be supported by a single DLC/DHLC card

Default

1

Value Range

1–8

Feature Guide References

None

◆ DPT Property—VM Unit No. (for DPT or S-Hybrid port)

Selects the unit number of the connected VPS.

Default

1

Value Range

1, 2

Feature Guide References

None

◆ DPT Property—VM Port No. (for DPT or S-Hybrid port)

Specifies the VM port number for the port.

Default

1

Value Range

1–12

Feature Guide References

None

◆ Headset OFF/ON (for DPT or S-Hybrid port)

Turns on or off the use of headset with a DPT.

Default

Headset OFF

Value Range

Headset OFF, Headset ON

Feature Guide References

None

◆ Ringing Tone (for DPT, S-Hybrid, or S-Hybrid (XDP) port)

Selects the dual-tone switching pattern of ringing tone for incoming calls. This setting is not available for KX-T7200, KX-T7451, APT, and SLT.

Default

A

Value Range

A: 64 ms (697 Hz), 64 ms (852 Hz)

B: 32 ms (697 Hz), 32 ms (852 Hz)

C: 128 ms (697 Hz), 128 ms (852 Hz)

D: 32 ms (697 Hz), 96 ms (852 Hz)

Feature Guide References

None

4.7.24 Extension Port [1-8] Port Command

Commands for the extension ports can be programmed.

◆ INS

Puts the port in service.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

None

◆ OUS

Takes the port out of service. This enables a temporary non-use of the port, for example, for the purpose of repair.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

None

4.7.25 Extension Port [1-8] Port Type View

Displays the number of connected telephones and Cell Stations (CSs).

◆ Type

Indicates the types of telephone (reference only).

Default

Not applicable.

Value Range

DPT(T76xx) (KX-T7600 series DPTs), DPT(Other) (DPTs other than KX-T7600 series), APT, SLT, DSS Console, VM, Other, CS

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

None

◆ **Total Count**

Indicates the connected number for each type of telephone and CS (reference only). The CS is counted on the basis of CSIF port in service.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.26 CSI/F Port [1-9]

Feature Guide References

None

4.7.26 CSI/F Port [1-9]

Status of the CSIF ports can be referred to, or set to INS (in-service) or OUS (out-of-service).

◆ **Slot**

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ **Port**

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Feature Guide References

None

◆ **Status**

Indicates the port status (reference only).

This column offers two ways to open the screen to select the port command:

- Click the desired cell in the column.
- Use the arrow keys to select the desired cell in the column, and then click **Command**.

Default

Current status

Value Range

INS: The Cell Station (CS) is in service.

OUS: The CS is out of service.

Fault: The port is not communicating with the CS.

Programming Guide References

4.7.27 CSI/F Port [1-9] Port Command

Feature Guide References

None

◆ **CS Name**

Specifies the name of the CSIF port.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

4.7.27 CSI/F Port [1-9] Port Command

Commands for the CSIF ports can be programmed.

◆ **INS**

Puts the Cell Station (CS) in service.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.26 CSI/F Port [1-9]

Feature Guide References

None

◆ **OUS**

Takes the CS out of service. This enables a temporary non-use of the CS, for example, for the purpose of repair.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.26 CSI/F Port [1-9]

Feature Guide References

None

4.7.28 IP-GW Port [1-10]

Status of the IP-GW ports can be referred to, or set to INS (in service) or OUS (out of service).

◆ **Slot**

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Feature Guide References

None

◆ Connection

Indicates the port status (reference only).

This column offers two ways to open the screen to select the port command:

- Click the desired cell in the column.
- Use the arrow key to select the desired cell in the column, and then click **Command**.

Default

Current status

Value Range

INS: The port is in service.

OUS: The port is out of service.

Fault: The port is not communicating with the network.

Programming Guide References

4.7.29 IP-GW Port [1-10] Port Command

Feature Guide References

None

4.7.29 IP-GW Port [1-10] Port Command

Commands for the IP-GW ports can be programmed.

◆ INS

Puts the port in service.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.28 IP-GW Port [1-10]

Feature Guide References

None

◆ OUS

Takes the port out of service. This enables a temporary non-use of the port, for example, for the purpose of repair.

Default

Not applicable.

Value Range

Not applicable.

Programming Guide References

4.7.28 IP-GW Port [1-10]

Feature Guide References

None

4.7.30 IP-Extension Port [1-15]

Various settings can be programmed for each IP extension port.

IP-PT Registration and De-registration

An IP-PT must be registered to the PBX by programming both the PBX and IP-PT before it can be used.

Programming instructions of the PBX are given below.

If desired, it is possible to de-register the IP-PT later.

◆ Preparation

Follow the steps below to prepare before registering an IP-PT.

1. Open **4.7.9 Slot [1-1] IP-Extension Card Property**, and confirm that the IP address and subnet mask settings of the IP-EXT16 card are correct.
2. Open **4.8.28 IP Extension Settings [2-13]**, and set the gateway address.

◆ Registration

Follow the steps below to register the IP-PT.

1. Connect the IP-PT to be registered to the network and, if necessary, the power supply.

2. Select the IP-PT by clicking the **Select** cell and set it to **ON**.
More than one IP-PT can be selected at a time (only unregistered IP-PTs with an extension number can be selected).
3. Click **Registration**.
A dialog box will appear when the registration starts to execute.
4. Click **Confirm**.
 - If the registration is still in process, the dialog box will show "Waiting: IP-PT Registration". Click **Close**.
 - If the registration is successful, the dialog box will show "Registration Succeed".
If there are more IP-PTs to be registered, click **Continue** to resume or **Quit** to terminate the registration. If not, click **Close**.
 - If the registration is unsuccessful, the dialog box will show "Registration Error". Click **Close**.
The registration will be terminated.

Once the IP-PT is successfully registered, the status of the IP-PT will update to show "Registered".

While the registration is executing, it is possible to abort registration by clicking **Halt** in step 4 above. However, if the registration is already completed, the registration cannot be aborted and the dialog box will show "Registration Halt: NG". Click **Continue** and confirm the progress of registration.

◆ De-registration

Follow the steps below to de-register the IP-PT.

1. Select the IP-PT by clicking the **Select** cell and set it to **ON**.
More than one IP-PT can be selected at a time (only registered IP-PTs can be selected).
2. Click **De-registration**.
 - If the de-registration is successful, the dialog box will show "De-registration Succeed".
If there are more IP-PTs to be de-registered, click **Continue** to resume or **Quit** to terminate the de-registration. If not, click **Close**.
 - If the de-registration is unsuccessful, the dialog box will show "De-registration Error". Click **Close**. De-registration will be terminated.

Once the IP-PT is successfully de-registered, the status of the IP-PT will update to show "None".

◆ Forced De-registration

Follow the steps below to forcibly de-register the IP-PT when normal de-registration has been unsuccessful or IP address settings have been changed or deleted only on the IP-PT.

1. Select the IP-PT by clicking the **Select** cell and set it to **ON**.
More than one IP-PT can be selected at a time (only unregistered IP-PTs with extension numbers can be selected).
 2. Click **Forced De-registration**.
 3. Click **OK**.
If the forced de-registration is successful, the dialog box will show "Forced De-registration Succeed".
If there are more IP-PTs to be de-registered, click **Continue** to resume or **Quit** to terminate the forced de-registration. If not, click **Close**.
- Once the IP-PT is successfully de-registered, the status of the IP-PT will update to show "None".

◆ Slot

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ Extension Number

Specifies the extension number of the port.

To change the extension number of a wired extension, follow the steps below:

1. Type the new extension number, then click **Apply**.
2. Set the status of the extension port to "**OUS**", then "**INS**".

When changing the extension number, make sure that the extension port is not in use. If the extension number is changed while the port is in use, the new extension number will not come into effect.

Default

Starting at 101 (For port 01 of the first extension card that is installed. Extension numbers are preset for subsequent extensions by adding one to the previous extension number.)

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ Connection

Indicates the port status (reference only).

This column offers two ways to open the screen to select the port command:

- Click the desired cell in the column.
- Use the arrow key to select the desired cell in the column, and then click **Command**.

This cell is only active when **Status** on this screen shows **Registered**.

Default

Current status

Value Range

INS: The port is in service.

OUS: The port is out of service.

Fault: The port is not communicating with the network.

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ Status

Indicates whether a certain IP-PT is registered (reference only).

Default

None

Value Range

None, Registered

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ Select

Selects the IP-PT to be registered or de-registered.

Default

OFF

Value Range

ON, OFF

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ **IP Address**

Indicates the IP address of the IP-PT (reference only).

Default

Current IP address

Value Range

0.0.0.0–255.255.255.255

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ **Headset OFF/ON**

Turns on or off the use of a headset with the IP-PT.

Default

Headset OFF

Value Range

Headset OFF, Headset ON

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ **Ringling Tone**

Selects the dual-tone switching pattern of ringing tone for incoming calls.

Default

A

Value Range

A: 64 ms (697 Hz), 64 ms (852 Hz)
B: 32 ms (697 Hz), 32 ms (852 Hz)
C: 128 ms (697 Hz), 128 ms (852 Hz)
D: 32 ms (697 Hz), 96 ms (852 Hz)

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ IP Codec

Specifies the codec used for compression and decompression of transmitted data.

Default

G.711

Value Range

G.711, G.729

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ Packet Sampling Time

Specifies the time interval between measurements (samples) of sound data during a conversation. The smaller this number, the higher the quality of the transmitted sound.

When **IP Codec** on this screen is set to **G.711**, only **20 ms** and **30 ms** are available.

Default

20 ms

Value Range

20 ms, 30 ms, 40 ms, 60 ms

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

4.8 System [2]

4.8.1 Date & Time/Daylight Saving—Date & Time [2-1-1]

The date and time of the PBX can be programmed. The date and time will be shown on the display of the extensions (e.g., PT, PS).

◆ Date & Time—Year, Month, Date, Week, Hour, Second

Indicates the current time and date. If needed, each parameter can be specified as desired (the day of the week is changed automatically to reflect the assigned date).

Default

Current date and time

Value Range

Year: 2000–2099

Month: 1–12

Date: 1–31

Week: Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday

Hour: 00–23

Minute: 00–59

Second: 00–59

Feature Guide References

None

4.8.2 Date & Time / Daylight Saving—Daylight Saving [2-1-2]

Daylight Saving Time sets the clock one hour forward at 2:00 AM on the start date, and one hour back at 2:00 AM on the end date. The start and end dates of a maximum of 20 different Daylight Saving Times can be programmed.

◆ Setting

Enables Daylight Saving Time.

Default

Enable

Value Range

Enable, Disable

Programming Guide References

None

Feature Guide References

2.3.4 Automatic Time Adjustment

◆ Start Date—Year, Month, Day

Specifies the Daylight Saving Time start date.

Default

Year: 2003 (For Daylight Saving Time number 1. The year advances by one for the subsequent Daylight Saving Times.)

Month: 4

Day: Day of the first Sunday of the month

Value Range

Year: 2000–2099

Month: 1–12

Day: 1–31

Programming Guide References

None

Feature Guide References

2.3.4 Automatic Time Adjustment

◆ End Date—Year, Month, Day

Specifies the Daylight Saving Time end date.

Default

Year: 2003 (For Daylight Saving Time number 1. The year advances by one for the subsequent Daylight Saving Times.)

Month: 10

Day: Day of the last Sunday of the month

Value Range

Year: 2000–2099

Month: 1–12

Day: 1–31

Programming Guide References

None

Feature Guide References

2.3.4 Automatic Time Adjustment

4.8.3 PBX Operator [2-2]

For each time mode (day/lunch/break/night), a number (extension number or floating extension number of incoming call distribution group) can be programmed to be designated as the PBX operator.

◆ Day

Specifies the number (extension number or floating extension number of incoming call distribution group) to be designated as the PBX operator in the day mode.

Default

101

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.8.8 Time Service—Week Table [2-5-1]

4.8.10 Numbering Plan—Extension [2-6-1]

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]

Feature Guide References

2.2.5 Operator Features

◆ Lunch

Specifies the number (extension number or floating extension number of incoming call distribution group) to be designated as the PBX operator in the lunch mode.

Default

101

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.8.8 Time Service—Week Table [2-5-1]

4.8.10 Numbering Plan—Extension [2-6-1]

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]

Feature Guide References

2.2.5 Operator Features

◆ Break

Specifies the number (extension number or floating extension number of incoming call distribution group) to be designated as the PBX operator in the break mode.

Default

101

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.8.8 Time Service—Week Table [2-5-1]

4.8.10 Numbering Plan—Extension [2-6-1]

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]

Feature Guide References

2.2.5 Operator Features

◆ **Night**

Specifies the number (extension number or floating extension number of incoming call distribution group) to be designated as the PBX operator in the night mode.

Default

101

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.8.8 Time Service—Week Table [2-5-1]

4.8.10 Numbering Plan—Extension [2-6-1]

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]

Feature Guide References

2.2.5 Operator Features

4.8.4 BGM / Music on Hold [2-3]

The audio source of the music to be played when a party is placed on hold or transferred can be selected.

◆ **Music Source of BGM2**

Selects the audio source of BGM2.

Default

Internal BGM 1

Value Range

External BGM Port 2, Internal BGM 1, Internal BGM 2

Programming Guide References

None

Feature Guide References

1.12.4 Music on Hold

◆ **Music on Hold**

Selects the audio source for Music on Hold.

Default

BGM 2 (Internal 1/2 or External 2)

Value Range

Tone, BGM 1 (External BGM Port 1), BGM 2 (Internal 1/2 or External 2)

Programming Guide References

None

Feature Guide References

1.12.4 Music on Hold

◆ **Sound on Transfer**

Selects the audio source for Sound on Transfer (either the same music source chosen for the Music on Hold, or ringback tone).

Default

Same as Music on Hold

Value Range

Same as Music on Hold, Ring Back Tone

Programming Guide References

None

Feature Guide References

1.11.1 Call Transfer

4.8.5 Timers & Counters—CO / Extension [2-4-1]

Various system timers and counters can be programmed.

◆ **Intercept Timer (Day/Lunch/Break/Night)**

Specifies the length of time until a CO line call is redirected to the intercept routing destination in each time mode.

Default

40 s

Value Range

1–240 s

Programming Guide References

None

Feature Guide References

1.1.1.5 Intercept Routing

◆ Hold Recall Timer

Specifies the length of time until the holding extension receives a Hold Recall ring when a held call remains unretrieved.

Default

60 s

Value Range

0 (disable the Hold Recall)—240 s

Programming Guide References

None

Feature Guide References

1.12.1 Call Hold

◆ Transfer Recall Timer

Specifies the length of time a transferred call waits to be answered, before being redirected to the Transfer Recall destination assigned to the transferring extension.

Default

60 s

Value Range

1–240 s

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.11.1 Call Transfer

◆ Call Park Recall Timer

Specifies the length of time a parked call waits to be retrieved, before the Transfer Recall destination assigned to the parking extension hears a Call Park Recall ring.

Default

60 s

Value Range

1–240 s

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.12.2 Call Park

◆ Forced CO Line Disconnect Timer for Hold Recall

Specifies the length of time until a held CO line call is disconnected after the holding extension receives the Hold Recall.

Default

30 min

Value Range

1–30 min

Programming Guide References

None

Feature Guide References

1.12.1 Call Hold

◆ Hot Line (Pickup Dial) Start Timer

Specifies the length of time until automatic dialing starts after going off-hook.

Default

1 s

Value Range

0–15 s

Programming Guide References

None

Feature Guide References

1.6.1.6 Hot Line

◆ Extension First Digit Timer

Specifies the length of time within which the first digit of a feature number (e.g., extension number) must be dialed before reorder tone is heard.

Default

10 s

Value Range

0–15 s

Programming Guide References

None

Feature Guide References

1.5.2 Automatic Extension Release

◆ Extension Inter Digit Timer

Specifies the length of time within which subsequent digits must be dialed before the PBX sends reorder tone.

Default

10 s

Value Range

0–15 s

Programming Guide References

None

Feature Guide References

1.5.2 Automatic Extension Release

◆ Analog CO First Digit Timer to Mute Caller's Voice during Dialing

Specifies the length of time within which the first digit of a telephone number must be sent to an analog CO line before the PBX recognizes end of dialing and cancels muting caller's voice sent to the analog CO line.

Default

10 s

Value Range

1–15 s

Feature Guide References

None

◆ Analog CO Inter Digit Timer to Mute Caller's Voice during Dialing

Specifies the length of time within which subsequent digits of a telephone number must be sent to an analog CO line before the PBX recognizes end of dialing and cancels muting caller's voice sent to the analog CO line.

Default

5 s

Value Range

1–15 s

Feature Guide References

None

◆ Call Duration Start Timer for Analog CO

Specifies the length of time between the end of dialing and the start of the SMDR timer for outgoing analog CO line calls.

Default

0 s

Value Range

0–60 s

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ Extension PIN Lock Counter

Specifies the number of successive incorrect PIN entries before the extension PIN is locked. (Specifying "0" disables the counter.)

Default

0

Value Range

0–15

Programming Guide References

None

Feature Guide References

1.25.1 Extension Personal Identification Number (PIN)

◆ Automatic Redial : Repeat Counter

Specifies the number of times automatic redialing is attempted before being canceled.

Default

0

Value Range

0–15

Programming Guide References

None

Feature Guide References

1.6.1.3 Last Number Redial

◆ Automatic Redial : Waiting Time before the Called Party Answers

Specifies the length of time the PBX waits for the called party to answer before canceling automatic redialing.

Default

30 s

Value Range

$10 \times n$ ($n=1-30$) s

Programming Guide References

None

Feature Guide References

1.6.1.3 Last Number Redial

◆ Automatic Redial Mute Off Timer for Analog CO

Specifies the length of time before the PBX stops muting the caller's voice and cancels busy tone detection when Automatic Redial to analog CO line is performed.

Default

8 s

Value Range

0–15 s

Programming Guide References

None

Feature Guide References

1.6.1.3 Last Number Redial

◆ On hook Waiting Time for call from VM to CO

Specifies the length of time from when the VPS seizes a CO line (for example, to transfer a call) until the VPS goes on hook. If the time specified here is too short, the VPS will be unable to dial the number and make a connection.

Default

10 s

Value Range

1–30 s

Programming Guide References

None

Feature Guide References

1.21 Voice Mail Features

4.8.6 Timers & Counters—DISA/DPH/CONF/T. Reminder [2-4-2]

Various system timers and counters can be programmed.

◆ DISA Delayed Answer Timer

Specifies the length of time the caller hears a ringback tone before hearing an OGM.

Default

5 s

Value Range

0–30 s

Programming Guide References

4.11.4 DISA—Message Setting [5-3-2]

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ DISA Mute & OGM Start Timer after Answering

Specifies the length of time until the caller hears an OGM after reaching the DISA line.

Default

1.8 s

Value Range

0.0–12.0 s

Programming Guide References

4.11.4 DISA—Message Setting [5-3-2]

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ DISA First Digit Timer for Routing to Operator when No Dial

Specifies the length of time after the OGM in which the caller must begin dialing before the call is redirected to the operator.

Default

10 s

Value Range

0–120 s

Programming Guide References

4.8.3 PBX Operator [2-2]

4.11.4 DISA—Message Setting [5-3-2]

4.12.8 Tenant [6-6]—Operator (Extension Number)

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ DISA Second Digit Timer for Automated Attendant

Specifies the length of time after the OGM in which the caller must dial the second digit before the DISA AA Service activates.

Default

2 s

Value Range

0–5 s

Programming Guide References

4.11.4 DISA—Message Setting [5-3-2]

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ DISA Intercept Timer (Day/Lunch/Break/Night)

Specifies the length of time until a DISA call is intercepted and redirected to the intercept routing destination after the original destination receives the call in each time mode.

Default

40 s

Value Range

0–60 s

Programming Guide References

4.9.1 Trunk Group—TRG Settings [3-1-1]—Intercept—Intercept Destination—Day,Lunch, Break, Night

4.10.1 Wired Extension—Extension Settings [4-1-1]—Option 1—Intercept Destination—Day, Lunch, Break, Night

4.10.9 Portable Station—Extension Settings [4-2-1]—Option 1—Intercept Destination—Day, Lunch, Break, Night

4.11.4 DISA—Message Setting [5-3-2]

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ DISA Disconnect Timer after Intercept

Specifies the length of time until an intercepted DISA call is disconnected after the DISA Intercept time expires.

Default

60 s

Value Range

0–60 s

Programming Guide References

4.11.4 DISA—Message Setting [5-3-2]

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ DISA CO-to-CO Line Call Prolong Counter

Specifies the number of times the caller can prolong a CO-to-CO line call on the DISA line. (Specifying "0" enables the caller to prolong the CO-to-CO line call without restriction.)

Default

10

Value Range

0–15

Programming Guide References

4.11.4 DISA—Message Setting [5-3-2]

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ DISA CO-to-CO Line Call Prolong Time

Specifies the length of time a CO-to-CO line call on the DISA line can be prolonged each time the caller prolongs the call. (Specifying "0" disables the caller to prolong the CO-to-CO line call.)

Default

3 min

Value Range

0–7 min

Programming Guide References

4.11.4 DISA—Message Setting [5-3-2]

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ Progress Tone Continuation Time before Recording Message

Specifies the length of time a progress tone is sent to the manager extension before recording an OGM.

Default

5 s

Value Range

0–7 s

Programming Guide References

4.11.4 DISA—Message Setting [5-3-2]

Feature Guide References

1.15.5 Outgoing Message (OGM)

◆ DISA Reorder Tone Duration Time

Specifies the length of time a reorder tone is sent to the caller before the call is disconnected.

Default

10 s

Value Range

1–15 s

Programming Guide References

4.11.4 DISA—Message Setting [5-3-2]

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ **Doorphone Call Duration Time**

Specifies the length of time until the ringing stops and the call is canceled when there is no answer.

Default

30 s

Value Range

10 × n (n=1–15) s

Programming Guide References

4.11.1 Doorphone [5-1]

Feature Guide References

1.15.1 Doorphone Call

◆ **Doorphone Call Duration Limitation Time**

Specifies the length of time until a doorphone call is disconnected.

Default

60 s

Value Range

10 × n (n=0–30) s

Programming Guide References

4.11.1 Doorphone [5-1]

Feature Guide References

1.15.1 Doorphone Call

◆ **Door Open Duration Time**

Specifies the length of time the door stays unlocked.

Default

5 s

Value Range

2–7 s

Programming Guide References

4.11.1 Doorphone [5-1]

Feature Guide References

1.15.2 Door Open

◆ Timed Reminder : Repeat Counter

Specifies the number of times the alarm is repeated.

Default

3

Value Range

1–15

Programming Guide References

None

Feature Guide References

1.25.4 Timed Reminder

◆ Timed Reminder : Interval Time

Specifies the length of time between the repeated alarms.

Default

30 s

Value Range $10 \times n$ ($n=1-120$) s**Programming Guide References**

None

Feature Guide References

1.25.4 Timed Reminder

◆ Timed Reminder : Alarm Ringing Duration Time

Specifies the length of time the alarm rings.

Default

30 s

Value Range $10 \times n$ ($n=1-30$) s

Programming Guide References

None

Feature Guide References

1.25.4 Timed Reminder

◆ **Unattended Conference : Recall Start Time**

Specifies the length of time until the conference originator receives an Unattended Conference Recall tone.

Default

10 min

Value Range

0–60 min

Programming Guide References

None

Feature Guide References

1.13.1.2 Conference

◆ **Unattended Conference : Recall Continuous Time before Sending Alarm Tone to CO**

Specifies the length of time until the parties involved in the Unattended Conference receive an alarm tone after the conference originator has received the Unattended Conference Recall tone but remained unattended to the conference.

Default

30 s

Value Range

0–240 s

Programming Guide References

None

Feature Guide References

1.13.1.2 Conference

◆ **Unattended Conference : Recall & Alarm Continuous Time before Disconnecting**

Specifies the length of time until the Unattended Conference is disconnected after the parties involved in the conference received an alarm tone but the conference originator remained unattended to the conference.

Default

15 s

Value Range

0–240 s

Programming Guide References

None

Feature Guide References

1.13.1.2 Conference

4.8.7 Timers & Counters—Miscellaneous [2-4-3]

Various system timers and counters can be programmed.

◆ Busy Tone / DND Tone Continuation Time

Specifies the length of time a busy/DND tone is heard when a call is made to an extension in busy status or DND mode. A reorder tone will be sent when this timer expires. (For a call through DISA, the call will be disconnected when this timer expires.)

Default

10 s

Value Range

0–15 s

Programming Guide References

None

Feature Guide References

1.7 Busy Line/Busy Party Features

◆ Reorder Tone Continuation Time for PT Handset Mode

Specifies the length of time a reorder tone is heard from the handset of a PT. The PT will return to idle status when this timer expires.

Default

10 s

Value Range

1–15 s

Programming Guide References

None

Feature Guide References

1.5.2 Automatic Extension Release

◆ Reorder Tone Continuation Time for PT Hands Free Mode

Specifies the length of time a reorder tone is heard from the built-in speaker of a PT in hands-free mode. The PT will return to idle status when this timer expires. This setting is applied to a PS as well as a PT.

Default

3 s

Value Range

1–15 s

Programming Guide References

None

Feature Guide References

1.5.2 Automatic Extension Release

◆ Current PT Display Keeping Time after moving to Idle mode

Specifies the length of time the current information remains on the display after the extension returns to idle status.

Default

5 s

Value Range

1–15 s

Feature Guide References

None

◆ DTMF Length while talking

Specifies the length of time a DTMF signal is sent when a number is dialed from a PT or PS during a conversation.

Default

160 ms

Value Range

80 ms, 160 ms, 240 ms, 320 ms

Feature Guide References

None

◆ DTMF Inter Digit Pause while talking

Specifies the length of time between DTMF signals when numbers are dialed in succession from a PT or PS during a conversation.

Default

112 ms

Value Range

$64 + 16 \times n$ ($n=0-15$) ms

Feature Guide References

None

◆ Pause Time while talking

Specifies the length of the pause inserted when the PAUSE button is pressed during a conversation.

Default

1.5 s

Value Range

1.5 s, 2.5 s, 3.5 s, 4.5 s

Programming Guide References

None

Feature Guide References

1.5.4.5 Pause Insertion

◆ TIE Receiving Dial Inter Digit Timer

Specifies the length of time between digits when receiving a dialed number from a TIE line. The call will be redirected to a PBX operator when this timer expires.

Default

10 s

Value Range

3–30 s

Programming Guide References

4.15.1 TIE Table [9-1]

Feature Guide References

1.27.1.2 PBX Code Method (Access with PBX Code)

1.27.1.3 Extension Number Method (Access without PBX Code)

◆ DID Receiving Dial Inter Digit Timer

Specifies the length of time between digits when receiving a DID number from a public network. The call will be redirected to a PBX operator when this timer expires.

Default

10 s

Value Range

0–30 s

Programming Guide References

4.16.3 DID Table [10-3]

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

◆ Waiting Timer to Receive Analog Caller ID

Specifies the length of time the PBX waits before receiving Caller ID from an analog CO line. If the Caller ID is received through the analog CO line card on which no Caller ID card is mounted or through the port to which Caller ID Detection is disabled, this timer is not applicable.

Default

5 s

Value Range

0–15 s

Programming Guide References

4.12.1 Speed Dialing & Caller ID—Main Table [6-1-1]

4.12.2 Speed Dialing & Caller ID—Caller ID Modification [6-1-2]

Feature Guide References

1.16.1 Caller ID

◆ Visual Caller ID Display Timer

Specifies the length of time the Caller ID number, with the Call Waiting tone offered by an analog line from the telephone company, is shown on the display. The Caller ID number flashes on the display twice for five seconds at 15-second intervals.

Default

30 s

Value Range

0–250 s

Programming Guide References

None

Feature Guide References

1.1.3.3 Call Waiting

◆ External Sensor Ringing Continuous Timer

Specifies the length of time that the PBX waits for the called party to answer before cancelling a sensor call.

Default

30 s

Value Range

10 × n (n=1–15) s

Programming Guide References

None

Feature Guide References

1.15.7 External Sensor

4.8.8 Time Service—Week Table [2-5-1]

A specific time mode (day, night, lunch, or break) can be selected for operation depending on the time of the day. The time mode can be switched either automatically or manually. Select the desired switching mode from the **Time Service Switching Mode** list.

The number of a Time Table corresponds to the number of a tenant. Select the desired Time Table from the **Time Table No.** list.

When in the Automatic Switching mode, time modes of the tenant are switched as programmed in the corresponding Time Table. Manual switching is possible only from an authorized extension (determined by COS).

Day / Lunch / Night

Time Tables containing day, lunch, and night start times can be programmed for each day of the week.

◆ Day 1 Start—Setting

Enables the setting of the Day 1 start time.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ **Day 1 Start—Hour**

Specifies the hour of the Day 1 start time.

Default

9

Value Range

0–23

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ **Day 1 Start—Minute**

Specifies the minute of the Day 1 start time.

Default

0

Value Range

0–59

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ **Lunch Start—Setting**

Enables the setting of the Lunch start time.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ Lunch Start—Hour

Specifies the hour of the Lunch start time.

Default

12

Value Range

0–23

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ Lunch Start—Minute

Specifies the minute of the Lunch start time.

Default

0

Value Range

0–59

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ Day 2 Start—Setting

Enables the setting of the Day 2 start time (Lunch end time).

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ **Day 2 Start—Hour**

Specifies the hour of the Day 2 start time.

Default

13

Value Range

0–23

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ **Day 2 Start—Minute**

Specifies the minute of the Day 2 start time.

Default

0

Value Range

0–59

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ Night Start—Setting

Enables the setting of the Night start time.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ Night Start—Hour

Specifies the hour of the Night start time.

Default

17

Value Range

0–23

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ Night Start—Minute

Specifies the minute of the Night start time.

Default

0

Value Range

0–59

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

Break

Break start and end times can be programmed for each day of the week for Time Tables that contain breaks.

◆ Break 1, 2, 3 Start—Setting

Enables the setting of each break mode start time.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ Break 1, 2, 3 Start—Hour

Specifies the hour of each break mode start time.

Default

0

Value Range

0–23

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ Break 1, 2, 3 Start—Minute

Specifies the minute of each break mode start time.

Default

0

Value Range

0–59

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ Break 1, 2, 3 End (Day Mode)—Setting

Enables the setting of each break mode end time (back to day mode).

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ Break 1, 2, 3 End (Day Mode)—Hour

Specifies the hour of each break mode end time.

Default

0

Value Range

0–23

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

◆ Break 1, 2, 3 End (Day Mode)—Minute

Specifies the minute of each break mode end time.

Default

0

Value Range

0–59

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.9.3 Extension Group [3-2]

Feature Guide References

2.2.4 Time Service

4.8.9 Time Service—Holiday Table [2-5-2]

A specific time mode (day, night, lunch, or break) can be selected for operation during holidays. Select the desired time mode from the **Holiday Mode** list. The start and end dates of a maximum of 24 different holidays can be programmed.

◆ Setting

Enables the setting of the holiday.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

2.2.4 Time Service

◆ Start Date—Month

Specifies the month of the holiday start date.

Default

1

Value Range

1–12

Programming Guide References

None

Feature Guide References

2.2.4 Time Service

◆ Start Date—Day

Specifies the day of the holiday start date.

Default

1

Value Range

1–31

Programming Guide References

None

Feature Guide References

2.2.4 Time Service

◆ End Date—Month

Specifies the month of the holiday end date.

Default

1

Value Range

1–12

Programming Guide References

None

Feature Guide References

2.2.4 Time Service

◆ End Date—Day

Specifies the day of the holiday end date.

Default

1

Value Range

1–31

Programming Guide References

None

Feature Guide References

2.2.4 Time Service

4.8.10 Numbering Plan—Extension [2-6-1]

The leading numbers and the number of additional digits of the extension numbers for a maximum of 32 different extension numbering schemes can be programmed.

◆ Leading Number

Specifies the leading number of the extension numbers and floating extension numbers.

Default

Extension Numbering Scheme 01: 1
Extension Numbering Scheme 02: 2
Extension Numbering Scheme 03: 3
Extension Numbering Scheme 04: 4
Extension Numbering Scheme 05: 5
Extension Numbering Scheme 06: 6
Extension Numbering Scheme 07–32: Not stored.

Value Range

Max. 2 digits (consisting of 0–9)

Programming Guide References

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]
4.9.11 VM(DPT) Group—Unit Setting [3-7-2]
4.9.13 VM(DTMF) Group—Group Setting [3-8-2]
4.10.1 Wired Extension—Extension Settings [4-1-1]
4.10.9 Portable Station—Extension Settings [4-2-1]
4.11.4 DISA—Message Setting [5-3-2]
4.17.4 Miscellaneous [11-4]

Feature Guide References

2.3.5 Flexible Numbering/Fixed Numbering

◆ Additional Digits

Specifies the number of additional digits following the leading number.

Default

XX

Value Range

None: 0 digit
X: 1 digit
XX: 2 digits

Programming Guide References

None

Feature Guide References

2.3.5 Flexible Numbering/Fixed Numbering

4.8.11 Numbering Plan—Feature [2-6-2]

Feature numbers to access various PBX features can be programmed. The following features are available while hearing a dial tone.

◆ Operator Call

Specifies the feature number used for calling the operator.

Default

0

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.8.3 PBX Operator [2-2]

4.12.8 Tenant [6-6]

Feature Guide References

2.2.5 Operator Features

2.3.5 Flexible Numbering/Fixed Numbering

◆ Idle Line Access (Local Access)

Specifies the feature number used for making a CO line call by Idle Line Access (selects an idle CO line automatically).

Default

9

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.9.2 Trunk Group—Local Access Priority [3-1-2]

Feature Guide References

1.5.5.3 CO Line Access

2.3.5 Flexible Numbering/Fixed Numbering

◆ **Trunk Group Access**

Specifies the feature number used for making a CO line call using an idle CO line from a certain CO line group.

Default

8

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.16.1 CO Line Setting [10-1]

Feature Guide References

2.3.5 Flexible Numbering/Fixed Numbering

◆ **Tie Line Access**

Specifies the feature number used for making a TIE line call.

Default

7

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.15.1 TIE Table [9-1]

Feature Guide References

1.27.1.2 PBX Code Method (Access with PBX Code)

2.3.5 Flexible Numbering/Fixed Numbering

◆ **Redial**

Specifies the feature number used for dialing the last number dialed.

Default

#

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

- 1.6.1.3 Last Number Redial
- 2.3.5 Flexible Numbering/Fixed Numbering

◆ System Speed Dialing / Personal Speed Dialing

Specifies the feature number used for making a call using System/Personal Speed Dialing number.

Default

**

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

- 4.10.4 Wired Extension—Speed Dial [4-1-3]
- 4.12.1 Speed Dialing & Caller ID—Main Table [6-1-1]

Feature Guide References

- 1.6.1.4 Speed Dialing—Personal/System
- 2.3.5 Flexible Numbering/Fixed Numbering

◆ Personal Speed Dialing - Programming

Specifies the feature number used for programming Personal Speed Dialing numbers at an extension.

Default

*30

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

- 1.6.1.4 Speed Dialing—Personal/System
- 2.3.5 Flexible Numbering/Fixed Numbering

◆ Doorphone Call

Specifies the feature number used for making a call to a doorphone.

Default

*31

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.11.1 Doorphone [5-1]

Feature Guide References

1.15.1 Doorphone Call

2.3.5 Flexible Numbering/Fixed Numbering

◆ **Group Paging**

Specifies the feature number used for paging a certain paging group.

Default

*33

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.9.5 Paging Group [3-4]

Feature Guide References

1.14.1 Paging

2.3.5 Flexible Numbering/Fixed Numbering

◆ **External BGM On / Off**

Specifies the feature number, available for manager extensions, used for turning on or off the external BGM.

Default

*35

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.8.4 BGM / Music on Hold [2-3]

4.8.15 Class of Service—COS Settings [2-7-1]—Options—Manager

Feature Guide References

1.15.4 Background Music (BGM)

2.3.5 Flexible Numbering/Fixed Numbering

◆ OGM Record / Clear / Playback

Specifies the feature number, available for manager extensions, used for recording, clearing, or playing back a certain OGM.

Default

*36

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.11.4 DISA—Message Setting [5-3-2]

4.8.15 Class of Service—COS Settings [2-7-1]—Options—Manager

Feature Guide References

1.15.5 Outgoing Message (OGM)

2.3.5 Flexible Numbering/Fixed Numbering

◆ Single-CO Line Access

Specifies the feature number used for making a CO line call using a certain CO line.

Default

*37

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.16.1 CO Line Setting [10-1]

Feature Guide References

1.5.5.3 CO Line Access

2.3.5 Flexible Numbering/Fixed Numbering

◆ Parallel Telephone (Ring) Mode Set / Cancel

Specifies the feature number used for setting or canceling the SLT connected in parallel with a DPT to ring when receiving an incoming call.

Default

*39

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.10.9 Paralleled Telephone
2.3.5 Flexible Numbering/Fixed Numbering

◆ **Group Call Pickup**

Specifies the feature number used for answering a call ringing in a certain call pickup group.

Default

*40

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.9.4 Call Pickup Group [3-3]

Feature Guide References

1.4.1.3 Call Pickup
2.3.5 Flexible Numbering/Fixed Numbering

◆ **Directed Call Pickup**

Specifies the feature number used for answering a call ringing at a certain extension.

Default

*41

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Option 3—Call Pickup Deny
4.10.9 Portable Station—Extension Settings [4-2-1]—Option 3—Call Pickup Deny

Feature Guide References

1.4.1.3 Call Pickup
2.3.5 Flexible Numbering/Fixed Numbering

◆ **TAFAS Answer**

Specifies the feature number used for answering a CO line call notified through an external pager.

Default

*42

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.11.2 External Pager [5-2]

Feature Guide References

1.15.3 Trunk Answer From Any Station (TAFAS)

2.3.5 Flexible Numbering/Fixed Numbering

◆ Group Paging Answer

Specifies the feature number used for answering a page to a paging group.

Default

*43

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.9.5 Paging Group [3-4]

Feature Guide References

1.14.1 Paging

2.3.5 Flexible Numbering/Fixed Numbering

◆ Automatic Callback Busy Cancel

Specifies the feature number used for canceling Automatic Callback Busy.

Default

*46

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.7.1 Automatic Callback Busy (Camp-on)

2.3.5 Flexible Numbering/Fixed Numbering

◆ **User Remote Operation / Walking COS / Verified Code**

Specifies the feature number used for changing the COS of an extension temporarily, and also changing the feature settings (for example, FWD, DND etc.) of an extension from another extension or through DISA.

Default

*47

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]—Options—Deny Remote Operation by Other Extension

Feature Guide References

1.8.4 Walking COS

1.8.5 Verified Code Entry

1.25.5 Remote Extension Control by User

2.3.5 Flexible Numbering/Fixed Numbering

◆ **Wireless XDP Parallel Mode Set / Cancel**

Specifies the feature number used for setting or canceling Wireless XDP Parallel mode.

Default

*48

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]—Options—Accept Wireless XDP Parallel Set by Other PS

Feature Guide References

1.22.3 Wireless XDP Parallel Mode

2.3.5 Flexible Numbering/Fixed Numbering

◆ **Account Code Entry**

Specifies the feature number used for entering the Account Code.

Default

*49

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.5.4.3 Account Code Entry

2.3.5 Flexible Numbering/Fixed Numbering

◆ Call Hold / Call Hold Retrieve

Specifies the feature number used for holding a call or retrieving a call on hold from the holding extension.

Default

*50

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.12.1 Call Hold

2.3.5 Flexible Numbering/Fixed Numbering

◆ Call Hold Retrieve : Specified with a Holding Extension Number

Specifies the feature number used for retrieving a held call from a different extension by specifying a holding extension number.

Default

*51

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.12.1 Call Hold

2.3.5 Flexible Numbering/Fixed Numbering

◆ Call Park / Call Park Retrieve

Specifies the feature number used for holding a call in a parking zone or retrieving a call held in a parking zone.

Default

*52

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.12.2 Call Park

2.3.5 Flexible Numbering/Fixed Numbering

◆ **Hold Retrieve : Specified with a Held CO Line Number**

Specifies the feature number used for retrieving a held CO line call from a different extension by specifying a held CO line number.

Default

*53

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.12.1 Call Hold

2.3.5 Flexible Numbering/Fixed Numbering

◆ **Door Open**

Specifies the feature number used for opening a door.

Default

*55

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.11.1 Doorphone [5-1]

Feature Guide References

1.15.2 Door Open

2.3.5 Flexible Numbering/Fixed Numbering

◆ External Relay Access

Specifies the feature number used for activating a relay.

Default

*56

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.11.5 External Relay [5-4]

Feature Guide References

1.15.8 External Relay Control

◆ External Feature Access

Specifies the feature number used for accessing features of a host PBX or the telephone company.

Default

*60

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.10.7 External Feature Access (EFA)

2.3.5 Flexible Numbering/Fixed Numbering

◆ COLR Set / Cancel

Specifies the feature number used for setting or canceling the COLR, which suppresses the presentation of the called party's number to the caller.

Default

*7*0

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.7.19 PRI Port [1-6]—Supplementary Service—COLP, CLIR, COLR, CNIP, CONP, CNIR, CONR

Feature Guide References

- 1.27.2.2 Calling/Connected Line Identification Presentation (CLIP/COLP) and Calling/Connected Name Identification Presentation (CNIP/CONP)—by QSIG
- 2.3.5 Flexible Numbering/Fixed Numbering

◆ CLIR Set / Cancel

Specifies the feature number used for setting or canceling the CLIR, which suppresses the presentation of the caller's number to the called party.

Default

*7*1

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

- 4.7.19 PRI Port [1-6]—Supplementary Service—COLP, CLIR, COLR, CNIP, CONP, CNIR, CONR

Feature Guide References

- 1.19.1.2 Calling Line Identification Presentation (CLIP)
- 1.27.2.2 Calling/Connected Line Identification Presentation (CLIP/COLP) and Calling/Connected Name Identification Presentation (CNIP/CONP)—by QSIG
- 2.3.5 Flexible Numbering/Fixed Numbering

◆ Switch CLIP of CO Line / Extension

Specifies the feature number used for sending either the CLIP number of the CO line in use (subscriber's number) or the extension to the network.

Default

*7*2

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

- 4.7.19 PRI Port [1-6]—CO Setting—Subscriber Number
- 4.10.1 Wired Extension—Extension Settings [4-1-1]—Option 1—CLIP ID
- 4.10.9 Portable Station—Extension Settings [4-2-1]—Option 1—CLIP ID

Feature Guide References

- 1.19.1.2 Calling Line Identification Presentation (CLIP)
- 2.3.5 Flexible Numbering/Fixed Numbering

◆ Message Waiting Set / Cancel / Call Back

Specifies the feature number used for setting or canceling Message Waiting, or calling back the caller.

Default

*70

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.17.1 Message Waiting

2.3.5 Flexible Numbering/Fixed Numbering

◆ **FWD/DND Set / Cancel: Call from CO & Extension**

Specifies the feature number used for setting or canceling FWD/DND for incoming CO line and intercom calls.

Default

*710

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND)

2.3.5 Flexible Numbering/Fixed Numbering

◆ **FWD/DND Set / Cancel: Call from CO**

Specifies the feature number used for setting or canceling FWD/DND for incoming CO line calls.

Default

*711

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

- 1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND)
- 2.3.5 Flexible Numbering/Fixed Numbering

◆ FWD/DND Set / Cancel: Call from Extension

Specifies the feature number used for setting or canceling FWD/DND for incoming intercom calls.

Default

*712

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

- 4.10.3 Wired Extension—FWD/DND [4-1-2]
- 4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

- 1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND)
- 2.3.5 Flexible Numbering/Fixed Numbering

◆ FWD No Answer Timer Set

Specifies the feature number used for setting the length of time before a call is forwarded.

Default

*713

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

- 4.10.3 Wired Extension—FWD/DND [4-1-2]
- 4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

- 1.3.1.2 Call Forwarding (FWD)
- 2.3.5 Flexible Numbering/Fixed Numbering

◆ Group FWD Set / Cancel: Call from CO & Extension

Specifies the feature number used for setting or canceling FWD for incoming CO line and intercom calls to an incoming call distribution group.

Default

*714

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]

Feature Guide References

1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND)

2.3.5 Flexible Numbering/Fixed Numbering

◆ Group FWD Set / Cancel: Call from CO

Specifies the feature number used for setting or canceling FWD for incoming CO line calls to an incoming call distribution group.

Default

*715

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]

Feature Guide References

1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND)

2.3.5 Flexible Numbering/Fixed Numbering

◆ Group FWD Set / Cancel: Call from Extension

Specifies the feature number used for setting or canceling FWD for incoming intercom calls to an incoming call distribution group.

Default

*716

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]

Feature Guide References

1.3.1 Call Forwarding (FWD)/Do Not Disturb (DND)

2.3.5 Flexible Numbering/Fixed Numbering

◆ Call Pickup Deny Set / Cancel

Specifies the feature number used for setting or canceling Call Pickup Deny (i.e., preventing or allowing the other extensions to pick up calls to your extension).

Default

*720

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.4.1.3 Call Pickup

2.3.5 Flexible Numbering/Fixed Numbering

◆ Paging Deny Set / Cancel

Specifies the feature number used for setting or canceling Paging Deny (i.e., preventing or allowing other extensions to page your extension).

Default

*721

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.9.5 Paging Group [3-4]

Feature Guide References

1.14.1 Paging

2.3.5 Flexible Numbering/Fixed Numbering

◆ Walking Extension

Specifies the feature number used for using the same extension settings at a new extension.

Default

*727

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.25.3 Walking Extension
2.3.5 Flexible Numbering/Fixed Numbering

◆ Data Line Security Set / Cancel

Specifies the feature number used for setting or canceling the Data Line Security (i.e., preventing or allowing signals from other extensions during data transmission).

Default

*730

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.10.5 Data Line Security
2.3.5 Flexible Numbering/Fixed Numbering

◆ Call Waiting Mode: Call from Extension

Specifies the feature number used for setting or changing the method of receiving a Call Waiting from an extension.

Default

*731

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.1.3.3 Call Waiting
2.3.5 Flexible Numbering/Fixed Numbering

◆ Call Waiting Mode: Call from CO

Specifies the feature number used for setting or canceling a Call Waiting from a CO line, doorphone, or a call via an incoming call distribution group.

Default

*732

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.1.3.3 Call Waiting

2.3.5 Flexible Numbering/Fixed Numbering

◆ **Executive Override Deny Set / Cancel**

Specifies the feature number used for setting or canceling Executive Busy Override (i.e., preventing or allowing the other extensions to join your conversation).

Default

*733

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]—Main—Executive Busy Override

4.8.15 Class of Service—COS Settings [2-7-1]—Options—Executive Busy Override Deny

Feature Guide References

1.7.2 Executive Busy Override

2.3.5 Flexible Numbering/Fixed Numbering

◆ **Not Ready (Manual Wrap-up) Mode On / Off**

Specifies the feature number used for entering or leaving the Not Ready mode.

Default

*735

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]

Feature Guide References

1.2.2.6 Log-in/Log-out

2.3.5 Flexible Numbering/Fixed Numbering

◆ Log-in / Log-out

Specifies the feature number used for joining or leaving the incoming call distribution group.

Default

*736

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]

Feature Guide References

1.2.2.6 Log-in/Log-out

2.3.5 Flexible Numbering/Fixed Numbering

◆ Incoming Call Queue Monitor

Specifies the feature number, available only for the extension assigned as a supervisor, used for monitoring the status of an incoming call distribution group with the display.

Default

*739

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]—Miscellaneous—Supervisor Extension Number

Feature Guide References

1.2.2.7 Supervisory Feature

2.3.5 Flexible Numbering/Fixed Numbering

◆ Hot Line (Pickup Dial) Program / Set / Cancel

Specifies the feature number used for setting/canceling, or programming a number for Hot Line.

Default

*740

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.8.5 Timers & Counters—CO / Extension [2-4-1]—Hot Line (Pickup Dial) Start Timer

Feature Guide References

1.6.1.6 Hot Line

2.3.5 Flexible Numbering/Fixed Numbering

◆ Absent Message Set / Cancel

Specifies the feature number used for setting or canceling the presentation of an Absent Message.

Default

*750

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.17.2 Absent Message

2.3.5 Flexible Numbering/Fixed Numbering

◆ BGM Set / Cancel

Specifies the feature number used for setting or canceling the BGM heard through the telephone speaker while on-hook.

Default

*751

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.8.4 BGM / Music on Hold [2-3]

Feature Guide References

1.15.4 Background Music (BGM)

2.3.5 Flexible Numbering/Fixed Numbering

◆ Remote Timed Reminder (Remote Wakeup Call)

Specifies the feature number used for setting or cancelling a Timed Reminder remotely (Remote Wake-up Call).

Default

76

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.25.4 Timed Reminder

◆ Timed Reminder Set / Cancel

Specifies the feature number used for setting or canceling a Timed Reminder.

Default

*760

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.25.4 Timed Reminder

2.3.5 Flexible Numbering/Fixed Numbering

◆ Printing Message

Specifies the feature number used for selecting a Printing Message to be output on SMDR.

Default

*761

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.12.11 Hotel [6-8]—Printing Message 1–8

Feature Guide References

1.23.2 Printing Message

◆ Extension Lock Set / Cancel

Specifies the feature number used for locking or unlocking the extension to make certain CO line calls and change the forward destination.

Default

*77

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.8.2 Extension Lock

2.3.5 Flexible Numbering/Fixed Numbering

◆ **Time Service (Day / Lunch / Break / Night) Switch**

Specifies the feature number, available for manager extensions, used for changing the time mode manually.

Default

*780

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]—Options—Time Service Switch

4.8.15 Class of Service—COS Settings [2-7-1]—Options—Manager

Feature Guide References

2.2.4 Time Service

2.3.5 Flexible Numbering/Fixed Numbering

◆ **Remote Extension Lock Off**

Specifies the feature number, available for manager extensions, used for unlocking other extensions.

Default

*782

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]—Options—Manager

Feature Guide References

1.8.2 Extension Lock

2.3.5 Flexible Numbering/Fixed Numbering

◆ Remote Extension Lock On

Specifies the feature number, available for manager extensions, used for locking other extensions.

Default

*783

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]—Options—Manager

Feature Guide References

1.8.2 Extension Lock

2.3.5 Flexible Numbering/Fixed Numbering

◆ Extension Feature Clear

Specifies the feature number used for resetting certain features of an extension to the default.

Default

*790

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.25.2 Extension Feature Clear

2.3.5 Flexible Numbering/Fixed Numbering

◆ Extension PIN Set / Cancel

Specifies the feature number used for setting a PIN to an extension.

Default

*799

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

- 1.25.1 Extension Personal Identification Number (PIN)
- 2.3.5 Flexible Numbering/Fixed Numbering

◆ Dial Information (CTI)

Specifies the feature number used for sending dial information to the CTI instead of the PBX.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

- 1.29.1 Computer Telephony Integration (CTI)
- 2.3.5 Flexible Numbering/Fixed Numbering

◆ Centralized BLF Monitor Cancel

Specifies the feature number used to cancel monitoring of an extension using an NDSS button.

Default

*784

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

- 4.15.1 TIE Table [9-1]

Feature Guide References

- 1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

4.8.12 Numbering Plan—Other PBX Extension [2-6-3]

Other PBX extension numbers can be used to call the extensions connected to the PBXs at different locations in a TIE line network. A maximum of 16 leading digits can be programmed.

◆ Dial

Specifies the other PBX extension number.

Default

Not stored.

Value Range

Max. 3 digits (consisting of 0–9, *, and #)

Programming Guide References

4.15.1 TIE Table [9-1]—Leading Number

Feature Guide References

1.27.1.3 Extension Number Method (Access without PBX Code)

2.3.5 Flexible Numbering/Fixed Numbering

4.8.13 Numbering Plan—Quick Dialing [2-6-4]

Quick Dialing numbers are used to call extensions or outside parties, or access certain features without having to dial their full numbers, if they are properly programmed. A maximum of 80 Quick Dialing numbers can be programmed.

◆ Dial

Specifies the Quick Dialing number.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.6.1.5 Quick Dialing

2.3.5 Flexible Numbering/Fixed Numbering

◆ Phone Number

Specifies the number to be dialed when the corresponding Quick Dialing number is used.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, T [Transfer], [,] [Secret], P [Pause], and F [Flash])

Programming Guide References

None

Feature Guide References

1.6.1.5 Quick Dialing

2.3.5 Flexible Numbering/Fixed Numbering

4.8.14 Numbering Plan—B/NA DND Call Feature [2-6-5]

Feature numbers used to access various PBX features can be programmed. The following features are available while hearing a busy, DND, or ringback tone. Each feature must have a unique feature number.

◆ BSS / OHCA / Whisper OHCA / DND Override

Specifies the feature number used for notifying a busy extension of a second call by Call Waiting, or calling an extension in DND mode.

Default

1

Value Range

1 digit (0–9, *, or #)

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Option 2—C. Waiting for Call from Extension

4.10.9 Portable Station—Extension Settings [4-2-1]—Option 2—C. Waiting for Call from Extension

Feature Guide References

1.1.3.3 Call Waiting

1.3.1.3 Do Not Disturb (DND)

2.3.5 Flexible Numbering/Fixed Numbering

◆ Executive Busy Override

Specifies the feature number used for interrupting an existing call to establish a three-party conference call.

Default

3

Value Range

1 digit (0–9, *, or #)

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]—Main—Executive Busy Override

4.10.1 Wired Extension—Extension Settings [4-1-1]—Option 3—Executive Override Deny

4.10.9 Portable Station—Extension Settings [4-2-1]—Option 3—Executive Override Deny

Feature Guide References

1.7.2 Executive Busy Override
2.3.5 Flexible Numbering/Fixed Numbering

◆ Alternate Calling - Ring / Voice

Specifies the feature number for allowing a caller to change the called extension's preset call receiving method to ring tone or voice.

Default

*

Value Range

1 digit (0–9, *, or #)

Programming Guide References

None

Feature Guide References

1.5.3 Intercom Call
2.3.5 Flexible Numbering/Fixed Numbering

◆ Message Waiting Set

Specifies the feature number used for leaving a Message Waiting notification.

Default

4

Value Range

1 digit (0–9, *, or #)

Programming Guide References

None

Feature Guide References

1.17.1 Message Waiting
2.3.5 Flexible Numbering/Fixed Numbering

◆ Call Monitor

Specifies the feature number used for listening to a busy extension's conversation.

Default

5

Value Range

1 digit (0–9, *, or #)

Programming Guide References

- 4.8.15 Class of Service—COS Settings [2-7-1]—Main—Call Monitor
- 4.10.1 Wired Extension—Extension Settings [4-1-1]—Option 3—Executive Override Deny
- 4.10.9 Portable Station—Extension Settings [4-2-1]—Option 3—Executive Override Deny

Feature Guide References

- 1.7.3 Call Monitor
- 2.3.5 Flexible Numbering/Fixed Numbering

◆ Automatic Callback Busy

Specifies the feature number used to reserve a busy line and receive callback ringing when the line becomes idle.

Default

6

Value Range

1 digit (0–9, *, or #)

Programming Guide References

None

Feature Guide References

- 1.7.1 Automatic Callback Busy (Camp-on)
- 2.3.5 Flexible Numbering/Fixed Numbering

◆ BSS / OHCA / Whisper OHCA / DND Override-2

Specifies the feature number used for notifying a busy extension of a second call by Call Waiting, or calling an extension in DND mode. This is the same setting as **BSS / OHCA / Whisper OHCA / DND Override** on this screen.

Default

2

Value Range

1 digit (0–9, *, or #)

Programming Guide References

- 4.10.1 Wired Extension—Extension Settings [4-1-1]—Option 2—C. Waiting for Call from Extension
- 4.10.9 Portable Station—Extension Settings [4-2-1]—Option 2—C. Waiting for Call from Extension

Feature Guide References

- 1.1.3.3 Call Waiting
- 1.3.1.3 Do Not Disturb (DND)
- 2.3.5 Flexible Numbering/Fixed Numbering

4.8.15 Class of Service—COS Settings [2-7-1]

Each extension, doorphone port, incoming call distribution group, and CO line group belongs to a certain COS. Certain features can be programmed to behave differently depending on the COS. A maximum of 64 COS can be programmed.

TRS / CO

Restrictions to features related to making CO line calls can be programmed for each COS.

◆ COS Name

Specifies the name of the COS.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ TRS Level—Day, Lunch, Break, Night

Specifies the Toll Restriction (TRS) level for making CO line calls in each time mode.

Default

1

Value Range

1: Allows all CO line calls

2–6: Restricts CO line calls according to the combination of the Denied and Exception Code Tables

7: Restricts all CO line calls

Programming Guide References

4.8.8 Time Service—Week Table [2-5-1]

4.9.1 Trunk Group—TRG Settings [3-1-1]—Main—COS

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]—Main—COS

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

4.11.1 Doorphone [5-1]—COS

4.13.1 Denied Code [7-1]

4.13.2 Exception Code [7-2]

Feature Guide References

1.8.1 Toll Restriction (TRS)

◆ TRS Level on Extension Lock

Specifies the TRS level for making CO line calls when an extension is locked.

Default

7

Value Range

1: Allows all CO line calls

2–6: Restricts CO line calls according to the combination of the Denied and Exception Code Tables

7: Restricts all CO line calls

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

4.13.1 Denied Code [7-1]

4.13.2 Exception Code [7-2]

Feature Guide References

1.8.2 Extension Lock

◆ TRS Level for System Speed Dialing

Specifies the TRS level for making a CO line call using System Speed Dialing numbers, which overrides the TRS set for the current time mode.

Default

1

Value Range

1: Allows all CO line calls

2–6: Restricts CO line calls according to the combination of the Denied and Exception Code Tables

7: Restricts all CO line calls

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

4.12.1 Speed Dialing & Caller ID—Main Table [6-1-1]

4.13.4 Miscellaneous [7-4]—TRS Override by System Speed Dialing

Feature Guide References

1.8.1 Toll Restriction (TRS)

◆ Extension-CO Line Call Duration Limit

Enables the extension-to-CO line call duration feature. The length of the call duration can be programmed.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.8.22 System Options—Option 2 [2-9-2]—Extension - CO Call Limitation

4.9.1 Trunk Group—TRG Settings [3-1-1]—Main—COS

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

Feature Guide References

1.10.8 CO Line Call Limitation

◆ **Transfer to CO**

Enables the transferring of a call to a CO line.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

Feature Guide References

1.11.1 Call Transfer

◆ **Call Forward to CO**

Enables the forwarding of a call to a CO line.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.3 Wired Extension—FWD/DND [4-1-2]

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

Main

The use of features related to extension operations can be programmed for each COS.

◆ COS Name

Specifies the name of the COS.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ Account Code Mode

Specifies whether the entry of an account code is optional or mandatory when making a CO line call.

Default

Option

Value Range

Option, Forced

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

Feature Guide References

1.5.4.3 Account Code Entry

◆ Outgoing CO Call Printout (SMDR)

Enables the automatic recording of outgoing CO line calls for SMDR output.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

4.17.1 SMDR [11-1]

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ Executive Busy Override

Enables the authorization for interrupting an existing call to establish a three-party conference call.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

Feature Guide References

1.7.2 Executive Busy Override

◆ DND Override

Enables the authorization for making a call to an extension in DND mode by entering the feature number.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.3 Wired Extension—FWD/DND [4-1-2]

4.10.9 Portable Station—Extension Settings [4-2-1]

4.10.11 Portable Station—FWD/DND [4-2-2]—Main—COS

Feature Guide References

1.3.1.3 Do Not Disturb (DND)

◆ OHCA / Whisper OHCA

Enables the authorization for using OHCA/Whisper OHCA as a method of second call notification by entering the feature number.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

Feature Guide References

1.7.4 Second Call Notification to Busy Extension

◆ **Door Unlock**

Enables the authorization to open the door.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

Feature Guide References

1.15.2 Door Open

◆ **Call Monitor**

Enables the authorization for listening to a busy extension's conversation.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—COS

Feature Guide References

1.7.3 Call Monitor

◆ **Call Pickup by DSS**

Enables the authorization for using a DSS button to pick up a call to a specified extension.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.5 Wired Extension—Flexible Key [4-1-4]

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

4.10.12 Portable Station—Flexible Key [4-2-3]

4.10.16 DSS Console—Flexible Key [4-3-2]

Feature Guide References

1.4.1.3 Call Pickup

Options

The use of features related to extension settings can be programmed for each COS.

◆ COS Name

Specifies the name of the COS.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ Time Service Switch

Enables the authorization to switch time modes manually.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.8.8 Time Service—Week Table [2-5-1]

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

Feature Guide References

2.2.4 Time Service

◆ Executive Busy Override Deny

Enables the authorization to prevent other extensions from interrupting calls.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

Feature Guide References

2.2.1 Class of Service (COS)

◆ Group Forward Set

Enables setting call forwarding for calls to an incoming call distribution group.

Default

Enable-Group

Value Range

Disable: An extension cannot set call forwarding for any group.

Enable-All: An extension can set call forwarding for all groups.

Enable-Group: An extension can only set call forwarding for the group to which the extension belongs.

Programming Guide References

4.9.7 Incoming Call Distribution Group—Member [3-5-2]

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ Deny Remote Operation by Other Extension

Enables the authorization to use the Walking COS or Remote Extension Control feature from a remote location (inside, or outside the PBX using DISA).

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

Feature Guide References

1.8.4 Walking COS

1.25.5 Remote Extension Control by User

◆ Accept the Call from DISA

Enables the authorization to receive calls from DISA.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

4.11.4 DISA—Message Setting [5-3-2]

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ Accept Wireless XDP Parallel Set by Other PS

Enables the authorization to allow Wireless XDP Parallel Mode to be set by a PS.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

Feature Guide References

1.22.3 Wireless XDP Parallel Mode

◆ Programming Mode Level

Specifies the level of authorization for performing PT programming.

Default

PROG Only

Value Range

Disable: A PT user cannot perform any programming.

PROG Only: A PT user can perform only personal programming.

PROG and PROG **/*#: A PT user can perform personal and system programming.

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

Feature Guide References

2.3.2 PT Programming

◆ Manager

Specifies the authorization to use manager features.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

Feature Guide References

2.2.6 Manager Features

◆ External Relay Access

Enables the authorization to access external relays.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.11.5 External Relay [5-4]

Feature Guide References

1.15.8 External Relay Control

4.8.16 Class of Service—External Call Block [2-7-2]

Each COS can have different CO line groups available for making CO line calls, depending on the time mode (day/lunch/break/night). Select the desired time mode from the list.

◆ Outgoing Trunk Group 1–64

Specifies the available CO line groups.

Default

All Trunk groups: Non Block

Value Range

Block, Non Block

Programming Guide References

4.8.8 Time Service—Week Table [2-5-1]

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

4.16.1 CO Line Setting [10-1]

Feature Guide References

1.5.5.3 CO Line Access

4.8.17 Class of Service—Internal Call Block [2-7-3]

Internal Call Block determines the restrictions placed on making intercom calls. The extensions, incoming call distribution groups, and doorphones belonging to a certain COS can be programmed to not receive intercom calls from those belonging to a certain COS.

◆ COS Number of the Extension Which Receive the Call from Other Extension 1–64

Specifies the COS combination that blocks intercom calls.

Default

All extensions: Non Block

Value Range

Block, Non Block

Programming Guide References

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]—Main—COS

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—COS

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—COS

4.11.1 Doorphone [5-1]—COS

Feature Guide References

1.1.2.2 Internal Call Block

4.8.18 Ring Tone Patterns—Call from CO [2-8-1]

Different ring tone patterns can be selected for incoming CO line calls depending on the CO line groups the calls come through. A maximum of 8 Ring Tone Pattern Tables can be programmed, and any pattern table can be selected for use by an extension.

◆ Ring Tone Pattern Table 1–8

Specifies the ring tone pattern for incoming CO line calls.

Default

Single

Value Range

Single, Double, Triple

Programming Guide References

4.16.1 CO Line Setting [10-1]—Trunk Group Number

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—Ring Pattern Table

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—Ring Pattern Table

Feature Guide References

1.1.3.2 Ring Tone Pattern Selection

4.8.19 Ring Tone Patterns—Call from Doorphone [2-8-2]

Different ring tone patterns can be selected for incoming doorphone calls depending on the doorphone ports the calls come through. A maximum of 8 Ring Tone Pattern Tables can be programmed, and any pattern table can be selected for use by an extension.

◆ Ring Tone Pattern Table 1–8

Specifies the ring tone pattern for incoming doorphone calls.

Default

Triple

Value Range

Single, Double, Triple, S-Double

Programming Guide References

- 4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—Ring Pattern Table
- 4.10.9 Portable Station—Extension Settings [4-2-1]—Main—Ring Pattern Table
- 4.11.1 Doorphone [5-1]

Feature Guide References

- 1.1.3.2 Ring Tone Pattern Selection

4.8.20 Ring Tone Patterns—Call from Others [2-8-3]

Different ring tone patterns can be selected for incoming intercom calls and ringing triggered by certain PBX features (Timed Reminder, Call Back, and Live Call Screening). A maximum of 8 Ring Tone Pattern Tables can be programmed, and any pattern table can be selected for use by an extension.

◆ Extension—Ring Tone Pattern Table 1–8

Specifies the ring tone pattern for incoming intercom calls.

Default

Double

Value Range

Single, Double, Triple

Programming Guide References

- 4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—Ring Pattern Table
- 4.10.9 Portable Station—Extension Settings [4-2-1]—Main—Ring Pattern Table

Feature Guide References

- 1.1.3.2 Ring Tone Pattern Selection

◆ Timed Reminder—Ring Tone Pattern Table 1–8

Specifies the ring tone pattern for alarm ringing by Timed Reminder.

Default

Triple

Value Range

Single, Double, Triple

Programming Guide References

- 4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—Ring Pattern Table
- 4.10.9 Portable Station—Extension Settings [4-2-1]—Main—Ring Pattern Table

Feature Guide References

- 1.1.3.2 Ring Tone Pattern Selection

◆ **Call Back—Ring Tone Pattern Table 1–8**

Specifies the ring tone pattern for callback ringing by Automatic Callback Busy.

Default

S-Double

Value Range

Single, Double, Triple, S-Double

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—Ring Pattern Table

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—Ring Pattern Table

Feature Guide References

1.1.3.2 Ring Tone Pattern Selection

◆ **Live Call Screening—Ring Tone Pattern Table 1–8**

Specifies the ring tone pattern for alarm ringing by LCS.

Default

Triple

Value Range

Single, Double, Triple

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—Ring Pattern Table

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—Ring Pattern Table

Feature Guide References

1.1.3.2 Ring Tone Pattern Selection

◆ **External Sensor**

Specifies the ring tone pattern for calls from an external sensor.

Default

Triple

Value Range

Single, Double, Triple, Option 1, Option 2

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—Ring Pattern Table

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—Ring Pattern Table

Feature Guide References

1.15.7 External Sensor

4.8.21 System Options—Option 1 [2-9-1]

Various system settings can be programmed.

◆ Time Display (12H/24H)

Selects the time format shown on the displays of extensions. The time display format assigned here applies when setting time for the Timed Reminder.

Default

12H

Value Range

12H, 24H

Programming Guide References

None

Feature Guide References

1.25.4 Timed Reminder

◆ Date Display

Selects the order month and date are shown on the displays of extensions.

Default

Month-Date

Value Range

Date-Month, Month-Date

Feature Guide References

None

◆ Password / PIN Display Mode

Selects to hide or show passwords or PINs (Personal Identification Number) on the displays of extensions while entering them.

Default

Hide

Value Range

Display, Hide

Feature Guide References

None

◆ LED Indication - FWD

Selects the light pattern of the FWD/DND button while the FWD feature is activated.

Default

Flash

Value Range

On (Solid): Red on

Flash: Slow red flashing

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1.1 Call Forwarding (FWD)/Do Not Disturb (DND)—OVERVIEW

◆ LED Indication - DND

Selects the light pattern of the FWD/DND button while the DND feature is activated.

Default

On (Solid)

Value Range

On (Solid): Red on

Flash: Slow red flashing

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1.1 Call Forwarding (FWD)/Do Not Disturb (DND)—OVERVIEW

◆ Off Hook Monitor for KX-T74xx/T75xx/T76xx

Enables the use of Off-hook Monitor using KX-T7400 series, KX-T7500 series, or KX-T7600 series telephones.

Default

Enable

Value Range

Disable: The PT user's voice is sent through the handsfree microphone. The other party's voice is heard through the hands-free speaker.

Enable: The PT user's voice is sent through the handset microphone. The other party's voice is heard through both the hands-free speaker and handset.

Programming Guide References

None

Feature Guide References

1.10.2 Off-hook Monitor

◆ SCO button operation during CO conversation

Selects the function of the S-CO button while there is an ongoing CO line call.

Default

Privacy release

Value Range

Privacy release, LCD switch

Programming Guide References

None

Feature Guide References

1.13.1.3 Privacy Release

◆ Ringing Time before Automatic Answer for Call from CO

Specifies the number of times a PT in Hands-free Answerback mode will ring before a conversation is established automatically when it receives a call from a CO line.

Default

1 Ring

Value Range

0 Ring, 1 Ring, 2 Rings, 3 Rings

Programming Guide References

None

Feature Guide References

1.4.1.4 Hands-free Answerback

◆ JOG Dial Speed

Selects the speed at which items scroll on the display by rotating the Jog Dial.

Default

Normal

Value Range

Normal, High Speed

Feature Guide References

None

◆ **PT Ring Off Setting**

Enables the ring off setting for PT.

Default

Enable

Value Range

Disable, Enable

Feature Guide References

None

◆ **FWD/DND press mode on the idle status**

Selects the function of the FWD/DND button (fixed button) when it is pressed in idle status. (A FWD/DND button customized on a flexible button is always in FWD/DND Cycle Switch mode, and the mode cannot be changed.)

Default

FWD/DND Cycle Switch Mode

Value Range

FWD/DND Setting Mode: Enter programming mode for the FWD/DND setting.

FWD/DND Cycle Switch Mode: Switch the FWD on/DND on/Off mode instead of entering the programming mode for the FWD/DND setting. (When there are separate FWD/DND settings for calls from CO lines and calls from extensions, mode switching cannot be performed.)

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1.1 Call Forwarding (FWD)/Do Not Disturb (DND)—OVERVIEW

◆ **System Feature Access Menu 1–8**

Specifies the System Feature Access Menu (1–8) shown on the display of an extension.

Default

System Feature Access Menu 1: Call Back Cancel
 System Feature Access Menu 2: Call Pickup Direct
 System Feature Access Menu 3: Call Pickup Group
 System Feature Access Menu 4: Doorphone Call
 System Feature Access Menu 5: Door Open
 System Feature Access Menu 6: External BGM
 System Feature Access Menu 7: Paging
 System Feature Access Menu 8: None

Value Range

None, Call Back Cancel, Call Pickup Direct, Call Pickup Group, Doorphone Call, Door Open, Relay ON, External BGM, Paging

Feature Guide References

None

4.8.22 System Options—Option 2 [2-9-2]

Various system settings can be programmed.

◆ Paging for DND Extension

Specifies whether the extension can receive paging when in DND mode.

Default

Do Not Page

Value Range

Do Not Page, Page

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]
 4.10.11 Portable Station—FWD/DND [4-2-2]
 4.9.5 Paging Group [3-4]

Feature Guide References

1.14.1 Paging

◆ Automatic Hold by ICM / CO / G-DN button

Selects to disconnect or hold a call when INTERCOM, CO, or G-DN button is pressed while having a conversation.

Default

Disconnect

Value Range

Disconnect, Hold

Programming Guide References

4.10.5 Wired Extension—Flexible Key [4-1-4]

4.10.12 Portable Station—Flexible Key [4-2-3]

Feature Guide References

1.12.1 Call Hold

◆ **Call Hold Mode**

Selects which extension can retrieve a held call or a call that is transferred by Call Transfer without Announcement feature.

Default

Hold

Value Range

Hold: Any extension can retrieve a held call.

Exclusive Hold: Only the holding extension can retrieve a held call.

Programming Guide References

None

Feature Guide References

1.12.1 Call Hold

◆ **SLT Hold Mode**

Selects how to hold a line and transfer a call with an SLT.

Default

Mode 2

Value Range

Mode 1, Mode 2, Mode 3, Mode 4

Programming Guide References

None

Feature Guide References

1.12.1 Call Hold

◆ **SLT Message Waiting Lamp Pattern**

Specifies the Message Waiting Lamp light pattern of SLT.

Default

11

Value Range

1–12

Programming Guide References

None

Feature Guide References

1.17.1 Message Waiting

◆ System CODEC

Selects the CODEC type for DPT and PS.

Default

Mu-Law

Value Range

A-Law, Mu-Law

Feature Guide References

None

◆ Network CODEC

Selects the CODEC type for the ISDN or T1 line.

Default

Mu-Law

Value Range

A-Law, Mu-Law

Feature Guide References

None

◆ Extension Clear : Call Waiting

Specifies whether the Call Waiting setting is cleared when the Extension Feature Clear feature is performed.

Default

Clear

Value Range

No Clear, Clear

Programming Guide References

None

Feature Guide References

1.25.2 Extension Feature Clear

◆ **Extension Clear : FWD/DND**

Specifies whether the FWD/DND setting is cleared when the Extension Feature Clear feature is performed.

Default

Clear

Value Range

No Clear, Clear

Programming Guide References

None

Feature Guide References

1.25.2 Extension Feature Clear

◆ **Extension Clear : Hot Line (Pickup Dial)**

Specifies whether the Hot Line setting is cleared when the Extension Feature Clear feature is performed.

Default

Clear

Value Range

No Clear, Clear

Programming Guide References

None

Feature Guide References

1.25.2 Extension Feature Clear

◆ **Automatic Redial when the called party does not answer (ISDN)**

Selects to cancel or retry the Automatic Redial to the ISDN line when the called party does not answer within a preprogrammed time period.

Default

Retry

Value Range

Disconnect, Retry

Programming Guide References

4.8.5 Timers & Counters—CO / Extension [2-4-1]—Automatic Redial : Waiting Time before the Called Party Answers

Feature Guide References

1.6.1.3 Last Number Redial

◆ Extension - CO Call Limitation

Selects whether the time limit for extension-to-CO line calls applies to outgoing calls only or for both outgoing and incoming calls. COS determines the use of this feature, and the length of time limit can be assigned on a CO line group basis.

Default

for Outgoing

Value Range

for Outgoing, for Outgoing + Incoming

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]—TRS / CO—Extension-CO Line Call Duration Limit

4.9.1 Trunk Group—TRG Settings [3-1-1]—Main—Extension-CO DurationTime

Feature Guide References

1.10.8 CO Line Call Limitation

◆ Save the Dial as Redial after Called Party's Answer

Specifies whether the number of the connected party to use for redialing is saved.

Default

No

Value Range

No, Yes

Programming Guide References

None

Feature Guide References

1.6.1.3 Last Number Redial

◆ SLT Ringing for Make Call (CTI)

Specifies whether to ring the SLT when a call has been made from CTI instead of an SLT.

Default

No Ring

Value Range

Ring, No Ring

Feature Guide References

None

◆ **ISDN En bloc Dial End Code "#"**

Specifies whether to use "#" as an end code while dialing to the ISDN line; if used as the end code, "#" will not be sent to the ISDN line.

Default

Yes

Value Range

No, Yes

Programming Guide References

4.7.19 PRI Port [1-6]—CO Setting—ISDN In / Out Call Type

Feature Guide References

1.19.1.1 Integrated Services Digital Network (ISDN)—OVERVIEW

◆ **Automatic Time Adjustment by ISDN or Caller ID (FSK) Service**

Enables the PBX to adjust its clock everyday according to the time information that the network provides with the first call after 3:05 AM.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

2.3.4 Automatic Time Adjustment

◆ **Whisper OHCA except for KX-T74xx/T75xx/T76xx**

Enables the use of Whisper-OHCA to telephones other than KX-T7400 series, KX-T7500 series, or KX-T7600 series DPTs and SLTs.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.7.4.4 Whisper OHCA

4.8.23 System Options—Option 3 [2-9-3]

Various system settings can be programmed.

◆ Confirmation Tone 1 : Press Doorphone Button / Receive Voice Call

Enables the PBX to send Confirmation Tone 1. Confirmation Tone 1 is heard from a doorphone when the doorphone button is pressed, or from a PT when it receives a call in voice-calling mode.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.26.2 Confirmation Tone

◆ Confirmation Tone 2 : Paged / Auto Answer

Enables the PBX to send Confirmation Tone 2. Confirmation Tone 2 is heard from a PT when it receives paging or a call in Hands-free Answerback mode.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.26.2 Confirmation Tone

◆ Confirmation Tone 3-1 : Start Talking after Making Call

Enables the PBX to send Confirmation Tone 3-1. Confirmation Tone 3-1 is heard from an extension when, for example, it pages another extension.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.26.2 Confirmation Tone

◆ Confirmation Tone 3-2 : Start Talking after Answering Call

Enables the PBX to send Confirmation Tone 3-2. Confirmation Tone 3-2 is heard from an extension when answers a call by, for example, the Call Pickup feature.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.26.2 Confirmation Tone

◆ Confirmation Tone 4-1 : Start Conference

Enables the PBX to send Confirmation Tone 4-1. Confirmation Tone 4-1 is heard from an extension when a new party joins a conference call.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.26.2 Confirmation Tone

◆ Confirmation Tone 4-2 : Finish Conference

Enables the PBX to send Confirmation Tone 4-2. Confirmation Tone 4-2 is heard from an extension when a party leaves a conference call.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.26.2 Confirmation Tone

◆ Confirmation Tone 5 : Hold

Enables the PBX to send Confirmation Tone 5. Confirmation Tone 5 is heard from an extension when it holds a call.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.26.2 Confirmation Tone

◆ Distinctive Dial Tone

Enables the PBX to send dial tones at different frequencies depending on the setting of an extension.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.26.1 Dial Tone

◆ **Dial Tone Type for Extension**

Selects the dial tone the PBX sends to the extensions to inform of the features activated on them.

Default

Type A

Value Range

Type A, Type B

Programming Guide References

None

Feature Guide References

1.26.1 Dial Tone

◆ **Dial Tone Type for ARS**

Selects the dial tone the PBX sends to the caller instead of the network when a call is made by the ARS feature, or by ISDN En Bloc dialing.

Default

Type B

Value Range

Type A, Type B

Programming Guide References

4.7.19 PRI Port [1-6]

4.14.1 System Setting [8-1]

Feature Guide References

1.26.1 Dial Tone

◆ **Echo Cancel Control for Conference**

Enables the use of the ECHO card (mounted on the OPB3 card) for conference calls.

Default

Enable

Value Range

Disable, Enable

Feature Guide References

None

◆ Echo Cancel Control for CO to CO

Enables the use of the ECHO card (mounted on the OPB3 card) for CO-to-CO line calls.

Default

Enable

Value Range

Disable, Enable

Feature Guide References

None

◆ Echo Cancel Control for Extension to Digital Line

Enables the use of the ECHO card (mounted on the OPB3 card) for extension-to-ISDN/TIE line calls.

Default

Disable

Value Range

Disable, Enable

Feature Guide References

None

◆ Echo Cancel Control for Extension to Analog Line

Enables the use of the ECHO card (mounted on the OPB3 card) for extension-to-analog CO line calls.

Default

Disable

Value Range

Disable, Enable

Feature Guide References

None

◆ Timed Reminder Message - Day, Lunch, Break, Night

Specifies the prerecorded message to play when answering the Timed Reminder in each time mode.

Default

None

Value Range

None, 1–64

Programming Guide References

4.11.4 DISA—Message Setting [5-3-2]

Feature Guide References

1.25.4 Timed Reminder

◆ Transfer to busy extension without BSS operation

Enables a transferred call to queue when the transfer destination is busy.

Default

Disable

Value Range

Disable: The call is not transferred. (If the transfer destination sets call waiting notification feature, it is possible to inform of transferring a call.)

Enable: The transferred call queues to be answered for a time period specified in **Transfer Recall Timer in Timers & Counters—CO / Extension [2-4-1]**.

Programming Guide References

4.8.5 Timers & Counters—CO / Extension [2-4-1]—Transfer Recall Timer

Feature Guide References

None

4.8.24 System Options—Option 4 [2-9-4]

Various system settings can be programmed.

It is possible to clear the master CS information (Master CS Port and Radio System ID) by following the procedure below in the batch mode:

1. Click **Clear Master CS**.
2. Click **OK**. To abort the procedure, click **Cancel**.

If the system data is downloaded to the PBX after the master CS information has been cleared, it is necessary to register all PSs again in the interactive mode. Master CS information will be assigned automatically when a CS is connected to the PBX. Without the Radio System ID, PSs cannot be registered.

◆ Master CS Port

Indicates the location of the master CS port (reference only).

Default

Current slot number-Master CS port number

Value Range

Not applicable.

Feature Guide References

None

◆ Radio System ID

Indicates the radio system ID used to register a PS (reference only).

Default

Radio system ID

Value Range

Not applicable.

Feature Guide References

None

◆ Call Log by Redial Button

Enables the PBX to show Outgoing Call Log on a display of a DPT when the REDIAL button is pressed while it is on hook.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.6.1.3 Last Number Redial

◆ Call Pickup by DSS Key for Direct Incoming Call

Specifies whether a DSS button will light up or flash when a call rings at the specified extension. To enable this setting, **DSS Key mode for Incoming call** on this screen must be set to **ON or Flash**.

Default

Enable

Value Range

Disable: The DSS button will light up when a call arrives, but pressing it will not pick up the call.

Enable: The DSS button will flash when a call arrives, and pressing it will pick up the call.

Programming Guide References

None

Feature Guide References

1.4.1.3 Call Pickup

◆ **Call Pickup by DSS Key for ICD Group Call**

Specifies whether a DSS button will light up or flash when a call rings at the specified incoming call distribution group.

To enable this setting, **DSS Key mode for Incoming call** on this screen must be set to **ON or Flash**.

Default

Disable

Value Range

Disable: The DSS button will light up when a call arrives, but pressing it will not pick up the call.

Enable: The DSS button will flash when a call arrives, and pressing it will pick up the call.

Programming Guide References

None

Feature Guide References

1.4.1.3 Call Pickup

◆ **DSS Key mode for Incoming call**

Enables the use of a DSS button to pick up an incoming call to another extension or an ICD group.

Default

OFF

Value Range

ON or Flash, OFF

Programming Guide References

None

Feature Guide References

1.4.1.3 Call Pickup

◆ **Minimum Digits for Caller ID from Public Network through Private Network**

Specifies the minimum length of Caller ID required for a call from a private network to be considered as a call from a public network.

Default

9

Value Range

0–15

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

◆ **Send CLIP of Held Party when Transfer**

Enables the transfer of the related CLIP information when a party on hold is transferred. When set to "Enable", the transfer destination will receive the original caller's CLIP information, not the information of the extension that performed the transfer.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

◆ **USB Serial Number**

Specifies the serial number assigned to this PBX's USB data transfers, used when multiple PBXs are connected via USB to one PC (for example, for CTI).

Default

1

Value Range

1–8

Feature Guide References

None

4.8.25 CTI [2-10]

Various CTI settings can be programmed.

◆ System status retry interval timer—For 3rd Party

Specifies the length of time between alive checks for Third Party Call Control CTI.

Default

60 s

Value Range

0–60 s

Programming Guide References

None

Feature Guide References

1.29.1 Computer Telephony Integration (CTI)

◆ System status retry interval timer—For 1st Party

Specifies the length of time between alive checks for First Party Call Control CTI.

Default

60 s

Value Range

0–60 s

Programming Guide References

None

Feature Guide References

1.29.1 Computer Telephony Integration (CTI)

◆ System status retry counter—For 3rd Party

Specifies the number of times the alive check is repeated for Third Party Call Control CTI.

Default

5

Value Range

0–10

Programming Guide References

None

Feature Guide References

1.29.1 Computer Telephony Integration (CTI)

◆ System status retry counter—For 1st Party

Specifies the number of times the alive check is repeated for First Party Call Control CTI.

Default

5

Value Range

0–10

Programming Guide References

None

Feature Guide References

1.29.1 Computer Telephony Integration (CTI)

◆ CDR retry interval timer—For 3rd Party

Specifies the length of time between alive checks of CDR (Call Detail Recording) for Third Party Call Control CTI.

Default

5 s

Value Range

0–60 s

Programming Guide References

None

Feature Guide References

1.29.1 Computer Telephony Integration (CTI)

◆ CDR retry interval timer—For 1st Party

Specifies the length of time between alive checks of CDR for First Party Call Control CTI.

Default

5 s

Value Range

0–60 s

Programming Guide References

None

Feature Guide References

1.29.1 Computer Telephony Integration (CTI)

◆ CDR retry counter—For 3rd Party

Specifies the number of times the alive check of CDR is repeated for Third Party Call Control CTI. When the programmed number of retry times is exhausted, the association is released automatically.

Default

1

Value Range

0–10

Programming Guide References

None

Feature Guide References

1.29.1 Computer Telephony Integration (CTI)

◆ CDR retry counter—For 1st Party

Specifies the number of times the alive check of CDR is repeated for First Party Call Control CTI. When the programmed number of retry times is exhausted, the association is released automatically.

Default

1

Value Range

0–10

Programming Guide References

None

Feature Guide References

1.29.1 Computer Telephony Integration (CTI)

4.8.26 Audio Gain—Paging/MOH [2-11-1]

Gain levels for the External Pager/External BGM ports can be programmed.

◆ EPG1 (External Pager 1)

Specifies the paging volume on the External Pager port 1.

Default

3 dB

Value Range

-15–15 dB

Programming Guide References

4.9.5 Paging Group [3-4]

Feature Guide References

1.14.1 Paging

◆ EPG2 (External Pager 2)

Specifies the paging volume on the External Pager port 2.

Default

3 dB

Value Range

-15–15 dB

Programming Guide References

4.9.5 Paging Group [3-4]

Feature Guide References

1.14.1 Paging

◆ MOH1 (Music On Hold 1)

Specifies the music volume on the External BGM port 1.

Default

0 dB

Value Range

-11–11 dB

Programming Guide References

4.8.4 BGM / Music on Hold [2-3]

Feature Guide References

1.15.4 Background Music (BGM)

◆ MOH2 (Music On Hold 2)

Specifies the music volume on the External BGM port 2.

Default

0 dB

Value Range

-11–11 dB

Programming Guide References

4.8.4 BGM / Music on Hold [2-3]

Feature Guide References

1.15.4 Background Music (BGM)

◆ **Paging Level from PT Speaker**

Specifies the paging volume from PTs.

Default

0 dB

Value Range

-15dB, -12dB, -9dB, -6dB, -3dB, 0dB, 3dB, 6dB

Programming Guide References

4.9.5 Paging Group [3-4]

Feature Guide References

1.14.1 Paging

4.8.27 Extension Caller ID [2-12]

Various settings for extension Caller ID can be programmed.

◆ **Extension Caller ID Modulation Type**

Specifies the modulation frequency to be used when sending Caller ID information to an SLT.

Default

Bell202(Bellcore)

Value Range

V.23(ETSI), Bell202(Bellcore)

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

◆ Channel Seizure Signal Bits

Specifies the number of seizure bits to send when sending Caller ID information to an SLT.

Default

300 bits

Value Range

$10 \times n$ ($n=3-40$) bits

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

◆ Mark Signal Bits

Specifies the number of mark bits to send when sending Caller ID information to an SLT.

Default

180 bits

Value Range

$10 \times n$ ($n=3-40$) bits

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

◆ Channel Seizure Wait Time

Specifies the length of time the PBX waits before starting to send the seizure signal following the first ring when sending Caller ID information to an SLT.

Default

512 ms

Value Range

$64 \times n$ ($n=5-35$) ms

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

◆ Caller ID Signal Type

Specifies the signal type of modulation to be used when sending Caller ID information to an SLT.

Default

FSK

Value Range

FSK

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

◆ Additional Local Trunk Access Code to Extension Caller ID

Enables the PBX to automatically add a Trunk Access number to the received telephone number when sending a Caller ID number of an incoming CO line call to an SLT.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

◆ Send Date & Time to Extension Caller ID

Enables the PBX to send date and time of an incoming call when sending Caller ID information to an SLT.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

◆ Send Name to Extension Caller ID

Enables the PBX to send caller's name of an incoming call when sending Caller ID information to an SLT.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

◆ Send Long Distance to Extension Caller ID

Enables the PBX to send a call qualifier (Long Distance) when it is received from a CO line when sending Caller ID information to an SLT.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

4.8.28 IP Extension Settings [2-13]

IP-PT network data transmission settings can be programmed. To activate any changes made to settings on this screen, it is necessary to set all installed IP-EXT cards to OUS, then back to INS.

◆ Gateway Address

Specifies the default gateway address of the network for IP-PTs.

Default

0.0.0.0

Value Range

0.0.0.0–223.255.255.255

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ Voice(RTP) Port No. (IP-EXT Card)

Specifies the UDP port used by the IP-EXT card to transmit and receive RTP (Realtime Transfer Protocol) data. This must be changed if another network application is using the same port.

For voice communications, an IP-EXT card uses 64 contiguous UDP ports, starting from the port number specified here.

Default

8000

Value Range

1024–65472

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

◆ Voice(RTP) Port No. (IP-PT)

Specifies the UDP port used to transmit and receive RTP (Realtime Transfer Protocol) data on the IP-PT side. This must be changed if another network application is using the same port.

For voice communications, an IP-PT uses 64 contiguous UDP ports, starting from the port number specified here.

Default

8000

Value Range

1024–65472

Programming Guide References

None

Feature Guide References

1.28.1 IP Proprietary Telephone (IP-PT)

4.9 Groups [3]

4.9.1 Trunk Group—TRG Settings [3-1-1]

CO lines are grouped into CO line groups. The settings of the COline groups determine the settings of their CO lines. A maximum of 64 CO linegroups can be programmed.

Main

◆ Group Name

Specifies the name of the CO line group for programming reference. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

4.16.1 CO Line Setting [10-1]

Feature Guide References

2.2.2 Group

◆ COS

Specifies the COS of the CO line group that applies when making a call from a CO line to another CO line by TIE Line Service.

Default

1

Value Range

1–64

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.16.1 CO Line Setting [10-1]

Feature Guide References

1.27.1.2 PBX Code Method (Access with PBX Code)

1.27.1.3 Extension Number Method (Access without PBX Code)

2.2.2 Group

◆ Line Hunting Order

Specifies the CO line hunting sequence for the CO line group. The hunting sequence can be programmed to start from the lowest or highest numbered CO lines, or to rotate uniformly among all CO lines.

Default

High -> Low

Value Range

High -> Low, Low -> High, Rotation

Programming Guide References

4.16.1 CO Line Setting [10-1]

Feature Guide References

1.5.5.3 CO Line Access

2.2.2 Group

◆ DISA Tone Detection—Silence

Enables the disconnection of a DISA-originated CO-to-CO line call by silence detection.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.11.3 DISA—System Setting [5-3-1]

4.16.1 CO Line Setting [10-1]

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

2.2.2 Group

◆ DISA Tone Detection—Continuous

Enables the disconnection of a DISA-originated CO-to-CO line call by continuous signal detection.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.11.3 DISA—System Setting [5-3-1]

4.16.1 CO Line Setting [10-1]

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

2.2.2 Group

◆ **DISA Tone Detection—Cyclic**

Enables the disconnection of a DISA-originated CO-to-CO line call by cyclic signal detection.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.11.3 DISA—System Setting [5-3-1]

4.16.1 CO Line Setting [10-1]

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

2.2.2 Group

◆ **CO-CO Duration Time**

Specifies the length of time a CO-to-CO line call can be maintained before being disconnected.

Default

10 min

Value Range

None, 1–60 min

Programming Guide References

4.16.1 CO Line Setting [10-1]

Feature Guide References

1.10.8 CO Line Call Limitation

2.2.2 Group

◆ **Extension-CO Duration Time**

Specifies the length of time an extension-to-CO line call can be maintained before being disconnected.

Default

10 min

Value Range

None, 1–60 min

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.8.22 System Options—Option 2 [2-9-2]

4.16.1 CO Line Setting [10-1]

Feature Guide References

1.10.8 CO Line Call Limitation

2.2.2 Group

◆ **Caller ID Modify Table**

Specifies the table to be used for modifying the caller information(telephone number).

Default

1

Value Range

1–4

Programming Guide References

4.12.2 Speed Dialing & Caller ID—Caller ID Modification [6-1-2]

4.16.1 CO Line Setting [10-1]

Feature Guide References

1.16.1 Caller ID

2.2.2 Group

◆ **Dialing Plan Table**

Specifies the table to be used for en-bloc dialing.

Default

1

Value Range

1–4

Programming Guide References

4.12.9 Dialing Plan [6-7]

Feature Guide References

None

Intercept

◆ Group Name

Specifies the name of the CO line group for programming reference. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

4.16.1 CO Line Setting [10-1]

Feature Guide References

2.2.2 Group

◆ Intercept Destination—Day, Lunch, Break, Night

Specifies the intercept routing destination of unanswered calls (whose original destination is a floating extension number of a PS Ring Group, VM Group, External Pager [TAFAS], or DISA) in each time mode.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

4.8.8 Time Service—Week Table [2-5-1]

4.16.1 CO Line Setting [10-1]

Feature Guide References

1.1.1.5 Intercept Routing

2.2.2 Group

Host PBX Access Code

◆ Group Name

Specifies the name of the CO line group for programming reference. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

4.16.1 CO Line Setting [10-1]

Feature Guide References

2.2.2 Group

◆ **Host PBX Access Code1–10**

Specifies the feature number used to access a CO line from the hostPBX.

Default

Not stored.

Value Range

Max. 10 digits (consisting of 0–9, *, and #)

Programming Guide References

4.16.1 CO Line Setting [10-1]

Feature Guide References

1.5.4.6 Host PBX Access Code (Access Code to the Telephone Company from a Host PBX)

2.2.2 Group

4.9.2 Trunk Group—Local Access Priority [3-1-2]

CO line groups can be assigned a priority for Idle Line Access. When making a CO line call by Idle Line Access, the PBX will search CO line groups for an idle CO line according to a priority assigned here.

◆ **Trunk Group No. & Name**

Specifies the CO line group assigned to the corresponding priority level.

Default

Priority 1–64 = Trunk Group No. 1–64

Value Range

Trunk Group No. 1–64

Programming Guide References

4.16.1 CO Line Setting [10-1]

Feature Guide References

1.5.5.3 CO Line Access

4.9.3 Extension Group [3-2]

Extensions can be assigned to a tenant according to their extension group. An extension group can belong to only one tenant. However, one extension group can belong to several call pickup groups and several paging groups. A maximum of 8 tenants can be programmed.

◆ Extension Group Name

Specifies the name of the extension group. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

4.9.4 Call Pickup Group [3-3]

4.9.5 Paging Group [3-4]

4.10.1 Wired Extension—Extension Settings [4-1-1]—Main—Extension Group

4.10.9 Portable Station—Extension Settings [4-2-1]—Main—Extension Group

Feature Guide References

2.2.2 Group

◆ Tenant Number

Specifies the tenant to which the extension group belongs.

Default

1

Value Range

1–8

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

2.2.2 Group

2.2.3 Tenant Service

4.9.4 Call Pickup Group [3-3]

Extensions can be assigned to a call pickup group according to their extension group. One extension group can belong to multiple call pickup groups. A maximum of 64 call pickup groups can be programmed.

Extension Group 1-16

◆ Call Pickup Group Name

Specifies the name of the call pickup group.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.4.1.3 Call Pickup

2.2.2 Group

◆ Extension Group 1–16

Specifies whether the extension group belongs to the corresponding pickup group.

Default

Extension Group 1–16: ON for the same-numbered call pickup group and group 33–group 64; OFF for other call pickup groups

Value Range

ON, OFF

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.4.1.3 Call Pickup

2.2.2 Group

Extension Group 17-32

◆ Call Pickup Group Name

Specifies the name of the call pickup group.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.4.1.3 Call Pickup

2.2.2 Group

◆ Extension Group 17–32

Specifies whether the extension group belongs to the corresponding pickup group.

Default

Extension Group 17–32: ON for the same-numbered call pickup group and group 33–group 64; OFF for other call pickup groups

Value Range

ON, OFF

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.4.1.3 Call Pickup

2.2.2 Group

4.9.5 Paging Group [3-4]

Extensions can be assigned to a paging group according to their extension group. External pagers can also be assigned to a paging group. One extension group or external pager can belong to multiple paging groups. A maximum of 32 paging groups can be programmed.

Extension Group 1-16

◆ Paging Group Name

Specifies the name of the paging group.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.14.1 Paging

2.2.2 Group

◆ Extension Group 1–16

Specifies whether the extension group belongs to the corresponding paging group.

Default

Extension Group 1–16: ON for the same-numbered paging group and group 32; OFF for other paging groups

Value Range

ON, OFF

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.14.1 Paging

2.2.2 Group

Extension Group 17-32

◆ Paging Group Name

Specifies the name of the paging group.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.14.1 Paging

2.2.2 Group

◆ **Extension Group 17–32**

Specifies whether the extension group belongs to the corresponding paging group.

Default

Extension Group 17–32: ON for the same-numbered paging group and group 32; OFF for other paging groups

Value Range

ON, OFF

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.14.1 Paging

2.2.2 Group

External Pager◆ **Paging Group Name**

Specifies the name of the paging group.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.14.1 Paging

2.2.2 Group

◆ External Pager 1–2

Specifies whether the external pager belongs to the corresponding paging group.

Default

External Pager 1: ON for all paging groups

External Pager 2: ON for all paging groups

Value Range

ON, OFF

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.14.1 Paging

2.2.2 Group

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]

Extensions can be assigned as members of an incoming call distribution group. Calls to an incoming call distribution group are distributed to its member extensions as programmed. A maximum of 64 incoming call distribution groups can be programmed.

Main

◆ Floating Extension Number

Specifies the floating extension number of the incoming call distribution group.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ Group Name

Specifies the name of the incoming call distribution group. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ Distribution Method

Selects the call distribution method for idle extensions of the incoming call distribution group.

Default

Ring

Value Range

Ring, UCD, Priority Hunting

Programming Guide References

None

Feature Guide References

1.2.2.2 Group Call Distribution

◆ Call Waiting Distribution

Selects the call waiting distribution method for busy extensions of the incoming call distribution group.

Default

Distribution

Value Range

All, Distribution

Programming Guide References

None

Feature Guide References

1.2.2.2 Group Call Distribution

◆ FWD Mode

Specifies whether the extension rings in FWD mode when a call comes in to the incoming call distribution group.

Default

Ring

Value Range

No Ring, Ring

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.2.2.2 Group Call Distribution

◆ DND Mode

Specifies whether the extension rings in DND mode when a call comes in to the incoming call distribution group.

Default

No Ring

Value Range

No Ring, Ring

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.2.2.2 Group Call Distribution

◆ Tenant Number

Specifies the tenant to which the incoming call distribution group belongs, to determine the Time Table and the audio source for the group. (The tenant number corresponds to the Time Table number.)

Default

1

Value Range

1–8

Programming Guide References

4.8.4 BGM / Music on Hold [2-3]

4.8.8 Time Service—Week Table [2-5-1]

4.12.8 Tenant [6-6]—Music on Hold

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ COS

Specifies the COS of the incoming call distribution group. Depending on the COS, calls from certain extensions are restricted as determined by the Internal Call Block feature. Also, when calls are forwarded or overflowed to a CO line, the TRS assigned for the COS of the incoming call distribution group applies.

Default

1

Value Range

1–64

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

4.8.16 Class of Service—External Call Block [2-7-2]

4.8.17 Class of Service—Internal Call Block [2-7-3]

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ CLIP on G-DN Button

Specifies the CLIP number sent to the network when making calls using the G-DN button.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

Overflow Queuing Busy

◆ Floating Extension Number

Specifies the floating extension number of the incoming call distribution group.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ Group Name

Specifies the name of the incoming call distribution group. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ Queuing Busy—Destination—Day, Lunch, Break, Night

Specifies the overflow destination of calls that cannot be queued in each time mode.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

4.8.8 Time Service—Week Table [2-5-1]

Feature Guide References

1.2.2.5 Overflow Feature

◆ Queuing Busy—Queuing Call Capacity

Specifies the number of calls that can wait in a queue.

Default

30

Value Range

None, 1–30

Programming Guide References

None

Feature Guide References

1.2.2.3 Queuing Feature

Overflow No Answer**◆ Floating Extension Number**

Specifies the floating extension number of the incoming call distribution group.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ Group Name

Specifies the name of the incoming call distribution group. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ **Time out & Manual Queue Redirection—Destination—Day, Lunch, Break, Night**

Specifies the overflow destination of queued calls when they are not answered or are redirected by Manual Queue Redirection in each time mode.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

4.8.8 Time Service—Week Table [2-5-1]

Feature Guide References

1.2.2.5 Overflow Feature

◆ **Time out & Manual Queue Redirection—Overflow Time**

Specifies the length of time calls wait in a queue before they are redirected to the overflow destination.

Default

None

Value Range

None, 10 × n (n=1–125) s

Programming Guide References

None

Feature Guide References

1.2.2.5 Overflow Feature

◆ **Hurry-up Level**

Specifies the number of calls to hold in the queue before prompting the Manual Queue Redirection by flashing the Hurry-up button.

Default

None

Value Range

None, 1–30

Programming Guide References

4.10.5 Wired Extension—Flexible Key [4-1-4]

4.10.12 Portable Station—Flexible Key [4-2-3]

Feature Guide References

1.2.2.3 Queuing Feature

Queuing Time Table**◆ Floating Extension Number**

Specifies the floating extension number of the incoming call distribution group.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ Group Name

Specifies the name of the incoming call distribution group. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ Queuing Time Table—Day, Lunch, Break, Night

Specifies the Queuing Time Table to be used in each time mode.

Default

None

Value Range

None, Table 1–Table 64

Programming Guide References

4.8.8 Time Service—Week Table [2-5-1]

Feature Guide References

1.2.2.3 Queuing Feature

◆ **Queuing Time Table When Extension Ringing**

Enables the PBX to play messages/BGM to the caller according to the Queuing Time Table, when the call arrives at an extension without being queued or after being queued.

Default

Enable

Value Range

Disable (Ringback Tone), Enable

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

Miscellaneous

◆ **Floating Extension Number**

Specifies the floating extension number of the incoming call distribution group.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ Group Name

Specifies the name of the incoming call distribution group. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ Extension No Answer Time

Specifies the length of time a call queues at an extension before it is redirected to the next member extension of the incoming call distribution group in UCD or Priority Hunting distribution method.

Default

None

Value Range

None, 10 × n (n=1–15) s

Programming Guide References

None

Feature Guide References

1.2.2.2 Group Call Distribution

◆ Automatic Log-out

Specifies the number of consecutive unanswered calls before a member extension is automatically logged out from the incoming call distribution group.

Default

None

Value Range

None, 1–15

Programming Guide References

None

Feature Guide References

1.2.2.6 Log-in/Log-out

◆ Maximum No. of Busy Extensions

Specifies the number of extensions that can accept calls at one time simultaneously in the incoming call distribution group.

Default

Max.

Value Range

Max: Call arrives at an idle extension.

1–32 : Call will not arrive at an idle extension when the number of busy extensions exceeds the assigned number.

Programming Guide References

None

Feature Guide References

1.2.2.2 Group Call Distribution

◆ Last Extension Log-out

Allows or prohibits the last extension logged-in to the incoming call distribution group to log-out.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.2.2.6 Log-in/Log-out

◆ VIP Call Mode

Enables the VIP Call mode to prioritize incoming call distribution groups.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.2.2.4 VIP Call

◆ Supervisor Extension Number

Specifies the extension number of the incoming call distribution group's supervisor. The supervisor can monitor and control the status of each member of the group using a 6-line display PT. The supervisor extension need not belong to the group.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.2.2.7 Supervisory Feature

◆ Programmed Mailbox No.

Specifies the VPS mailbox number of the incoming call distribution group. The mailbox number programmed here is to be used only by VM (DTMF) group.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

Group Log / Group FWD**◆ Floating Extension Number**

Specifies the floating extension number of the incoming call distribution group.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ **Group Name**

Specifies the name of the incoming call distribution group. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ **Incoming Call Log Memory**

Specifies the number of unanswered calls to the incoming call distribution group that can be logged in the call log memory.

Default

10

Value Range

0–100

Programming Guide References

None

Feature Guide References

1.16.2 Incoming Call Log

◆ **Group FWD for Call from CO—Setting**

Sets or cancels the FWD feature for incoming CO line calls directed to the incoming call distribution group.

Default

Off

Value Range

Off, On

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ **Group FWD for Call from CO—Destination**

Specifies the forward destination of incoming CO line calls directed to the incoming call distribution group.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ **Group FWD for Call from Extension—Setting**

Sets or cancels the FWD feature for incoming intercom calls directed to the incoming call distribution group.

Default

Off

Value Range

Off, On

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ **Group FWD for Call from Extension—Destination**

Specifies the forward destination of incoming intercom calls directed to the incoming call distribution group.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

None

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

4.9.7 Incoming Call Distribution Group—Member [3-5-2]

Each incoming call distribution group can have a maximum of 32 members (extensions) assigned to it, and each member can have its own Delayed Ringing and Wrap-up time settings. An extension can be a member of multiple incoming call distribution groups. Select the desired incoming call distribution group (1–64) from the **Incoming Call Distribution** list.

◆ **Extension No.**

Specifies the extension number of each member. In addition to the extension numbers of the PT, SLT, PS, and T1-OPX extensions, floating extension numbers of PS Ring groups can also be specified.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.9.14 PS Ring Group [3-9]

Feature Guide References

1.2.2.1 Incoming Call Distribution (ICD) Group Features—OVERVIEW

◆ **Delayed Ring**

Specifies the Delayed Ringing setting of each member. (Applicable when the call distribution method of the incoming call distribution group is set to **Ring**.)

Default

Immediate

Value Range

Immediate, 1–6 Rings, No Ring

Programming Guide References

None

Feature Guide References

1.2.2.2 Group Call Distribution

◆ **Wrap-up Time**

Specifies the length of time that must pass after completing a call before the member can accept another call.

Default

0 s

Value Range

$10 \times n$ ($n=0-300$) s

Programming Guide References

None

Feature Guide References

1.2.2.6 Log-in/Log-out

4.9.8 Incoming Call Distribution Group—Queuing Time Table [3-5-3]

A Queuing Time Table can contain up to 16 sequences which control how calls waiting in a queue are handled. A maximum of 64 Queuing Time Tables can be programmed.

◆ **Queuing Sequence—Sequence 01–16**

Specifies the command activated by the corresponding sequence.

Default

None

Value Range

None: Redirects the call to the next sequence

Overflow: Redirects the call to the overflow destination when there is no answer

Disconnect: Disconnects the line

Sequence 01–16: Redirects the call to a different sequence

OGM 01–64: Sends a certain OGM

Wait $5 \times n$ ($n=1-16$) s: If preceded by an OGM, plays the Music on Hold for the specified period of time; if not preceded by an OGM, sends a ringback tone for the specified period of time.

Programming Guide References

None

Feature Guide References

1.2.2.3 Queuing Feature

4.9.9 Extension Hunting Group [3-6]

If an extension within an idle extension hunting group is called when it is busy or in DND mode, the call can be redirected to another extension in the same hunting group, according to a preprogrammed hunting type. If there is no idle extension in the group, the call can then be redirected to the overflow destination, which can be different depending on the time mode (day/lunch/break/night). A maximum of 64 hunting groups can be programmed, each containing up to 16 extensions.

◆ Hunting Group Name

Specifies the name of the hunting group.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.2.1 Idle Extension Hunting

◆ Hunting Type

Specifies the hunting type for the hunting group.

Default

Circular

Value Range

Circular: Circulates until the call is answered or overflowed
Terminated: Terminates at the last extension

Programming Guide References

None

Feature Guide References

1.2.1 Idle Extension Hunting

◆ **Overflow—Day, Lunch, Break, Night**

Specifies the overflow destination of an unanswered call in each time mode.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, T [Transfer], [,] [Secret], P [Pause], and F [Flash])

Programming Guide References

None

Feature Guide References

1.2.1 Idle Extension Hunting

◆ **Member Extension 1–16**

Specifies the extension number of each member extension of the idle extension hunting group.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.2.1 Idle Extension Hunting

4.9.10 VM(DPT) Group—System Setting [3-7-1]

A Panasonic Voice Processing System (VPS) with DPT Integration can be connected to DPT ports of the PBX. The DPT ports that are connected to the VPS are called a VM (DPT) Group.

A maximum of 2 VM (DPT) Groups can be programmed.

◆ **Call Waiting on VM Group**

Enables the queuing of calls when all extension ports of the VM (DPT) group are busy. (Call Waiting tone is not sent to any VM port.)

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

1.21.1 Voice Mail (VM) Group

◆ Intercept to Mailbox

Enables the PBX to send the mailbox number of the called extension to the VPS when a CO line call is redirected to the VM (DPT) group by Intercept Routing. When the VPS receives the mailbox number, the VPS answers the call with the appropriate mailbox.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.7.23 Extension Port [1-8]

4.9.1 Trunk Group—TRG Settings [3-1-1]—Intercept—Intercept Destination—Day, Lunch, Break, Night

4.10.1 Wired Extension—Extension Settings [4-1-1]—Option 1—Intercept Destination—Day, Lunch, Break, Night

4.10.9 Portable Station—Extension Settings [4-2-1]—Option 1—Intercept Destination—Day, Lunch, Break, Night

Feature Guide References

1.21.1 Voice Mail (VM) Group

1.21.2 Voice Mail DPT (Digital) Integration

◆ Transfer Recall to Mailbox

Enables the PBX to send the mailbox number of the transfer destination extension to the VPS when a call is transferred to an extension by the Call Transfer without Announcement feature using the Automated Attendant (AA) service of the VPS and the call is not answered within a programmed time period, or when the VPS is assigned as the Transfer Recall destination of a certain extension. When the VPS receives the mailbox number, the VPS answers the call with the appropriate mailbox.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

- 1.21.1 Voice Mail (VM) Group
- 1.21.2 Voice Mail DPT (Digital) Integration

4.9.11 VM(DPT) Group—Unit Setting [3-7-2]

A VM (DPT) group has a floating extension number, which can be assigned as the destination for redirected calls and incoming calls.

◆ Floating Extension No.

Specifies the floating extension number of the VM (DPT) group.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

- 4.7.23 Extension Port [1-8]

Feature Guide References

- 1.21.1 Voice Mail (VM) Group

◆ Group Name

Specifies the name of the VM (DPT) group, which will be shown on the display of the extension that has called the VM (DPT) group. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

- 4.7.23 Extension Port [1-8]

Feature Guide References

- 1.21.1 Voice Mail (VM) Group

4.9.12 VM(DTMF) Group—System Setting [3-8-1]

A Panasonic Voice Processing System (VPS) with DTMF Integration can be connected to SLT ports of the PBX. The SLT ports that are connected to the VPS are called a VM (DTMF) Group. A maximum of 2 VM (DTMF) Groups can be programmed.

◆ VM DTMF Status Signal—Ringback Tone

Specifies the DTMF status signal the PBX sends to the VPS when the called extension is ringing.

Default

1

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.21.1 Voice Mail (VM) Group

1.21.3 Voice Mail DTMF Integration

◆ VM DTMF Status Signal—Busy Tone

Specifies the DTMF status signal the PBX sends to the VPS when the called extension is busy.

Default

2

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.21.1 Voice Mail (VM) Group

1.21.3 Voice Mail DTMF Integration

◆ VM DTMF Status Signal—Reorder Tone

Specifies the DTMF status signal the PBX sends to the VPS when the dialed number is invalid.

Default

3

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.21.1 Voice Mail (VM) Group

1.21.3 Voice Mail DTMF Integration

◆ VM DTMF Status Signal—DND tone

Specifies the DTMF status signal the PBX sends to the VPS when the called extension is in DND mode.

Default

4

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.21.1 Voice Mail (VM) Group

1.21.3 Voice Mail DTMF Integration

◆ VM DTMF Status Signal—Answer

Specifies the DTMF status signal the PBX sends to the VPS when the called extension has answered the call.

Default

5

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.21.1 Voice Mail (VM) Group

1.21.3 Voice Mail DTMF Integration

◆ VM DTMF Status Signal—Confirm

Specifies the DTMF status signal the PBX sends to the VPS when a certain feature (e.g., Message Waiting) has been successfully set or canceled on an extension.

Default

9

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.21.1 Voice Mail (VM) Group

1.21.3 Voice Mail DTMF Integration

◆ VM DTMF Status Signal—Disconnect

Specifies the DTMF status signal the PBX sends to the VPS when the caller hangs up.

Default

#9

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.21.1 Voice Mail (VM) Group

1.21.3 Voice Mail DTMF Integration

◆ VM DTMF Status Signal—FWD to VM Ringback Tone

Specifies the DTMF status signal the PBX sends to the VPS when the call has been forwarded to the VPS and the PBX is calling another port of the VPS.

Default

6

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

- 1.21.1 Voice Mail (VM) Group
- 1.21.3 Voice Mail DTMF Integration

◆ VM DTMF Status Signal—FWD to VM Busy Tone

Specifies the DTMF status signal the PBX sends to the VPS when the call has been forwarded to the VPS and all ports of the VPS are busy.

Default

7

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

- 1.21.1 Voice Mail (VM) Group
- 1.21.3 Voice Mail DTMF Integration

◆ VM DTMF Status Signal—FWD to Extension Ringback Tone

Specifies the DTMF status signal the PBX sends to the VPS when the call has been forwarded to another extension and the PBX is calling the destination extension.

Default

8

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

- 1.21.1 Voice Mail (VM) Group
- 1.21.3 Voice Mail DTMF Integration

◆ VM DTMF Command—Recording Message

Specifies the DTMF command the PBX sends to the VPS when a call is forwarded, intercepted, or transferred to the VPS, so that the caller can leave a message in a certain mailbox.

Default

H

Value Range

Max. 4 digits (consisting of 0–9, *, #, and H [H=mailbox number])

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ **VM DTMF Command—Listening Message**

Specifies the DTMF command the PBX sends to the VPS when an extension user answers a message waiting notification from the VPS, so that the extension user can retrieve a new message in a certain mailbox without having to dial the mailbox number manually.

Default

*H

Value Range

Max. 4 digits (consisting of 0–9, *, #, and H [H=mailbox number])

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ **VM DTMF Command—Switching to AA**

Specifies the DTMF command the PBX sends to the VPS when in the VM Service Mode to activate the AA Service Mode instead.

Default

#8

Value Range

Max. 4 digits (consisting of 0–9, *, #, and H [H=mailbox number])

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ **VM DTMF Command—Switching to VM**

Specifies the DTMF command the PBX sends to the VPS when in the AA Service Mode to activate the VM Service Mode instead.

Default

#6

Value Range

Max. 4 digits (consisting of 0–9, *, #, and H [H=mailbox number])

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ Timing—DTMF Length for VM

Specifies the length of the DTMF signal the PBX sends to the VPS.

Default

80 ms

Value Range

80 ms, 160 ms

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ Timing—Inter-digit Time

Specifies the length of pause time between DTMF signals the PBX sends to the VPS.

Default

80 ms

Value Range

80 ms, 160 ms

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ Timing—Waiting Time before Sending Follow on ID

Specifies the length of time the PBX waits before sending the Follow on ID to the VPS after the VPS has answered a call.

Default

1.5 s

Value Range

0.5 s, 1.0 s, 1.5 s, 2.0 s

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ **Timing—Waiting Time before Sending VM DTMF Status Signal**

Specifies the length of time the PBX waits before sending the DTMF status signal to the VPS after the VPS has finished dialing.

Default

1.5 s

Value Range

0.5 s, 1.0 s, 1.5 s, 2.0 s

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ **Others—Call Waiting on VM Group**

Enables the queuing of calls when all extension ports of the VM (DTMF) group are busy. (Call Waiting tone is not sent to any VM port.)

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.21.1 Voice Mail (VM) Group

◆ Others—FWD to the VPS Sequence

Specifies which DTMF commands the VPS receives from the PBX when a call is forwarded to the VPS, so that the VPS can answer the call either with a mailbox or in the AA service mode. It is also possible to send no DTMF signal to the VPS.

Default

Answer by Mailbox

Value Range

None, Answer by Mailbox, AA

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ Others—Intercept Routing to the VPS Sequence

Specifies which DTMF commands the VPS receives from the PBX when a call is intercepted to the VPS, so that the VPS can answer the call either with a mailbox or in the AA service mode. It is also possible to send no DTMF signal to the VPS.

Default

None

Value Range

None, Answer by Mailbox, AA

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ Others—Mailbox for Extension

Specifies whether the mailboxes use the same numbers as the extensions and incoming call distribution groups, or use different numbers as programmed for each extension or incoming call distribution group.

Default

Extension Number

Value Range

Extension Number, Programmed Mailbox Number

Programming Guide References

4.9.6 Incoming Call Distribution Group—Group Settings [3-5-1]—Miscellaneous—Programmed Mailbox No.

4.10.1 Wired Extension—Extension Settings [4-1-1]—Option 1—Programmed Mailbox No.

4.10.9 Portable Station—Extension Settings [4-2-1]—Option 1—Programmed Mailbox No.

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ Others—Message Waiting Lamp Control

Specifies whether the PBX or VPS cancels the Message Waiting feature (e.g., turning off the MESSAGE button light) when an extension user answers the message waiting notification from the VPS.

Default

By PBX

Value Range

By PBX, By VM

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

4.9.13 VM(DTMF) Group—Group Setting [3-8-2]

A VM (DTMF) group has a floating extension number, and can be assigned as the destination for redirected calls and incoming calls.

◆ Floating Ext No.

Specifies the floating extension number of the VM (DTMF) group.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.21.1 Voice Mail (VM) Group

◆ Group Name

Specifies the name of the VM (DTMF) group, which will be shown on the display of the extension that has called the VM (DTMF) group. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.21.1 Voice Mail (VM) Group

◆ Type

Specifies the initial service mode in which the VPS answers calls.

Default

AA

Value Range

AA, VM

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ Extension Number of the SLT Port Connected to VM 1–32

Specifies the extension number of the SLT ports that belongs to the VM (DTMF) group.

To assign an extension port to a VM (DTMF) group, follow the steps below:

1. Type the extension number of the SLT port that belongs to the VM (DTMF) group.
2. Set the status of the extension port to "OUS", then "INS".

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.24 Extension Port [1-8] Port Command

Feature Guide References

1.21.1 Voice Mail (VM) Group

4.9.14 PS Ring Group [3-9]

PS ring group is a group of PS extensions that receives incoming calls. Each group has a floating extension number and name. One PS can belong to multiple PS ring groups. A maximum of 32 PS ring groups can be programmed, each containing up to 128 PS extensions.

◆ Floating Extension No.

Specifies the floating extension number of the PS ring group.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.22.2 PS Ring Group

◆ Group Name

Specifies the name of the PS ring group, which will be shown on the display of the extension that has called the PS ring group when **Incoming Trunk Call Information Display** on this screen is set to **Called Number**. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.22.2 PS Ring Group

◆ Incoming Trunk Call Information Display

Specifies the information of the incoming CO line call to be shown on the displays of the PSs that belong to the PS ring group. If the caller's name or called party's name is not recognized, the telephone number will be shown.

Default

Caller ID

Value Range

Caller ID, Called Number

Programming Guide References

None

Feature Guide References

1.22.2 PS Ring Group

◆ Portable Station 1–128

Specifies whether the PS belongs to the PS ring group. A PS can be assigned to a PS ring group, even when the PS is working in parallel with a wired telephone (in Wireless XDP Parallel Mode). (Refer to "4.7.14 Portable Station [1-2]" for more information about PS numbers.)

Default

Group No. 1: ON, Group No. 2–32: OFF

Value Range

ON, OFF

Programming Guide References

4.7.14 Portable Station [1-2]

Feature Guide References

1.22.2 PS Ring Group

4.10 Extension [4]

4.10.1 Wired Extension—Extension Settings [4-1-1]

For each slot in which an extension card is installed, a certain number of extension ports are displayed. For each extension port, various extension settings can be assigned. It is possible to assign a set of CLIP numbers automatically. Click **CLIP Generate**.

Main

◆ Slot

Indicates the slot position of each extension card (reference only).

Default

Current slot number

Value Range

Slot number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

None

◆ Extension Number

Specifies the extension number of the extension.

To change the extension number of a wired extension, follow the steps below:

1. Type the new extension number, then click **Apply**.
2. Set the status of the extension port to "**OUS**", then "**INS**".

When changing the extension number, make sure that the extension port is not in use. If the extension number is changed while the port is in use, the new extension number will not come into effect.

Default

Starting at 101 (For port 01 of the first extension card that is installed. Extension numbers are preset for subsequent extensions by adding one to the previous extension number.)

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.24 Extension Port [1-8] Port Command

Feature Guide References

None

◆ Extension Name

Specifies the name of the extension. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ Port Type

Indicates the extension port type (reference only).

Default

Current port type

Value Range

DPT: DPT port (DLC)

SLT: SLT port (SLC)

S-Hybrid: Super Hybrid port (DHLC)

S-Hybrid (SLT): XDP port of Super Hybrid port (DHLC)

S-Hybrid (S-DPT): Digital XDP port of Super Hybrid port (DHLC)

DPT (S-DPT): Digital XDP port of DPT port (DLC)

ISDN: ISDN port (PRI)

OPX: T1-OPX port (T1)

IP-EXT: IP-Extension port (IP-EXT)

Programming Guide References

None

Feature Guide References

2.1.1 Extension Port Configuration

◆ Telephone Type

Indicates the type of telephone connected to the extension port (reference only).

Default

Current connected telephone type

Value Range

DPT(T76xx): KX-T7600 series DPT is connected.

DPT(Other): DPT other than KX-T7600 series is connected.

APT: APT is connected.

DSS: DSS Console is connected.

VM: VPS is connected.

SLT: SLT is connected (or no telephone is connected to the Super Hybrid port).

ISDN-Extension: ISDN telephone is connected.

No Connection: No telephone is connected.

CS: CS is connected.

IP-EXT: IP-PT is connected.

Feature Guide References

None

◆ Wireless XDP

Specifies the extension number of the PS with which the Wireless XDP Parallel Mode is established. To enable the Wireless XDP Parallel Mode, the PS must be turned off once and then turned on after assigning this setting.

When changing the port type of an extension port in **DPT Property—Type (for DPT or S-Hybrid port)** on the **4.7.23 Extension Port [1-8]** screen, the **Wireless XDP** setting must be deleted first.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.22.3 Wireless XDP Parallel Mode

◆ SLT MW Mode

Enables the use of the Message Waiting Lamp on an SLT extension connected to the extension port.

Default

Disable

Value Range

Disable, MW-Lamp

Programming Guide References

None

Feature Guide References

1.17.1 Message Waiting

◆ Extension Group

Specifies the extension group to which the extension belongs. The extension group is used to compose call pickup groups and paging groups.

Default

1

Value Range

1–32

Programming Guide References

None

Feature Guide References

2.2.2 Group

◆ COS

Specifies the COS of the extension.

Default

1

Value Range

1–64

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

Feature Guide References

2.2.1 Class of Service (COS)

◆ Ring Pattern Table

Specifies the Ring Tone Pattern Table to be used by the extension.

Default

1

Value Range

1–8

Programming Guide References

4.8.18 Ring Tone Patterns—Call from CO [2-8-1]

4.8.19 Ring Tone Patterns—Call from Doorphone [2-8-2]

4.8.20 Ring Tone Patterns—Call from Others [2-8-3]

Feature Guide References

1.1.3.2 Ring Tone Pattern Selection

Option 1

◆ Slot

Indicates the slot position of each extension card (reference only).

Default

Current slot number

Value Range

Slot number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

None

◆ Extension Number

Specifies the extension number of the extension.

To change the extension number of a wired extension, follow the steps below:

1. Type the new extension number, then click **Apply**.
2. Set the status of the extension port to "**OUS**", then "**INS**".

When changing the extension number, make sure that the extension port is not in use. If the extension number is changed while the port is in use, the new extension number will not come into effect.

Default

Starting at 101 (For port 01 of the first extension card that is installed. Extension numbers are preset for subsequent extensions by adding one to the previous extension number.)

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.24 Extension Port [1-8] Port Command

Feature Guide References

None

◆ Extension Name

Specifies the name of the extension. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ Intercept Destination—Day, Lunch, Break, Night

Specifies the Intercept Routing destination of CO line calls in each time mode for Intercept Routing–No Answer and Intercept Routing–Busy/DND feature.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

None

Feature Guide References

1.1.1.5 Intercept Routing

◆ **Programmed Mailbox No.**

Specifies the mailbox number of the extension's mailbox for Voice Processing Systems (VPS) with DTMF Integration.

Default

Same number as the corresponding extension number.

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ **Transfer Recall Destination**

Specifies the transfer recall destination when an extension user transfers a call with the Call Transfer without Announcement feature, and the transferred call is not answered within a certain time period.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.11.1 Call Transfer

◆ **CLIP ID**

Specifies the CLIP number sent to the public network to show on the called party's telephone display when making a CO line call.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

Option 2

◆ Slot

Indicates the slot position of each extension card (reference only).

Default

Current slot number

Value Range

Slot number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

None

◆ Extension Number

Specifies the extension number of the extension.

To change the extension number of a wired extension, follow the steps below:

1. Type the new extension number, then click **Apply**.
2. Set the status of the extension port to **"OUS"**, then **"INS"**.

When changing the extension number, make sure that the extension port is not in use. If the extension number is changed while the port is in use, the new extension number will not come into effect.

Default

Starting at 101 (For port 01 of the first extension card that is installed. Extension numbers are preset for subsequent extensions by adding one to the previous extension number.)

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.24 Extension Port [1-8] Port Command

Feature Guide References

None

◆ Extension Name

Specifies the name of the extension. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ Extension PIN

Specifies the PIN of the extension.

Default

Not stored.

Value Range

Max. 10 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.25.1 Extension Personal Identification Number (PIN)

◆ ARS Itemized Code

Specifies the itemized billing code used by the ARS feature for identifying the calls made from the extension for accounting and billing purposes.

Default

Not stored.

Value Range

Max. 10 digits (consisting of 0–9, *, and #)

Programming Guide References

4.14.5 Carrier [8-5]

Feature Guide References

1.8.5 Verified Code Entry

1.9.1 Automatic Route Selection (ARS)

◆ C. Waiting for Call from Extension

Selects the method of receiving call waiting notification from other extensions.

Default

BSS

Value Range

Off: No notification

BSS: Tone from the handset or built-in speaker

OHCA: Voice from the built-in speaker

W-OHCA: Voice from the handset

Programming Guide References

None

Feature Guide References

1.1.3.3 Call Waiting

◆ C. Waiting for Call from CO

Specifies whether to receive call waiting notification for a call from CO line, a doorphone call or a call via an incoming call distribution group.

Default

On

Value Range

Off, On

Programming Guide References

None

Feature Guide References

1.1.3.3 Call Waiting

◆ **Pickup Dial Set**

Sets or cancels the Hot Line feature. The number specified in **Pickup Dial Number** on this screen is dialed automatically after going off-hook by the Hot Line feature.

Default

Off

Value Range

Off, On

Programming Guide References

4.8.5 Timers & Counters—CO / Extension [2-4-1]—Hot Line (Pickup Dial) Start Timer

Feature Guide References

1.6.1.6 Hot Line

◆ **Pickup Dial Number**

Specifies the number to be dialed automatically after going off-hook via the Hot Line feature.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, T [Transfer], [,] [Secret], P [Pause], and F [Flash])

Programming Guide References

None

Feature Guide References

1.6.1.6 Hot Line

◆ **Data Mode**

Sets or cancels the protection against tones or interruptions from other extensions during communication.

Default

Off

Value Range

Off, On

Programming Guide References

None

Feature Guide References

1.10.5 Data Line Security

Option 3

◆ Slot

Indicates the slot position of each extension card (reference only).

Default

Current slot number

Value Range

Slot number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

None

◆ Extension Number

Specifies the extension number of the extension.

To change the extension number of a wired extension, follow the steps below:

1. Type the new extension number, then click **Apply**.
2. Set the status of the extension port to "**OUS**", then "**INS**".

When changing the extension number, make sure that the extension port is not in use. If the extension number is changed while the port is in use, the new extension number will not come into effect.

Default

Starting at 101 (For port 01 of the first extension card that is installed. Extension numbers are preset for subsequent extensions by adding one to the previous extension number.)

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.24 Extension Port [1-8] Port Command

Feature Guide References

None

◆ **Extension Name**

Specifies the name of the extension. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ **Call Pickup Deny**

Enables the prevention of calls being picked up by other extensions.

Default

Disable

Value Range

Disable: Allows other extension users to pick up the calls to your extension
Enable: Denies other extension users to pick up the calls to your extension

Programming Guide References

None

Feature Guide References

1.4.1.3 Call Pickup

◆ Executive Override Deny

Enables the prevention of calls being interrupted by other extensions.

Default

Disable

Value Range

Disable: Allows other extension users to interrupt an existing call

Enable: Denies other extension users to interrupt an existing call

Programming Guide References

None

Feature Guide References

1.7.2 Executive Busy Override

◆ CLIP on Extension / CO

Selects the CLIP number to show on the called party's telephone.

Default

Extension

Value Range

Extension: Show the CLIP number specified in **CLIP ID** on **Option 1** tab

CO: Show the CLIP number specified in **Subscriber Number** in **PRI Port [1-6]**.

Programming Guide References

4.7.19 PRI Port [1-6]—CO Setting—Subscriber Number

4.10.1 Wired Extension—Extension Settings [4-1-1]—Option 1—CLIP ID

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ CLIR

Enables the restriction to show the CLIP number for public network on the called party's telephone when making a CO line call.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ COLR

Enables the restriction to show the CLIP number of the extension on the caller's telephone display when answering a call.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ Absent Message

Specifies the Personal Absent Message which, unlike System Absent Message, is a customized message used only by the certain extension. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 16 characters

Programming Guide References

None

Feature Guide References

1.17.2 Absent Message

Option 4

◆ Slot

Indicates the slot position of each extension card (reference only).

Default

Current slot number

Value Range

Slot number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

None

◆ Extension Number

Specifies the extension number of the extension.

To change the extension number of a wired extension, follow the steps below:

1. Type the new extension number, then click **Apply**.
2. Set the status of the extension port to "**OUS**", then "**INS**".

When changing the extension number, make sure that the extension port is not in use. If the extension number is changed while the port is in use, the new extension number will not come into effect.

Default

Starting at 101 (For port 01 of the first extension card that is installed. Extension numbers are preset for subsequent extensions by adding one to the previous extension number.)

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.24 Extension Port [1-8] Port Command

Feature Guide References

None

◆ **Extension Name**

Specifies the name of the extension. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ **Outgoing Preferred Line**

Selects the line to be seized after going off-hook to make a call.

Default

ICM

Value Range

No Line: No line is seized.

Idle: An idle CO line is seized automatically from the programmed CO line groups.

ICM: An extension line is seized.

F-1–F-36: A CO line programmed for a flexible CO button (F-1–F-36) is seized. A flexible CO button customized as a Single-CO, Group-CO, Loop-CO, or G-DN button must be selected.

Programming Guide References

4.10.5 Wired Extension—Flexible Key [4-1-4]

Feature Guide References

1.5.5.2 Line Preference—Outgoing

◆ **Incoming Preferred Line**

Selects the line on which an incoming call is answered after going off-hook.

Default

Ringing Line

Value Range

No Line: No line is selected. Select a line by pressing the desired Line Access button to answer a call.

Ringing Line: The longest ringing call is selected.

F-1–F-36: The call arriving at a flexible CO button (F-1–F-36) is selected. A flexible CO button customized as a Single-CO, Group-CO, Loop-CO, or G-DN button must be selected.

Programming Guide References

4.10.5 Wired Extension—Flexible Key [4-1-4]

Feature Guide References

1.4.1.2 Line Preference—Incoming

◆ Intercom Call by Voice

Selects the method of receiving intercom calls. When **Deny Voice Call** is selected, the called party always receives calls by a ring tone: the caller cannot change the called party's call receiving method.

Default

Tone Call

Value Range

Tone Call, Voice Call, Deny Voice Call

Programming Guide References

None

Feature Guide References

1.5.3 Intercom Call

◆ Call Waiting Tone Type

Selects the type of Call Waiting tone sent to the busy extension.

Default

CW Tone 1

Value Range

CW Tone 1, CW Tone 2

Programming Guide References

None

Feature Guide References

1.7.4.2 Call Waiting Tone

◆ LCS Recording Mode

Specifies whether to continue or stop recording the message in the extension's mailbox after the extension user answer the call while monitoring.

Default

Stop Record

Value Range

Stop Record, Keep Record

Programming Guide References

None

Feature Guide References

1.21.2 Voice Mail DPT (Digital) Integration

◆ **LCS Answer Mode**

Specifies whether the extension's mailbox is monitored in Hands-free or Private mode.

Default

Hands free

Value Range

Hands free: Monitor through the built-in speaker

Private: Monitor through the handset or the built-in speaker after hearing an alarm tone

Programming Guide References

None

Feature Guide References

1.21.2 Voice Mail DPT (Digital) Integration

◆ **Display Language**

Selects the display language of the extension telephone.

Default

Language 1

Value Range

Language 1–Language 5

Programming Guide References

None

Feature Guide References

1.18.4 Display Information

Option 5

◆ **Slot**

Indicates the slot position of each extension card (reference only).

Default

Current slot number

Value Range

Slot number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

None

◆ Extension Number

Specifies the extension number of the extension.

To change the extension number of a wired extension, follow the steps below:

1. Type the new extension number, then click **Apply**.
2. Set the status of the extension port to "**OUS**", then "**INS**".

When changing the extension number, make sure that the extension port is not in use. If the extension number is changed while the port is in use, the new extension number will not come into effect.

Default

Starting at 101 (For port 01 of the first extension card that is installed. Extension numbers are preset for subsequent extensions by adding one to the previous extension number.)

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.24 Extension Port [1-8] Port Command

Feature Guide References

None

◆ **Extension Name**

Specifies the name of the extension. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ **Incoming Call Display**

Selects which caller information is shown on the first line of the extension's display.

Default

Caller ID Name

Value Range

Caller ID Name, CO Line Name, DID Name

Programming Guide References

None

Feature Guide References

1.18.4 Display Information

◆ **Automatic LCD Switch when start talking**

Enables the first line of the display to show the call duration automatically after answering a CO line call.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.18.4 Display Information

◆ **Key Pad Tone**

Specifies whether the key pad tones are heard when dialing.

Default

On

Value Range

Off, On

Feature Guide References

None

◆ Automatic Answer for CO Call

Enables the extension user to answer an incoming CO line call automatically after a certain number of rings without going off-hook, when Hands-free Answerback has been set on the extension. This setting is only effective when **Forced Automatic Answer** on this screen has been set to **Off**.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.4.1.4 Hands-free Answerback

◆ Forced Automatic Answer

Specifies whether the extension user automatically answers all incoming calls (both intercom and CO line calls) without going off-hook, regardless of the Hands-free Answerback setting.

Default

Off

Value Range

Off, On

Feature Guide References

None

◆ Flexible Key Programming Mode

Specifies whether the extension user can modify all flexible CO buttons without limitation, or only the One-touch Dialing buttons. When the mode is set to **One-touch Dial Only**, there is no need to enter "2" before the number.

Default

No Limitation

Value Range

No Limitation, One-touch Dial Only

Feature Guide References

None

◆ **ICM Tone**

Selects the ring tone for incoming calls arriving at the INTERCOM button.

Default

1

Value Range

KX-T7600 series: 1–30

Other telephones: 1–8 (Even if ring tone 9–30 is selected, the ring tone 2 is heard.)

Feature Guide References

None

Option 6

◆ **Slot**

Indicates the slot position of each extension card (reference only).

Default

Current slot number

Value Range

Slot number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Port**

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

None

◆ **Extension Number**

Specifies the extension number of the extension.

To change the extension number of a wired extension, follow the steps below:

1. Type the new extension number, then click **Apply**.
2. Set the status of the extension port to "**OUS**", then "**INS**".

When changing the extension number, make sure that the extension port is not in use. If the extension number is changed while the port is in use, the new extension number will not come into effect.

Default

Starting at 101 (For port 01 of the first extension card that is installed. Extension numbers are preset for subsequent extensions by adding one to the previous extension number.)

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.24 Extension Port [1-8] Port Command

Feature Guide References

None

◆ **Extension Name**

Specifies the name of the extension. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ Incoming Call Log Lock

Locks or unlocks the Incoming Call Log display (i.e., prevents or allows the other extension users to see the Incoming Call Log information at the extension).

Default

Unlock

Value Range

Unlock, Lock

Programming Guide References

None

Feature Guide References

1.16.2 Incoming Call Log

◆ Paging Deny

Enables the prevention of being paged by other extensions.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.14.1 Paging

◆ Character Input Mode

Selects the character table to be used for entering characters.

Default

Table 1

Value Range

Table 1: Standard mode

Table 2: Option mode

Programming Guide References

3.3.1 Programming Instructions

Feature Guide References

None

◆ Flash mode during CO Conversation

Selects the function of the FLASH/RECALL button during a CO line conversation.

Default

Flash Recall

Value Range

EFA, Terminate, Flash Recall

Programming Guide References

None

Feature Guide References

1.10.6 Flash/Recall/Terminate

◆ Incoming Call Log Memory

Specifies the number of incoming CO line calls that are retained in the extension's Incoming Call Log memory.

Default

10

Value Range

0–100

Programming Guide References

None

Feature Guide References

1.16.2 Incoming Call Log

◆ Outgoing Call Log Memory

Specifies the number of telephone numbers dialed by the extension that are retained in the extension's Outgoing Call Log memory.

Default

5

Value Range

1–100

Programming Guide References

None

Feature Guide References

1.6.1.3 Last Number Redial

◆ ISDN Bearer

Selects the ISDN bearer mode. When **Automatic** is selected, the bearer mode is set automatically depending on the extension's telephone type as follows:

PT: Speech

SLT: Audio

Default

Automatic

Value Range

Automatic, Speech, Audio

Programming Guide References

None

Feature Guide References

1.19.1.1 Integrated Services Digital Network (ISDN)—OVERVIEW

◆ Group CW w/o Tone (Ring after Call)

Enables an incoming call to an incoming call distribution group to arrive at a previously busy extension at the time of going on-hook after a call.

Default

Enable

Value Range

Disable, Enable

Feature Guide References

None

Option 7

◆ Slot

Indicates the slot position of each extension card (reference only).

Default

Current slot number

Value Range

Slot number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ **Port**

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

None

◆ **Extension Number**

Specifies the extension number of the extension.

To change the extension number of a wired extension, follow the steps below:

1. Type the new extension number, then click **Apply**.
2. Set the status of the extension port to "**OUS**", then "**INS**".

When changing the extension number, make sure that the extension port is not in use. If the extension number is changed while the port is in use, the new extension number will not come into effect.

Default

Starting at 101 (For port 01 of the first extension card that is installed. Extension numbers are preset for subsequent extensions by adding one to the previous extension number.)

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.24 Extension Port [1-8] Port Command

Feature Guide References

None

◆ **Extension Name**

Specifies the name of the extension.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ **Extension Caller ID Sending**

Enables the extension to send Caller ID information to an SLT.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

◆ **Incoming Call Wait Timer for Extension Caller ID**

Specifies the length of time the ringing for a call is delayed when the call follows immediately after the previous unanswered call. When receiving two calls in quick succession (e.g., when a call waiting in a queue is directed to an extension immediately after the previous call stops ringing), some SLTs require a pause, after the first call stops ringing, to receive the second call's Caller ID information.

Default

0

Value Range

0–15 s

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

FWD / DND Reference

Call Forwarding (FWD) and Do Not Disturb (DND) settings for each extension can be referred. FWD and DND settings can be programmed separately for each extension in **Wired Extension—FWD/DND [4-1-2]**.

◆ Slot

Indicates the slot position of each extension card (reference only).

Default

Current slot number

Value Range

Slot number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Programming Guide References

4.7.23 Extension Port [1-8]

Feature Guide References

None

◆ Extension Number

Specifies the extension number of the extension.

To change the extension number of a wired extension, follow the steps below:

1. Type the new extension number, then click **Apply**.
2. Set the status of the extension port to "**OUS**", then "**INS**".

When changing the extension number, make sure that the extension port is not in use. If the extension number is changed while the port is in use, the new extension number will not come into effect.

Default

Starting at 101 (For port 01 of the first extension card that is installed. Extension numbers are preset for subsequent extensions by adding one to the previous extension number.)

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.24 Extension Port [1-8] Port Command

Feature Guide References

None

◆ **Extension Name**

Specifies the name of the extension. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ **FWD Set for Call from CO**

Indicates the current FWD status for incoming CO line calls (reference only).

Default

Off

Value Range

Off, On

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ **DND Set for Call from CO**

Indicates the current DND status for incoming CO line calls (reference only).

Default

Off

Value Range

Off, On

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

Feature Guide References

1.3.1.3 Do Not Disturb (DND)

◆ **FWD Mode for Call from CO**

Indicates the forwarding type of incoming CO line calls (reference only).

Default

None

Value Range

None, FWD ALL, FWD Busy, FWD N/A, FWD Busy N/A

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ **FWD Destination for Call from CO**

Indicates the forwarding destination of incoming CO line calls (reference only).

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ **FWD Set for Call from Extension**

Indicates the current FWD status for incoming intercom calls (reference only).

Default

Off

Value Range

Off, On

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ **DND Set for Call from Extension**

Indicates the current DND status for incoming intercom calls (reference only).

Default

Off

Value Range

Off, On

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

Feature Guide References

1.3.1.3 Do Not Disturb (DND)

◆ **FWD Mode for Call from Extension**

Indicates the forwarding type of incoming intercom calls (reference only).

Default

None

Value Range

None, FWD ALL, FWD Busy, FWD N/A, FWD Busy N/A

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ **FWD Destination for Call from Extension**

Indicates the forwarding destination of incoming intercom calls (reference only).

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ FWD No Answer Time

Indicates the length of time an incoming call rings at the extension before the call is forwarded (reference only).

Default

15 s

Value Range

0–120 s

Programming Guide References

4.10.3 Wired Extension—FWD/DND [4-1-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

4.10.2 Wired Extension—Extension Settings [4-1-1] CLIP Generate

CLIP Generate allows CLIP numbers to be programmed at once for a set of locations in series. Pre-existing CLIP numbers will be overwritten.

If a number generated here is longer than 16 digits, the additional digits will be discarded.

◆ Beginning Entry Location (Ext. Number)

Specifies the extension number of the first location to be programmed.

Default

Extension number of port 01 of the first extension card that is installed.

Value Range

Wired extension number

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ **Number to Generate**

Specifies the number of locations to be programmed.

A CLIP number will only be assigned to connected wired extensions, even if the number entered here is larger than the total number of wired extensions.

Default

24

Value Range

1–total number of connected wired extensions

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ **Deleting Digits**

Specifies the number of digits to be deleted from the start of an extension number when using it as part of the CLIP number.

Default

0

Value Range

0–4

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ **Head of ID**

Specifies a prefix number to be applied to all generated CLIP numbers.

Default

Not stored

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ Tail of ID

Specifies a suffix number to be applied to all generated CLIP numbers.

Default

Not stored

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

4.10.1 Wired Extension—Extension Settings [4-1-1]

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

4.10.3 Wired Extension—FWD/DND [4-1-2]

For each extension, separate Call Forwarding (FWD) and Do Not Disturb (DND) settings can be programmed for incoming intercom and CO line calls. Select the desired extension from the **Extension Number / Name** list.

◆ Call from CO—Present Button Status

Indicates the current status of the FWD/DND—External button (reference only).

Default

Current status

Value Range

OFF, FWD, DND

Programming Guide References

None

Feature Guide References

1.3.1.1 Call Forwarding (FWD)/Do Not Disturb (DND)—OVERVIEW

◆ **Call from CO—FWD Status Availability**

Turns on or off the FWD feature for incoming CO line calls.

Default

OFF

Value Range

OFF, ON

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ **Call from CO—DND Status Availability**

Turns on or off the DND feature for incoming CO line calls.

Default

OFF

Value Range

OFF, ON

Programming Guide References

None

Feature Guide References

1.3.1.3 Do Not Disturb (DND)

◆ **Call from CO—FWD Mode**

Specifies the circumstances when incoming CO line calls are forwarded.

Default

None

Value Range

None, FWD ALL, FWD Busy, FWD N/A, FWD Busy N/A

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ Call from CO—FWD Destination

Specifies the forwarding destination of incoming CO line calls.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ Call from Extension—Present Button Status

Indicates the current status of the FWD/DND—Internal button (reference only).

Default

Current status

Value Range

OFF, FWD, DND

Programming Guide References

None

Feature Guide References

1.3.1.1 Call Forwarding (FWD)/Do Not Disturb (DND)—OVERVIEW

◆ Call from Extension—FWD Status Availability

Turns on or off the FWD feature for incoming intercom calls.

Default

OFF

Value Range

OFF, ON

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ Call from Extension—DND Status Availability

Turns on or off the DND feature for intercom calls.

Default

OFF

Value Range

OFF, ON

Programming Guide References

None

Feature Guide References

1.3.1.3 Do Not Disturb (DND)

◆ Call from Extension—FWD Mode

Specifies the circumstances when incoming intercom calls are forwarded.

Default

None

Value Range

None, FWD ALL, FWD Busy, FWD N/A, FWD Busy N/A

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ Call from Extension—FWD Destination

Specifies the forwarding destination of incoming intercom calls.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ FWD No Answer Timer

Specifies the length of time an incoming call rings at the extension before the call is forwarded.

Default

15 s

Value Range

0–120 s

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

4.10.4 Wired Extension—Speed Dial [4-1-3]

Personal Speed Dialing allows extension users to dial frequently dialed numbers using two-digit speed dialing numbers (00–09). A maximum of 10 Personal Speed Dialing numbers can be programmed for each extension. Select the desired extension from the **Extension Number / Name** list.

If an MEC card is installed, the available speed dialing numbers are shown in sets of 20. Select the desired set from the **Station Speed Dialing No.** list.

◆ Speed Dialing Name

Specifies the name of the Personal Speed Dialing number to call using the Personal Speed Dialing Directory shown on the extension's display. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.6.1.4 Speed Dialing—Personal/System

◆ Dialing Number

Specifies the number to be dialed by the Personal Speed Dialing number.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, T [Transfer], [,] [Secret], P [Pause], and F [Flash])

Programming Guide References

None

Feature Guide References

1.6.1.4 Speed Dialing—Personal/System

4.10.5 Wired Extension—Flexible Key [4-1-4]

Each flexible CO button can be customized to allow one-touch access to a certain feature. A maximum of 36 flexible CO buttons can be customized for each extension. Select the desired extension from the **Extension Number / Name** list.

◆ Type

Specifies the feature to be assigned to the flexible CO button.

Default

Single CO

Value Range

Not Stored, Loop CO, Single CO, Group CO, DSS, One-touch, G-DN, Message Waiting, Fwd/DND (Both), Fwd/DND (External), Fwd/DND (Internal), Group Fwd (Both), Group Fwd (External), Group Fwd (Internal), Account, Conference, Terminate, EFA, Call Park, Call Log, Log-in/Log-out, Hurry-up, Wrap-up, System Alarm, Time Service, Answer, Release, TRS Level Change, CLIR, COLR, Headset, Time Service - Automatic / Manual, Check In, Check Out, Two-way Record, Two-way Transfer, LCS, Voice Mail Transfer, NDSS, CTI

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Parameter Selection (for Single CO)

Specifies the CO line to be accessed.

Default

1

Value Range

1–128

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Parameter Selection (for Group CO)

Specifies the CO line group to be accessed.

Default

1

Value Range

1–64

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Parameter Selection (for Call Park)

Specifies whether a call is parked in an idle parking zone automatically or in a specific parking zone.

Default

Automatic

Value Range

Automatic, Specific

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.12.2 Call Park

1.18.2 Flexible Buttons

◆ Parameter Selection (for Log-in/Log-out)

Specifies which incoming call distribution groups that the extension belongs to are logged-in to or logged-out from.

Default

None

Value Range

None: The incoming call distribution group is selected manually.

All: All incoming call distribution groups that the extension belongs to.

Incoming Group: A specified incoming call distribution group

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.2.2.6 Log-in/Log-out

1.18.2 Flexible Buttons

◆ **Parameter Selection (for Time Service)**

Selects which time modes are switched manually.

Default

All

Value Range

All (Day/Night/Lunch/Break), Day/Night/Break, Day/Night/Lunch, Day/Night

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

2.2.4 Time Service

◆ **Parameter Selection (for TRS Level Change)**

Specifies the TRS level to be used temporarily on a certain extension.

Default

1

Value Range

1–7

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Parameter Selection (for Time Service - Automatic / Manual)**

Specifies the Time Table to be used when the Time Service Switching Mode is set to automatic.

Default

1

Value Range

1–8

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

2.2.4 Time Service

◆ Ext No. or Floating Ext No. (for DSS)

Specifies the number of an extension to be accessed.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for G-DN)

Specifies the floating extension number of an incoming call distribution group to be accessed.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Message Waiting)

Specifies the number of an extension or floating extension number of an incoming call distribution group for which messages are checked. If this cell is left empty, the extension will check its own messages only.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Group FWD (Both))**

Specifies the floating extension number of an incoming call distribution group to which both intercom and CO line calls are forwarded.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Group FWD (External))**

Specifies the floating extension number of an incoming call distribution group to which CO line calls are forwarded.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Group FWD (Internal))

Specifies the floating extension number of an incoming call distribution group to which intercom calls are forwarded.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Call Log)

Specifies the extension's own number or the floating extension number of an incoming call distribution group for which call log information is displayed. If the cell is left empty, the extension will display its own call log information.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Log-in/Log-out)

Specifies the floating extension number of an incoming call distribution group to log-in to or log-out from.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Hurry-up)

Specifies the floating extension number of an incoming call distribution group for which Manual Queue Redirection is performed for the longest waiting call.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Two-way Record)

Specifies the floating extension number of the VM (DPT) group containing the extension's mailbox.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Two-way Transfer)

Specifies the floating extension number of the VM (DPT) group containing the desired mailbox.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Voice Mail Transfer)

Specifies the floating extension number of the VM (DTMF/DPT) group containing the desired mailbox.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Dial (for One-touch)

Specifies the number to be dialed. The PBX can have a maximum of 1000 One-touch Dialing buttons for extensions and DSS Consoles.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, T [Transfer], [,] [Secret], P [Pause], and F [Flash])

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Dial (for NDSS)

Specifies the network extension number of the extension to be accessed.

Note that only extension numbers that have been previously registered in **4.15.4 NDSS Key Table [9-4]** can be specified here.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, T [Transfer], [,] [Secret], P [Pause], and F [Flash])

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Optional parameter (or Ringing Tone Type Number) (for Time Service)

Specifies the Time Table to be used for changing time modes in the Automatic Switching mode.

Default

1

Value Range

1–8

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Optional parameter (or Ringing Tone Type Number) (for Loop CO, Single CO, Group CO, G-DN)

Specifies the ring tone type.

Default

1

Value Range

1–30

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Optional parameter (or Ringing Tone Type Number) (for Call Park)

Specifies the number of the parking zone a call is to be parked by pressing the Call Park button whose **Parameter Selection** on this screen is **Specific**.

Default

Not stored.

Value Range

0–99

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.12.2 Call Park

1.18.2 Flexible Buttons

◆ Extension Number of Mailbox (for Two-way Transfer)

Specifies the number of the extension whose mailbox will be used to record conversations. (For example, a secretary records a conversation into the mailbox of a boss.) This setting establishes the One-touch Two-way Transfer button. If the cell is left empty, the extension user can specify the number of an extension each time.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

4.10.6 Wired Extension—Flexible Key [4-1-4] Flexible Key Data Copy

The flexible CO button settings of an extension can be copied to different extensions. Select the extension that has the settings to copy to other extensions from the **Extension Number / Name** list, then click **Copy To**.

◆ Destination Extension Line

Select the number and name of the extension that will receive the copied settings. Multiple extensions can be selected. To select all extensions at once, click **Select All**.

Programming Guide References

4.10.5 Wired Extension—Flexible Key [4-1-4]

Feature Guide References

None

4.10.7 Wired Extension—PF Key [4-1-5]

Each Programmable Feature (PF) button can be customized to access a certain feature with one-touch. A maximum of 12 PF buttons can be customized for each extension. Select the desired extension from the **Extension Number / Name** list.

◆ Type

Specifies whether to store a dialing number for the one-touch access.

Default

Not stored.

Value Range

Not Stored, One-Touch

Programming Guide References

None

Feature Guide References

1.18.2 Flexible Buttons

◆ Dial

Specifies the number to be dialed.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, T [Transfer], [,] [Secret], P [Pause], and F [Flash])

Programming Guide References

None

Feature Guide References

1.18.2 Flexible Buttons

4.10.8 Wired Extension—NDSS Link Data - Send [4-1-6]

It is possible to cancel the transmission of an extension's status data over the network. Select the desired extension from the **Extension Number / Name** list.

◆ Network BLF Data to NDSS Key of Other PBX - Other PBX (Network PBX ID=1)

Selects whether status data is transmitted over the network for the selected extension. This setting can only be changed from **ON** to **OFF**, to cancel data transmission.

Default

OFF

Value Range

OFF, ON

Programming Guide References

4.15.1 TIE Table [9-1]

Feature Guide References

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

4.10.9 Portable Station—Extension Settings [4-2-1]

For each Portable Station (PS), various extension settings can be assigned. A maximum of 128 PSs can be programmed.

It is possible to assign a set of CLIP numbers automatically. Click **CLIP Generate**.

Main

◆ Extension Number

Indicates the extension number of the PS (reference only).

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.14 Portable Station [1-2]

Feature Guide References

None

◆ Extension Name

Specifies the name of the PS. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ **Property**

Indicates the property (reference only).

Default

Portable Station

Value Range

Not applicable.

Feature Guide References

None

◆ **Extension Group**

Specifies the extension group to which the PS belongs. The extension group is used to compose call pickup groups and paging groups.

Default

1

Value Range

1–32

Programming Guide References

None

Feature Guide References

2.2.2 Group

◆ **COS**

Specifies the COS of the PS.

Default

1

Value Range

1–64

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

Feature Guide References

2.2.1 Class of Service (COS)

◆ Ring Pattern Table

Specifies the Ring Tone Pattern Table to be used by the PS.

Default

1

Value Range

1–8

Programming Guide References

4.8.18 Ring Tone Patterns—Call from CO [2-8-1]

4.8.19 Ring Tone Patterns—Call from Doorphone [2-8-2]

4.8.20 Ring Tone Patterns—Call from Others [2-8-3]

Feature Guide References

1.1.3.2 Ring Tone Pattern Selection

Option 1**◆ Extension Number**

Indicates the extension number of the PS (reference only).

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.14 Portable Station [1-2]

Feature Guide References

None

◆ Extension Name

Specifies the name of the PS. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ **Intercept Destination—Day, Lunch, Break, Night**

Specifies the Intercept Routing destination of CO line calls in each time mode for Intercept Routing—No Answer and Intercept Routing—Busy/DND feature.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

None

Feature Guide References

1.1.1.5 Intercept Routing

◆ **Programmed Mailbox No.**

Specifies the mailbox number of the PS's mailbox for Voice Processing Systems (VPS) with DTMF Integration.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.21.3 Voice Mail DTMF Integration

◆ **Transfer Recall Destination**

Specifies the transfer recall destination when an extension user transfers a call with the Call Transfer without Announcement feature, and the transferred call is not answered within a certain time period.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.11.1 Call Transfer

◆ **CLIP ID**

Specifies the CLIP number sent to the public network to show on the called party's telephone display when making a CO line call.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

Option 2◆ **Extension Number**

Indicates the extension number of the PS (reference only).

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.14 Portable Station [1-2]

Feature Guide References

None

◆ **Extension Name**

Specifies the name of the PS. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ **Extension PIN**

Specifies the PIN of the PS.

Default

Not stored.

Value Range

Max. 10 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.25.1 Extension Personal Identification Number (PIN)

◆ **ARS Itemized Code**

Specifies the itemized billing code used by the ARS feature for identifying the calls made from the PS for accounting and billing purposes.

Default

Not stored.

Value Range

Max. 10 digits (consisting of 0–9, *, and #)

Programming Guide References

4.14.5 Carrier [8-5]

Feature Guide References

1.8.5 Verified Code Entry

1.9.1 Automatic Route Selection (ARS)

◆ C. Waiting for Call from Extension

Selects the method of receiving call waiting notification from other extensions.

Default

BSS

Value Range

Off: No notification

BSS: Tone from the handset or built-in speaker

Programming Guide References

None

Feature Guide References

1.1.3.3 Call Waiting

◆ C. Waiting for Call from CO

Specifies whether to receive call waiting notification for a call from CO line, a doorphone call or a call via an incoming call distribution group.

Default

On

Value Range

Off, On

Programming Guide References

None

Feature Guide References

1.1.3.3 Call Waiting

◆ Pickup Dial Set

Sets or cancels the Hot Line feature. The number specified in **Pickup Dial Number** on this screen is dialed automatically after going off-hook by the Hot Line feature.

Default

Off

Value Range

Off, On

Programming Guide References

4.8.5 Timers & Counters—CO / Extension [2-4-1]—Hot Line (Pickup Dial) Start Timer

Feature Guide References

1.6.1.6 Hot Line

◆ Pickup Dial Number

Specifies the number to be dialed automatically after going off-hook via the Hot Line feature.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, T [Transfer], [,] [Secret], P [Pause], and F [Flash])

Programming Guide References

None

Feature Guide References

1.6.1.6 Hot Line

Option 3

◆ Extension Number

Indicates the extension number of the PS (reference only).

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.14 Portable Station [1-2]

Feature Guide References

None

◆ Extension Name

Specifies the name of the PS. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ Call Pickup Deny

Enables the prevention of calls being picked up by other extensions.

Default

Disable

Value Range

Disable: Allows other extension users to pick up the calls to your PS

Enable: Denies other extension users to pick up the calls to your PS

Programming Guide References

None

Feature Guide References

1.4.1.3 Call Pickup

◆ Executive Override Deny

Enables the prevention of calls being interrupted by other extensions.

Default

Disable

Value Range

Disable: Allows other extension users to interrupt an existing call

Enable: Denies other extension users to interrupt an existing call

Programming Guide References

None

Feature Guide References

1.7.2 Executive Busy Override

◆ CLIP on Extension / CO

Selects the CLIP number to show on the called party's telephone.

Default

Extension

Value Range

Extension: Show the CLIP number specified in **CLIP ID** on **Option 1** tab

CO: Show the CLIP number specified in **Subscriber Number** in **PRI Port [1-6]**.

Programming Guide References

4.7.19 PRI Port [1-6]—CO Setting—Subscriber Number

4.10.1 Wired Extension—Extension Settings [4-1-1]—Option 1—CLIP ID

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ **CLIR**

Enables the restriction to show the CLIP number for public network on the called party's telephone when making a CO line call.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ **COLR**

Enables the restriction to show the CLIP number of the PS on the caller's telephone display when answering a call.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ **Absent Message**

Specifies the Personal Absent Message which, unlike System Absent Message, is a customized message used only by the certain PS. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 16 characters

Programming Guide References

None

Feature Guide References

1.17.2 Absent Message

Option 4

◆ Extension Number

Indicates the extension number of the PS (reference only).

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.14 Portable Station [1-2]

Feature Guide References

None

◆ Extension Name

Specifies the name of the PS. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ Outgoing Preferred Line

Selects the line to be seized after going off-hook to make a call.

Default

ICM

Value Range

No Line: No line is seized.

Idle: An idle CO line is seized automatically from the programmed CO line groups.

ICM: An extension line is seized.

F-1–F-12: A CO line programmed for a flexible CO button (F-1–F-12) is seized. A flexible CO button customized as a Single-CO, Group-CO, Loop-CO, or G-DN button must be selected.

Programming Guide References

4.10.12 Portable Station—Flexible Key [4-2-3]

Feature Guide References

1.5.5.2 Line Preference—Outgoing

◆ **Incoming Preferred Line**

Selects the line on which an incoming call is answered after going off-hook.

Default

Ringing Line

Value Range

No Line: No line is selected. Select a line by pressing the desired Line Access button to answer a call.

Ringing Line: The longest ringing call is selected.

F-1–F-12: The call arriving at a flexible CO button (F-1–F-12) is selected. A flexible CO button customized as a Single-CO, Group-CO, Loop-CO, or G-DN button must be selected.

Programming Guide References

4.10.12 Portable Station—Flexible Key [4-2-3]

Feature Guide References

1.4.1.2 Line Preference—Incoming

◆ **Call Waiting Tone Type**

Selects the type of Call Waiting tone sent to the busy extension.

Default

CW Tone 1

Value Range

CW Tone 1, CW Tone 2

Programming Guide References

None

Feature Guide References

1.7.4.2 Call Waiting Tone

◆ LCS Recording Mode

Specifies whether to continue or stop recording the message in the PS's mailbox after the PS user interrupts the call recording while monitoring.

Default

Stop Record

Value Range

Stop Record, Keep Record

Programming Guide References

None

Feature Guide References

1.21.2 Voice Mail DPT (Digital) Integration

◆ Display Language

Selects the display language of the PS.

Default

Language 1

Value Range

Language 1–Language 5

Programming Guide References

None

Feature Guide References

1.18.4 Display Information

Option 5**◆ Extension Number**

Indicates the extension number of the PS (reference only).

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.14 Portable Station [1-2]

Feature Guide References

None

◆ **Extension Name**

Specifies the name of the PS. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ **Incoming Call Display**

Selects which caller information is shown on the first line of the PS's display.

Default

Caller ID Name

Value Range

Caller ID Name, CO Line Name, DID Name

Programming Guide References

None

Feature Guide References

1.18.4 Display Information

◆ **Automatic LCD Switch when start talking**

Enables the first line of the display to show the call duration automatically after answering a CO line call.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.18.4 Display Information

◆ Flexible Key Programming Mode

Specifies whether the PS user can modify all flexible CO buttons without limitation, or only the One-touch Dialing buttons. When the mode is set to **One-touch Dial Only**, there is no need to enter "2" before the number.

Default

No Limitation

Value Range

No Limitation, One-touch Dial Only

Feature Guide References

None

Option 6

◆ Extension Number

Indicates the extension number of the PS (reference only).

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.14 Portable Station [1-2]

Feature Guide References

None

◆ Extension Name

Specifies the name of the PS. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ **Character Input Mode**

Selects the character table to be used for entering characters.

Default

Table 1

Value Range

Table 1: Standard mode

Table 2: Option mode

Programming Guide References

3.3.1 Programming Instructions

Feature Guide References

None

◆ **Flash mode during CO Conversation**

Selects the function of the FLASH/RECALL button during a CO line conversation.

Default

Flash Recall

Value Range

EFA, Terminate, Flash Recall

Programming Guide References

None

Feature Guide References

1.10.6 Flash/Recall/Terminate

◆ **Incoming Call Log Memory**

Specifies the number of incoming CO line calls that are retained in the PS's Incoming Call Log memory.

Default

10

Value Range

0–100

Programming Guide References

None

Feature Guide References

1.16.2 Incoming Call Log

◆ Outgoing Call Log Memory

Specifies the number of telephone numbers dialed by the PS that are retained in the PS's Outgoing Call Log memory.

Default

5

Value Range

1–100

Programming Guide References

None

Feature Guide References

1.6.1.3 Last Number Redial

◆ ISDN Bearer

Selects the ISDN bearer mode. When **Automatic** is selected, the bearer mode is set automatically depending on the type of the PS.

Default

Automatic

Value Range

Automatic, Speech, Audio

Programming Guide References

None

Feature Guide References

1.6.1.3 Last Number Redial

◆ Group CW w/o Tone (Ring after Call)

Enables an incoming call to an incoming call distribution group to arrive at a previously busy PS at the time of going on-hook after a call.

Default

Enable

Value Range

Disable, Enable

Feature Guide References

None

FWD / DND Reference

Call Forwarding (FWD) and Do Not Disturb (DND) settings for each PS can be referred. FWD and DND settings can be programmed separately for each PS in **Portable Station—FWD/DND [4-2-2]**.

◆ Extension Number

Indicates the extension number of the PS (reference only).

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.7.14 Portable Station [1-2]

Feature Guide References

None

◆ Extension Name

Specifies the name of the PS. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Feature Guide References

None

◆ FWD Set for Call from CO

Indicates the current FWD status for incoming CO line calls (reference only).

Default

Off

Value Range

Off, On

Programming Guide References

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ DND Set for Call from CO

Indicates the current DND status for incoming CO line calls (reference only).

Default

Off

Value Range

Off, On

Programming Guide References

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1.3 Do Not Disturb (DND)

◆ FWD Mode for Call from CO

Indicates the forwarding type of incoming CO line calls (reference only).

Default

None

Value Range

None, FWD ALL, FWD Busy, FWD N/A, FWD Busy N/A

Programming Guide References

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ FWD Destination for Call from CO

Indicates the forwarding destination of incoming CO line calls (reference only).

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ **FWD Set for Call from Extension**

Indicates the current FWD status for incoming intercom calls (reference only).

Default

Off

Value Range

Off, On

Programming Guide References

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ **DND Set for Call from Extension**

Indicates the current DND status for incoming intercom calls (reference only).

Default

Off

Value Range

Off, On

Programming Guide References

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1.3 Do Not Disturb (DND)

◆ **FWD Mode for Call from Extension**

Indicates the forwarding type of incoming intercom calls (reference only).

Default

None

Value Range

None, FWD ALL, FWD Busy, FWD N/A, FWD Busy N/A

Programming Guide References

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ FWD Destination for Call from Extension

Indicates the forwarding destination of incoming intercom calls (reference only).

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ FWD No Answer Time

Indicates the length of time an incoming call rings at the PS before the call is forwarded (reference only).

Default

15 s

Value Range

0–120 s

Programming Guide References

4.10.11 Portable Station—FWD/DND [4-2-2]

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

4.10.10 Portable Station—Extension Settings [4-2-1] CLIP Generate

CLIP Generate allows CLIP numbers to be programmed at once for a set of locations in series. Pre-existing CLIP numbers will be overwritten.

If a number generated here is longer than 16 digits, the additional digits will be discarded.

◆ **Beginning Entry Location (Ext. Number)**

Specifies the extension number of the first location to be programmed.

Default

Not stored.

Value Range

PS extension number

Programming Guide References

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ **Number to Generate**

Specifies the number of locations to be programmed.

A CLIP number will only be assigned to registered PS extensions, even if the number entered here is larger than the total number of PS extensions.

Default

128

Value Range

1–total number of connected wired extensions

Programming Guide References

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ **Deleting Digits**

Specifies the number of digits to be deleted from the start of an extension number when using it as part of the CLIP number.

Default

0

Value Range

0–4

Programming Guide References

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ Head of ID

Specifies a prefix number to be applied to all generated CLIP numbers.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

◆ Tail of ID

Specifies a suffix number to be applied to all generated CLIP numbers.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

4.10.9 Portable Station—Extension Settings [4-2-1]

Feature Guide References

1.19.1.2 Calling Line Identification Presentation (CLIP)

4.10.11 Portable Station—FWD/DND [4-2-2]

For each PS, separate Call Forwarding (FWD) and Do Not Disturb (DND) settings can be programmed for incoming intercom and CO line calls. Select the desired PS from the **Extension Number / Name** list.

◆ Call from CO—Present Button Status

Indicates the current status of the FWD/DND—External button (reference only).

Default

Current status

Value Range

OFF, FWD, DND

Programming Guide References

None

Feature Guide References

1.3.1.1 Call Forwarding (FWD)/Do Not Disturb (DND)—OVERVIEW

◆ **Call from CO—FWD Status Availability**

Turns on or off the FWD feature for incoming CO line calls.

Default

OFF

Value Range

OFF, ON

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ **Call from CO—DND Status Availability**

Turns on or off the DND feature for incoming CO line calls.

Default

OFF

Value Range

OFF, ON

Programming Guide References

None

Feature Guide References

1.3.1.3 Do Not Disturb (DND)

◆ **Call from CO—FWD Mode**

Specifies the circumstances when incoming CO line calls are forwarded.

Default

None

Value Range

None, FWD ALL, FWD Busy, FWD N/A, FWD Busy N/A

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ Call from CO—FWD Destination

Specifies the forwarding destination of incoming CO line calls.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ Call from Extension—Present Button Status

Indicates the current status of the FWD/DND—Internal button (reference only).

Default

Current status

Value Range

OFF, FWD, DND

Programming Guide References

None

Feature Guide References

1.3.1.1 Call Forwarding (FWD)/Do Not Disturb (DND)—OVERVIEW

◆ Call from Extension—FWD Status Availability

Turns on or off the FWD feature for incoming intercom calls.

Default

OFF

Value Range

OFF, ON

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ **Call from Extension—DND Status Availability**

Turns on or off the DND feature for incoming intercom calls.

Default

OFF

Value Range

OFF, ON

Programming Guide References

None

Feature Guide References

1.3.1.3 Do Not Disturb (DND)

◆ **Call from Extension—FWD Mode**

Specifies the circumstances when incoming intercom calls are forwarded.

Default

None

Value Range

None, FWD ALL, FWD Busy, FWD N/A, FWD Busy N/A

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ **Call from Extension—FWD Destination**

Specifies the forwarding destination of incoming intercom calls.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

◆ FWD No Answer Timer

Specifies the length of time an incoming call rings at the PS before the call is forwarded.

Default

15 s

Value Range

0–120 s

Programming Guide References

None

Feature Guide References

1.3.1.2 Call Forwarding (FWD)

4.10.12 Portable Station—Flexible Key [4-2-3]

Each flexible CO button can be customized to allow one-touch access to a certain feature. A maximum of 12 flexible CO buttons can be customized for each PS. Select the desired PS from the **Extension Number / Name** list.

◆ Type

Specifies the feature to be assigned to the flexible button.

Default

Single CO

Value Range

Not Stored, Loop CO, Single CO, Group CO, DSS, One-touch, G-DN, Message Waiting, Fwd/DND (Both), Fwd/DND (External), Fwd/DND (Internal), Group Fwd (Both), Group Fwd (External), Group Fwd (Internal), Account, Conference, Terminate, EFA, Call Park, Log-in/Log-out, Hurry-up, Wrap-up, Time Service, TRS Level Change, CLIR, COLR, Time Service - Automatic / Manual, Two-way Record, Two-way Transfer, LCS, Voice Mail Transfer, NDSS, CTI

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Parameter Selection (for Single CO)

Specifies the CO line to be accessed.

Default

1

Value Range

1–128

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Parameter Selection (for Group CO)

Specifies the CO line group to be accessed.

Default

1

Value Range

1–64

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Parameter Selection (for Call Park)

Specifies whether a call is parked in an idle parking zone automatically, or in a specific parking zone.

Default

Automatic

Value Range

Automatic, Specific

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

- 1.12.2 Call Park
- 1.18.2 Flexible Buttons

◆ Parameter Selection (for Log-in/Log-out)

Specifies which incoming call distribution groups that the PS belongs to are logged-in to or logged-out from.

Default

None

Value Range

None: The incoming call distribution group is selected manually.
 All: All incoming call distribution groups that the PS belongs to.
 Incoming Group: A specified incoming call distribution group

Programming Guide References

- 4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

- 1.2.2.6 Log-in/Log-out
- 1.18.2 Flexible Buttons

◆ Parameter Selection (for Time Service)

Selects which time modes are switched manually.

Default

All

Value Range

All (Day/Night/Lunch/Break), Day/Night/Break, Day/Night/Lunch, Day/Night

Programming Guide References

- 4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

- 1.18.2 Flexible Buttons
- 2.2.4 Time Service

◆ Parameter Selection (for TRS Level Change)

Specifies the TRS level to be used temporarily on a certain PS.

Default

1

Value Range

1–7

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Parameter Selection (for Time Service - Automatic / Manual)**

Specifies the Time Table to be used when the Time Service Switching Mode is set to automatic.

Default

1

Value Range

1–8

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

2.2.4 Time Service

◆ **Ext No. or Floating Ext No. (for DSS)**

Specifies the number of an extension to be accessed.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for G-DN)**

Specifies the floating extension number of an incoming call distribution group to be accessed.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Message Waiting)**

Specifies the number of an extension or floating extension number of an incoming call distribution group for which messages are checked. If this cell is left empty, the PS will check its own messages only.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Group FWD (Both))**

Specifies the floating extension number of an incoming call distribution group to which both intercom and CO line calls are forwarded.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Group FWD (External))**

Specifies the floating extension number of an incoming call distribution group to which CO line calls are forwarded.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Group FWD (Internal))**

Specifies the floating extension number of an incoming call distribution group to which intercom calls are forwarded.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Log-in/Log-out)**

Specifies the floating extension number of an incoming call distribution group to log-in to or log-out from.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Hurry-up)

Specifies the floating extension number of an incoming call distribution group for which Manual Queue Redirection is performed for the longest waiting call.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Two-way Record)

Specifies the floating extension number of the VM (DPT) group containing the PS's mailbox.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Two-way Transfer)

Specifies the floating extension number of the VM (DPT) group containing the desired mailbox.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Voice Mail Transfer)**

Specifies the floating extension number of the VM (DTMF/DPT) group containing the desired mailbox.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Dial (for One-touch)**

Specifies the number to be dialed. The PBX can have a maximum of 500 One-touch Dialing buttons for PSs.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, T [Transfer], [,] [Secret], P [Pause], and F [Flash])

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Optional parameter (or Ringing Tone Type Number) (for Time Service)**

Specifies the Time Table to be used for changing time modes in the Automatic Switching mode.

Default

1

Value Range

1–8

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Optional parameter (or Ringing Tone Type Number) (for Call Park)**

Specifies the number of the parking zone a call is to be parked by pressing the Call Park button whose **Parameter Selection** on this screen is **Specific**.

Default

Not stored.

Value Range

0–99

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.12.2 Call Park

1.18.2 Flexible Buttons

◆ **Extension Number of Mailbox (for Two-way Transfer)**

Specifies the number of the extension whose mailbox will be used to record conversations. (For example, a secretary records a conversation into the mailbox of a boss.) This setting establishes the One-touch Two-way Transfer button. If the cell is left empty, the extension user can specify the number of an extension each time.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

4.10.13 Portable Station—Flexible Key [4-2-3] Flexible Key Data Copy

The flexible CO button settings of a PS can be copied to different PSs. Select the PS that has the settings to copy to other PSs from the **Extension Number / Name** list, then click **Copy To**.

◆ **Destination Extension Line**

Select the number and name of the PS that will receive the copied settings. Multiple PSs can be selected. To select all PSs at once, click **Select All**.

Programming Guide References

4.10.12 Portable Station—Flexible Key [4-2-3]

Feature Guide References

None

4.10.14 Portable Station—NDSS Link Data - Send [4-2-4]

It is possible to cancel the transmission of an extension's status data over the network. Select the desired extension from the **Extension Number / Name** list.

◆ Network BLF Data to NDSS Key of Other PBX - Other PBX (Network PBX ID=1)

Selects whether extension status data is transmitted over the network for the selected extension. This setting can only be changed from **ON** to **OFF**, to cancel data transmission.

Default

OFF

Value Range

OFF, ON

Programming Guide References

4.15.4 NDSS Key Table [9-4]

Feature Guide References

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

4.10.15 DSS Console—Main [4-3-1]

A DSS Console can be used in conjunction with a PT. A maximum of 8 DSS Consoles can be programmed. The **DPT Property–Type** of the extension port that DSS Console is connected must be set to **DSS** in **Extension Port [1-8]**.

◆ DSS Console Type

Indicates the status of the extension port that the DSS Console is connected (reference only).

Default

Current status

Value Range

DSS, No Connection

Programming Guide References

4.7.23 Extension Port [1-8]—DPT Property—Type (for DPT or S-Hybrid port)

Feature Guide References

None

◆ Pair Extension Number

Specifies the extension number of the PT to be used in pair with the DSS Console.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

2.1.1 Extension Port Configuration

4.10.16 DSS Console—Flexible Key [4-3-2]

Each flexible DSS button can be customized to access a certain feature. A maximum of 66 flexible DSS buttons can be customized for each DSS Console. Select the desired DSS Console from the **DSS Console No./ Pair Extension** list.

◆ Type

Specifies the feature to be assigned to the flexible DSS button.

Default

Not Stored

Value Range

Not Stored, Loop CO, Single CO, Group CO, DSS, One-touch, G-DN, Message Waiting, Fwd/DND (Both), Fwd/DND (External), Fwd/DND (Internal), Group Fwd (Both), Group Fwd (External), Group Fwd (Internal), Account, Conference, Terminate, EFA, Call Park, Call Log, Log-in/Log-out, Hurry-up, Wrap-up, System Alarm, Time Service, Answer, Release, TRS Level Change, CLIR, COLR, Headset, Time Service - Automatic / Manual, Check In, Check Out, Two-way Record, Two-way Transfer, LCS, Voice Mail Transfer, NDSS, CTI

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Parameter Selection (for Single CO)**

Specifies the CO line to be accessed.

Default

1

Value Range

1–128

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Parameter Selection (for Group CO)**

Specifies the CO line group to be accessed.

Default

1

Value Range

1–64

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Parameter Selection (for Call Park)**

Specifies whether a call is parked in an idle parking zone automatically or in a specific parking zone.

Default

Automatic

Value Range

Automatic, Specific

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.12.2 Call Park

1.18.2 Flexible Buttons

◆ Parameter Selection (for Log-in/Log-out)

Specifies which incoming call distribution groups that the paired extension belongs to are logged-in to or logged-out from.

Default

None

Value Range

None: The incoming call distribution group is selected manually.

All: All incoming call distribution groups that the paired extension belongs to.

Incoming Group: A specified incoming call distribution group

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.2.2.6 Log-in/Log-out

1.18.2 Flexible Buttons

◆ Parameter Selection (for Time Service)

Selects which time modes are switched manually.

Default

All

Value Range

All (Day/Night/Lunch/Break), Day/Night/Break, Day/Night/Lunch, Day/Night

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

2.2.4 Time Service

◆ Parameter Selection (for TRS Level Change)

Specifies the TRS level to be used temporarily on a certain extension.

Default

1

Value Range

1–7

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Parameter Selection (for Time Service - Automatic / Manual)**

Specifies the Time Table to be used when the Time Service Switching Mode is set to automatic.

Default

1

Value Range

1–8

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

2.2.4 Time Service

◆ **Ext No. or Floating Ext No. (for DSS)**

Specifies the number of an extension to be accessed.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for G-DN)**

Specifies the floating extension number of an incoming call distribution group to be accessed.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Message Waiting)**

Specifies the number of an extension or floating extension number of an incoming call distribution group for which messages are checked. If this cell is left empty, the paired extension will check its own messages only.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Group FWD (Both))**

Specifies the floating extension number of an incoming call distribution group to which both intercom and CO line calls are forwarded.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Group FWD (External))**

Specifies the floating extension number of an incoming call distribution group to which CO line calls are forwarded.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Group FWD (Internal))**

Specifies the floating extension number of an incoming call distribution group to which intercom calls are forwarded.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Call Log)**

Specifies the paired extension's number or the floating extension number of an incoming call distribution group for which call log information is displayed. If the cell is left empty, the paired extension will display its own call log information.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Log-in/Log-out)**

Specifies the floating extension number of an incoming call distribution group to log-in to or log-out from.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Hurry-up)

Specifies the floating extension number of an incoming call distribution group for which Manual Queue Redirection is performed for the longest waiting call.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Two-way Record)

Specifies the floating extension number of the VM (DPT) group containing the paired extension's mailbox.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Ext No. or Floating Ext No. (for Two-way Transfer)

Specifies the floating extension number of the VM (DPT) group containing the desired mailbox.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Ext No. or Floating Ext No. (for Voice Mail Transfer)**

Specifies the floating extension number of the VM (DTMF/DPT) group containing the desired mailbox.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Dial (for One-touch)**

Specifies the number to be dialed. The PBX can have a maximum of 1000 One-touch Dialing buttons for extensions and DSS Consoles.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, T [Transfer], [,] [Secret], P [Pause], and F [Flash])

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ **Optional parameter (or Ringing Tone Type Number) (for Time Service)**

Specifies the Time Table to be used for changing time modes in the Automatic Switching mode.

Default

1

Value Range

1–8

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Optional parameter (or Ringing Tone Type Number) (for Loop CO, Single CO, Group CO, G-DN)

Specifies the ring tone type.

Default

1

Value Range

1–30

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

◆ Optional parameter (or Ringing Tone Type Number) (for Call Park)Specifies the number of the parking zone a call is to be parked by pressing the Call Park button whose **Parameter Selection** on this screen is **Specific**.**Default**

Not stored.

Value Range

0–99

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.12.2 Call Park

1.18.2 Flexible Buttons

◆ **Extension Number of Mailbox (for Two-way Transfer)**

Specifies the number of the extension whose mailbox will be used to record conversations. (For example, a secretary records a conversation into the mailbox of a boss.) This setting establishes the One-touch Two-way Transfer button. If the cell is left empty, the paired extension user can specify the number of an extension each time.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

Feature Guide References

1.18.2 Flexible Buttons

4.10.17 DSS Console—Flexible Key [4-3-2] Flexible Key Data Copy

The flexible DSS button settings of a DSS Console can be copied to different DSS Consoles. Select the DSS Console that has the setting to copy to other DSS Consoles from the **DSS Console No./ Pair Extension** list, then click **Copy To**.

◆ **Destination DSS Console**

Select the number of the DSS Console and paired extension. Multiple DSS Consoles can be selected. To select all DSS Consoles at once, click **Select All**.

Programming Guide References

4.10.16 DSS Console—Flexible Key [4-3-2]

Feature Guide References

None

4.11 Optional Device [5]

4.11.1 Doorphone [5-1]

The settings to establish doorphone calls can be programmed.

◆ **Physical—Slot**

Indicates the slot position (reference only).

Default

Current slot number

Value Range

Slot number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

1.15.1 Doorphone Call

◆ **Physical—Port**

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

1.15.1 Doorphone Call

◆ **Name**

Specifies the doorphone name. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.15.1 Doorphone Call

◆ **Destination—Day, Lunch, Break, Night**

Specifies the destination number of doorphone calls for each port in each time mode.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [,] [Secret], and P [Pause])

Programming Guide References

4.8.8 Time Service—Week Table [2-5-1]

Feature Guide References

1.15.1 Doorphone Call

◆ **Tenant Number**

Specifies the tenant number for the doorphone port in order to apply the Time Table (day/lunch/break/night).

Default

1

Value Range

1–8

Programming Guide References

None

Feature Guide References

1.15.1 Doorphone Call

◆ **COS**

Specifies the Class of Service (COS) number. COS programming determines the doorphone ports that are able to make CO line calls, and sets restrictions on intercom calls from certain extensions (Internal Call Block).

Default

1

Value Range

1–64

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]—TRS / CO—TRS Level—Day, Lunch, Break, Night

4.8.17 Class of Service—Internal Call Block [2-7-3]

Feature Guide References

1.1.2.2 Internal Call Block

1.15.1 Doorphone Call

◆ VM Trunk Group Number

Specifies the number of the VPS trunk (CO line) group sent to the VPS when the doorphone call destination is the floating extension number of a VM (DPT) group.

The VPS trunk (CO line) group number is used to send the applicable company greeting message of the VPS to the caller.

Default

1

Value Range

1–48

Programming Guide References

None

Feature Guide References

1.15.1 Doorphone Call

1.21.2 Voice Mail DPT (Digital) Integration

4.11.2 External Pager [5-2]

Settings for external pagers (external speakers) can be specified.

◆ Floating Extension Number

Specifies the floating extension number of the external pager.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.14.1 Paging

1.15.3 Trunk Answer From Any Station (TAFAS)

1.15.4 Background Music (BGM)

◆ Name

Specifies the name of the external pager. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.14.1 Paging

1.15.3 Trunk Answer From Any Station (TAFAS)

1.15.4 Background Music (BGM)

4.11.3 DISA—System Setting [5-3-1]

Direct Inward System Access (DISA) enables outside callers to access specific PBX features as if the caller were an SLT extension user on the PBX.

◆ DISA Security Mode

Selects the DISA security mode to prevent unauthorized access to the PBX. In Trunk (CO Line) or All Security mode, the caller is required to override security by Walking COS or Verified Code Entry in order to enable the restricted feature temporarily.

Default

Trunk

Value Range

None: Intercom calls, TIE line calls, and CO line calls can be made.

Trunk: Intercom calls and TIE line calls without PBX code can be made. TIE line calls with PBX code and CO line calls are restricted.

All: All calls are restricted.

Programming Guide References

None

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ Mode when the Destination through DISA is Busy

Selects how DISA calls are handled if the destination is busy, and disables Call Waiting, FWD, or Idle Extension Hunting.

Default

Busy Tone

Value Range

Busy Tone, Intercept, OGM

Programming Guide References

None

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ Mode when the Destination through DISA sets DND

Selects how DISA calls are handled if the destination sets DND, and disables Idle Extension Hunting.

Default

Busy Tone

Value Range

Busy Tone, Intercept, OGM

Programming Guide References

None

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ Mode when DISA receives DTMF "*"

Selects what to do when the caller dials "*" during a DISA CO-to-CO line conversation.

Default

DISA Top Menu

Value Range

DISA Top Menu, Send DTMF "*"

Programming Guide References

None

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ Cyclic Tone Detection

Selects the cyclic tone detection mode. Cyclic tone detection is used to determine the end of a call for a DISA CO-to-CO line conversation established through an analog CO line.

To change **Cyclic Tone Detection**, follow the steps below:

 
1. Change **Cyclic Tone Detection**.
2. Set the status of the OPB3 card to "OUS", then "INS".

Default

Fixed

Value Range

Fixed: The number of times of a tone pattern (a set of tone-on and tone-off) that the PBX receives is fixed to 4 times in the ranges of:



Ⓐ, Ⓑ = 100–1300 ms, Ⓒ = Ⓐ ±90 ms, Ⓓ = Ⓑ ±90 ms

Option: The tone pattern that the PBX receives is optional as specified in **Cyclic Tone Option** on this screen.

Programming Guide References

4.7.10 Slot [1-1] OPB

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ Cyclic Tone Option—Tone On Maximum Time

Specifies the maximum duration of the cyclic tone that will be recognized by the PBX. When the tone sent from the telephone company is shorter than the value set here, the PBX recognizes it as a tone-on.

To change **Cyclic Tone Option**, follow the steps below:

1. Change **Cyclic Tone Option**.
2. Set the status of the OPB3 card to "OUS", then "INS".

Default

600 ms

Value Range

$100 + 10 \times n$ ($n=1-390$) ms

Programming Guide References

4.7.10 Slot [1-1] OPB

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ Cyclic Tone Option—Tone Off Maximum Time

Specifies the maximum time the PBX waits for a cyclic tone to be sent from the telephone company before recognizing it as a tone-off. When no tone is detected within the time set here, the PBX recognizes it as a tone-off.

To change **Cyclic Tone Option**, follow the steps below:

1. Change **Cyclic Tone Option**.
2. Set the status of the OPB3 card to "OUS", then "INS".

Default

600 ms

Value Range

100 + 10 x n (n=1–390) ms

Programming Guide References

4.7.10 Slot [1-1] OPB

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

◆ Repeating Times of On / Off for Detection

Specifies the number of times the tone pattern (a set of tone-on and tone-off) must be received to establish reception of the cyclic tone. This determines the end of call.

Default

3

Value Range

3–16

Programming Guide References

None

Feature Guide References

1.15.6 Direct Inward System Access (DISA)

4.11.4 DISA—Message Setting [5-3-2]

Outgoing messages (OGM) for DISA calls can be specified. A maximum of 64 OGMs can be programmed.

◆ Floating Extension Number

Specifies the floating extension number of the OGM.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.15.5 Outgoing Message (OGM)

1.15.6 Direct Inward System Access (DISA)

◆ Name

Specifies the name of the OGM. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.15.5 Outgoing Message (OGM)

1.15.6 Direct Inward System Access (DISA)

◆ 1 Digit AA Destination (Extension Number)—Dial 0–9

Specifies the destination for each DISA Automated Attendant (AA) number. After listening to an OGM, the caller can be directed to the destination by dialing a 1-digit DISA AA number.

Default

Not stored.

Value Range

Max. 5 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

- 1.15.5 Outgoing Message (OGM)
- 1.15.6 Direct Inward System Access (DISA)

◆ **Busy/DND Message No.**

Selects the OGM to be played for the caller when the destination party is busy or sets DND.

Default

None

Value Range

None, 1–64

Programming Guide References

- 4.11.3 DISA—System Setting [5-3-1]

Feature Guide References

- 1.15.6 Direct Inward System Access (DISA)

4.11.5 External Relay [5-4]

Settings related to external relays can be programmed.

◆ **External Relay No.**

Indicates the number of the external relay (reference only).

Default

Current external relay number.

Value Range

1–16

Programming Guide References

None

Feature Guide References

- 1.15.8 External Relay Control

◆ **Physical Location—Slot**

Indicates the slot position (reference only).

Default

Current slot and sub-slot number.

Value Range

Slot and sub-slot number.

Programming Guide References

None

Feature Guide References

1.15.8 External Relay Control

◆ **Physical Location—Port**

Indicates the port number (reference only).

Default

Current port number.

Value Range

Port number.

Programming Guide References

None

Feature Guide References

1.15.8 External Relay Control

◆ **Name**

Specifies the relay name.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.15.8 External Relay Control

◆ **Relay Activate Time**

Specifies the length of time that the relay stays on when activated.

Default

5 s

Value Range

1–7 s

Programming Guide References

None

Feature Guide References

1.15.8 External Relay Control

◆ COS Number

Specifies the Class of Service (COS) number. COS programming determines the extensions that are able to activate relays.

Default

1

Value Range

1–64

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]—External Relay Access

Feature Guide References

1.15.8 External Relay Control

4.11.6 External Sensor [5-5]

Settings related to external sensors can be programmed.

◆ External Sensor No.

Indicates the number of the external sensor (reference only).

Default

Current external sensor number.

Value Range

1–16

Programming Guide References

None

Feature Guide References

1.15.7 External Sensor

◆ **Physical Location—Slot**

Indicates the slot position (reference only).

Default

Current slot and sub-slot number.

Value Range

Slot and sub-slot number.

Programming Guide References

None

Feature Guide References

1.15.7 External Sensor

◆ **Physical Location—Port**

Indicates the port number (reference only).

Default

Current port number.

Value Range

Port number.

Programming Guide References

None

Feature Guide References

1.15.7 External Sensor

◆ **Sensor Name**

Specifies the sensor name.

Default

Sensor

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.15.7 External Sensor

◆ Destination—Day, Lunch, Break, Night

Specifies the destination number of sensor calls for each port in each time mode.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, [] [Secret], and P [Pause])

Programming Guide References

None

Feature Guide References

1.15.7 External Sensor

◆ Tenant No.

Specifies the tenant to which the sensor belongs, to determine the Time Table for the sensor. (The tenant number corresponds to the Time Table number.)

Default

1

Value Range

1–8

Programming Guide References

4.8.8 Time Service—Week Table [2-5-1]

Feature Guide References

1.15.7 External Sensor

4.12 Feature [6]

4.12.1 Speed Dialing & Caller ID—Main Table [6-1-1]

The System Speed Dial Table is used to store frequently dialed numbers as well as callers that should be automatically routed to certain extensions when they call (Calling Line Identification [CLI] distribution). The System Speed Dialing Table is available for all extension users when making or receiving a call.

A maximum of 1000 System Speed Dialing numbers (e.g., telephone numbers, feature numbers) can be programmed with other related parameters. Select the desired System Speed Dialing numbers from the **System Speed Dialing No.** list.

◆ Tenant No.

Select the number of the tenant whose System Speed Dialing Table will be programmed. This option is only displayed when an MEC card is installed. Whether a tenant uses the common System Speed Dialing Table or the exclusive tenant table depends on the setting of **System Speed Dial** in **4.12.8 Tenant [6-6]**.

Value Range

1–8

Programming Guide References

4.12.8 Tenant [6-6]—System Speed Dial

Feature Guide References

1.6.1.4 Speed Dialing—Personal/System

1.16.1 Caller ID

◆ Reference

Displays the System Speed Dialing Table currently being programmed (reference only). This setting is only displayed when an MEC card is installed.

Value Range

System: The selected tenant is using the common System Speed Dialing Table.

Exclusive: The selected tenant is using that tenant's own private System Speed Dialing Table.

Programming Guide References

4.12.8 Tenant [6-6]—System Speed Dial

Feature Guide References

1.6.1.4 Speed Dialing—Personal/System

1.16.1 Caller ID

◆ Name

Specifies a name for the System Speed Dialing number. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.6.1.4 Speed Dialing—Personal/System

1.16.1 Caller ID

◆ **CO Line Access Number + Telephone Number**

Specifies the telephone number (including the CO Line Access number) or feature number assigned to the System Speed Dialing number.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, T [Transfer], [,] [Secret], P [Pause], and F [Flash])

Programming Guide References

None

Feature Guide References

1.6.1.4 Speed Dialing—Personal/System

1.16.1 Caller ID

◆ **CLI Destination**

Specifies the CLI destination (extension) to which incoming calls from the programmed telephone number are routed. If a Caller ID Modification Table is being used, the modified number must match the telephone number above (**CO Line Access Number + Telephone Number**) in order for the call to be routed correctly.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.16.2 DIL Table & Port Setting [10-2]—CLI for DIL—CLI Ring for DIL—Day, Lunch, Break, Night

4.16.3 DID Table [10-3]—CLI Ring for DID—Day, Lunch, Break, Night

Feature Guide References

- 1.1.1.4 Calling Line Identification (CLI) Distribution
- 1.16.1 Caller ID

4.12.2 Speed Dialing & Caller ID—Caller ID Modification [6-1-2]

The telephone numbers of incoming callers can be modified automatically by a Caller ID Modification Table, and then recorded for calling back.

The PBX looks for incoming telephone numbers that begin with an area code programmed in the Caller ID Modification Table assigned to that CO line group. If it finds such a code, it removes digits and adds a number to the telephone number. If this modified telephone number is stored as a System Speed Dialing number, the caller's name can be shown on a PT display and the call can be routed to a certain extension (CLI destination). A maximum of 4 Caller ID Modification Tables, each containing 10 local/international call data and 1 long distance code, can be programmed. Each CO line group can select a table for use. Select the desired table from the **Modification Table** list.

If the telephone number does not contain an area code programmed here, it is modified based on the Long Distance Code settings.

◆ Area Code (for Local / International Call Data 1–10)

Specifies the leading number (area code) to look for in the incoming caller's number.

Default

Not stored.

Value Range

Max. 6 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

- 1.16.1 Caller ID

◆ Removed Number of Digits

Specifies the number of digits to be removed from the beginning of the incoming caller's number.

Default

Local / International Call Data 1–10: 3
Long Distance Code: 0

Value Range

0–9

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

◆ Added Number

Specifies the number to be added to the incoming caller's number in the place of the removed digits.

Default

Local / International Call Data 1–10: Not stored.

Long Distance Code: 1 (fixed)

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

4.12.3 Speed Dialing & Caller ID—ISDN CLIP Modification [6-1-3]

When incoming caller information is sent through an ISDN line and the type of the network numbering plan is International, National, or Subscriber, the caller's number can be modified as programmed in the Modification Tables assigned to the CO line group. The modified number will then be recorded, and it is used for sending to the network as a CLIP number.

A maximum of 4 ISDN CLIP Modification Tables can be programmed. Select the desired table from the **Modification Table** list.

◆ Removed Number of Digits

Specifies the number of leading digits to be removed from the incoming caller's number for each type of the network numbering plan.

Default

0

Value Range

0–9

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

◆ Added Number

Specifies the number to be added to the incoming caller's number in the place of the removed digits for each type of the network numbering plan.

Default

International: 011
National: 1
Subscriber: Not stored.

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.16.1 Caller ID

4.12.4 Emergency Dial [6-2]

Any extension user can dial the programmed emergency numbers at any time after seizing a CO line. The restrictions imposed on the extension, such as Toll Restriction (TRS), Account Code—Forced mode, and Extension Lock are disregarded.

A maximum of 10 emergency numbers can be programmed.

◆ Emergency Number

Specifies the numbers used for making emergency calls. It is not necessary to start the emergency number with a CO Line Access number.

Default

1: 911, 2–10: Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, T [Transfer], [,] [Secret], P [Pause], and F [Flash])

Programming Guide References

None

Feature Guide References

1.5.4.2 Emergency Call

4.12.5 Verified Code [6-3]

A verified code is used to override the Toll Restriction (TRS) of the extension in use to make a certain CO line call, or to identify the call for accounting and billing purposes.

A maximum of 1000 verified codes can be programmed with other related parameters.

◆ **Verified Code**

Specifies the verified code.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.8.5 Verified Code Entry

◆ **User Name**

Specifies the user name assigned to the verified code. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.8.5 Verified Code Entry

◆ **Verified Code PIN**

Specifies the PIN to be entered when making a CO line call with the verified code.

Default

Not stored.

Value Range

Max. 10 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.8.5 Verified Code Entry

◆ **COS Number**

Specifies the COS that applies when making a CO line call with the verified code.

Default

1

Value Range

1–64

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]

Feature Guide References

1.8.5 Verified Code Entry

◆ **Itemized Billing Code for ARS**

Specifies the itemized billing code used by the ARS feature for identifying calls made with a verified code for accounting and billing purposes.

Default

Not stored.

Value Range

Max. 10 digits (consisting of 0–9, *, and #)

Programming Guide References

4.14.5 Carrier [8-5]

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

4.12.6 Second Dial Tone [6-4]

A programmed Pause time can be inserted automatically between the Second Dial Tone Waiting code and the following digits. When a programmed Second Dial Tone Waiting code is dialed after seizing a CO line, a preprogrammed number of pauses are inserted after the code.

A maximum of 100 Second Dial Tone Waiting codes can be programmed.

◆ **Second Dial Tone Waiting Code**

Specifies the Second Dial Tone Waiting code.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.5.4.5 Pause Insertion

◆ Pause Repeating Counter

Specifies the number of pauses to be inserted when waiting for the second dial tone.

Default

1

Value Range

0–20

Programming Guide References

None

Feature Guide References

1.5.4.5 Pause Insertion

4.12.7 Absent Message [6-5]

When a display PT user calls an extension, a message is shown on the caller's telephone display describing the reason for absence. A maximum of 8 Absent Messages can be programmed, and any extension user can select one of them.

◆ Absent Message

Specifies the message according to need. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

- 1: Will Return Soon
- 2: Gone Home
- 3: At Ext %%%% (Extension Number)
- 4: Back at %:%% (Hour:Minute)
- 5: Out until %%/%% (Month/Day)
- 6: In a Meeting
- 7 and 8: Not stored.

Value Range

Max. 16 characters

Programming Guide References

None

Feature Guide References

1.17.2 Absent Message

4.12.8 Tenant [6-6]

A maximum of 8 tenants can share the PBX. The tenant members consist of extension groups. The PBX offers each tenants its own Time Table and system resource for each tenant.

◆ Music on Hold

Specifies the audio source to be used for Music on Hold.

Default

Same as System Setting

Value Range

Same as System Setting, BGM 1, BGM 2, Tone

Programming Guide References

4.8.4 BGM / Music on Hold [2-3]

Feature Guide References

1.12.4 Music on Hold

2.2.3 Tenant Service

◆ Operator (Extension Number)

Specifies the extension number or floating extension number of an incoming call distribution group to be designated as the tenant operator. When this parameter is left unspecified, a PBX operator serves as the tenant operator.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.8.3 PBX Operator [2-2]

Feature Guide References

2.2.3 Tenant Service

2.2.5 Operator Features

◆ ARS Mode

Specifies the ARS mode used when making a CO line call.

Default

Same as System Setting

Value Range

Off: ARS is disabled.

On for Local Access Operation: ARS operates when an extension user makes a call using any Idle Line Access method.

On for Any CO Access Operation: ARS operates when an extension user makes a call using any CO Line Access method.

Same as System Setting: The setting specified in **ARS Mode** in **System Setting [8-1]** is applied.

Programming Guide References

4.14.1 System Setting [8-1]

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

2.2.3 Tenant Service

◆ System Speed Dial

Specifies which system speed dialing table is used by the tenant. This setting is only available when an MEC card is installed.

Default

Same as System Setting

Value Range

Same as System Setting: PBX common system speed dialing numbers are used.

Tenant Exclusive: Individual tenant system speed dialing numbers are used.

Programming Guide References

4.12.1 Speed Dialing & Caller ID—Main Table [6-1-1]

Feature Guide References

1.6.1.4 Speed Dialing—Personal/System

4.12.9 Dialing Plan [6-7]

The PBX sends all of the dialed digits at once after an extension user completes dialing. The PBX can recognize the end of dialing when the dialed telephone number starts with the programmed leading number and contains the programmed total number of digits.

When the PBX recognizes the end of dialing to an analog CO line, the PBX cancels the muting of the caller's voice sent to the analog CO line immediately. If the PBX cannot recognize the end of dialing, the PBX mutes the caller's voice sent to the analog CO from the time at which the last digits is dialed until the analog CO

inter digit timer expires.

4 tables can be programmed, each with a maximum of 50 leading numbers. The leading number table used with each trunk (CO line) group can be specified in **Dialing Plan Table** in **TRG Settings [3-1-1]**.

◆ **Leading Number**

Specifies the leading number to be regarded as the beginning of dialing.

Default

No. 1 in Dialing Plan Table 1: N11

No. 2 in Dialing Plan Table 1: NXX NXX XXXX

No. 3 in Dialing Plan Table 1: 1NXX NXX XXXX

Others: Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, N [2,3,4,5,6,7,8,9], P [0, 1], and X [0-9, *, and #])

Programming Guide References

4.8.5 Timers & Counters—CO / Extension [2-4-1]—Analog CO First Digit Timer to Mute Caller's Voice during Dialing

4.8.5 Timers & Counters—CO / Extension [2-4-1]—Analog CO Inter Digit Timer to Mute Caller's Voice during Dialing

Feature Guide References

1.19.1.1 Integrated Services Digital Network (ISDN)—OVERVIEW

4.12.10 Dialing Plan [6-7] Auto Assign

It is possible to assign a set of leading numbers automatically.

◆ **Select Auto Assigning Table**

Selects the set of preset leading number values to assign to the active dialing plan table. When TypeD is selected, you will be prompted to enter a 3-digit area code, and 7 "X"s, in cells 1 through 47 of the dialing plan table.

Default

Type A

Value Range

TypeA: 1:N11, 2:NXX XXXX, 3:1NXX NXX XXXX, 4-50: Not stored

TypeB: 1:N11, 2:NNX XXXX, 3:1NPX NXX XXXX, 4-50: Not stored

TypeC: 1:N11, 2:NXX XXXX, 3:1NNX XXXX, 4:1NPX NXX XXXX, 5-50: Not stored

TypeD: 1-47: Not stored, 48:N11, 49:NXX XXXX, 50:1NXX NXX XXXX

TypeE: 1:N11, 2:NXX NXX XXXX, 3:1NXX NXX XXXX, 4-50: Not stored

Programming Guide References

4.12.9 Dialing Plan [6-7]

Feature Guide References

None

4.12.11 Hotel [6-8]

Various settings related to the hospitality features of the PBX can be set.

◆ Hotel Operator

Specifies the number of the extension designated as the hotel operator.

Default

101

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.24.1 Hospitality Features—SUMMARY

◆ Room Status Printout (SMDR)

Selects whether check-in and check-out data is output on SMDR.

Default

No Print

Value Range

No Print, Print

Programming Guide References

4.17.1 SMDR [11-1]

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ Wakeup Call Printout (SMDR)

Selects whether Timed Reminder data is output on SMDR.

Default

No Print

Value Range

No Print, Print

Programming Guide References

4.17.1 SMDR [11-1]

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ **Printing Message 1–8**

Specifies the text of the message output on SMDR when this Printing Message is selected from an extension.

The "%" character can be used in a message, and requires a number to be entered in its place when the message is selected from an extension. This character can be used a maximum of seven times in a Printing Message.

Default

Not stored.

Value Range

Max. 16 characters

Programming Guide References

4.17.1 SMDR [11-1]

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

4.13 TRS [7]

4.13.1 Denied Code [7-1]

Toll Restriction (TRS) prohibits an extension from making certain CO line calls. Each time mode of every COS is assigned one of the seven TRS levels. TRS level 7 provides the maximum restriction (all CO line calls are prohibited) and level 1 provides the minimum (all CO line calls are allowed). TRS levels 2–6 are used to restrict calls according to the combination of **Denied Code Tables** and **Exception Code Tables** in **Exception Code [7-2]**.

If the leading digits of the dialed number are not found in the applicable Denied Code Tables, the call is made. A maximum of 100 denied codes can be programmed for each level.

◆ Denied Code Tables—Level 2–Level 6

Specifies the leading digits of toll restricted numbers for each level.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, #, and X)

Note

"X" can be used as a wild card character which substitutes any digit in its position.

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]—TRS / CO—TRS Level—Day, Lunch, Break, Night

4.13.2 Exception Code [7-2]

Feature Guide References

1.8.1 Toll Restriction (TRS)

4.13.2 Exception Code [7-2]

Toll Restriction (TRS) prohibits an extension from making certain CO line calls. Each time mode of every COS is assigned one of the seven TRS levels. TRS level 7 provides the maximum restriction (all CO line calls are prohibited) and level 1 provides the minimum (all CO line calls are allowed). TRS levels 2–6 are used to restrict calls according to the combination of **Denied Code Tables** in **Denied Code [7-1]** and **Exception Code Tables**.

A call denied by the applicable Denied Code Tables is checked against the applicable Exception Code Tables, and if a match is found, the call is made. A maximum of 100 exception codes can be programmed for each level.

◆ Exception Code Tables—Level 2–Level 6

Specifies the leading digits of the numbers to be exempted from toll restriction for each level.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, #, and X)

Note

"X" can be used as a wild card character which substitutes any digit in its position.

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]—TRS / CO—TRS Level—Day, Lunch, Break, Night
4.13.1 Denied Code [7-1]

Feature Guide References

1.8.1 Toll Restriction (TRS)

4.13.3 Special Carrier [7-3]

If the PBX has access to multiple telephone companies, a Special Carrier Access Code is required each time a CO line call is made. By programming these Special Carrier Access Codes here, Toll Restriction (TRS) can restrict or allow calls to be made by ignoring the codes and looking at the telephone number only. If a Special Carrier Access Code is found in the dialed number, TRS will look only at the following digits. A maximum of 20 Special Carrier Access Codes can be programmed.

◆ Special Carrier Access Code

Specifies a Special Carrier Access Code. Special Carrier Access Codes and Host PBX Access codes should be unique.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.5.4.7 Special Carrier Access Code
1.8.1 Toll Restriction (TRS)

4.13.4 Miscellaneous [7-4]

Toll Restriction (TRS) prohibits an extension from making certain CO line calls. Five optional settings can be programmed to activate a TRS check or to override TRS.

◆ TRS Override by System Speed Dialing

Enables an outgoing CO line call to override TRS when the call is made using System Speed Dialing.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

4.12.1 Speed Dialing & Caller ID—Main Table [6-1-1]

Feature Guide References

1.8.1 Toll Restriction (TRS)

◆ TRS Check for dial "*" #"

Enables a TRS check for the user-dialed "*" and "#". This is useful in preventing unauthorized calls which could possibly be made through certain telephone company exchanges.

Default

No Check

Value Range

No Check, Check

Programming Guide References

None

Feature Guide References

1.8.1 Toll Restriction (TRS)

◆ Mode when Dial Time-out before TRS Check

Selects whether a CO line is disconnected if the TRS/Barring check has not been completed when the CO line Inter-digit timer expires.

Default

Keep

Value Range

Disconnect: The CO line is disconnected as soon as the timer expires.

Keep: The TRS/Barring check is performed when the timer expires.

Programming Guide References

None

Feature Guide References

1.8.1 Toll Restriction (TRS)

◆ Dial Digits Limitation after Answering

Specifies a limit to be placed on the number of digits which can be dialed after an extension user receives a CO line call. If the number of dialed digits exceeds the programmed limit, the line will be disconnected.

Default

None

Value Range

None, 1–7

Programming Guide References

None

Feature Guide References

1.8.1 Toll Restriction (TRS)

◆ TRS Check after EFA

Enables TRS to check the digits dialed after External Feature Access (EFA) during a CO line call.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.8.1 Toll Restriction (TRS)

1.10.7 External Feature Access (EFA)

4.14 ARS [8]

4.14.1 System Setting [8-1]

Automatic Route Selection (ARS) automatically selects the appropriate carrier at the time a CO line call is made, according to the programmed settings. The user-dialed number will be checked and modified in order to connect it to the appropriate carrier.

◆ ARS Mode

Selects the condition to determine when to operate ARS.

Default

Off

Value Range

Off: ARS is disabled.

On for Local Access Operation: ARS operates when an extension user makes a call using Idle Line Access method.

On for Any CO Access Operation: ARS operates when an extension user makes a call using Idle Line Access, CO Line Access, or S-CO Line Access method.

Programming Guide References

None

Feature Guide References

1.5.5.3 CO Line Access

1.9.1 Automatic Route Selection (ARS)

◆ Mode When Any Carrier is not Programmed for the Dial

Selects what happens when the dialed number is not found in **Leading Number** in **Leading Number [8-2]**.

Default

Local Access

Value Range

Disconnect: the line will be disconnected.

Local Access: the dialed number will be handled by Idle Line Access method.

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

4.14.2 Leading Number [8-2]

Specifies the area codes and/or telephone numbers as leading numbers that will be routed by the ARS feature. A maximum of 1000 different leading numbers can be programmed, and each leading number can select a Routing Plan Table number, which determines the ARS procedure.

Each leading number can also specify the additional (remaining) number of digits. The additional (remaining) number of digits must be specified only when "#", for example, is needed after the dialed number. The "#" will be added after the programmed number of digits of the user-dialed number (excluding the leading number).

◆ Leading Number

Specifies the leading number.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, #, and X)

Note

"X" can be used as a wild card character which substitutes any digit in its position.

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

◆ Additional Number of Digits

Specifies the additional (remaining) number of digits following each leading number.

Default

0

Value Range

0–15

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

◆ Routing Plan Number

Specifies the Routing Plan Table number used for each leading number.

Default

1

Value Range

1–16

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

4.14.3 Routing Plan Time [8-3]

The start times of a maximum of 4 different time blocks (Time-A through D) can be programmed for each day of the week. There are 16 Routing Plan Tables, and each Routing Plan Table can have its own time blocks. Select the desired Routing Plan Table number from the **Routing Plan** list.

◆ Time-A–Time-D—Setting

Enables the setting of the start time for each time block.

Default

Time-A–Time-C: Enable

Time-D: Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

◆ Time-A–Time-D—Hour, Minute

Specifies the start time for each time block.

Default

Time-A: 8:00, Time-B: 17:00, Time-C: 21:00, Time-D: Not applicable.

Value Range

00:00–23:59

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

4.14.4 Routing Plan Priority [8-4]

The carrier priority (1 through 6) in a Routing Plan Table can be programmed for each time zone of each day of the week. Select the desired Routing Plan Table number and the desired day of the week from the **Routing Plan** and **Week** lists.

◆ Time-A–Time-D

Specifies the carrier priority for each time zone.

Default

None

Value Range

None, 01–10

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

4.14.5 Carrier [8-5]

Carrier

The way to modify user-dialed numbers for connecting the appropriate carrier can be determined. A maximum of 10 different carriers can be programmed to be used for the ARS feature.

◆ Carrier Name

Specifies the carrier name. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

◆ **Removed Number of Digits**

Specifies the number of leading digits to remove from the user-dialed number.

Default

0

Value Range

0–15

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

◆ **Modify Command**

Specifies the commands to modify the user-dialed number to access the carrier.

Default

CH

Value Range

C: Adds the Carrier Access code

P: Inserts a pause and changes to tone (DTMF) signal

A: Adds the Authorization code for a tenant

G: Adds the Authorization code for a CO line group

I: Adds the Itemized Billing code

H: Adds the dialed number after the programmed number of digits are removed (Home position)

Number: Adds the number

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

◆ **Carrier Access Code**

Specifies the carrier access code. The carrier access code can be added to the user-dialed number by specifying "C" command in **Modify Command** on this screen.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, and P [Pause])

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

Trunk Group

Selects the CO line groups that connect to the carrier.

◆ Trunk Group for the Carrier—TRG 01–TRG 64

Enables each CO line group for each carrier.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

Authorization Code for Tenant

Specifies an Authorization code for each tenant. The Authorization codes can be added to the user-dialed number by specifying "A" command in **Modify Command** on the **Carrier** tab.

◆ Authorization Code for Tenant—Tenant 1–Tenant 8

Specifies the Authorization code of each carrier for each tenant.

Default

Not stored.

Value Range

Max. 10 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

Authorization Code for TRG

Specifies an Authorization code for each CO line group. The Authorization codes can be added to the user-dialed number by specifying "G" command in **Modify Command** on the **Carrier** tab.

◆ Authorization Code for Trunk Group—TRG 01–TRG 64

Specifies the Authorization code of each carrier for each CO line group.

Default

Not stored.

Value Range

Max. 10 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

4.14.6 Leading Number Exception [8-6]

Specifies telephone numbers that will not be connected using the ARS feature. When the user-dialed number includes a leading number exception, the PBX sends the number to a CO line by the Idle Line Access method if **ARS Mode** in **System Setting [8-1]** is "on". A maximum of 200 different leading number exceptions can be programmed.

◆ Leading Number Exception

Specifies the leading number exception.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, #, and X)

Note

"X" can be used as a wild card character which substitutes any digit in its position.

Programming Guide References

None

Feature Guide References

1.9.1 Automatic Route Selection (ARS)

4.15 Private Network [9]

4.15.1 TIE Table [9-1]

A TIE line is a privately leased communication line between two or more PBXs, which provides cost effective communications between company members at different locations.

A maximum of 32 TIE Line Routing and Modification Tables can be programmed. It is necessary to make unified tables with all PBXs at different locations in a TIE line network in order to identify the CO line route when an extension makes or receives a TIE line call.

There are two types of routing methods: Extension Number Method which works on an extension number basis, and PBX Code Method which works on a PBX code basis.

◆ Own PBX Code

Specifies the own PBX code to employ PBX Code Method for a TIE line network. If this cell is left empty, Extension Number Method is employed.

Default

Not stored.

Value Range

Max. 7 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.27.1.2 PBX Code Method (Access with PBX Code)

◆ Network PBX ID

Specifies the Network ID of the PBX. This parameter must be set to correspond with the Network IDs assigned to other PBXs in the network.

Network IDs 1-8 can only be assigned to one PBX each within a network. Assigning the same Network ID to two PBXs will cause network data transmission problems.

If this parameter has been set to one of 1-8, changing it in Interactive mode results in NDSS Link Data being automatically cleared.

Default

0

Value Range

0: The PBX retransmits BLF data sent by other PBXs.

1: The PBX receives BLF data sent by other PBXs.

2–8: The PBX transmits BLF data over the network.

Programming Guide References

None

Feature Guide References

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

◆ Leading Number

Specifies the leading number for other PBX extension numbers or the PBX code of others in the TIE line network.

Default

Not stored.

Value Range

Max. 3 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.27.1.2 PBX Code Method (Access with PBX Code)

1.27.1.3 Extension Number Method (Access without PBX Code)

◆ Removed Number of Digits—Priority 1–Priority 8

Specifies the number of leading digits of the dialed number to be removed for each priority.

Default

0

Value Range

0–15

Programming Guide References

None

Feature Guide References

1.27.1.2 PBX Code Method (Access with PBX Code)

1.27.1.3 Extension Number Method (Access without PBX Code)

◆ Added Number—Priority 1–Priority 8

Specifies the number to be added to the dialed number in place of the removed digits for each priority.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, #, and P [Pause])

Programming Guide References

None

Feature Guide References

1.27.1.2 PBX Code Method (Access with PBX Code)

1.27.1.3 Extension Number Method (Access without PBX Code)

◆ Trunk Group—Priority 1–Priority 8

Specifies the CO line group to be used for TIE line calls for each priority.

Default

None

Value Range

None, 1–64

Programming Guide References

None

Feature Guide References

1.27.1.2 PBX Code Method (Access with PBX Code)

1.27.1.3 Extension Number Method (Access without PBX Code)

4.15.2 Network BLF Data Transfer [9-2]

Settings related to the transmission of extension BLF (Busy Line Field) data over a network of PBXs can be programmed. This data is used to show the status of a monitored extension attached to another PBX on a Network DSS button.

◆ Network BLF(DSS) Data Transfer for VoIP->ISDN

Selects whether to re-send BLF data received from a VoIP port through any ISDN ports that are set to transmit BLF data.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.7.19 PRI Port [1-6]—Networking Data Transfer

Feature Guide References

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

◆ Network BLF(DSS) Data Transfer for ISDN->VoIP

Selects whether to re-send BLF data received from an ISDN port through any VoIP ports that are set to transmit BLF data.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

4.15.3 Network Operator (VoIP) [9-3]—IP-GW Card Slot No. to notify BLF data to Network Operator

Feature Guide References

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

◆ Network BLF(DSS) Data Transit Counter

Specifies the maximum number of "hops", or transmissions between two PBXs, before a packet of BLF data is discarded.

Default

8

Value Range

0–63

Programming Guide References

None

Feature Guide References

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

◆ Network BLF(DSS) Data Broadcasting Interval Timer

Specifies the frequency of BLF data transmission. The PBX will send data over the network periodically according to the interval specified here.

Default

3000 ms

Value Range

100 × n (n=0–30) ms

Programming Guide References

None

Feature Guide References

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

4.15.3 Network Operator (VoIP) [9-3]

Settings related to the network operator can be programmed. The settings on this screen should be programmed at the PBX that is to be monitored (Network PBX ID 2–8).

◆ Network Operator Extension No.

Specifies the number of an extension at the monitor PBX (the PBX whose **Network PBX ID** is set to **1** in **4.15.1 TIE Table [9-1]**). Any extension at the monitor PBX can be specified here.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

Network PBX ID—4.15.2 Network BLF Data Transfer [9-2]

Feature Guide References

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

◆ IP-GW Card Slot No. to notify BLF data to Network Operator

Specifies the slot number of the card used to send extension status data. This setting is only required when using VoIP to transmit data.

Default

Undefined

Value Range

Undefined, 1–11

Programming Guide References

4.7.1 Slot [1-1]

Feature Guide References

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

4.15.4 NDSS Key Table [9-4]

Extensions at another PBX that will be monitored can be registered. A maximum of 32 extensions can be registered. To create an NDSS button to monitor an extension, the extension must be registered here first.

The parameters on this screen can only be set when the Network PBX ID is set to **1** in the **4.15.1 TIE Table [9-1]** screen.

◆ **No.**

Indicates the entry number (reference only).

Default

Not stored.

Value Range

1–32

Programming Guide References

None

Feature Guide References

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

◆ **Network Extension No.**

Specifies the number of the extension at another PBX that will be monitored. The number input here can be in the form of an Other PBX Extension number, or a TIE number.

Default

Not stored.

Value Range

Max. 16 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

1.27 Networking Features—1.27.1 TIE Line Service

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

◆ **Network Extension Name for Programming Reference**

Specifies the name of the network extension. This name is only shown here, not on the displays of extensions.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

◆ NDSS Link Data - Receive (Network PBX ID)

Indicates the Network PBX ID of the PBX that the extension is connected to (reference only).

Default

Not stored.

Value Range

None, 1–8

Programming Guide References

4.15.1 TIE Table [9-1]—Network PBX ID

Feature Guide References

1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)

4.16 CO & Incoming Call [10]

4.16.1 CO Line Setting [10-1]

CO lines can be assigned a name, and grouped into a maximum of 64 CO line groups.

◆ **Physical—Slot**

Indicates the slot position of each CO line card (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ **Physical—Port**

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Feature Guide References

None

◆ **CO Name**

Specifies the CO line name which is shown on the extension's display when receiving a call from the CO line. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

None

Feature Guide References

1.18.4 Display Information

◆ **Trunk Group Number**

Specifies the CO line group number to which the CO line belongs.

Default

1

Value Range

1–64

Programming Guide References

None

Feature Guide References

2.2.2 Group

4.16.2 DIL Table & Port Setting [10-2]

Direct In Line (DIL) or Direct Inward Dialing (DID) can be selected for each CO line as the method of distributing incoming CO line calls to certain destinations. For each CO line to which the DIL distribution is set, different destinations can be programmed depending on the time mode (day/lunch/break/night). If desired, Calling Line Identification (CLI) distribution can be used in conjunction with the DIL distribution.

DID / TIE

For each CO line to which DID distribution is set, or for each CO line whose **Trunk Property** on this screen is **Private (TIE)**, modification parameters for DID number and TIE line call numbers can be programmed.

◆ **Slot**

Indicates the slot position of each CO line card (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ **Port**

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Feature Guide References

None

◆ **Card Type**

Indicates the CO line card type (reference only).

Default

Current card type

Value Range

Card type

Programming Guide References

None

Feature Guide References

1.1.1.1 Incoming CO Line Call Features—OVERVIEW

◆ **Trunk Property**

Indicates the networking type of each CO line (reference only).

Default

Current networking type

Value Range

Public, Private(TIE), VPN

Programming Guide References

None

Feature Guide References

1.1.1.1 Incoming CO Line Call Features—OVERVIEW

◆ **Incoming Type**

Selects the distribution method for incoming CO line calls. The value range of this setting depends on the card type and **Trunk Property** assigned for each CO line.

Default

DIL

Value Range

DIL: Distribution depends on the CO line through which the calls arrive
 DID: Distribution depends on the DID number of the calls

Programming Guide References

None

Feature Guide References

1.1.1.1 Incoming CO Line Call Features—OVERVIEW

◆ DID/TIE—Remove Digit

Specifies the number of leading digits to be removed from the incoming called number for DID distribution or for TIE line service.

Default

0

Value Range

0–15

Programming Guide References

None

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)
 1.27.1.2 PBX Code Method (Access with PBX Code)
 1.27.1.3 Extension Number Method (Access without PBX Code)

◆ DID/TIE—Additional Dial

Specifies the number to be added to the incoming called number in the place of the removed digits for DID distribution or for TIE line service.

Default

Not stored.

Value Range

Max. 8 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)
 1.27.1.2 PBX Code Method (Access with PBX Code)
 1.27.1.3 Extension Number Method (Access without PBX Code)

DIL

For each CO line to which the DIL distribution is set, different DIL destinations can be programmed depending on the time mode (day/lunch/break/night). Generally, DIL distribution is used for CO line calls from analog CO lines. Tenant number and VPS trunk (CO line) group number can also be programmed for each CO line.

◆ Slot

Indicates the slot position of each CO line card (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Feature Guide References

None

◆ Card Type

Indicates the CO line card type (reference only).

Default

Current card type

Value Range

Card type

Programming Guide References

None

Feature Guide References

1.1.1.1 Incoming CO Line Call Features—OVERVIEW

◆ **Trunk Property**

Indicates the networking type of each CO line (reference only).

Default

Current networking type

Value Range

Public, Private(TIE), VPN

Programming Guide References

None

Feature Guide References

1.1.1.1 Incoming CO Line Call Features—OVERVIEW

◆ **Incoming Type**

Selects the distribution method for incoming CO line calls. The value range of this setting depends on the card type and **Trunk Property** assigned for each CO line.

Default

DIL

Value Range

DIL: Distribution depends on the CO line through which the calls arrive
DID: Distribution depends on the DID number of the calls

Programming Guide References

None

Feature Guide References

1.1.1.1 Incoming CO Line Call Features—OVERVIEW

◆ **DIL Destination—Day, Lunch, Break, Night**

Specifies the DIL destination in each time mode.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9): For the extension number of the own PBX
Max. 5 digits (consisting of 0–9): For the extension number of the other PBX

Programming Guide References

4.8.12 Numbering Plan—Other PBX Extension [2-6-3]

Feature Guide References

- 1.1.1.2 Direct In Line (DIL)
- 1.27.1 TIE Line Service

◆ Tenant Number

Specifies the tenant number to determine the Time Table by which calls are distributed depending on the time of the day.

Default

1

Value Range

1–8

Programming Guide References

None

Feature Guide References

- 1.1.1.2 Direct In Line (DIL)

◆ VM Trunk Group No.

Specifies the number of the VPS trunk (CO line) group sent to the VPS when the DIL destination is the floating extension number of a VM (DPT) Group.
The VPS trunk (CO line) group number is used to send the applicable company greeting message of the VPS to the caller.

Default

1

Value Range

1–48

Programming Guide References

None

Feature Guide References

- 1.1.1.2 Direct In Line (DIL)
- 1.21.2 Voice Mail DPT (Digital) Integration

CLI for DIL

When CLI distribution is enabled for a CO line to which the DIL distribution is set, incoming CO line calls will be distributed to the CLI destinations (instead of the DIL destinations) if the caller's identification number is found in the System Speed Dialing Table, which is used as the Caller ID Table.
CLI distribution can be enabled or disabled for each time mode (day/lunch/break/night) on a CO line basis.

◆ Slot

Indicates the slot position of each CO line card (reference only).

Default

Current slot number

Value Range

Slot number

Feature Guide References

None

◆ Port

Indicates the port number (reference only).

Default

Current port number

Value Range

Port number

Feature Guide References

None

◆ Card Type

Indicates the CO line card type (reference only).

Default

Current card type

Value Range

Card type

Programming Guide References

None

Feature Guide References

1.1.1.1 Incoming CO Line Call Features—OVERVIEW

◆ Trunk Property

Indicates the networking type of each CO line (reference only).

Default

Current networking type

Value Range

Public, Private(TIE), VPN

Programming Guide References

None

Feature Guide References

1.1.1.1 Incoming CO Line Call Features—OVERVIEW

◆ **Incoming Type**

Selects the distribution method for incoming CO line calls. The value range of this setting depends on the card type and **Trunk Property** assigned for each CO line.

Default

DIL

Value Range

DIL: Distribution depends on the CO line through which the calls arrive

DID: Distribution depends on the DID number of the calls

Programming Guide References

None

Feature Guide References

1.1.1.1 Incoming CO Line Call Features—OVERVIEW

◆ **CLI Ring for DIL—Day, Lunch, Break, Night**

Enables CLI distribution in each time mode.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.1.1.2 Direct In Line (DIL)

1.1.1.4 Calling Line Identification (CLI) Distribution

4.16.3 DID Table [10-3]

Incoming CO line calls with DID numbers can be distributed to specific destinations. Each DID number has a destination programmed for each time mode (day/lunch/break/night).

When CLI distribution is enabled for a DID number, incoming CO line calls with that DID number will be distributed to the CLI destinations (instead of the DID destinations) if the caller's identification number is found in the System Speed Dialing Table, which is used as the Caller ID Table. CLI distribution can be enabled or disabled for each time mode (day/lunch/break/night) on a DID number basis.

A maximum of 1000 DID numbers can be programmed with other related parameters in locations 1–1000. Select the desired location from the **Location** list.

It is possible to program DID numbers and DID destinations in each time mode (day/lunch/break/night) for a set of locations in series at once by clicking **Automatic Registration**, or to program DID names for a set of locations in series at once by clicking **Name Generate**.

◆ DID Number

Specifies the DID number.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9)

Programming Guide References

4.16.4 DID Table [10-3] Automatic Registration

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

◆ DID Name

Specifies the name for the DID number which is shown on the extension's display when receiving a call with the DID number. The name of the DID number can be printed out on SMDR. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

4.17.1 SMDR [11-1]—DID Print format

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

◆ DID Destination—Day, Lunch, Break, Night

Specifies the DID destination in each time mode.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9): For the extension number of the own PBX

Max. 5 digits (consisting of 0–9): For the extension number of the other PBX

Programming Guide References

4.8.12 Numbering Plan—Other PBX Extension [2-6-3]

4.16.4 DID Table [10-3] Automatic Registration

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

1.27.1 TIE Line Service

◆ Tenant Number

Specifies the tenant number to determine the Time Table by which calls are distributed depending on the time of the day.

Default

1

Value Range

1–8

Programming Guide References

None

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

◆ VM Trunk Group No.

Specifies the number of the VPS trunk (CO line) group sent to the VPS when the DID destination is the floating extension number of a VM (DPT) Group.

The VPS trunk (CO line) group number is used to send the applicable company greeting message of the VPS to the caller.

Default

1

Value Range

1–48

Programming Guide References

None

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

1.21.2 Voice Mail DPT (Digital) Integration

◆ CLI Ring for DID—Day, Lunch, Break, Night

Enables the CLI distribution in each time mode.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

1.1.1.4 Calling Line Identification (CLI) Distribution

4.16.4 DID Table [10-3] Automatic Registration

Automatic Registration allows DID numbers and DID destinations in each time mode (day/lunch/break/night) to be programmed at once for a set of locations in series.

◆ Beginning Entry Location

Specifies the number of the first location to be programmed.

Default

1

Value Range

1–1000

Programming Guide References

4.16.3 DID Table [10-3]

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

◆ **Generate DID Number (From)**

Specifies the DID number of the first location to be programmed. DID numbers for subsequent locations will be generated automatically, by adding one to the value of the previous location.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9)

Programming Guide References

4.16.3 DID Table [10-3]

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

◆ **Number of Registrations**

Specifies the number of locations to be programmed.

Default

100

Value Range

1–1000

Programming Guide References

4.16.3 DID Table [10-3]

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

◆ **Destination—Day, Lunch, Break, Night**

Specifies the number of the DID destination in each time mode for the first location to be programmed. If the same destination is to be used for all locations for a certain time mode, click the appropriate **Same all** check box. If the **Same all** check box for a certain time mode is not clicked, the destination numbers for subsequent locations will be generated automatically, by adding one to the value of the previous location for that time mode.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

4.16.3 DID Table [10-3]

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

4.16.5 DID Table [10-3] Name Generate

Name Generate allows DID names to be programmed at once for a set of locations in series. If a name generated here is longer than 20 characters, the additional characters will be discarded.

◆ Beginning Entry Location

Specifies the number of the first location to be programmed.

Default

1

Value Range

1–1000

Programming Guide References

4.16.3 DID Table [10-3]

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

◆ Number to Generate

Specifies the number of locations to be programmed.

Default

Not stored.

Value Range

1–1000

Programming Guide References

4.16.3 DID Table [10-3]

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

◆ Deleting Digits

Specifies the number of digits to be deleted from the start of a DID number when using it as part of the DID name.

Default

0

Value Range

0–32

Programming Guide References

4.16.3 DID Table [10-3]

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

◆ **Head of Name**

Specifies the text to be included at the start of each DID name.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

4.16.3 DID Table [10-3]

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

◆ **Tail of Name**

Specifies the text to be included at the end of each DID name.

Default

Not stored.

Value Range

Max. 20 characters

Programming Guide References

4.16.3 DID Table [10-3]

Feature Guide References

1.1.1.3 Direct Inward Dialing (DID)

4.16.6 Miscellaneous [10-4]

It is possible to activate the Intercept Routing feature when the destination of an incoming CO line call is unavailable, or when there is no destination for the call.

◆ Intercept when the destination is Busy

Enables the Intercept Routing—Busy feature to activate when the original destination is busy.

Default

Disable (Busy Tone)

Value Range

Disable (Busy Tone): Sends busy tone to the caller (However, a call through LCOT or T1 [LCOT/GCOT] card will ring at the original destination while the caller hears a ringback tone.)

Enable: Redirects the call to the intercept destination

Programming Guide References

None

Feature Guide References

1.1.1.5 Intercept Routing

◆ Intercept when the destination sets DND

Enables the Intercept Routing—DND feature to activate when the original destination is in DND mode.

Default

Enable

Value Range

Disable (Busy Tone): Sends busy tone to the caller (However, a call through LCOT or T1 [LCOT/GCOT] card will ring at the original destination while the caller hears a ringback tone.)

Enable: Redirects the call to the intercept destination

Programming Guide References

None

Feature Guide References

1.1.1.5 Intercept Routing

◆ Routing to Operator when the destination is not programmed

Enables the Intercept Routing—No Destination feature to activate when there is no destination for the call. (The Intercept Routing—No Destination feature always works for the calls through LCOT or T1 [LCOT/GCOT] card, even when this feature is disabled.)

Default

Enable

Value Range

Disable (Reorder Tone): Sends the reorder tone to the caller

Enable: Redirects the call to an operator

Programming Guide References

None

Feature Guide References

1.1.1.6 Intercept Routing—No Destination

4.17 Maintenance [11]

4.17.1 SMDR [11-1]

Station Message Detail Recording (SMDR) automatically records detailed information about incoming and outgoing calls.

◆ SMDR Type

Selects the format of SMDR output.

Default

Type A

Value Range

Type A: 80 digits without call charge information

Type B: 80 digits with call charge information

Type C: 120 digits

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ SMDR Port

Selects the Serial Interface (RS-232C) port that is used to output the SMDR data.

Default

RS-232C

Value Range

None, RS-232C

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ SMDR Page Length (Number of Line)

Specifies the number of lines in a page of output paper. Used to match the SMDR output to the paper size being used in the printer.

Default

66

Value Range

4–99

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ **SMDR Skip Perforation (Number of Line)**

Specifies the number of lines to be skipped at the end of every page. The number of lines for the skip perforation should be shorter than the page length.

Default

0

Value Range

0–95

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ **Outgoing Call Print**

Specifies whether the dialed digits of outgoing CO line calls are printed. Class of Service (COS) programming determines the printable records.

Default

Print

Value Range

No Print, Print

Programming Guide References

4.8.15 Class of Service—COS Settings [2-7-1]—Main—Outgoing CO Call Printout (SMDR)

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ Incoming Call Print

Specifies whether the information relating to incoming CO line calls, such as caller's identification name and number, is printed.

Default

No Print

Value Range

No Print, Print

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ Intercom Call Print

Specifies whether the dialed digits of outgoing intercom calls are printed.

Default

No Print

Value Range

No Print, Print

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ Log-in / Log-out Print

Specifies whether the log-in/log-out status is printed.

Default

No Print

Value Range

No Print, Print

Programming Guide References

None

Feature Guide References

1.2.2.6 Log-in/Log-out

1.23.1 Station Message Detail Recording (SMDR)

◆ ARS Dial

Selects the type of the dialed number to be printed for a call with the ARS feature.

Default

Dial after ARS Modification

Value Range

Dial before ARS Modification: The user-dialed number

Dial after ARS Modification: The ARS modified number

Programming Guide References

None

Feature Guide References

1.9 Automatic Route Selection (ARS) Features

1.23.1 Station Message Detail Recording (SMDR)

◆ Caller ID Print format

Selects the printing format of caller identifications for incoming CO line calls.

Default

Number

Value Range

None, Number, Name, Name + Number

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ DID Print format

Selects the printing format of incoming CO line calls with a DID number.

Default

None

Value Range

None, Number, Name, Name + Number

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ Secret Dial

Selects the printing format of calls with a secret dial. The secret dial conceals all or part of dialed number. Note that selecting **Dial before ARS Modification** in **ARS Dial** on this screen indicates the dialed numbers as dots regardless of this setting.

Default

Print "...."

Value Range

Print "....", Print Dialed Number

Programming Guide References

None

Feature Guide References

1.6.1.1 Memory Dialing Features—OVERVIEW
1.23.1 Station Message Detail Recording (SMDR)

◆ Date Format

Selects the printed date format.

Default

MM-DD-YY

Value Range

MM-DD-YY, DD-MM-YY, YY-MM-DD, YY-DD-MM

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ Time format (12H/24H)

Selects whether times are displayed using the 12- or 24-hour format.

Default

12H

Value Range

12H, 24H

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ **Condition Code "RC/VR" Print**

Specifies whether the time of receiving an incoming CO line call is printed.

Default

No Print

Value Range

No Print, Print

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ **Condition Code "AN/VA" Print**

Specifies whether the time of answering an incoming CO line call is printed.

Default

No Print

Value Range

No Print, Print

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ **Caller ID Modification**

Specifies whether Caller ID is recorded on SMDR as received (before being modified by the PBX) or after being modified.

Default

Before Modification

Value Range

Before Modification, After Modification

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

4.17.2 PT System Program [11-2]

PROG**

Enables extension users to set a certain system programming by a PT.

Default

000–009, 020–099: Enable

010–019, 100–999: Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

2.3.2 PT Programming

4.17.3 Power Failure Transfer [11-3]

When the power supply to the PBX fails, power failure transfer (PFT) switches the current connection to Auxiliary Connection so that a certain SLT and CO line can be connected. Auxiliary Connection maintains the CO line conversation during the power failure.

◆ PFT Card Position—Pair-1—Pair-6

Pairs the slot numbers of CO line card and extension card that are actually connected by RJ11. The conversations through the lines specified here will be maintained even when the power returns.

Default

CO Line Card Slot Number: None

Extension Card Slot Number: None

Value Range

None, 1–11

Programming Guide References

None

Feature Guide References

2.4.1 Power Failure Transfer

4.17.4 Miscellaneous [11-4]

Various settings for on-site and remote programming and diagnosis can be specified.

◆ Analog Remote (Modem) Floating Extension Number

Specifies the floating extension number for analog remote maintenance. To enable this setting, an RMT card must be installed, and **Remote Programming** on this screen must be enabled.

Default

299

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

2.3.1 PC Programming

◆ Remote Programming

Enables the system programming, diagnosis, and data upload from a remote location.

Default

Enable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

2.3.1 PC Programming

◆ Password Lock Counter for Remote Programming

Specifies the number of successive incorrect password entries before remote access is locked.

Default

None

Value Range

None, 1–15

Programming Guide References

None

Feature Guide References

2.3.1 PC Programming

◆ Remote Maintenance Dial Number (Own telephone number for reference)

Specifies the telephone number of the PBX used for reference.

This number can be specified by Quick Setup, and will be used to access the PBX from a remote location for maintenance purposes.

Default

Not stored.

Value Range

Max. 32 digits (consisting of 0–9, *, and #)

Programming Guide References

None

Feature Guide References

2.3.3 Quick Setup

◆ RS-232C: Baud Rate

Specifies the data transmission speed from the PBX to the printer or personal computer.

Default

19200 bps

Value Range

2400 bps, 4800 bps, 9600 bps, 19200 bps, 38400 bps, 57600 bps, 115200 bps

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ RS-232C: NL Code

Specifies the NL (New Line) code for the printer or personal computer.

If the printer or personal computer automatically feeds lines with a carriage return, select **CR** (Carriage Return). If not, select **CR+LF** (Line Feed).

Default

CR+LF

Value Range

CR+LF, CR

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ **RS-232C: Word Length**

Specifies the number of bits in each byte of a character.

When connecting the KX-TDA Maintenance Console to the PBX using an RS-232C cable, assign the following values to the Serial Interface (RS-232C) port of the PBX:

Word Length: 8 bit, **Parity Bit:** None, **Stop Bit:** 1 bit

CAUTION

Do not use the following combinations:

- **Word Length:** 8 bit, **Parity Bit:** Space, **Stop Bit:** 1 bit
- **Word Length:** 8 bit, **Parity Bit:** Mark, **Stop Bit:** 2 bit
- **Word Length:** 8 bit, **Parity Bit:** Space, **Stop Bit:** 2 bit

Default

8 bit

Value Range

7 bit, 8 bit

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ **RS-232C: Parity Bit**

Selects a parity bit code that indicates what type of parity is used to detect an error in the string of bits composing a character.

Make an appropriate selection depending on the requirements of the printer or personal computer.

Default

None

Value Range

None, Mark, Space, Even, Odd

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ RS-232C: Stop Bit

Selects a stop bit code that indicates the end of a bit string which composes a character. Select an appropriate value depending on the requirements of the printer or personal computer.

Default

1 bit

Value Range

1 bit, 2 bit

Programming Guide References

None

Feature Guide References

1.23.1 Station Message Detail Recording (SMDR)

◆ RS-232C: Flow Control

Enables the hardware flow control.

Default

None

Value Range

None, Hardware

Feature Guide References

None

◆ Error Log Information Print

Specifies whether the PBX error log is printed to the SMDR output.

Default

Print

Value Range

No Print, Print

Programming Guide References

None

Feature Guide References

- 1.23.1 Station Message Detail Recording (SMDR)
- 2.4.3 Local Alarm Information

◆ **Local Alarm Display Extension 1, Local Alarm Display Extension 2**

Specifies the extension numbers of PTs which respond to a local alarm. When the PBX detects that there are PBX errors, the System Alarm button on the PT turns on red. If pressed, the display will show the error numbers, and the button turns off automatically.

Default

Not stored.

Value Range

Max. 4 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

- 2.4.3 Local Alarm Information

◆ **Daily Test Start Time : Set**

Enables the daily self check of the PBX for local alarm and error log.

Default

Disable

Value Range

Disable, Enable

Programming Guide References

None

Feature Guide References

- 2.4.3 Local Alarm Information

◆ **Daily Test Start Time : Hour**

Specifies the hour of the start time for the daily self check of the PBX.

Default

0

Value Range

0–23

Programming Guide References

None

Feature Guide References

2.4.3 Local Alarm Information

◆ Daily Test Start Time : Minute

Specifies the minute of the start time for the daily self check of the PBX.

Default

0

Value Range

0–59

Programming Guide References

None

Feature Guide References

2.4.3 Local Alarm Information

◆ External Modem Command - Automatic Initialization

Specifies the command to automatically initialize an external modem every time it is plugged into the Serial Interface (RS-232C) port of the PBX. As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

AT&F0Q0E0V1S0=1X0&D0

Value Range

Max. 80 characters

Programming Guide References

None

Feature Guide References

2.3.1 PC Programming

◆ External Modem Command - Manual Initialization 1–Manual Initialization 5

Specifies the command to manually initialize an external modem. The command specified here is controlled by PT system programming (External Modem Control [801]).

As for the available characters, refer to the character code table described in section 3.2.1 Installing and Starting KX-TDA Maintenance Console.

Default

Not stored.

Value Range

Max. 80 characters

Programming Guide References

External Modem Control [801]

Feature Guide References

2.3.1 PC Programming

4.17.5 Password Setting [11-5]

Passwords authorize the user to program the extension and the PBX by a PT or a personal computer.

◆ System Password - PT Programming [Prog **] : User Level

Specifies the user level system password to authorize the PT user to access only the permitted system programming.

Default

1234

Value Range

4–10 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

2.3.2 PT Programming

◆ System Password - PT Programming [Prog *#] : Administrator Level

Specifies the administrator level system password to authorize the PT user to access all system programming.

Default

1234

Value Range

4–10 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

2.3.2 PT Programming

◆ Manager Password - PT Programming [Prog *1]

Specifies the manager password to authorize the PT user to access manager programming.

Default

1234

Value Range

4–10 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

2.2.6 Manager Features

◆ System Password - PC Programming : User Level

Specifies the system password used to access KX-TDA Maintenance Console in User Level.

Default

1234

Value Range

4–10 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

2.3.1 PC Programming

◆ System Password - PC Programming : Administrator Level

Specifies the system password used to access KX-TDA Maintenance Console in Administrator Level.

Default

1234

Value Range

4–10 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

2.3.1 PC Programming

◆ **System Password - PC Programming : Installer Level**

Specifies the system password used to access KX-TDA Maintenance Console in Installer Level.

Default

1234

Value Range

4–10 digits (consisting of 0–9)

Programming Guide References

None

Feature Guide References

2.3.1 PC Programming

Section 5

Appendix

5.1 Capacity of System Resources

5.1.1 Capacity of System Resources

System

Item	KX-TDA100	KX-TDA200
Tenant	8	
COS	64	
CO Line Group	64	
Extension Group	32	
Paging Group	32	
Call Pickup Group	64	
Incoming Call Distribution Group	64 (32 extensions/group)	
PS Ring Group	32	
VM (DPT) Group	2 VPSs x 24 ch	
VM (DTMF) Group	2 groups x 32 ch	
Queuing Time Table	64	
Idle Extension Hunting Group	64 (16 extensions/group)	
Absent Message—System	8 x 16 characters	
Absent Message—Extension	1 x 16 characters/extn.	
Message Waiting—PT + SLT	512	
Message Waiting—PS + Incoming Call Distribution Group	256	
Number of Characters per Name	20	
Extension Number Digits	1 – 4	
Extension Personal Identification Number (PIN)	10 digits/extn.	
Call Park Zone	100	
Conference	3 x 10 – 8 x 4	
Verified Code	4 digits, 1 000 entries	
Verified Code Personal Identification Number (PIN)	10 digits, 1 000 entries	
Special Carrier Code	16 digits, 20 entries	
Host PBX Access Code	10 digits, 10 entries/CO line group	
DID Table	32 digits, 1 000 entries	
SMDR	200 calls	

Dialing

Item	KX-TDA100	KX-TDA200
Emergency Call	32 digits, 10 entries	
Quick Dialing	4 digits, 80 entries	
System Speed Dialing	Without MEC: 32 digits, 1 000 entries/PBX	
	With MEC: 32 digits, 1 000 entries/tenant	
Personal Speed Dialing	Without MEC: 32 digits, 10 entries/extn.	
	With MEC: 32 digits, 100 entries/extn.	
One-touch Dialing	32 digits	
Hot Line	32 digits	
Redial	32 digits	

ARS

Item	KX-TDA100	KX-TDA200
Routing Plan Table	16 entries	
Leading Number Table	16 digits, 1 000 entries	
Leading Number Exception Table	16 digits, 200 entries	
ARS Carrier	10	
Itemized Billing Code	10 digits	
Authorization Code	10 digits	

Networking

Item	KX-TDA100	KX-TDA200
TIE Line Routing and Modification Table	32 entries	
Leading Number	3 digits	
PBX Code	7 digits	

TRS

Item	KX-TDA100	KX-TDA200
TRS Level	7	
TRS Denied Code	16 digits, 100 entries/level	

Item	KX-TDA100	KX-TDA200
TRS Exception Code	16 digits, 100 entries/level	

Call Log

Item	KX-TDA100	KX-TDA200
Outgoing Call Log—PT	100 logs/extn. 5 x 304 logs/PBX	
Outgoing Call Log—PS	100 logs/extn. 5 x 128 logs/PBX	
Incoming Call Log—PT	100 logs/extn. 10 x 304 logs/PBX	
Incoming Call Log—PS	100 logs/extn. 10 x 128 logs/PBX	
Incoming Call Log—Incoming Call Distribution Group	100 logs/group 10 x 64 logs/PBX	


Password

Item	KX-TDA100	KX-TDA200
System Password for Installer	4 – 10 characters	
System Password for Administrator—for PC Programming	4 – 10 characters	
System Password for User—for PC Programming	4 – 10 characters	
System Password for Administrator—for PT Programming	4 – 10 digits	
System Password for User—for PT Programming	4 – 10 digits	
Manager Password	4 – 10 digits	


5.2 Tones/Ring Tones

5.2.1 Tones/Ring Tones


Tone Patterns (Default)

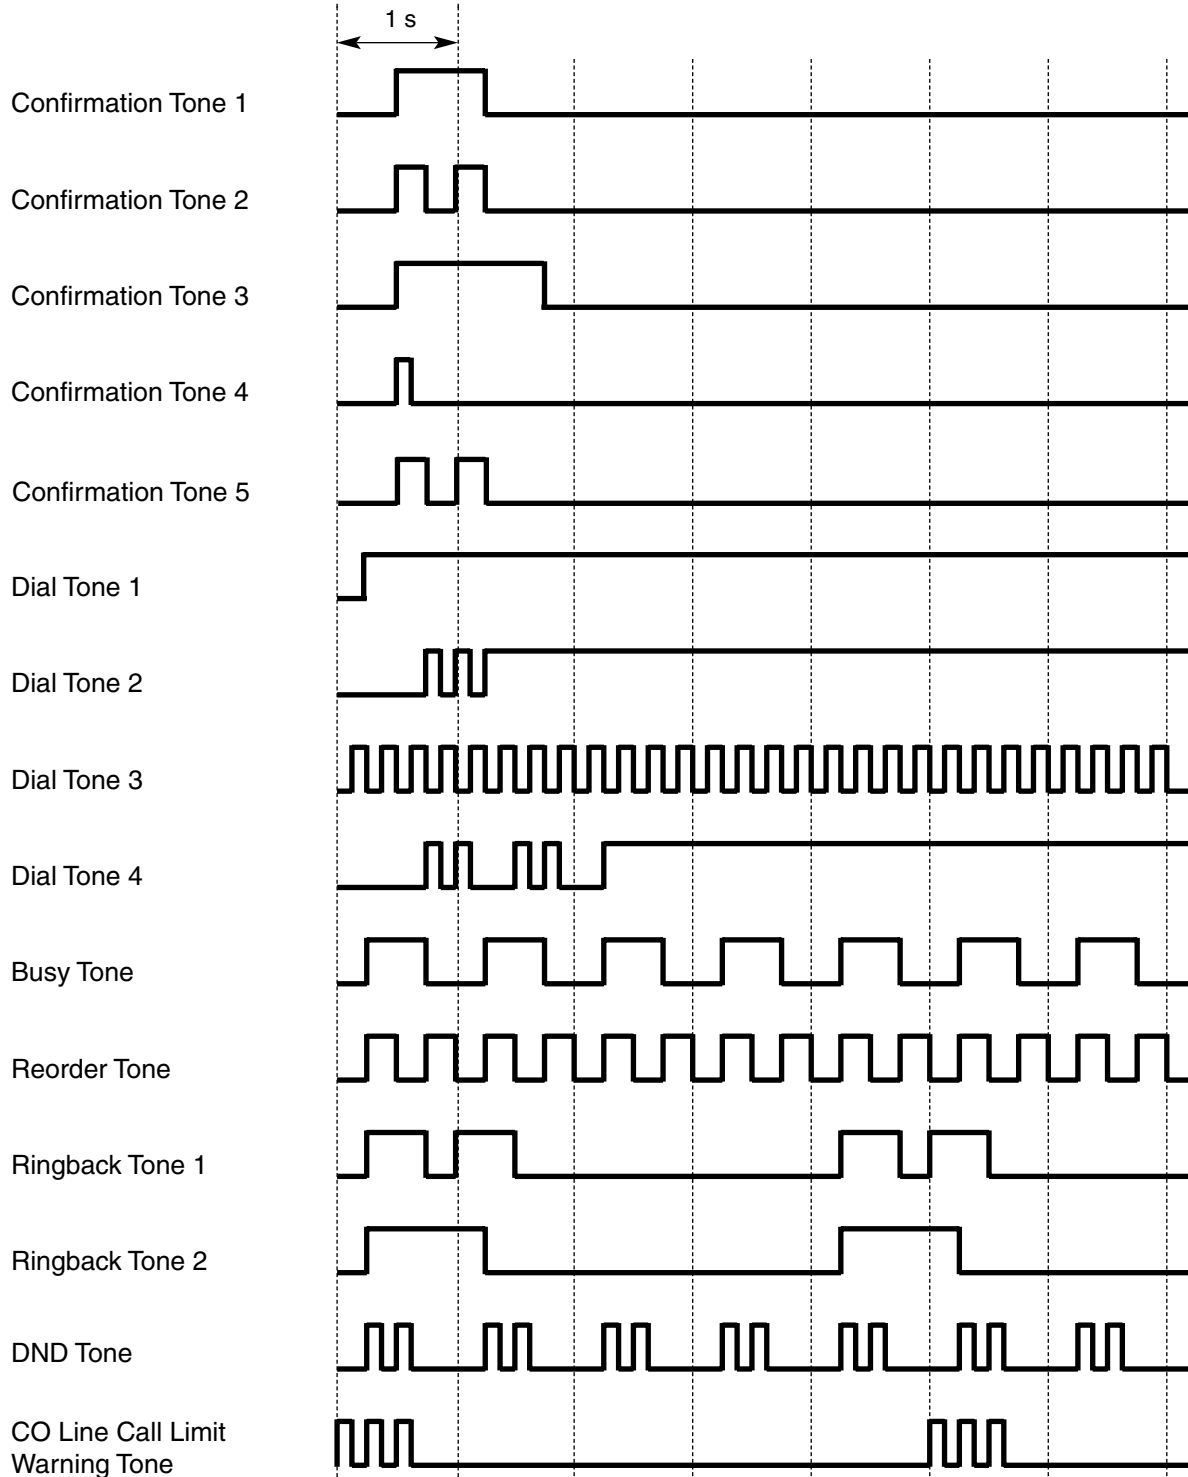

Tone Patterns (Default)

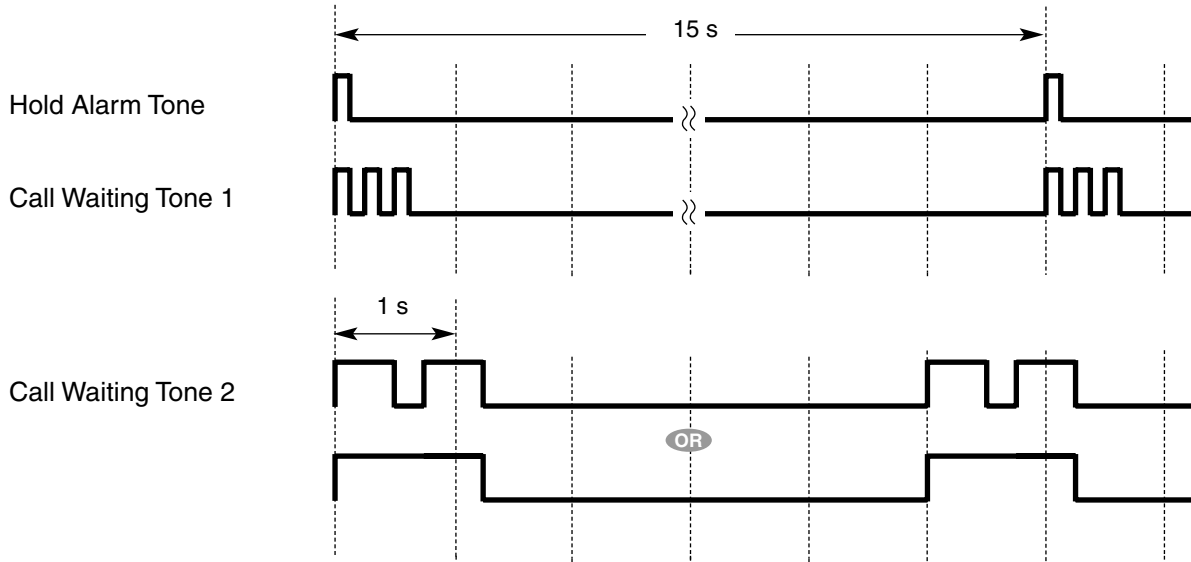

Ring Tone Patterns (Default)

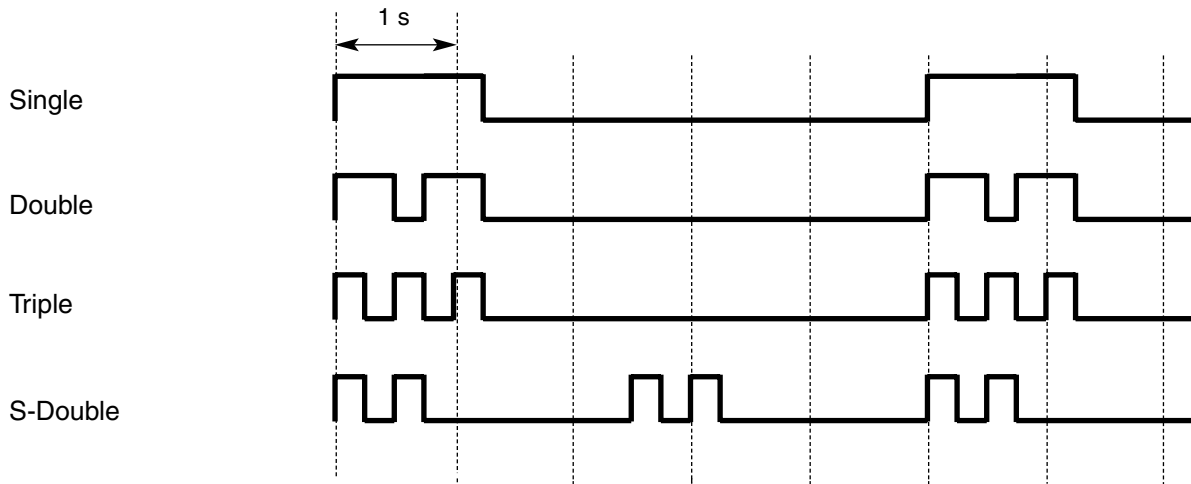

5.3 Revision History

5.3.1 Version 1.1

New Contents

- 1.5.4.2 Emergency Call
CLIP Number Notification
- 1.6.1.3 Last Number Redial
Outgoing Call Log Display by REDIAL Button
- 1.6.1.4 Speed Dialing—Personal/System
System Speed Dialing Display by AUTO DIAL/STORE Button
- 1.10.9 Paralleled Telephone
Digital XDP
- 1.21.2 Voice Mail DPT (Digital) Integration
DID Number Notification to the VPS

Changed Contents

- 1.2.2.2 Group Call Distribution
[How the Group Call Waiting Feature Works]
- 1.4.1.3 Call Pickup
[Directed Call Pickup]
- 1.14.1 Paging
Paging Group
- 1.18.1 Fixed Buttons
FLASH/RECALL
- 1.18.3 LED Indication
Light Pattern of the Message/Ringer Lamp
Light Pattern of the Corresponding Extension Status Button
- 1.22.1 Portable Station (PS) Connection
Handover
- 1.23.1 Station Message Detail Recording (SMDR)
CD (Condition Code)
- 2.1.1 Extension Port Configuration
- 2.2.4 Time Service
Features Using Time Service
- 3.3.1 Programming Instructions
PT Programming
- 3.3.4 Time Programming
Intercept Time [203]
DISA Intercept Time [211]
- 5.1.1 Capacity of System Resources

5.3.2 Version 2.0

New Contents

- 1.15.7 External Sensor
- 1.15.8 External Relay Control
- 1.24 Hospitality Features
- 1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)
- 1.28 IP Proprietary Telephone (IP-PT) Features
- 2.2.6 Manager Features
- 3.1.2 Password Security
- 3.1.3 Entering Characters

Changed Contents

- 1.1.3.3 Call Waiting
- 1.6.1.3 Last Number Redial
- 1.8.1 Toll Restriction (TRS)
- 1.18.2 Flexible Buttons
- 1.22.1 Portable Station (PS) Connection
- 1.23.1 Station Message Detail Recording (SMDR)
- 1.25.4 Timed Reminder
- 1.29.1 Computer Telephony Integration (CTI)
- 2.3.5 Flexible Numbering/Fixed Numbering
- 5.1.1 Capacity of System Resources

KX-TDA0920 SD Memory Card for Software Upgrade to Enhanced Version-only Features

- 1.27.2.3 Network Direct Station Selection (NDSS) (KX-TDA0920 required)
- 1.29.1 Computer Telephony Integration (CTI)

Index

- A**
- Absent Message 138
 - Absent Message [008] 275
 - Account Code Entry 66
 - Account Code Mode [508] 287
 - Administrative Information Features 175
 - Alternate Calling—Ring/Voice 64
 - Alternate Receiving/Calling Mode (Ring/Voice) Override 61
 - Alternate Receiving—Ring/Voice 64
 - ANI → Automatic Number Identification (ANI) 129
 - Answering Features 59
 - Answering Features—OVERVIEW 59
 - Appendix 759
 - ARS → Automatic Route Selection (ARS) 91
 - ARS Carrier Access Code [353] 282
 - ARS Carrier Name [350] 281
 - ARS CO Line Group for Carrier Access [351] 281
 - ARS Exception Number [325] 281
 - ARS Leading Number [321] 280
 - ARS Mode [320] 280
 - ARS Removed Number of Digits for Carrier Access [352] 281
 - ARS Routing Plan Table (1–16) [331–346] 281
 - ARS Routing Plan Table Number [322] 280
 - ARS Routing Plan Time Table [330] 281
 - Audible Tone Features 189
 - Audio Source Selection for BGM 2 [710] 294
 - Authorization Code 95
 - Automatic Call Hold 107
 - Automatic Call Park 108
 - Automatic Callback Busy (Camp-on) 78
 - Automatic Extension Release 63
 - Automatic Log-out 48
 - Automatic Number Identification (ANI) 129
 - Automatic Privacy 112
 - Automatic Redial 75
 - Automatic Redial Repeat Times [205] 278
 - Automatic Route Selection (ARS) 91
 - Automatic Route Selection (ARS) Features 91
 - Automatic Station Release → Automatic Extension Release 63
 - Automatic Time Adjustment 249
- B**
- Background Music (BGM) 118
 - Basic Programming 274
 - BGM → Background Music (BGM) 118
 - BGM—External 118
 - Boss & Secretary feature 57
 - Built-in Small Call Center Features 4
 - Busy Line/Busy Party Features 78
 - Busy on Busy 45
 - Busy Station Signaling (BSS) → Call Waiting 32
 - Buttons and Functions 272
- C**
- Call Directory—Extension Dialing 64
 - Call Directory—Speed Dialing 76
 - Call Duration Count Starting Time for LCOT [208] 279
 - Call Forwarding (FWD) 54
 - Call Forwarding (FWD)/Do Not Disturb (DND) 52
 - Call Forwarding (FWD)/Do Not Disturb (DND) Features 52
 - Call Forwarding (FWD)/Do Not Disturb (DND)—OVERVIEW 52
 - Call Forwarding to CO Line [504] 286
 - Call Forwarding—No Answer Time [605] 289
 - Call Handling Features 17
 - Call Hold 107
 - Call Hold Retrieve Deny 107
 - Call Monitor 79
 - Call Park 108
 - Call Park Recall 109
 - Call Park Retrieve Deny 109
 - Call Pickup 60
 - Call Retry 121
 - Call Splitting 109
 - Call Transfer 105
 - Call Transfer to CO Line [503] 286
 - Call Transfer with Announcement 105
 - Call Transfer without Announcement 105
 - Call Transfer—Screened → Call Transfer with Announcement 105
 - Call Transfer—Unscreened → Call Transfer without Announcement 105
 - Call Waiting 32
 - Call Waiting Caller ID (Visual Caller ID) 33
 - Call Waiting Tone 81
 - Caller ID 129
 - Caller ID Features 129
 - Caller ID Signal Type [490] 285
 - Caller ID to SLT Port 129
 - Calling Line Identification (CLI) Distribution 25
 - Calling Line Identification Presentation (CLIP) 129, 148
 - Calling Line Identification Restriction (CLIR) 149
 - Calling Party Control (CPC) Signal Detection 104
 - Calling/Connected Line Identification Presentation (CLIP/COLP) and Calling/Connected Name Identification Presentation (CNIP/CONP)—by QSIG 218
 - Capacity of System Resources 760
 - Card Programming 297
 - Circular Hunting 34
 - Class of Service (COS) 231
 - Class of Service [602] 289
 - CLI → Calling Line Identification (CLI) Distribution 25
 - CLIP → Calling Line Identification Presentation (CLIP) 129, 148
 - CLIP → Calling/Connected Line Identification Presentation (CLIP/COLP) and Calling/Connected Name Identification Presentation (CNIP/CONP)—by QSIG 218
 - CLIP Number [606] 289
 - CLIR → Calling Line Identification Restriction (CLIR) 149
 - CLIR → Calling Line/Name Identification Restriction (CLIR/CNIR) 220
 - CNIP → Calling/Connected Line Identification Presentation (CLIP/COLP) and Calling/Connected Name Identification Presentation (CNIP/CONP)—by QSIG 218
 - CNIR → Calling Line/Name Identification Restriction (CLIR/CNIR) 220
 - CO Line Access 71
 - CO Line Call Duration Limitation [502] 286
 - CO Line Call Features 65
 - CO Line Call Features—OVERVIEW 65
 - CO Line Call Limitation 100
 - CO Line Group Access 71
 - CO Line Group Intercept Destination [470] 284
 - CO Line Group Number [500] 286
 - CO Line Programming 282

- COLP → Calling/Connected Line Identification Presentation (CLIP/COLP)
and Calling/Connected Name Identification Presentation (CNIP/
CONP)—by QSIG 218
- COLR → Connected Line/Name Identification Restriction (COLR/
CONR) 220
- Computer Telephony Integration (CTI) 227
- Computer Telephony Integration (CTI) Features 227
- Conference 111
- Conference Features 111
- Conference Features—OVERVIEW 111
- Confirmation Tone 190
- CONP → Calling/Connected Line Identification Presentation (CLIP/COLP)
and Calling/Connected Name Identification Presentation (CNIP/
CONP)—by QSIG 218
- CONR → Connected Line/Name Identification Restriction (COLR/
CONR) 220
- Console Paired Telephone [007] 275
- Consultation Hold 110
- Conversation Features 97
- COS → Class of Service (COS) 231
- COS Programming 286
- CO-to-CO Line Call Duration 101
- CO-to-CO Line Call Duration [473] 285
- CO-to-CO Line Calls through DISA 122
- CPC → Calling Party Control (CPC) Signal Detection 104
- CS Status Reference [699] 293
- CTI → Computer Telephony Integration (CTI) 227
- ## D
- Data Line Security 99
- Date & Time [000] 274
- Delayed Ringing 40
- Denied Code Tables 83
- Destination for Overflow Time Expiration [625] 290
- Destination When All Busy [627] 291
- Dial Tone 189
- Dial Tone Transfer 88
- Dial Type Selection 67
- Dialing Digit Restriction during Conversation 101
- DID → Direct Inward Dialing (DID) 23
- DID Destination [453] 284
- DID Name [452] 284
- DID Number [451] 284
- Digital XDP 102
- DIL → Direct In Line (DIL) 21
- DIL 1:1 Destination [450] 284
- Direct CO Line Access 71
- Direct In Line (DIL) 21
- Direct Inward Dialing (DID) 23
- Direct Inward System Access (DISA) 120
- Direct One-touch Answering 59
- Directed Call Pickup 60
- DISA → Direct Inward System Access (DISA) 120
- DISA AA Service 120
- DISA Continuous Signal Detection [476] 285
- DISA CO-to-CO Line Call Prolong Time [210] 279
- DISA Cyclic Signal Detection [477] 285
- DISA Delayed Answer Time [209] 279
- DISA Intercept Routing—Busy/DND 121
- DISA Intercept Routing—No Answer 121
- DISA Intercept Routing—No Dial 121
- DISA Intercept Time [211] 279
- DISA Security Mode 122
- DISA Security Mode [732] 295
- DISA Silence Detection [475] 285
- Display Information 145
- DND → Call Forwarding (FWD)/Do Not Disturb (DND) 52
- DND Override 58
- DND Override [507] 287
- Do Not Disturb (DND) 58
- Door Open 117
- Door Open Duration [207] 279
- Doorphone Call 116
- Doorphone Call Destination [720] 294
- Doorphone Number Reference [729] 295
- ## E
- EFA → External Feature Access (EFA) 100
- Electronic Station Lockout → Extension Lock 87
- Emergency Call 65
- Emergency Number [304] 280
- Entering Characters 264
- Entering System Programming Mode 273
- Exception Code Tables 83
- Exclusive Call Hold 107
- Executive Busy Override 78
- Executive Busy Override [505] 287
- Executive Busy Override Deny 78
- Executive Busy Override Deny [506] 287
- Extension Controlling Features 185
- Extension Feature Clear 186
- Extension Group [603] 289
- Extension Groups of a Paging Group [640] 292
- Extension Groups of a Pickup Group [650] 292
- Extension Intercept Destination [604] 289
- Extension Lock 87
- Extension Name [004] 274
- Extension Number [003] 274
- Extension Number Method (Access without PBX Code) 207
- Extension Personal Identification Number (PIN) 185
- Extension Personal Identification Number (PIN) [005] 275
- Extension PIN Lock 185
- Extension Port Configuration 230
- Extension Programming 288
- Extension-to-CO Line Call Duration 100
- Extension-to-CO Line Call Duration [472] 285
- External Feature Access (EFA) 100
- External Modem Control [801] 296
- External Pager Floating Extension Number [700] 294
- External Pagers of a Paging Group [641] 292
- External Relay Control 127
- External Sensor 126
- EXtra Device Port (XDP) 230
- EXtra Device Port (XDP) Mode [600] 288
- ## F
- Fault Recovery/Diagnostics 257
- Feature Guide References 2

Feature Highlights 3
 Fixed Buttons 139
 Flash/Recall/Terminate 99
 Flexible Buttons 141
 Flexible Numbering [100] 276
 Flexible Numbering/Fixed Numbering 250
 Floating Extension 255
 Floating Station → Floating Extension 255
 Full One-touch Dialing 74
 FWD → Call Forwarding (FWD)/Do Not Disturb (DND) 52
 FWD—All Calls 54
 FWD—Busy 54
 FWD—Busy/No Answer 54
 FWD—Follow Me 54
 FWD—No Answer 54

G

Group 232
 Group Call Distribution 39
 Group Call Pickup 60

H

Handover 167
 Handset/Headset Selection → Headset Operation 98
 Hands-free Answerback 61
 Hands-free Operation 97
 Headset Operation 98
 Hold Recall 107
 Hold Recall Time [200] 278
 Holding Features 107
 Hospitality Features 183
 Hospitality Features—SUMMARY 183
 Host PBX Access Code (Access Code to the Telephone Company from a Host PBX) 68
 Host PBX Access Code [471] 284
 Hot Line 77
 Hot Line Waiting Time [204] 278
 Hurry-up Transfer → Manual Queue Redirection 43

I

ICD Group Delayed Ringing [621] 290
 ICD Group Distribution Method [624] 290
 ICD Group Floating Extension Number [622] 290
 ICD Group Member [620] 289
 ICD Group Name [623] 290
 ICD Group Overflow 45
 Idle Extension Hunting 34
 Idle Extension Hunting Group Member [681] 293
 Idle Extension Hunting Type [680] 293
 Idle Line Access (Local Access) 71
 Idle Line Access (Local Access) [103] 276
 Idle Line Preference 70
 Incoming Call Distribution (ICD) Group Features 35
 Incoming Call Distribution (ICD) Group Features—OVERVIEW 35
 Incoming Call Features 18
 Incoming Call Indication Features 30
 Incoming Call Indication Features—OVERVIEW 30
 Incoming Call Log 133
 Incoming Call Log Display Lock 134

Incoming Call Queue Monitor 49
 Incoming CO Line Call Features 18
 Incoming CO Line Call Features—OVERVIEW 18
 Installation Manual References 2
 Installing and Starting KX-TDA Maintenance Console 267
 Installing KX-TDA Maintenance Console 267
 Integrated Services Digital Network (ISDN) 147
 Integrated Services Digital Network (ISDN) Service Features 147
 Integrated Services Digital Network (ISDN)—OVERVIEW 147
 Intercept Routing 26
 Intercept Routing—Busy 26
 Intercept Routing—DND 26
 Intercept Routing—No Answer (IRNA) 26
 Intercept Routing—No Destination 28
 Intercept Time [203] 278
 Intercom Call 64
 Internal Call Block 29
 Internal Call Features 28
 Internal Call Features—OVERVIEW 28
 Interrupt Redial 75
 Introduction 262
 IP Proprietary Telephone (IP-PT) Features 226
 IRNA → Intercept Routing—No Answer (IRNA) 26
 ISDN → Integrated Services Digital Network (ISDN) 147
 ISDN Remote Floating Extension Number [812] 297
 Itemized Billing Code 95

L

Last Number Redial 75
 LCOT CO Line Connection [400] 282
 LCOT CO Line Group Number [402] 282
 LCOT CO Line Name [401] 282
 LCOT CO Line Number Reference [409] 282
 LCOT CPC Signal Detection Time—Incoming [414] 283
 LCOT CPC Signal Detection Time—Outgoing [413] 283
 LCOT Dialing Mode [410] 282
 LCOT Disconnect Time [418] 283
 LCOT DTMF Minimum Duration [412] 283
 LCOT Flash/Recall Time [417] 283
 LCOT Pause Time [416] 283
 LCOT Pulse Rate [411] 283
 LCS → Live Call Screening (LCS) 159
 LED Indication 143
 Line Preference Override 70
 Line Preference—Incoming 59
 Line Preference—Outgoing 70
 Live Call Screening (LCS) 159
 Local Alarm Information 258
 Log-in/Log-out 47
 Log-in/Log-out Monitor 48
 Log-in/Log-out Monitor and Remote Control 49

M

Main Processing (MPR) Software Version Reference [190] 278
 Making Call Features 63
 Manager Assignment [511] 287
 Manager Features 242
 Manager Password [112] 277
 Manual Queue Redirection 43

Maximum Number of Agents [632] 292
 Memory Dialing Features 73
 Memory Dialing Features—OVERVIEW 73
 Message Features 135
 Message Waiting 135
 Modem Floating Extension Number [811] 297
 Multiple FWD 56
 Music for Transfer [712] 294
 Music on Hold 110
 Music on Hold [711] 294
 Mute 97

N

Network Direct Station Selection (NDSS) (KX-TDA0920 required) 221
 Networking Features 3, 191
 No Line Preference 59, 70

O

Off-hook Call Announcement (OHCA) 81
 Off-hook Monitor 97
 OGM 120
 OGM → Outgoing Message (OGM) 118
 OHCA → Off-hook Call Announcement (OHCA) 81
 One-touch Dialing 74
 One-touch Transfer 106
 OPB3 Option Card Deletion [911] 298
 OPB3 Option Card Type Reference [910] 298
 Operator Assignment [006] 275
 Operator Call 242
 Operator Features 242
 Optional Device Features 116
 Outgoing Call Log 75
 Outgoing Message (OGM) 118
 Outgoing Message (OGM) Floating Extension Number [730] 295
 Outgoing Message (OGM) Name [731] 295
 Overflow Feature 45
 Overflow Time [626] 290

P

Paging 114
 Paging Deny 114
 Paging DND 58, 115
 Paging Features 114
 Paging Group 114
 Paralleled Telephone 101
 Paralleled Telephone Features 5
 Password Security 262
 Pause Insertion 67
 PBX Code Method (Access with PBX Code) 198
 PC Programming 245, 266, 267
 Permission for Door Open Access [512] 288
 Personal Identification Number (PIN) for PS Registration [692] 293
 Personal Speed Dialing Display Lock 76
 Pickup Dialing → Hot Line 77
 PIN → Extension Personal Identification Number (PIN) 185
 PIN → Verified Code Personal Identification Number (PIN) 90
 Portable Station (PS) Connection 166
 Portable Station (PS) Features 166
 Power Failure Connections 257

Power Failure Restart 257
 Power Failure Transfer 257
 Predialing 63
 Prime Line Preference 59, 70
 Printing Message 181
 Priority Hunting 39
 Privacy Release 112
 Programming Instructions 261, 271
 Programming Mode Limitation [516] 288
 Programming Structure 273
 Proprietary Telephone (PT) Features 139
 PS → Portable Station (PS) Features 166
 PS Directory 173
 PS Feature Buttons 174
 PS Registration [690] 293
 PS Ring Group 167
 PS Termination [691] 293
 PT → Proprietary Telephone (PT) Features 139
 PT Programming 247, 264, 271
 PT Programming References 2
 Pulse to Tone Conversion 67

Q

QSIG Network 217
 QSIG Network—OVERVIEW 217
 Queuing Call Capacity [628] 291
 Queuing Feature 41
 Queuing Hurry-up Level [629] 291
 Queuing Time Table [630] 291
 Quick Dialing 77
 Quick Setup 248

R

Receiving Group Features 34
 Remote Control 49
 Remote Extension Control by User 188
 Remote Extension Lock 87
 Remote Programming [810] 297
 Remote Station Control by User → Remote Extension Control by User 188
 Remote Station Lock Control → Remote Extension Lock 87
 Requirements 271
 Resource/Interface Programming 294
 Revision History 765
 Ring 40
 Ring Tone Pattern Selection 31
 Ringing Line Preference 59
 Room Status Control 183
 RS-232C Parameter—Baud Rate [800] 295
 RS-232C Parameter—New Line Code [800] 295
 RS-232C Parameter—Parity Bit [800] 296
 RS-232C Parameter—Stop Bit Length [800] 296
 RS-232C Parameter—Word Length [800] 295

S

S-CO Line Access 71
 Second Call Notification to Busy Extension 80
 Second Call Notification to Busy Extension—OVERVIEW 80
 Seizing a Line Features 69

Seizing a Line Features—OVERVIEW 69
 Sequences in Queuing Time Table [631] 291
 Slot Card Deletion [901] 297
 Slot Card Reset [902] 297
 Slot Card Type Reference [900] 297
 SMDR & Maintenance Programming 295
 SMDR → Station Message Detail Recording (SMDR) 175
 SMDR Incoming Call Printing [805] 296
 SMDR Outgoing Call Printing [804] 296
 SMDR Page Length [802] 296
 SMDR Skip Perforation [803] 296
 Software Upgrading 256
 Special Carrier Access Code 69
 Special Carrier Access Code [303] 280
 Speed Dialing—Personal/System 76
 Starting KX-TDA Maintenance Console 267
 Station Hunting → Idle Extension Hunting 34
 Station Message Detail Recording (SMDR) 175
 Station Password Lock → Extension PIN Lock 185
 Station Program Clear → Extension Feature Clear 186
 Station Speed Dialing → Personal Speed Dialing 76
 Supervisory Feature 49
 System Configuration and Administration Features 229
 System Configuration—Hardware 230
 System Configuration—Software 231
 System Data Control 245
 System Management Programming 276
 System Password for Administrator—for PT Programming [110] 277
 System Password for User—for PT Programming [111] 277
 System Requirements 267
 System Speed Dialing Name [002] 274
 System Speed Dialing Number [001] 274

T

T1 Line Service 150
 T1 Line Service Features 150
 TAFAS → Trunk Answer From Any Station (TAFAS) 117
 Tenant Service 234
 Tenant-to-Tenant Call Block 235
 Terminal Device Assignment [601] 288
 Terminated Hunting 34
 TIE Line Service 191
 TIE Line Service—OVERVIEW 191
 Time Programming 278
 Time Service 238
 Time Service Manual Switching [514] 288
 Time Service Starting Time [102] 276
 Time Service Switching Mode [101] 276
 Time Synchronization 160
 Timed Reminder 187
 Toll Restriction (TRS) 83
 Toll Restriction (TRS) Features 83
 Tones/Ring Tones 763
 Transfer Recall 105
 Transfer Recall Time [201] 278
 Transferring Features 105
 TRS → Toll Restriction (TRS) Features 83
 TRS Denied Code [301] 280
 TRS Exception Code [302] 280

TRS Level 83
 TRS Level [501] 286
 TRS Level for Extension Lock [510] 287
 TRS Level for System Speed Dialing [509] 287
 TRS Override by System Speed Dialing 83
 TRS Override by System Speed Dialing [300] 279
 TRS/ARS Programming 279
 Trunk Answer From Any Station (TAFAS) 117
 Two-way Recording into the VPS 159

U

UCD → Uniform Call Distribution (UCD) 39
 Unattended Conference 111
 Uniform Call Distribution (UCD) 39
 User Manual References 2

V

Verified Code [120] 277
 Verified Code COS Number [123] 278
 Verified Code Entry 89
 Verified Code Name [121] 277
 Verified Code Personal Identification Number (PIN) 90
 Verified Code Personal Identification Number (PIN) [122] 277
 Version 1.1 765
 Version 2.0 766
 VIP Call 44
 VM → Voice Mail Features 152
 VM Group Floating Extension Number [660] 292
 Voice Mail (VM) Group 152
 Voice Mail DPT (Digital) Integration 154
 Voice Mail DTMF Integration 161
 Voice Mail Features 152
 Voice over Internet Protocol (VoIP) Network 225
 VoIP → Voice over Internet Protocol (VoIP) Network 225

W

Walking COS 88
 Walking COS/Verified Code Entry through DISA 122
 Walking Extension 187
 Walking Station → Walking Extension 187
 Whisper OHCA 82
 Wireless XDP Parallel Mode 171
 Wireless XDP Parallel Mode for Paired Telephone [515] 288
 Wrap-up 47

X

XDP → EXtra Device Port (XDP) 230

**Panasonic Consumer Electronics Company
Division of Panasonic Corporation of North America**

One Panasonic Way
Secaucus, NJ 07094

Panasonic Puerto Rico, Inc.

Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985

<http://www.panasonic.com/csd>

Copyright:

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2003 Panasonic Communications Co., Ltd. All Rights Reserved.

PSQX2230WA KK0503CM4015